



ASSEMBLY INSTRUCTIONS

Coat Rack

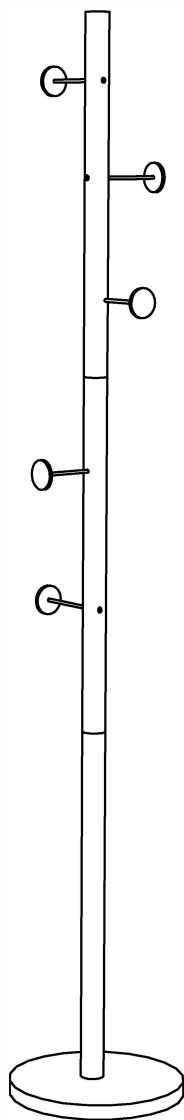

A1



Base

1PC

A2



Lower Rod

1PC


A3



Middle Rod

1PC

A4



Upper Rod

1PC

A5



Hook

5PCS

B1



Bolt

5pcs

B2



Bolt

1pc

B3



Bolt


1pc



Allen Wrench


1pc

Step: 1

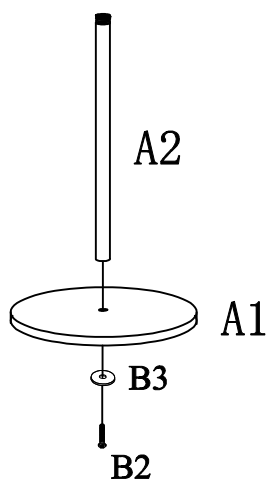


Assemble Lower Rod A2 to Base A1 using Bolt B2 with washer B3 as shown above.

Step: 2

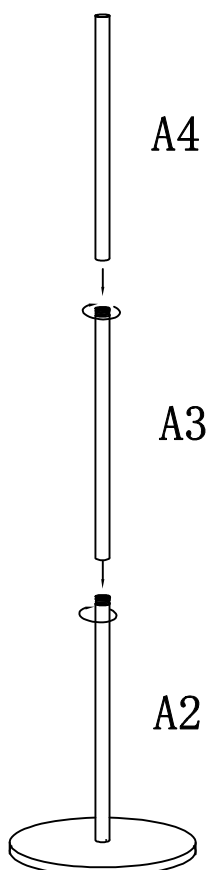

Tighten Middle Rod A3 to Lower Rod A2 ,then tighten Upper Rod A4 to Middle Rod A3 as shown above.

Step: 3

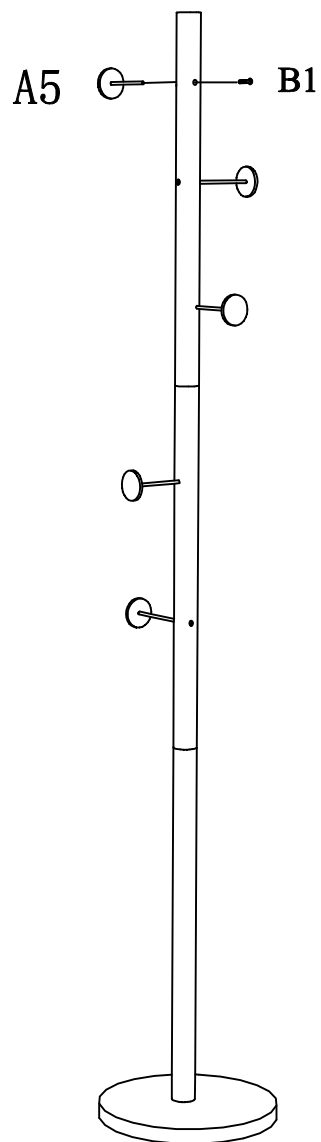

Assemble Hooks A5 to the rod using Bolts B1 as shown above.