




INSTALLATION MANUAL

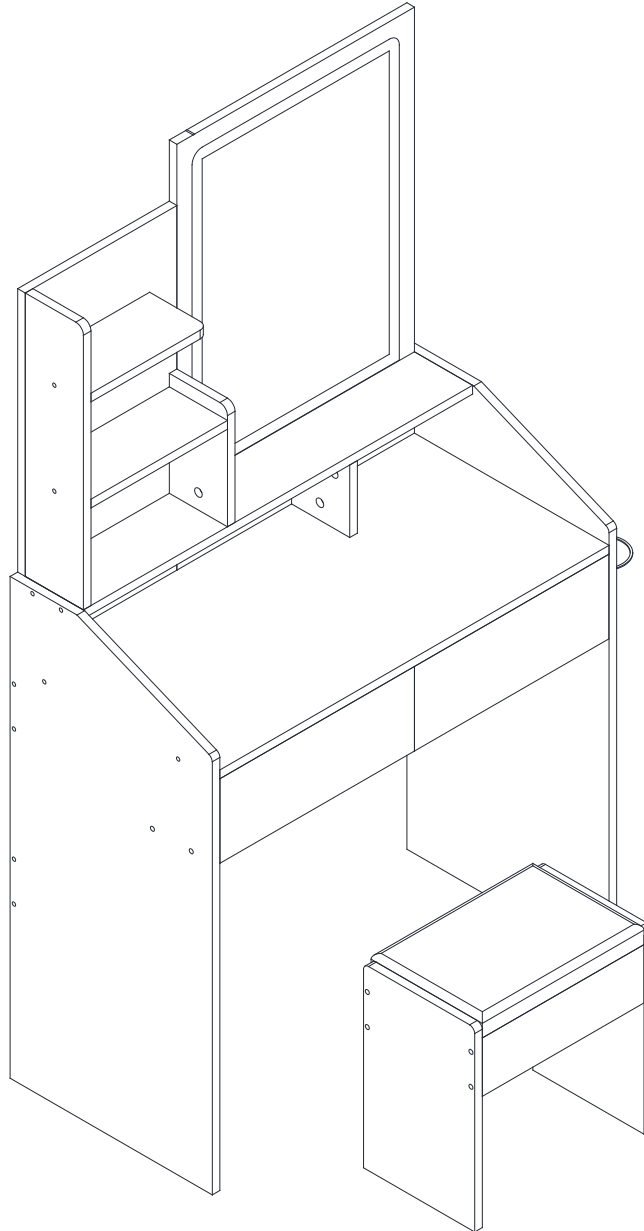

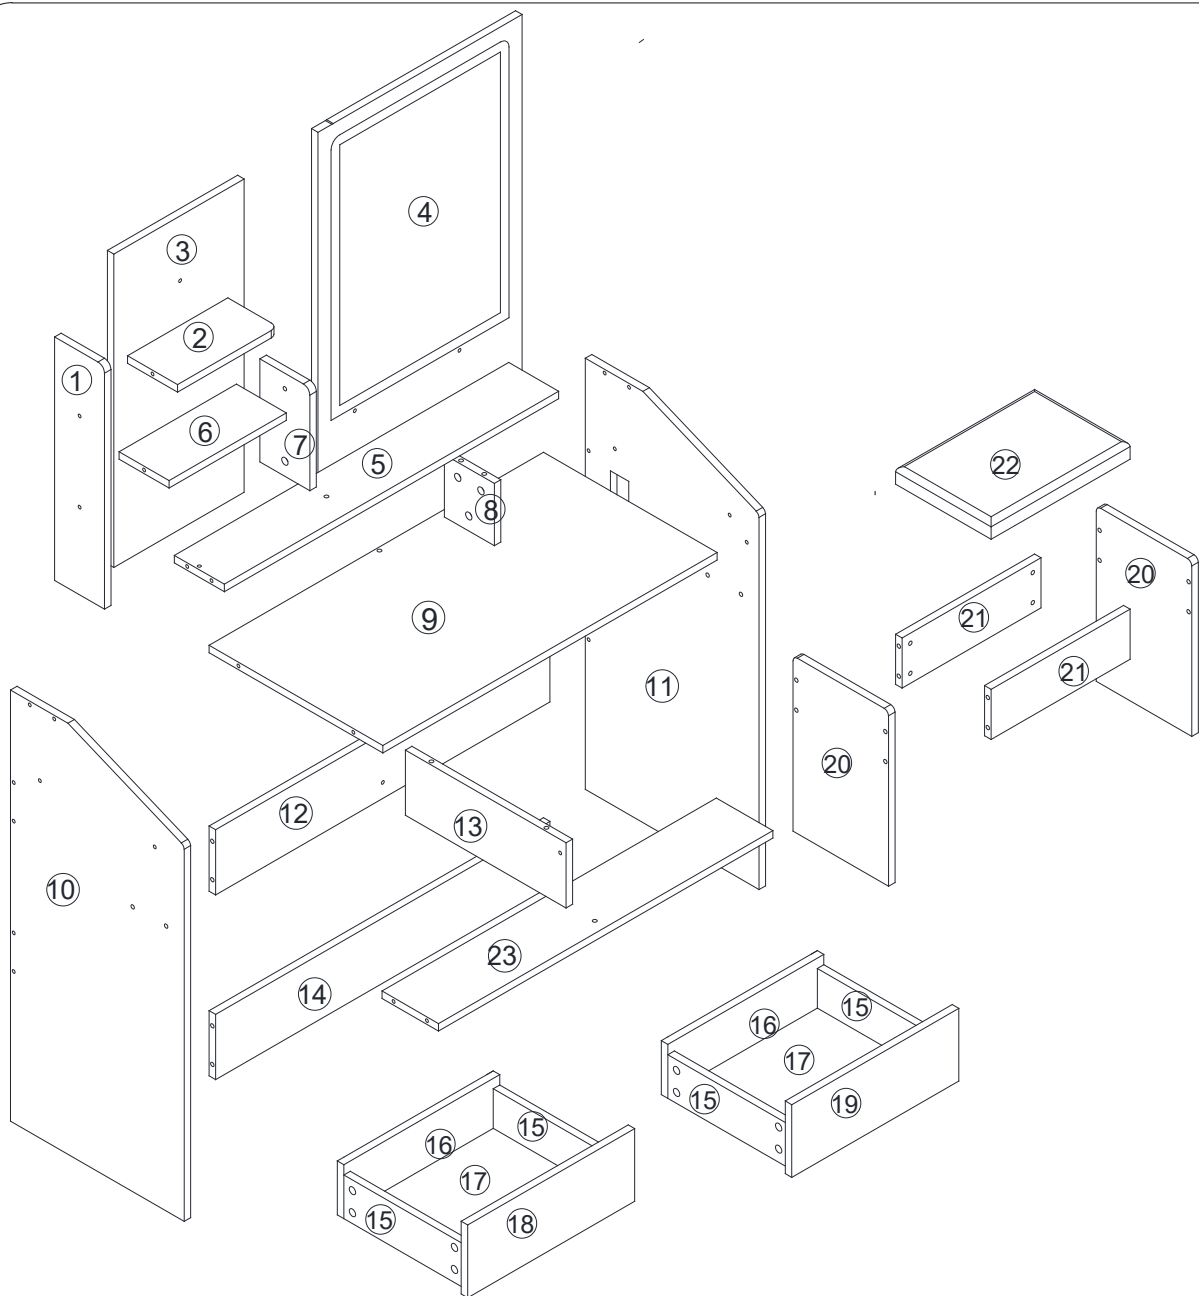

1 - x1	6 - x1	11 - x1	16 - x2	21 - x2
2 - x1	7 - x1	12 - x1	17 - x2	22 - x1
3 - x1	8 - x1	13 - x1	18 - x1	23 - x1
4 - x1	9 - x1	14 - x1	19 - x1	
5 - x1	10 - x1	15 - x4	20 - x2	

HARDWARE




A	SCREW & PLASTIC LOCK	x25
---	-------------------------	-----



B	SCREW & METAL LOCK	x25
---	-----------------------	-----



C	SCREW	x17
---	-------	-----



D	METAL PLATE	x1
---	-------------	----



E		x1
---	--	----




F	SOCKET	x1
---	--------	----



G	SCREW	x4
---	-------	----



H	L PLATE	x2
---	---------	----




J	SCREW	x40
---	-------	-----



K	SCREW	x40
---	-------	-----


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

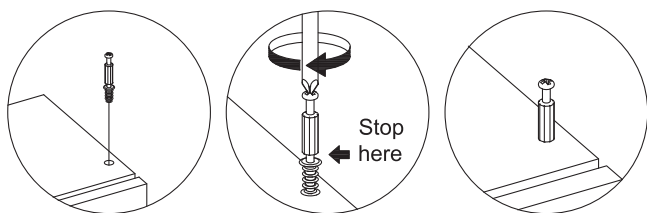


2. Check the Nut direction









This direction of the marked nut is consistent with the direction in which the screw is inserted

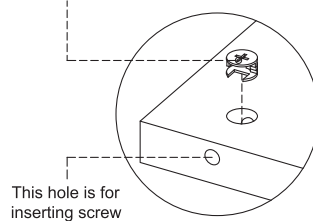


3. Installation on the board with fixing screws

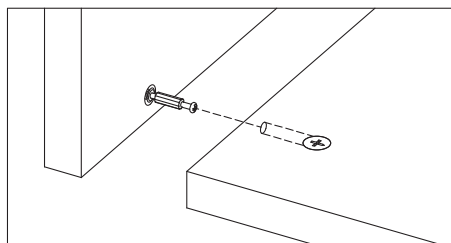


3. Rotate slowly until it stops

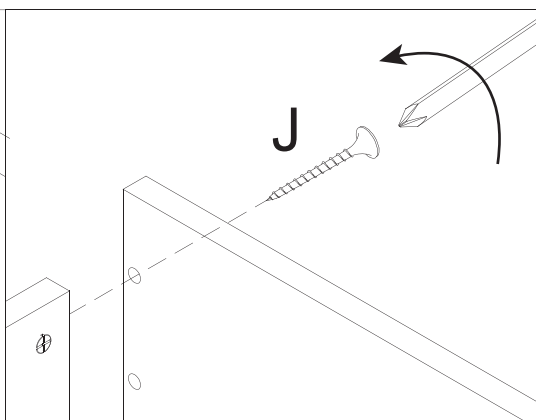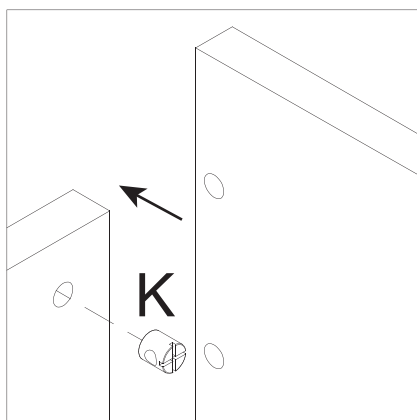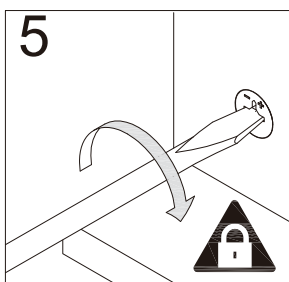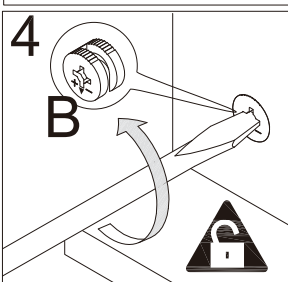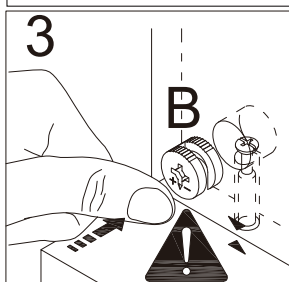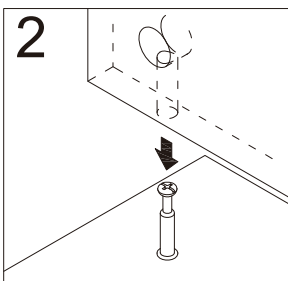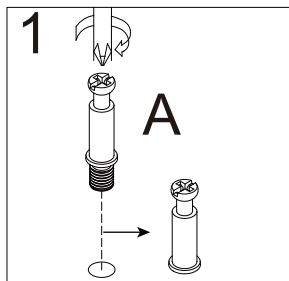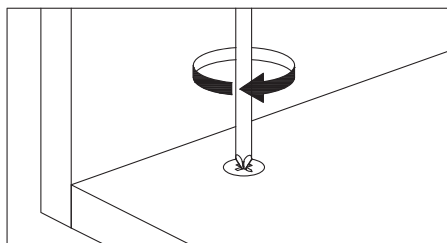


Step 01

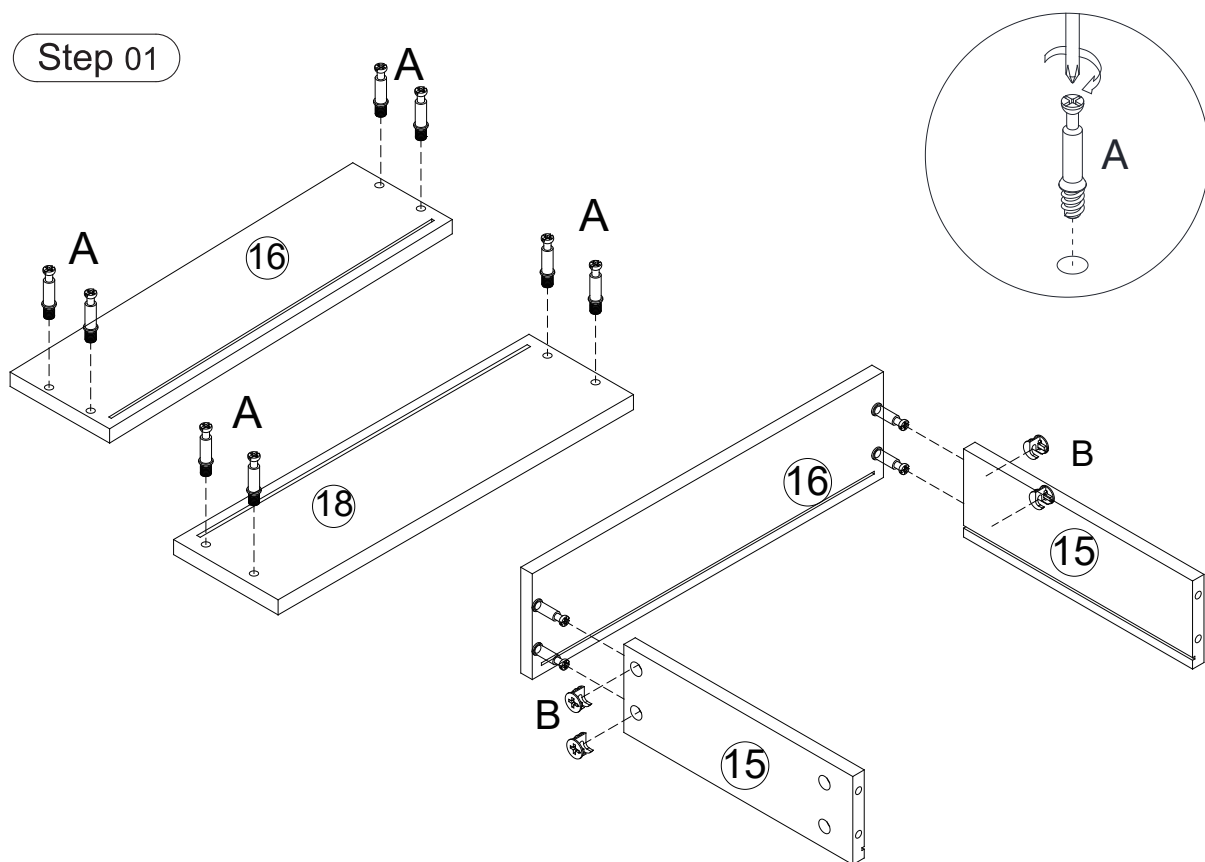

Step 02

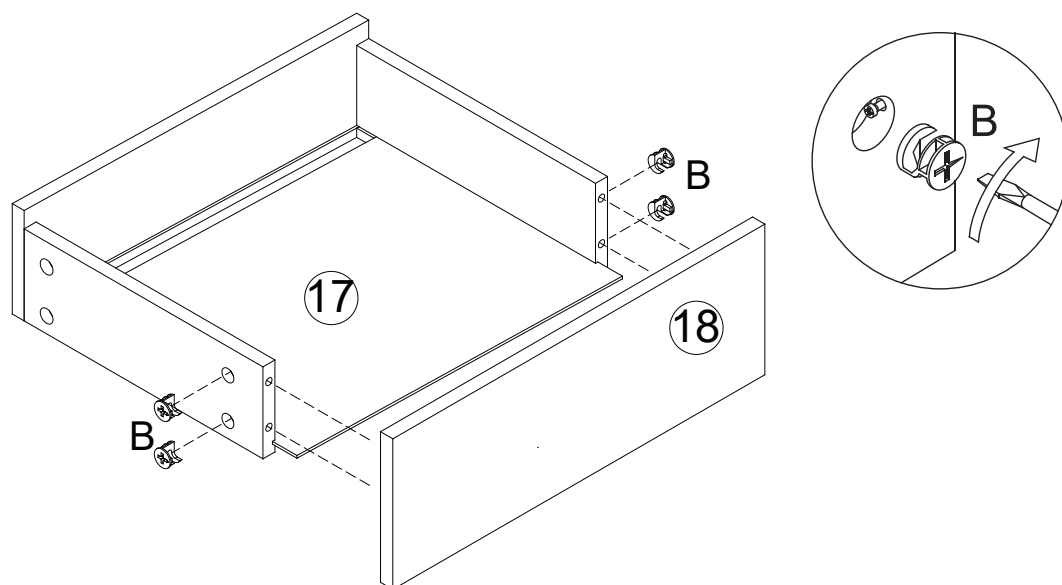


Step 03

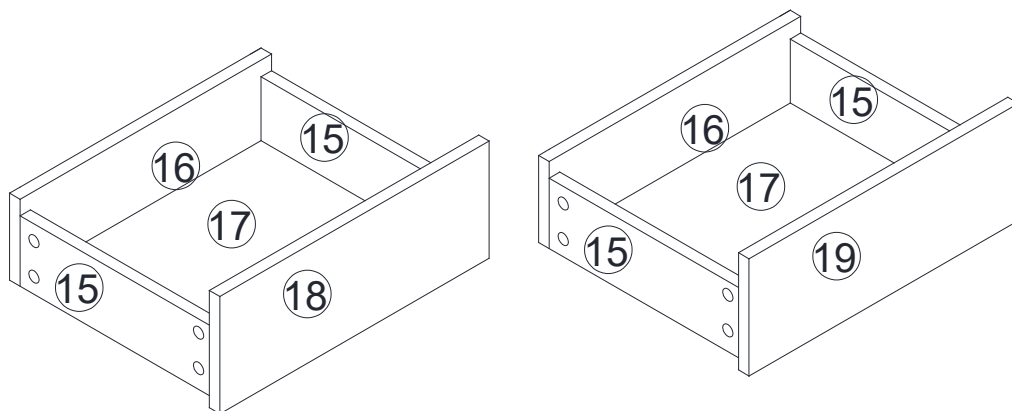


The two drawers are installed in the same way


Step 04

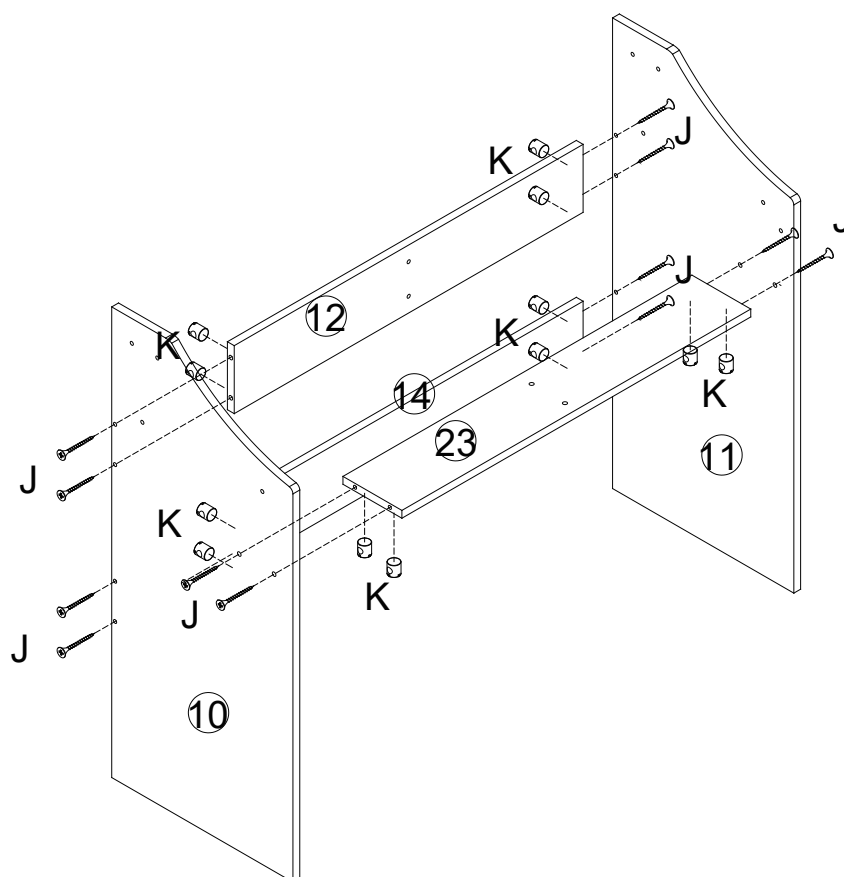


Step 05

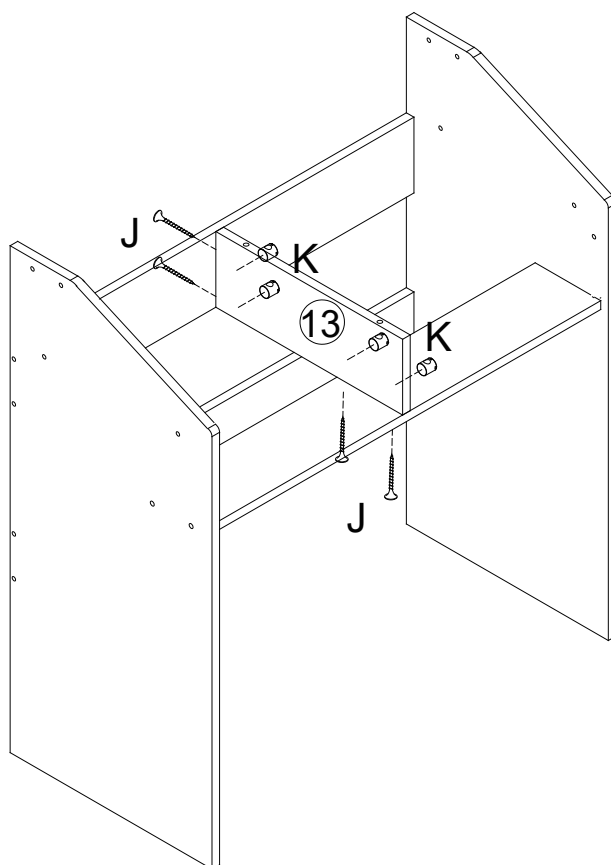


Step 06

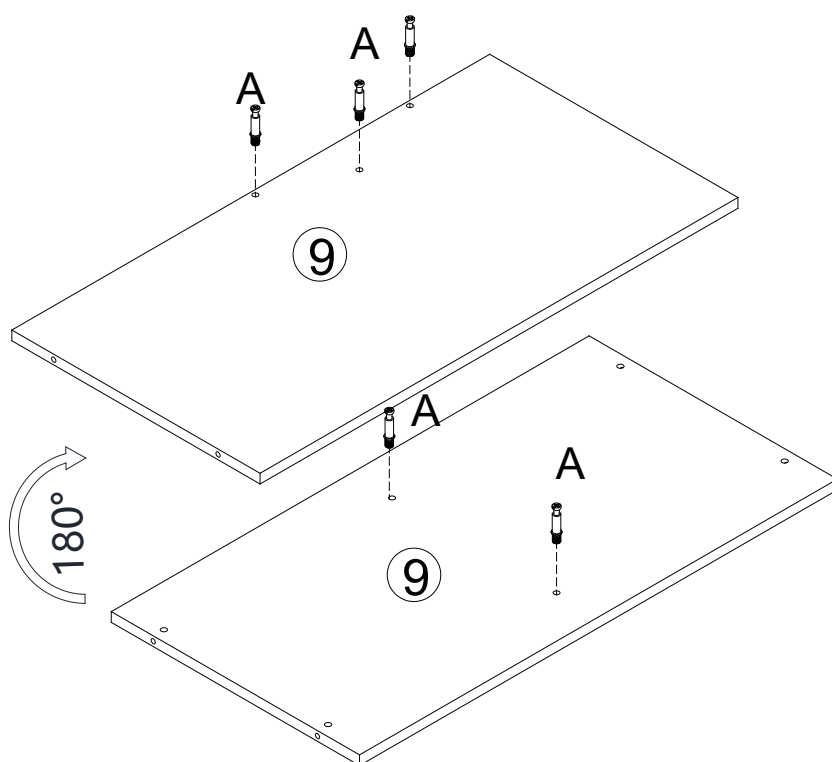


Step 07

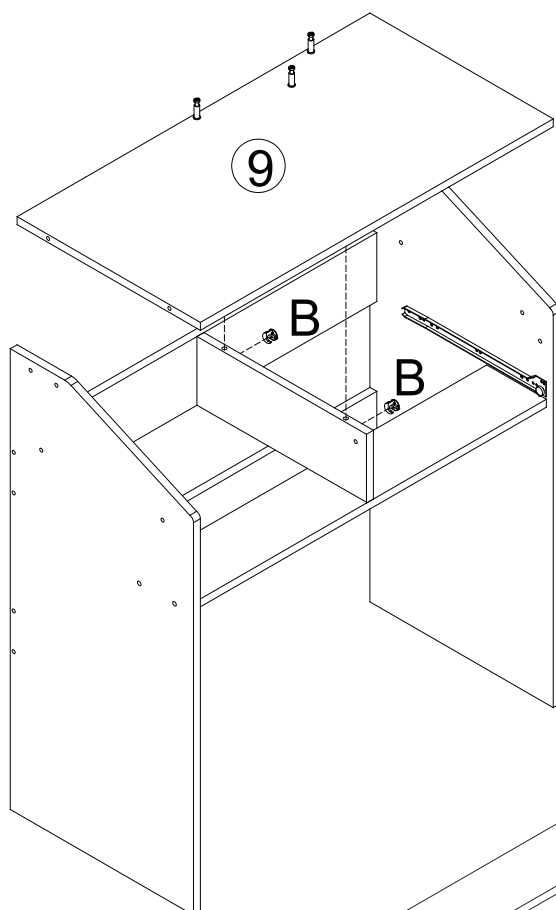


Step 08

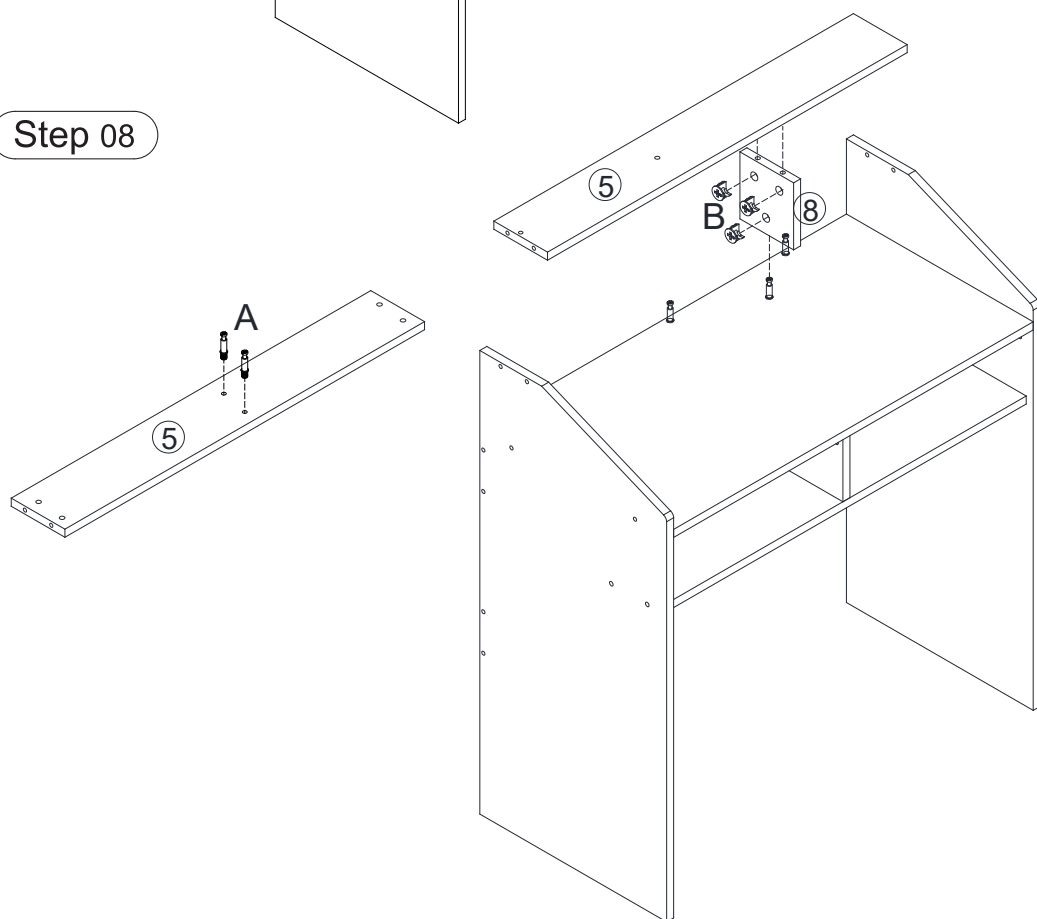


Step 09

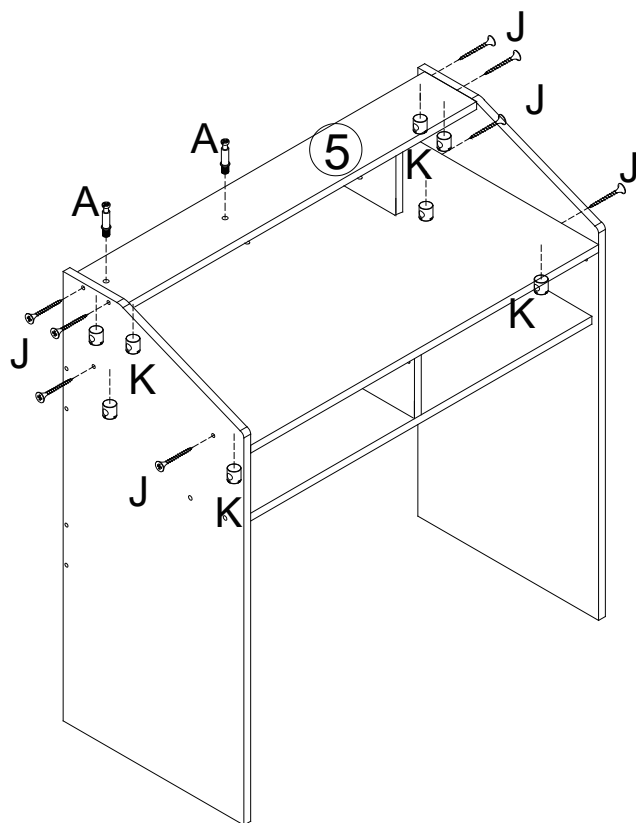


Step 10

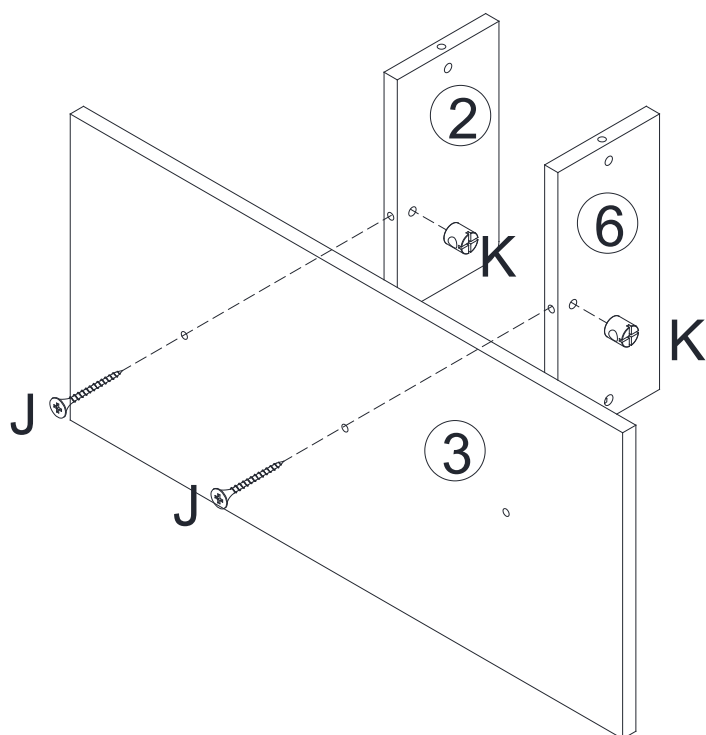


Step 11

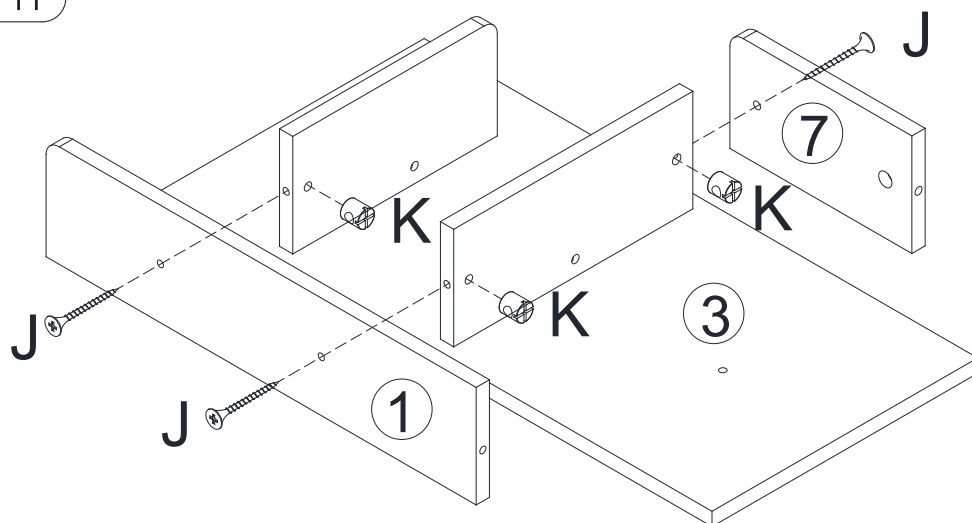


Step 12

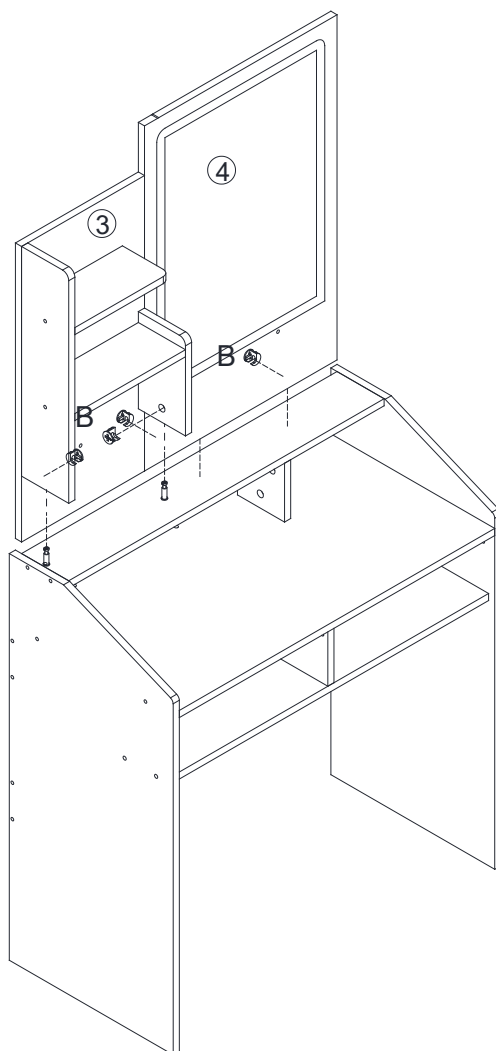



Step 13

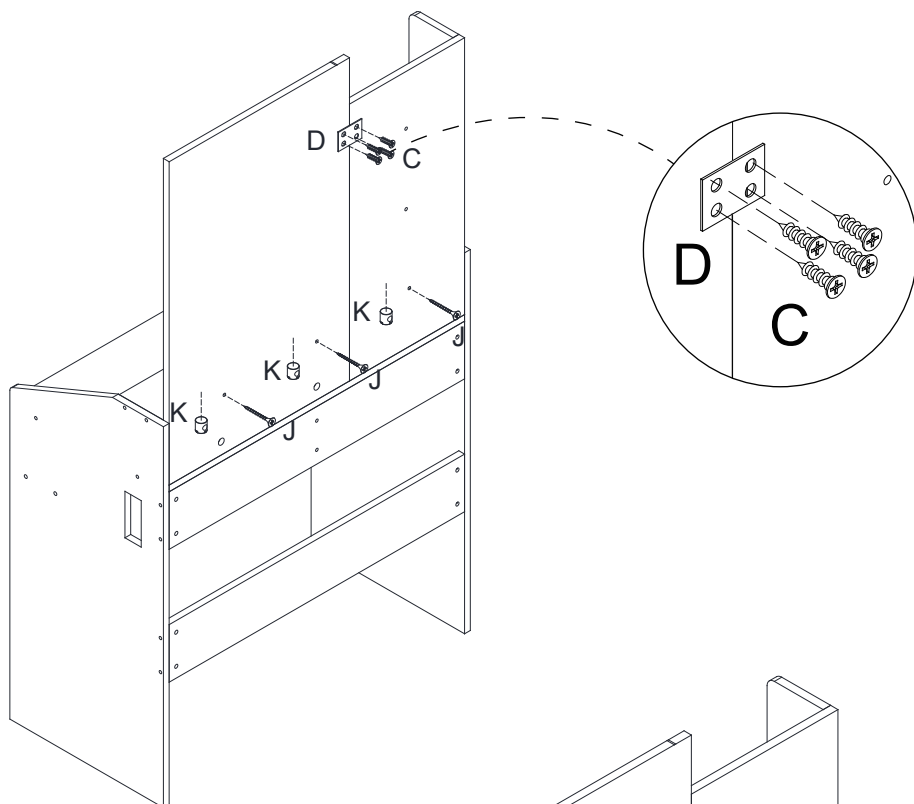


Step 14

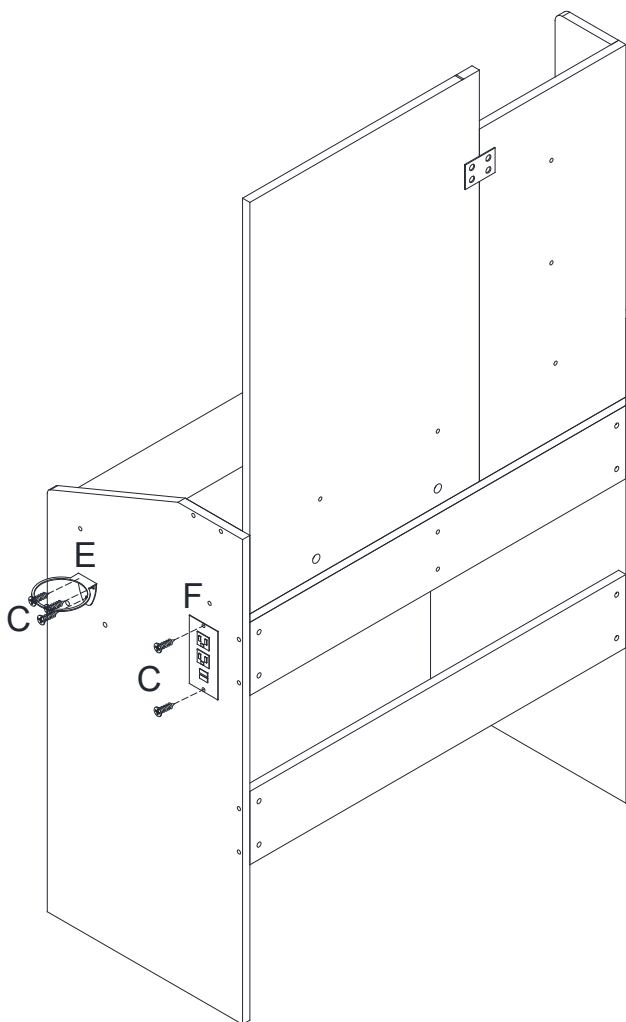


Step 15

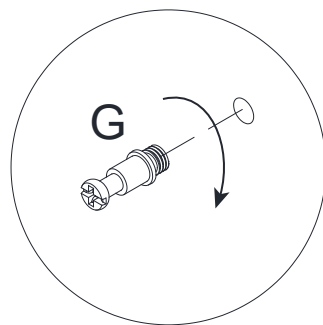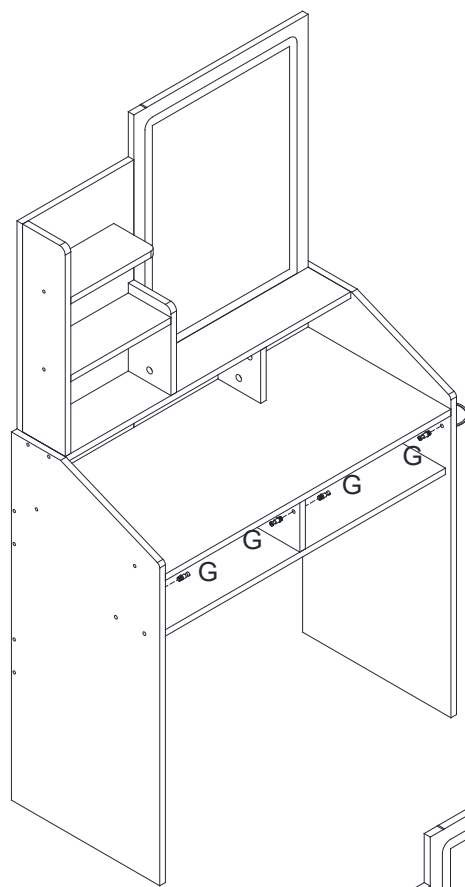

Step 16

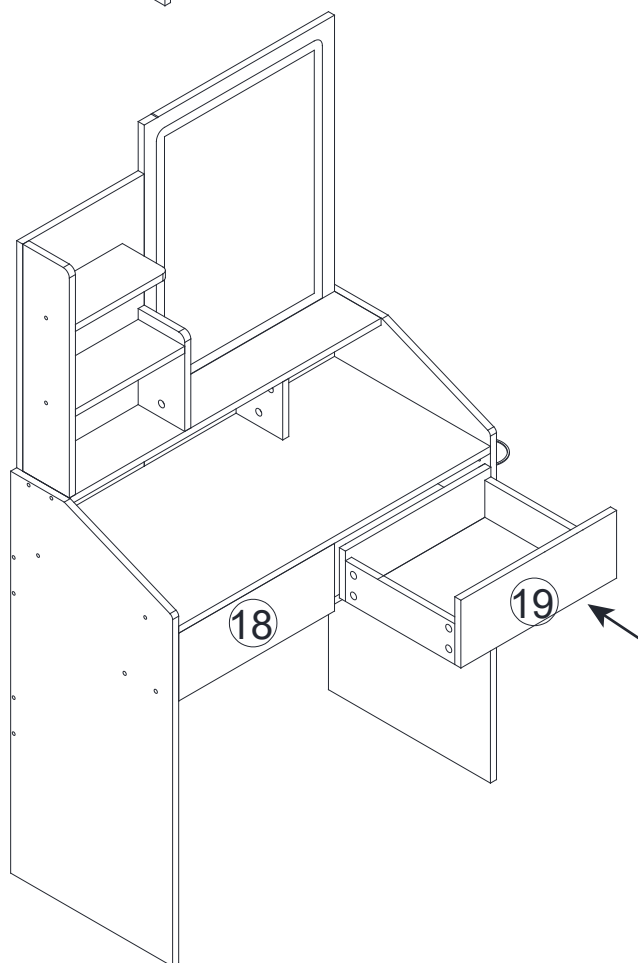

Step 17

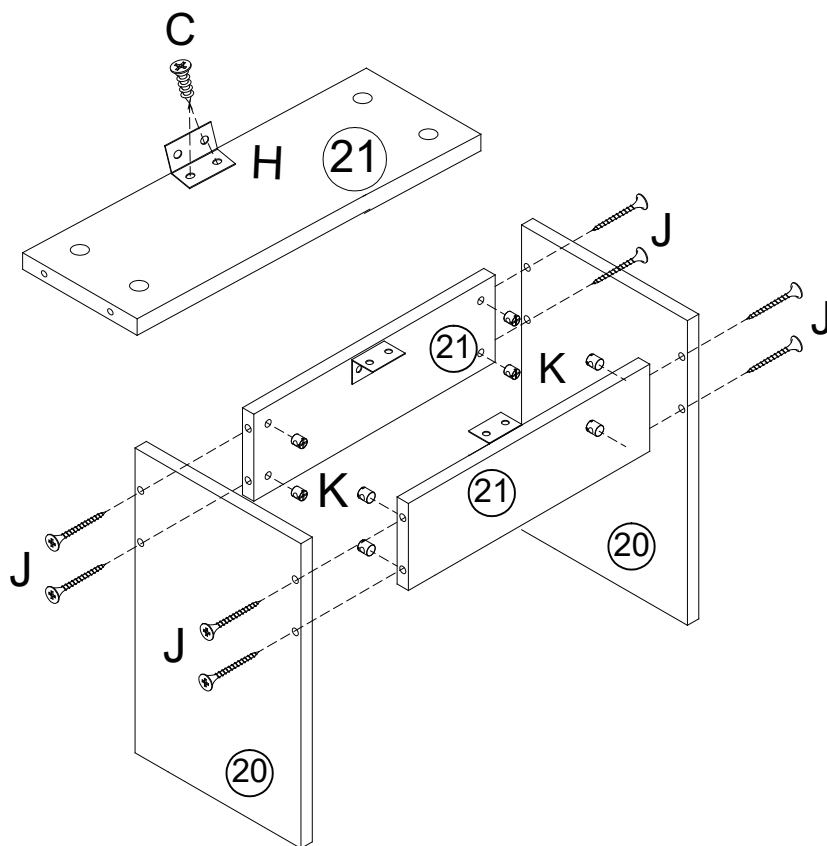

Step 18

