


# ASSEMBLY INSTRUCTIONS

## 52066 QN-KG HEADBOARD

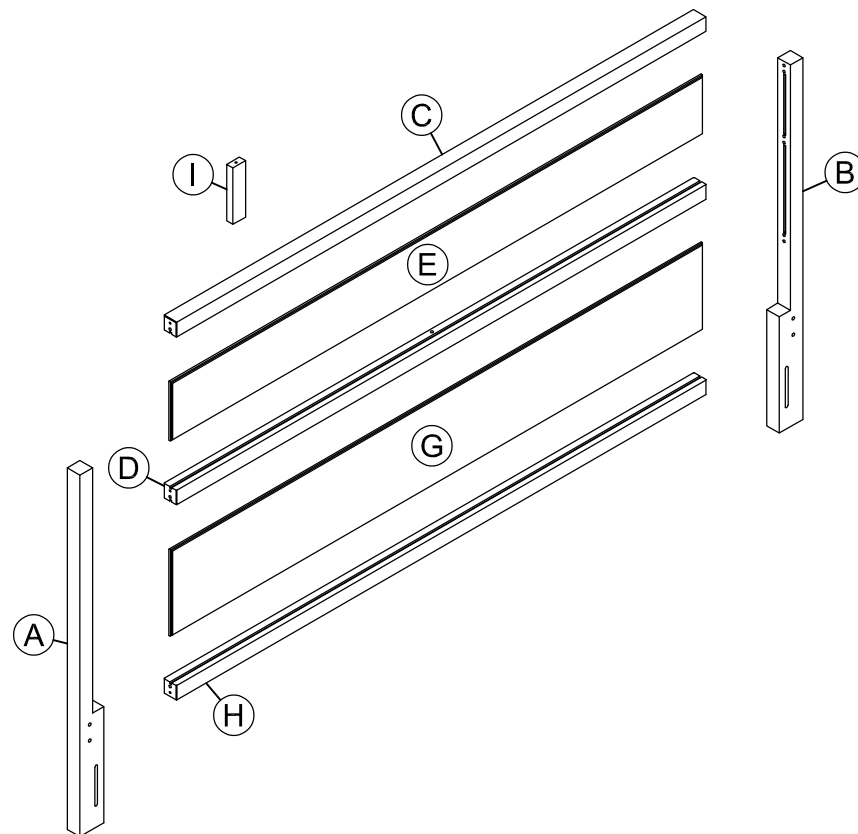

Requires two people for assembly

# 52066 QN-KG HEADBOARD

## ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


**If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.336.861.0604 during business hours, email [parts@comfortpointe.com](mailto:parts@comfortpointe.com).**

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

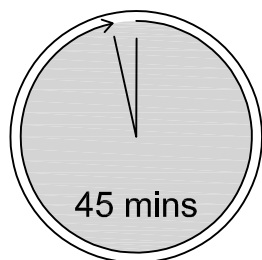

**TIME**

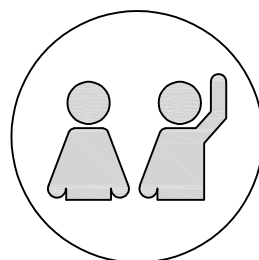

**# OF PEOPLE**




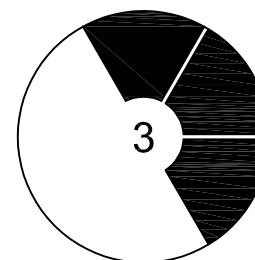


**DIFFICULTY**




**Important: Use hand tools for assembly. DO NOT USE POWER TOOL TO TIGHTEN CAM LOCKS.**

# 52066 QN-KG HEADBOARD

## Parts List




| CODE     | DESCRIPTION                                                                                                | QTY |
|----------|------------------------------------------------------------------------------------------------------------|-----|
| <b>A</b> | Left headboard leg        | 1PC |
| <b>B</b> | Right headboard leg       | 1PC |
| <b>C</b> | Upper horizontal rail     | 1PC |
| <b>D</b> | Middle horizontal rail    | 1PC |
| <b>E</b> | Upper panel             | 1PC |
| <b>G</b> | Bottom panel            | 1PC |
| <b>H</b> | Bottom horizontal rail  | 1PC |
| <b>I</b> | Center support          | 1PC |

## Hardware List

| CODE | DESCRIPTION                                                                                                            | QTY  |
|------|------------------------------------------------------------------------------------------------------------------------|------|
| 1.   | Cam Lock Bolt M6x40mm               | 8PCS |
| 2.   | Cam Lock Ø15mm                      | 8PCS |
| 3.   | Dowel 8x30mm                        | 6PCS |
| 4.   | Screwdriver to tighten cam locks  | 1PC  |

1

# 52066 QN-KG HEADBOARD

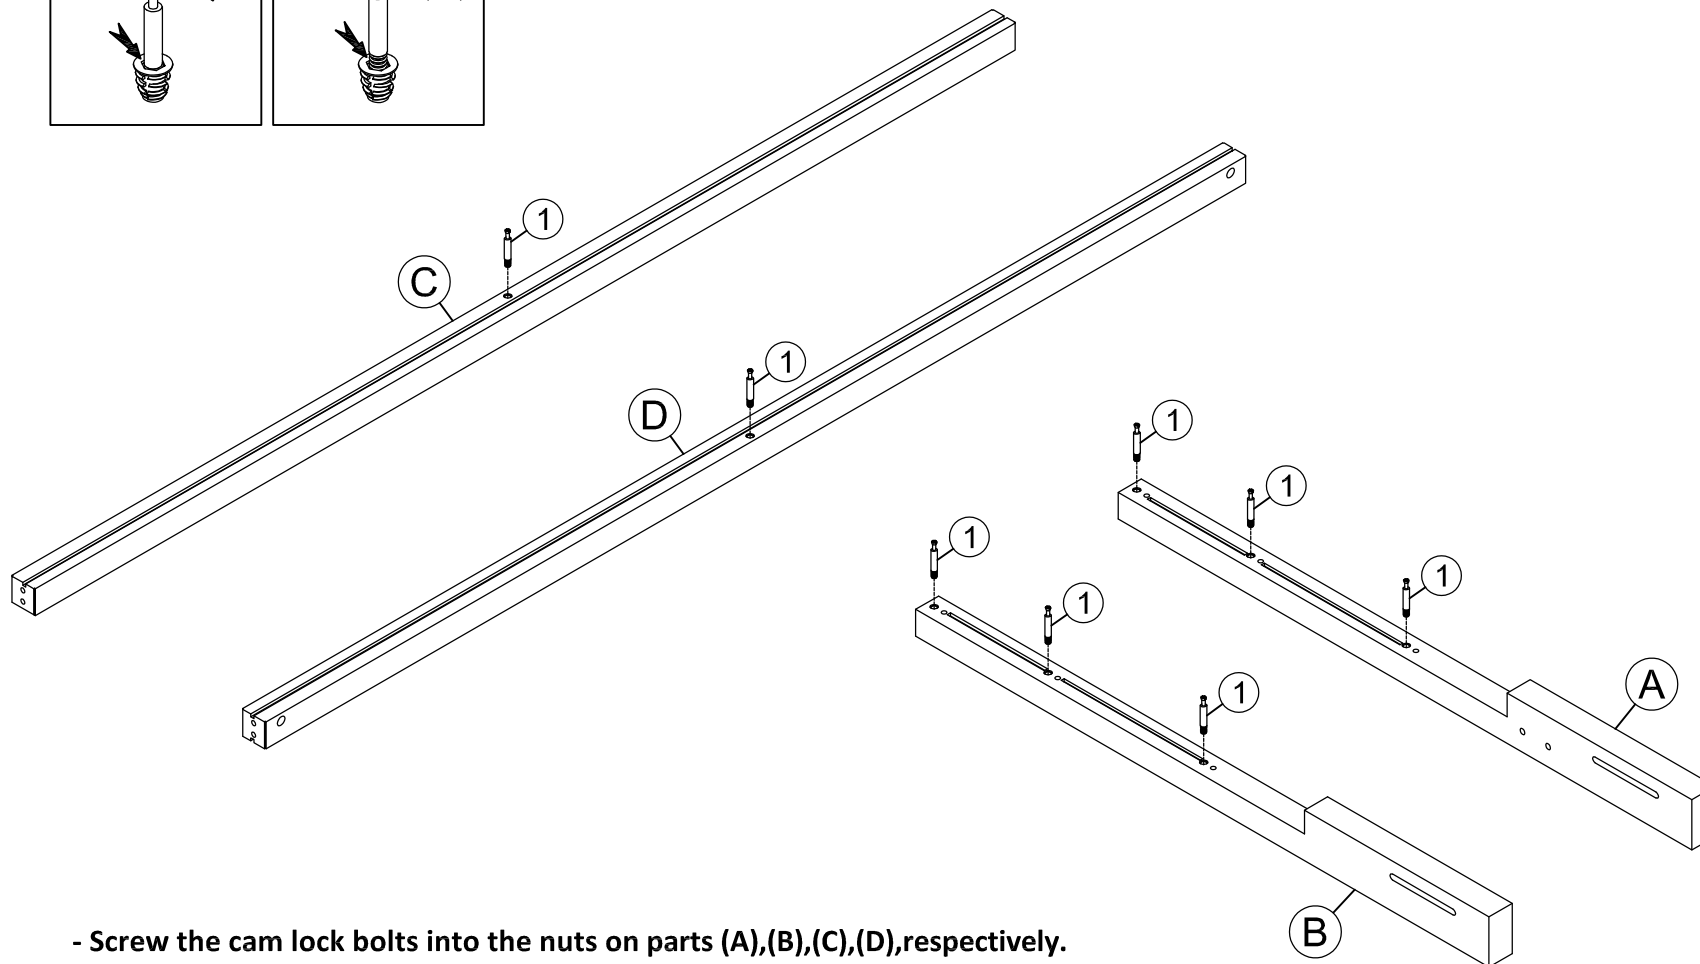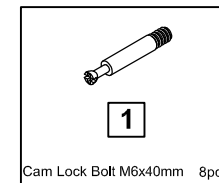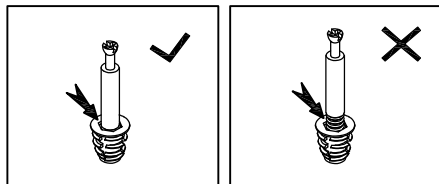


- Screw the cam lock bolts into the nuts on parts (A),(B),(C),(D),respectively.

If you're having difficulty, our friendly Customer Care team is always here to help.  
Call us at 1.336.861.0604, email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com).

VERSION 2.1 REV 08/19/2026

2


## 52066 QN-KG HEADBOARD

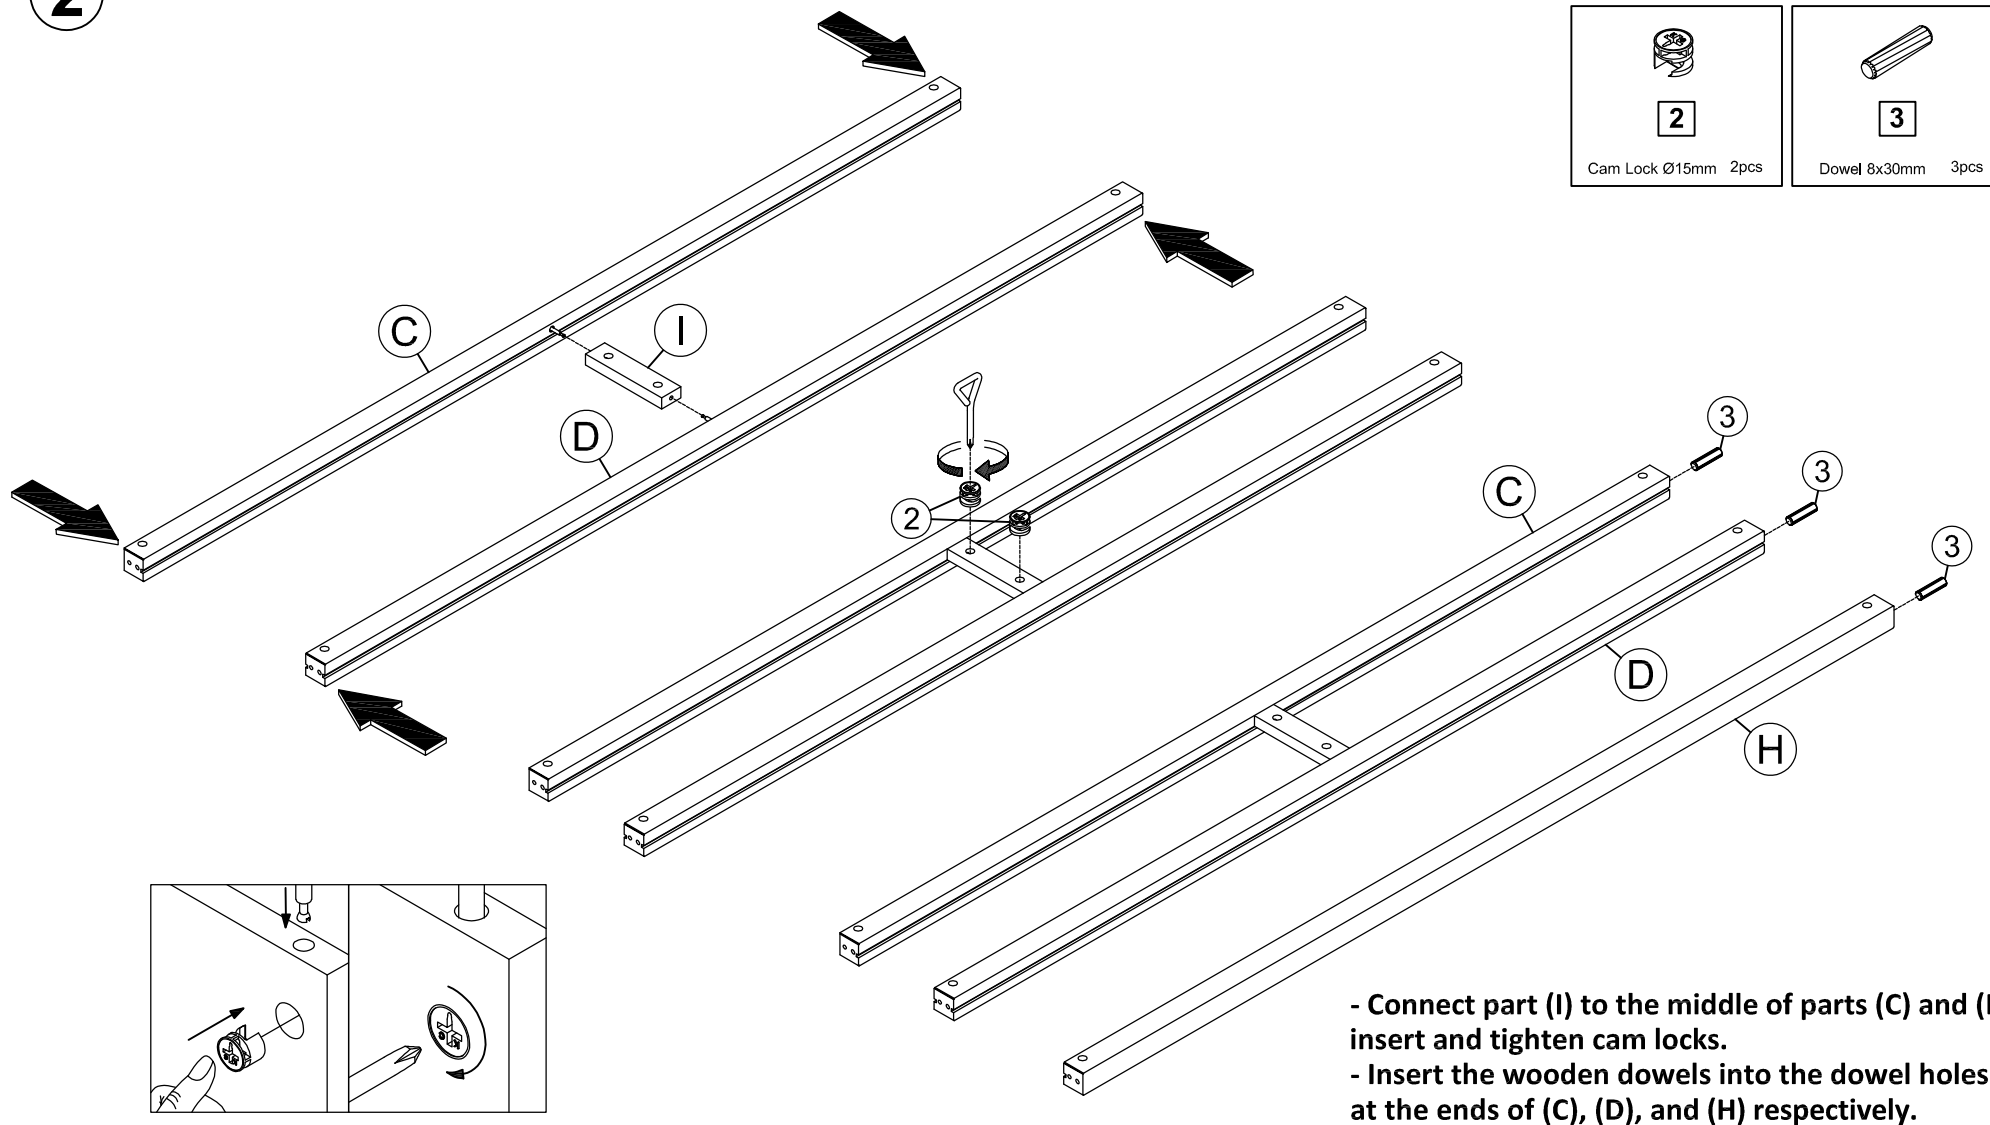

If you're having difficulty, our friendly Customer Care team is always here to help.  
Call us at 1.336.861.0604, email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com).

VERSION 2.1 REV 08/19/2026

# 3 52066 QN-KG HEADBOARD

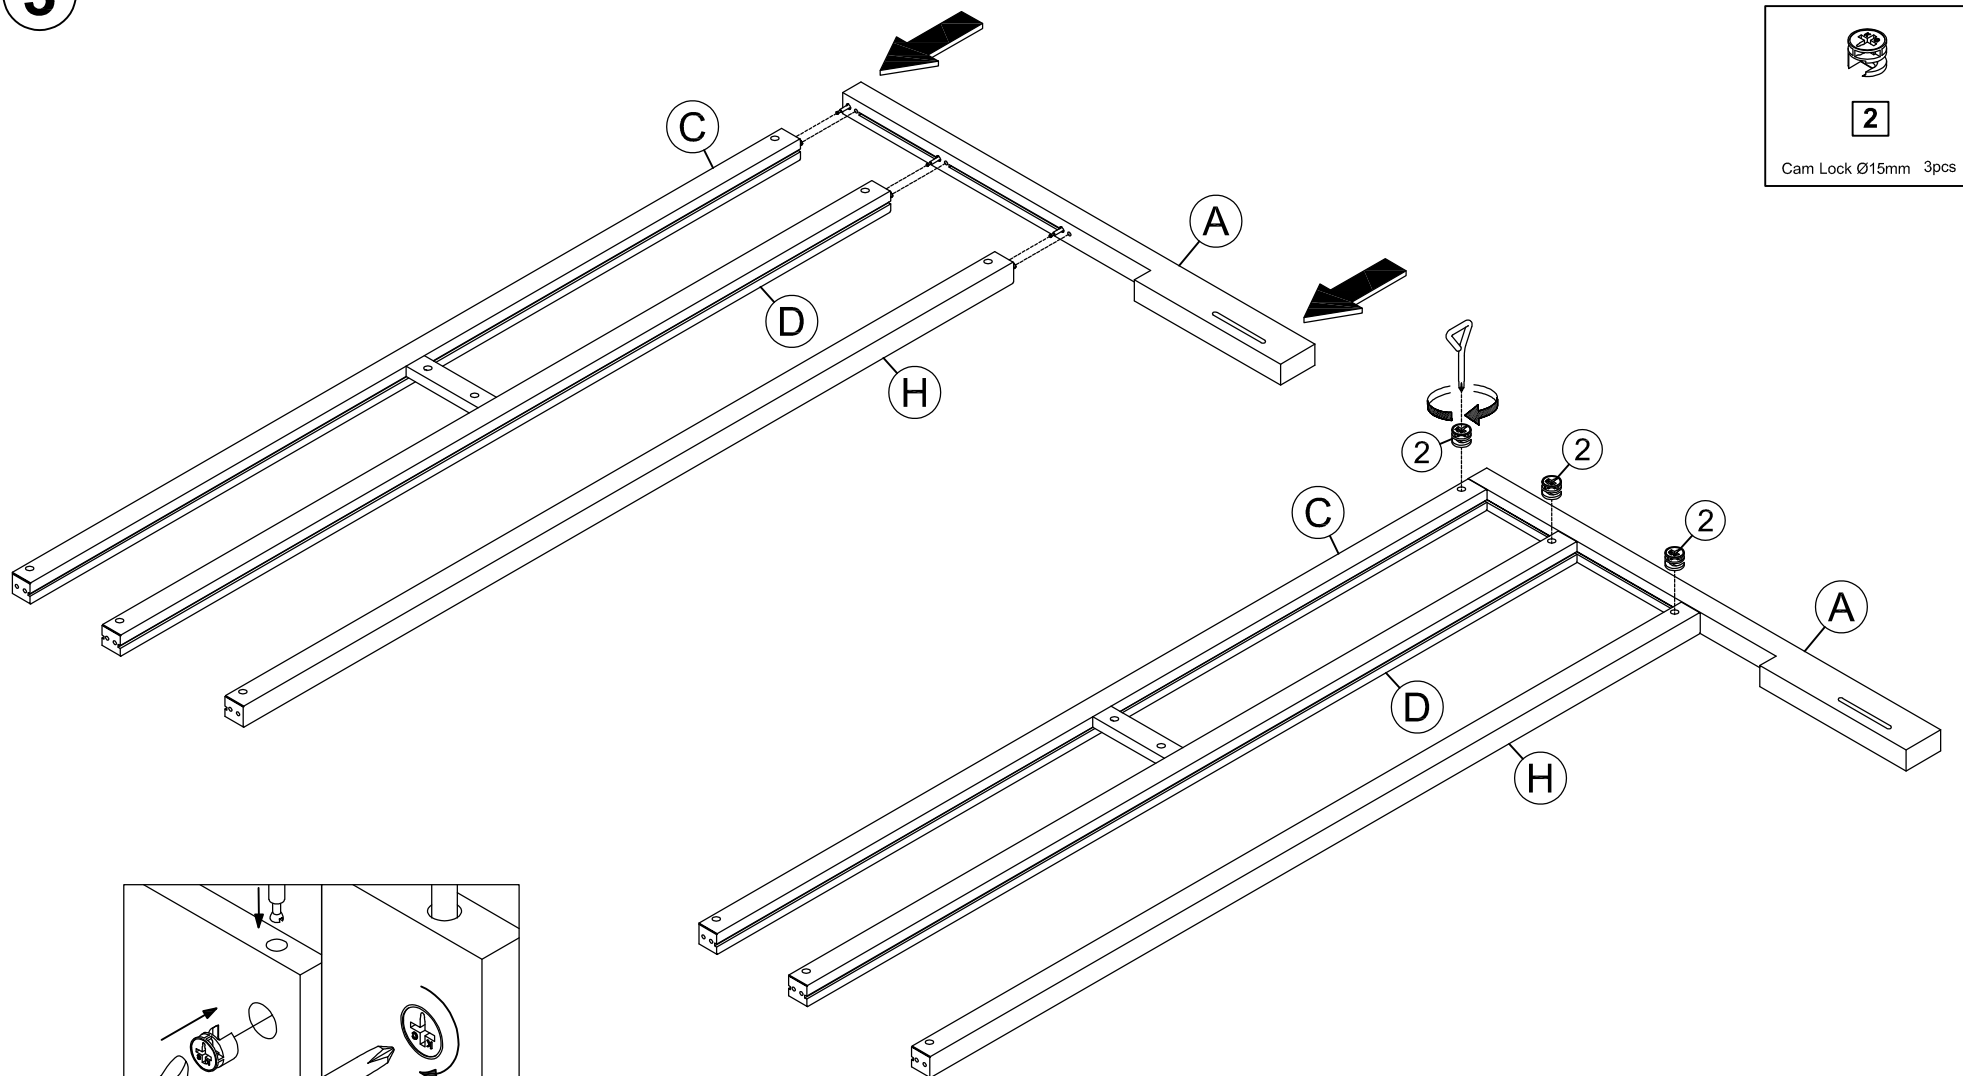

-Insert bed leg (A) into the ends of parts (C), (D), and (H), Insert and tighten the cam locks.



If you're having difficulty, our friendly Customer Care team is always here to help.  
Call us at 1.336.861.0604, email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com).

VERSION 2.1 REV 08/19/2026

4

## 52066 QN-KG HEADBOARD



- One person holds the assembled frame at an approx. 30-degree angle to the ground. The other person inserts panels (E) and (G) into the slots Between (C), (D), and (H) respectively.
- Insert the wooden dowels into the dowel holes at the ends of (C), (D), and (H) respectively.
- Insert bed leg (B) into the ends of parts (C), (D), and (H).

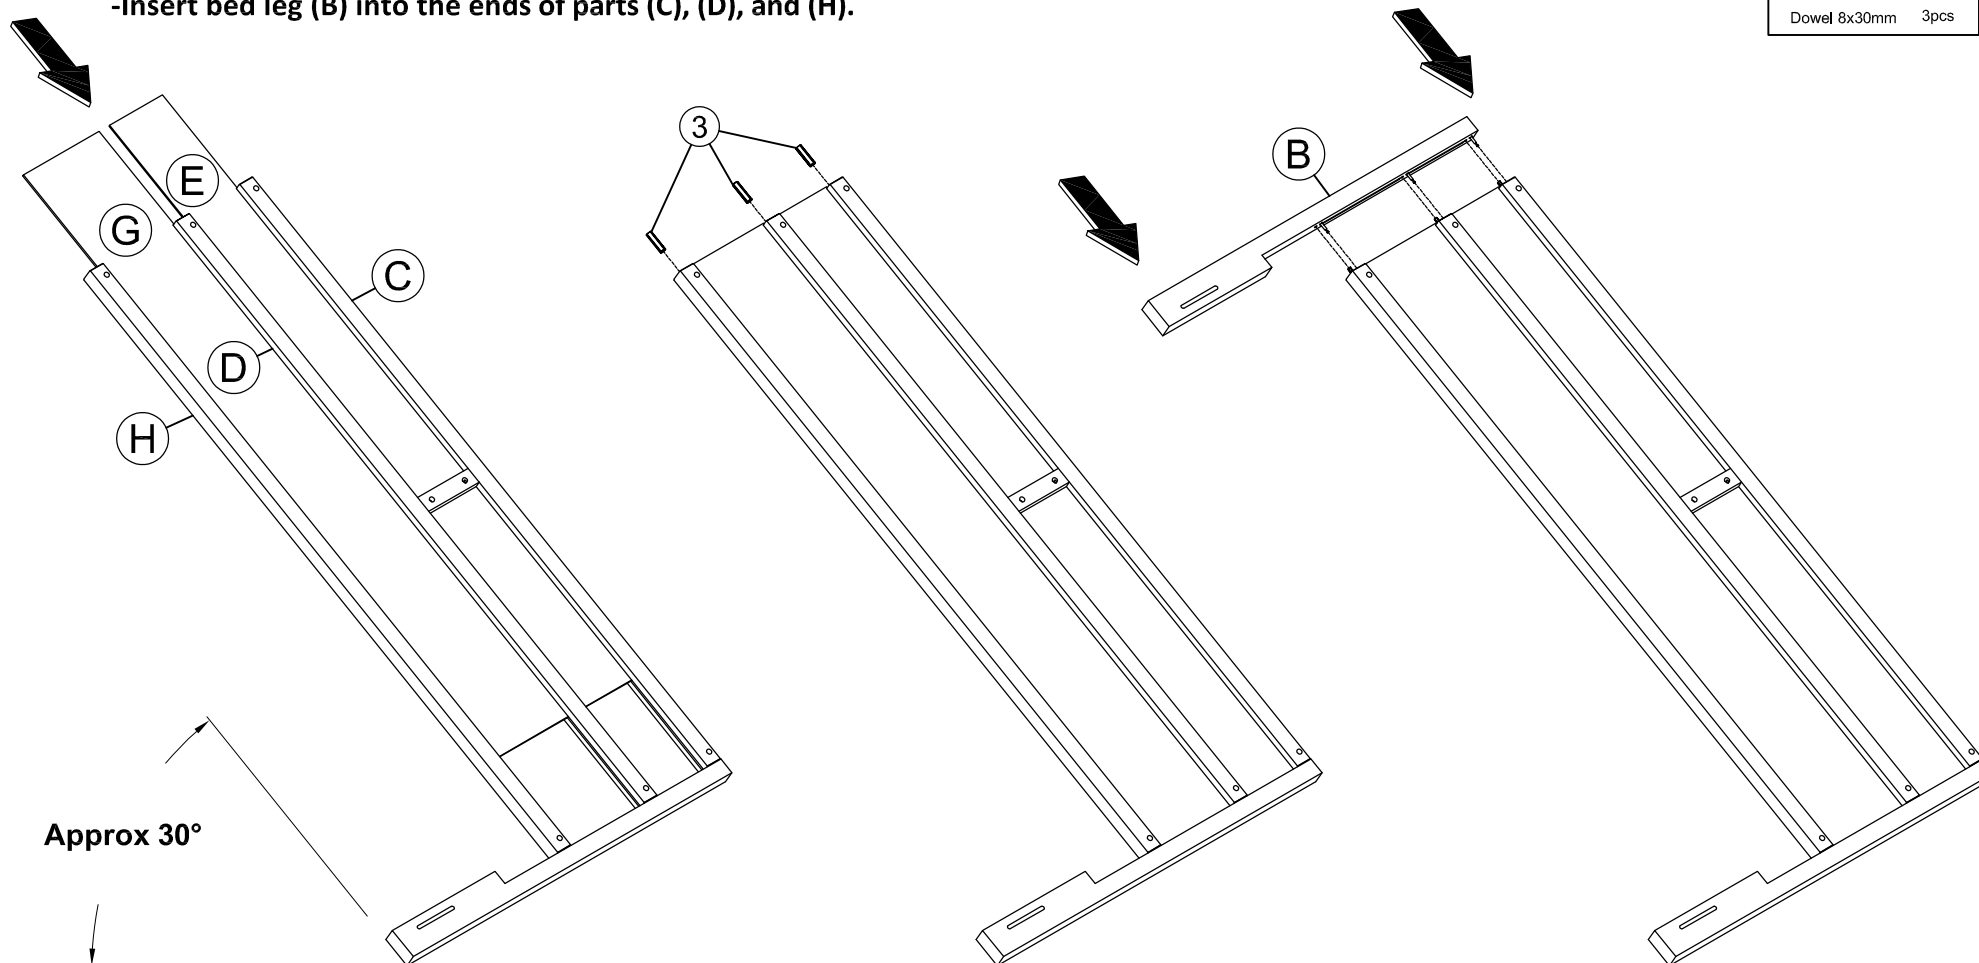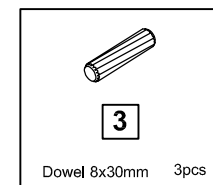


If you're having difficulty, our friendly Customer Care team is always here to help.  
Call us at 1.336.861.0604, email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com).

VERSION 2.1 REV 08/19/2026

# 5 52066 QN-KG HEADBOARD

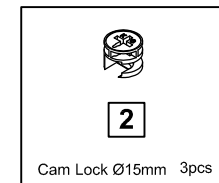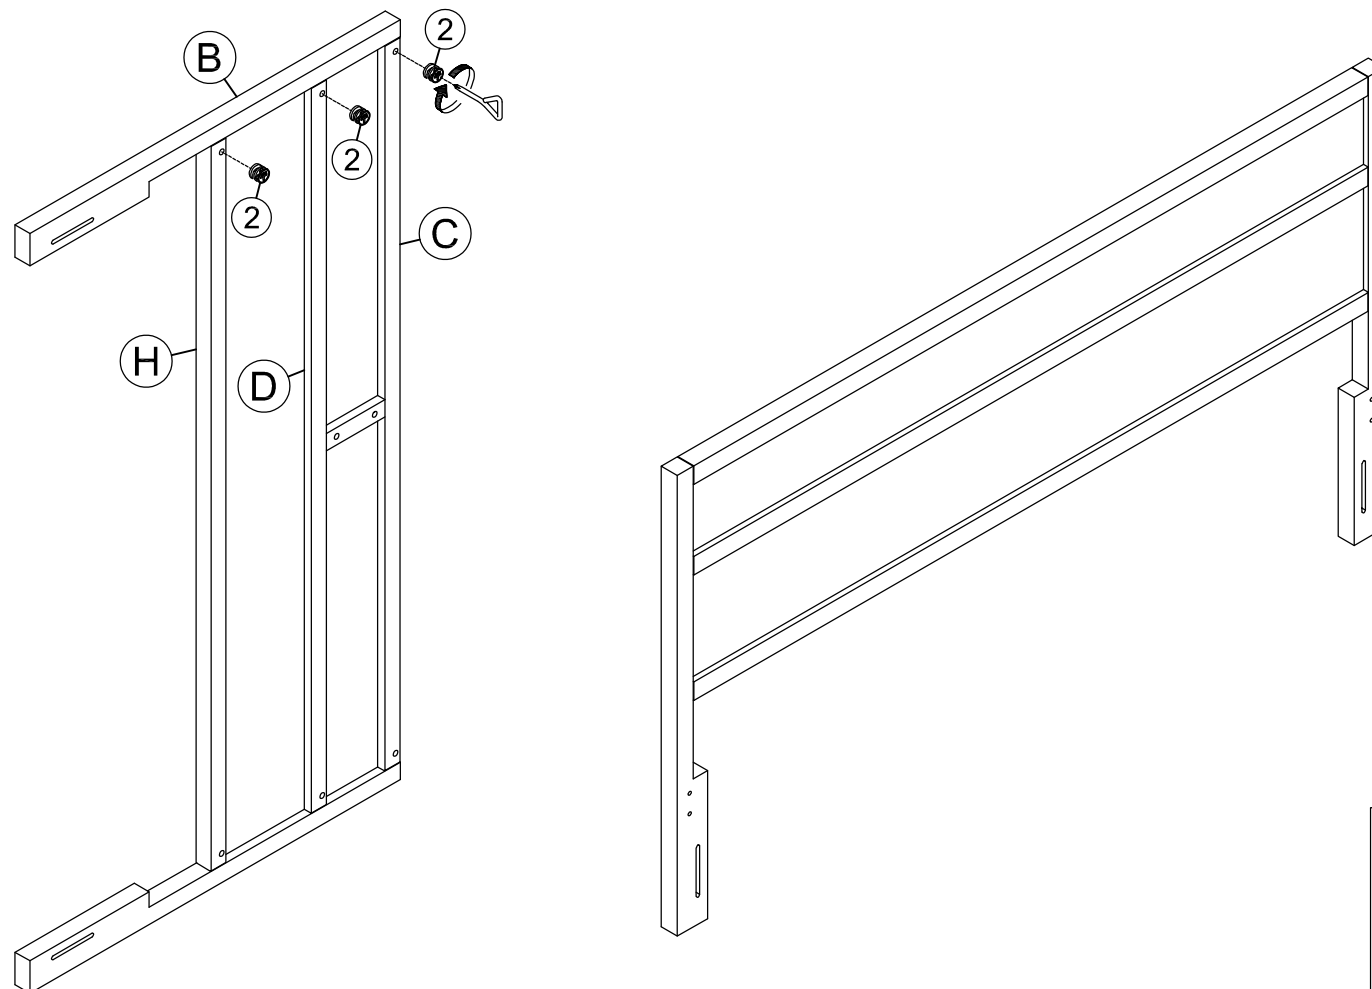


- Insert and tighten the cam locks.  
Your headboard is complete, thank you for your purchase !

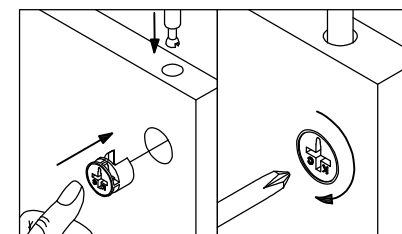

If you're having difficulty, our friendly Customer Care team is always here to help.  
Call us at 1.336.861.0604, email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com).

VERSION 2.1 REV 08/19/2026

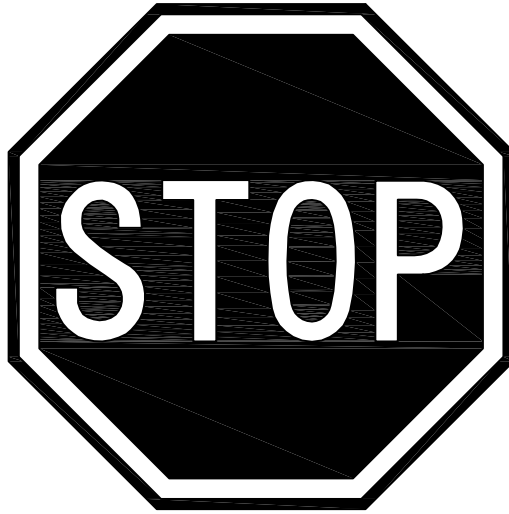

\*\*\*\*\*IMPORTANT MESSAGE\*\*\*\*\*

Please check to insure you have received all parts listed on the instruction sheet provided. If you did not receive all parts or received damaged parts please email or call the following:

Email: [parts@comfortpointe.com](mailto:parts@comfortpointe.com)

Phone: 336-861-0604 Contact: Parts Department

Office hours:

8am to 4pm EST Mon-Thur

8am to 3pm EST Friday

You will need to provide the item number purchased, your reference number, and identify which part is missing/damaged, all parts orders are considered priority.

Thank You