


ASSEMBLY INSTRUCTION

TWIN BED

W2582P185443 W2582P185446
W2582P185487 W2582P185492

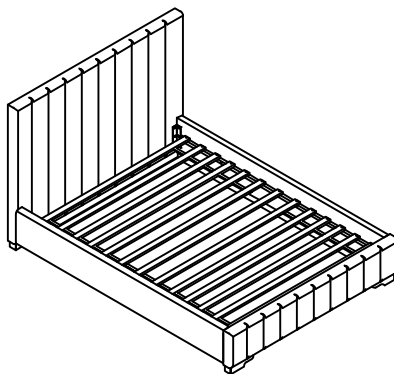


Part list

W2582P185443/ W2582P185487			
No.	Parts	Description	QTY
A		Headboard	1
W2582P185446/ W2582P185492			
B		Footboard	1
C		Side Rail	2
D		Wood strip for Side rail	2
E		Slats	13

Hardware

W2582P185446/ W2582P185492			
No.	Parts	Description	QTY
1		Bolt 5/16" x 25mm	24
2		Flat Washer 5/16"	24
3		Lock washer 5/16"	36
4		Bolt 1/4" x 60mm	12
5		Flat Washer 1/4"	12
6		Screw #8 x 30mm	26
7		Large L metal connector	4
8		Allen Wrench	1


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!


STEP 1:

Attach Large L metal connector (7) to Side rail (C), Headboard (A) and Footboard (B) with Bolt (1), Lock washer (3) and Flat washer (2) .Tighten with Allen Wrench (8).

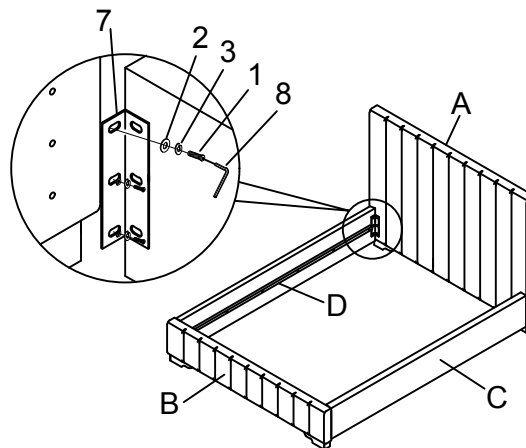

STEP 2:

Attach Wood strip for Side rail (D) to Side rail (C) with Bolt (4), Lock washer (3) and Flat washer (5) .Tighten with Allen Wrench (8).

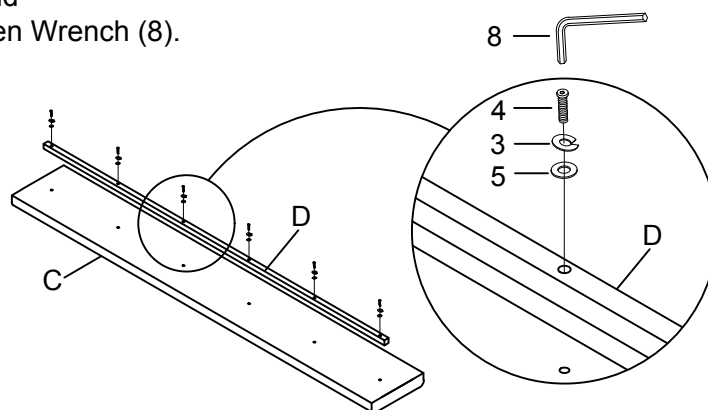

STEP 3:

Attach Slats (E) to Side rail (C) with Allen Screw (6).

