ASSEMBLY GUIDE & CARE INFORMATION

Dresser

191150-DSR



For the most up-to-date assembly instructions, scan the QR code below.

We continuously improve our guides based on customer feedback!

Most customers assemble under 120 minutes

Assembly is easiest with 2 people

Important Assembly & Safety Notes

1. **Do not assemble or use this product if any parts are missing, damaged, or broken.**
   Contact customer support for factory replacement parts before proceeding.

2. **Carefully check all packing materials before discarding the carton.**
   Small hardware may have come loose during shipment.

3. **Identify and count all parts and hardware before starting.**
   Compare each item with the parts and hardware list in the instructions.

4. **Follow the assembly steps exactly as shown.**
   Improper assembly may result in personal injury or property damage.

5. **Some parts may be heavy or have sharp edges.**
   Use caution when handling components.

6. **Secure all bolts firmly before use.**
   Do not use the product until all fasteners are fully tightened.

7. **Recheck and tighten all bolts every 90 days.**
   This helps maintain long-term stability and prevents loosening over time.

8. **Do not drag or push the furniture.**
   Always use two people to lift and reposition the furniture. Dragging may damage the legs or center support.

9. **Use floor protection on non-carpeted surfaces.**
   An area rug or furniture pads are recommended (not included).

10. **Do not use or store this product near open flames or flammable chemicals.**

11. **Keep these instructions for future reference and maintenance.**


Need a replacement part?

Please contact us through the website used for your purchase.
To help us resolve your request quickly, include:

- **Clear photos of the issue**
- **The part number and quantity needed**


IMPORTANT: Seller and Manufacturer disclaim all and any liability for property damage, personal injury, or loss, direct, indirect, or incidental, resulting from the incorrect assembly, inadequate maintenance, improper use, or neglect of this product.

Parts Check List

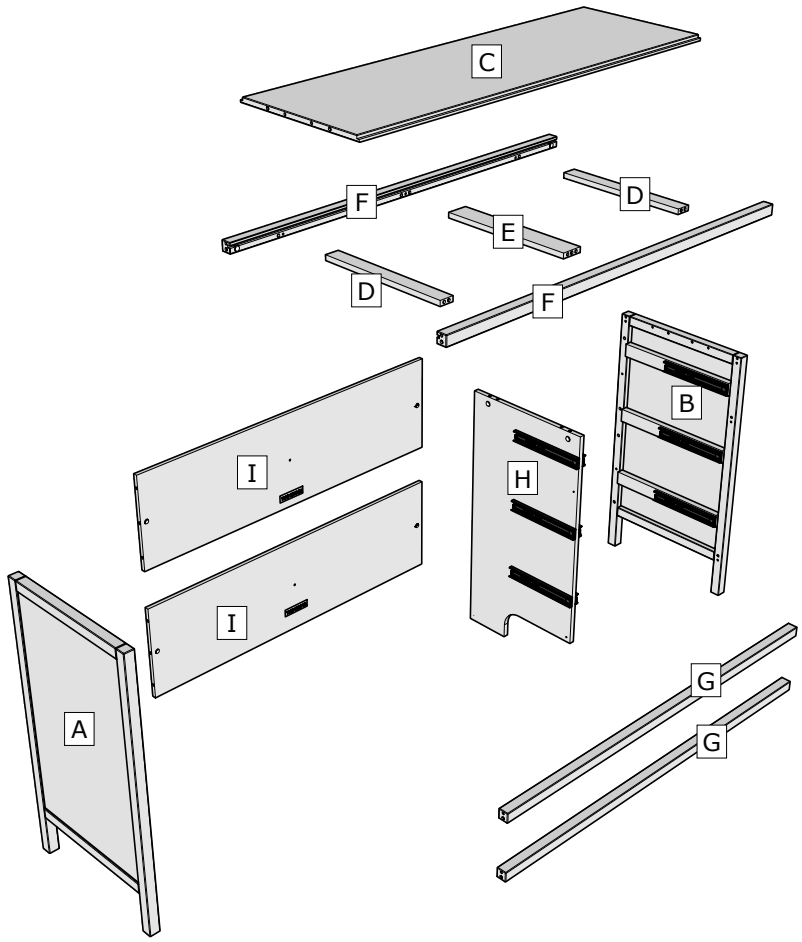



A	Side Panel Left	x1
B	Side Panel Right	x1
C	Top Panel	x1
D	Side Top Rail	x2
E	Center Top Rail	x1
F	Upper Rail	x2
G	Front Rail	x2
H	Division	x1
I	Back Panel	x2

Parts Check List


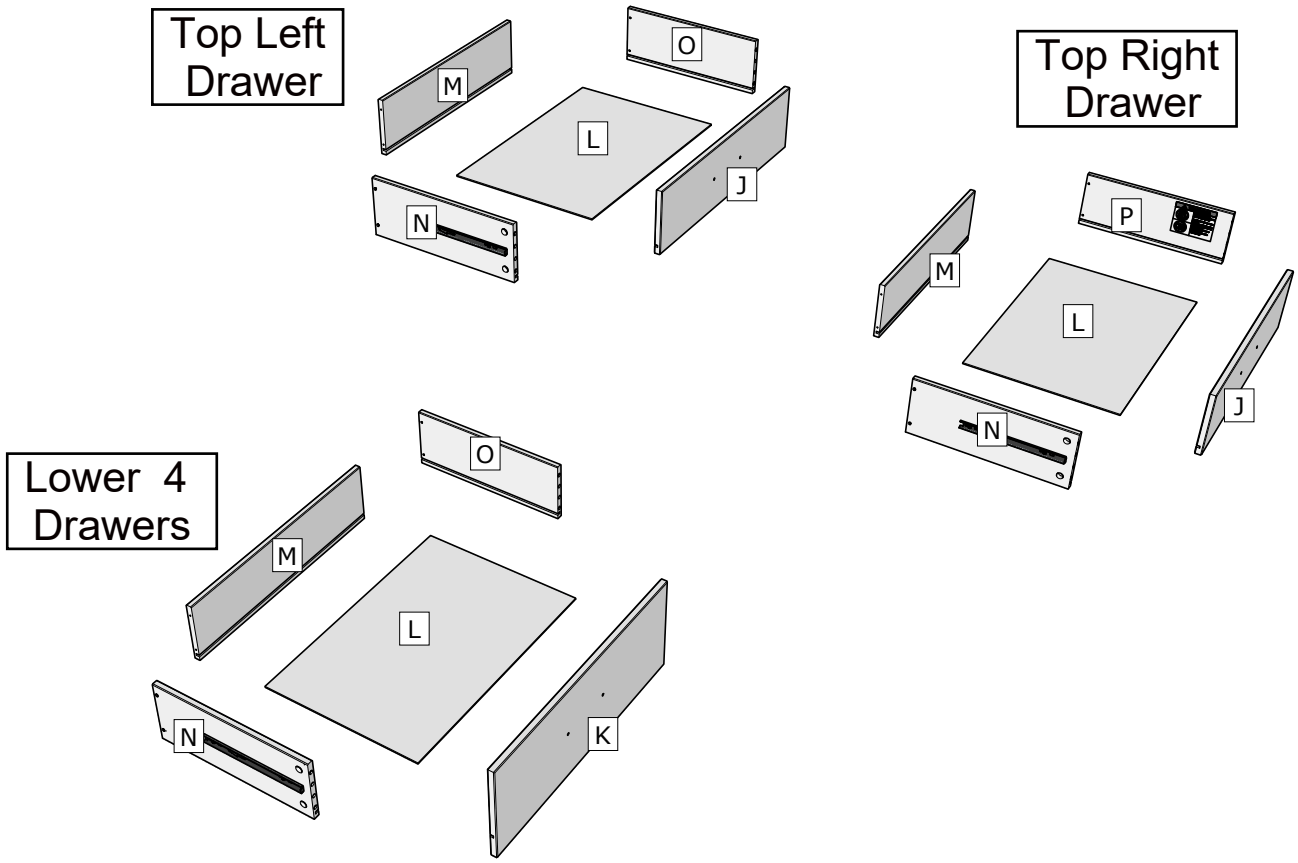


J	Upper Drawer Face	x2
K	Lower Drawer Face	x4
L	Drawer Bottom	x6
M	Drawer Back	x6
N	Left Drawer Side	x6
O	Right Drawer Side	x5
P	Right Drawer Side with Warning Sticker	x1




Need a replacement screw?
Refer to the Hardware Check List below for size specifications.


Q	Dowel	x44	M8 x 30mm	
R	Dowel	x12	M6 x 30mm	
S	Cam Bolt	x48	M6 x 31mm	
T	Cam Lock	x48	M15 x 11mm	
U	Metal Bracket	x2	M22 x 11 x 13mm	
V	Screw	x16	M3.5 x 12mm	
W	Leveling Feet	x1	M17 x 25mm	
X	Leveling Bush	x1	M13 x 19mm	
Y	Adhesive Felt Pad	x4	20mm x 19mm	
Z	Screw	x26	M3.5 x 35mm	

Need a replacement screw?
Refer to the Hardware Check List below for size specifications.

AA	Handle	x6	M135 x 20 x 11mm	
AB	Screw	x12	M4 x 22mm	
AC	Anti Tipping Ribbon	x1	M150 x 30mm	
AD	Flat Washer	x2	M10 x 1mm	
AE	Screw	x1	M4 x 16mm	
AF	Screw	x1	M4.5 x 40mm	
AG	Wall Anchor	x1	M6 x 35mm	
AH	Phillips Screwdriver	x1	M35 x 100mm	





Assembly Step 1

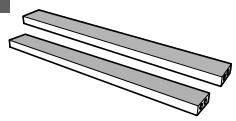
D Side Top Rail x2 	E Center Top Rail x1 	H Division x1 	Q Dowel x10  M8 x 30mm

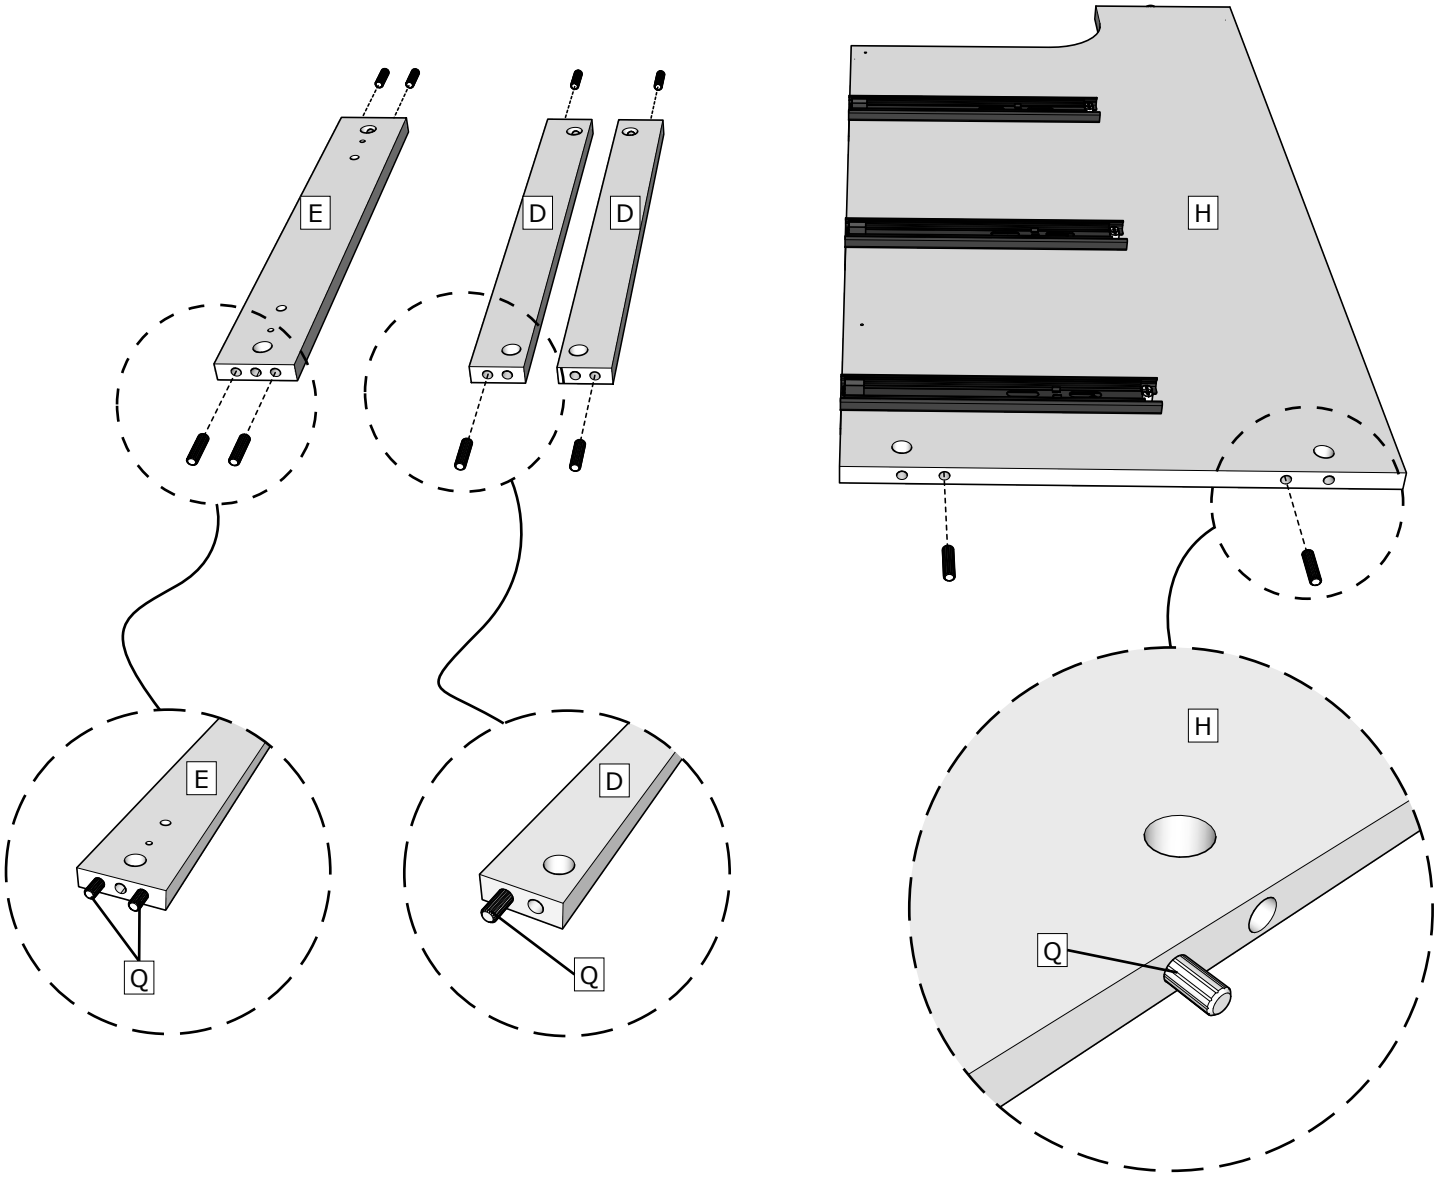

• Insert Q into D, E and H as shown.



Assembly Step 2


N Left Drawer Side x6 	O Right Drawer Side x5 	P Right Drawer Side (Sticker) x1 	Q Dowel x24  M8 x 30mm

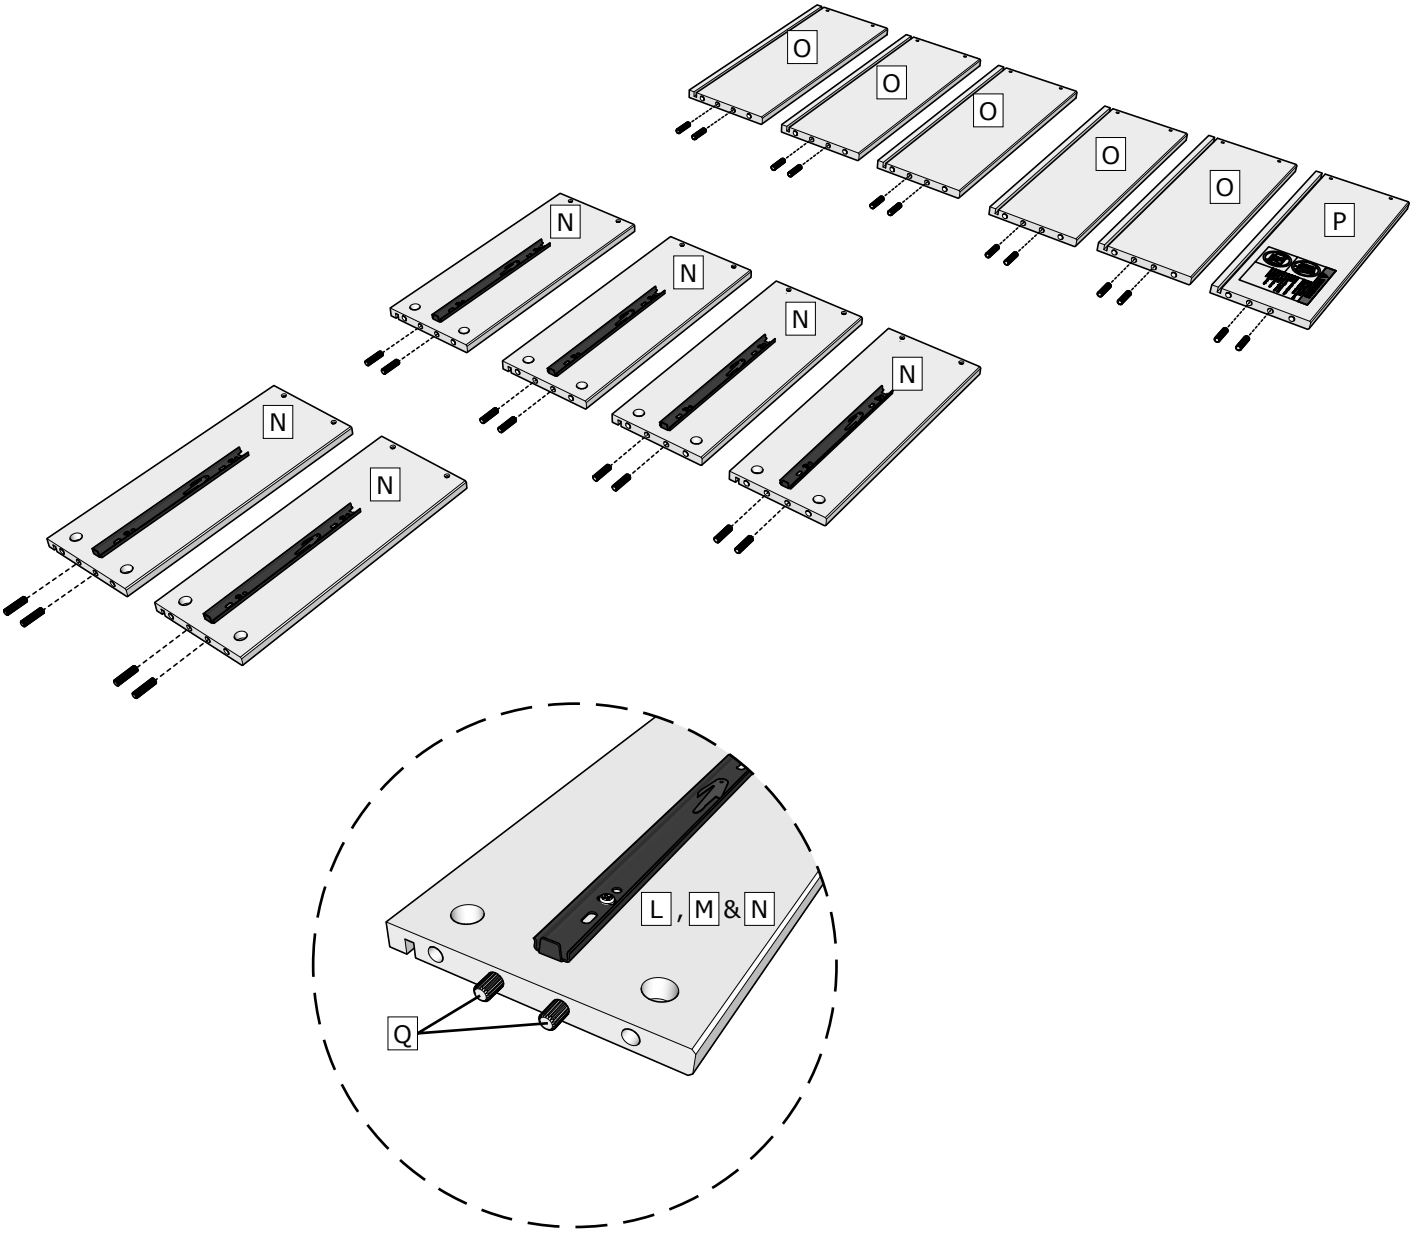

• Insert Q into L , M and N as shown.




Assembly Step 3

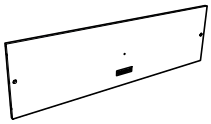
I Back Panel x2 	Q Dowel x8  M8 x 30mm

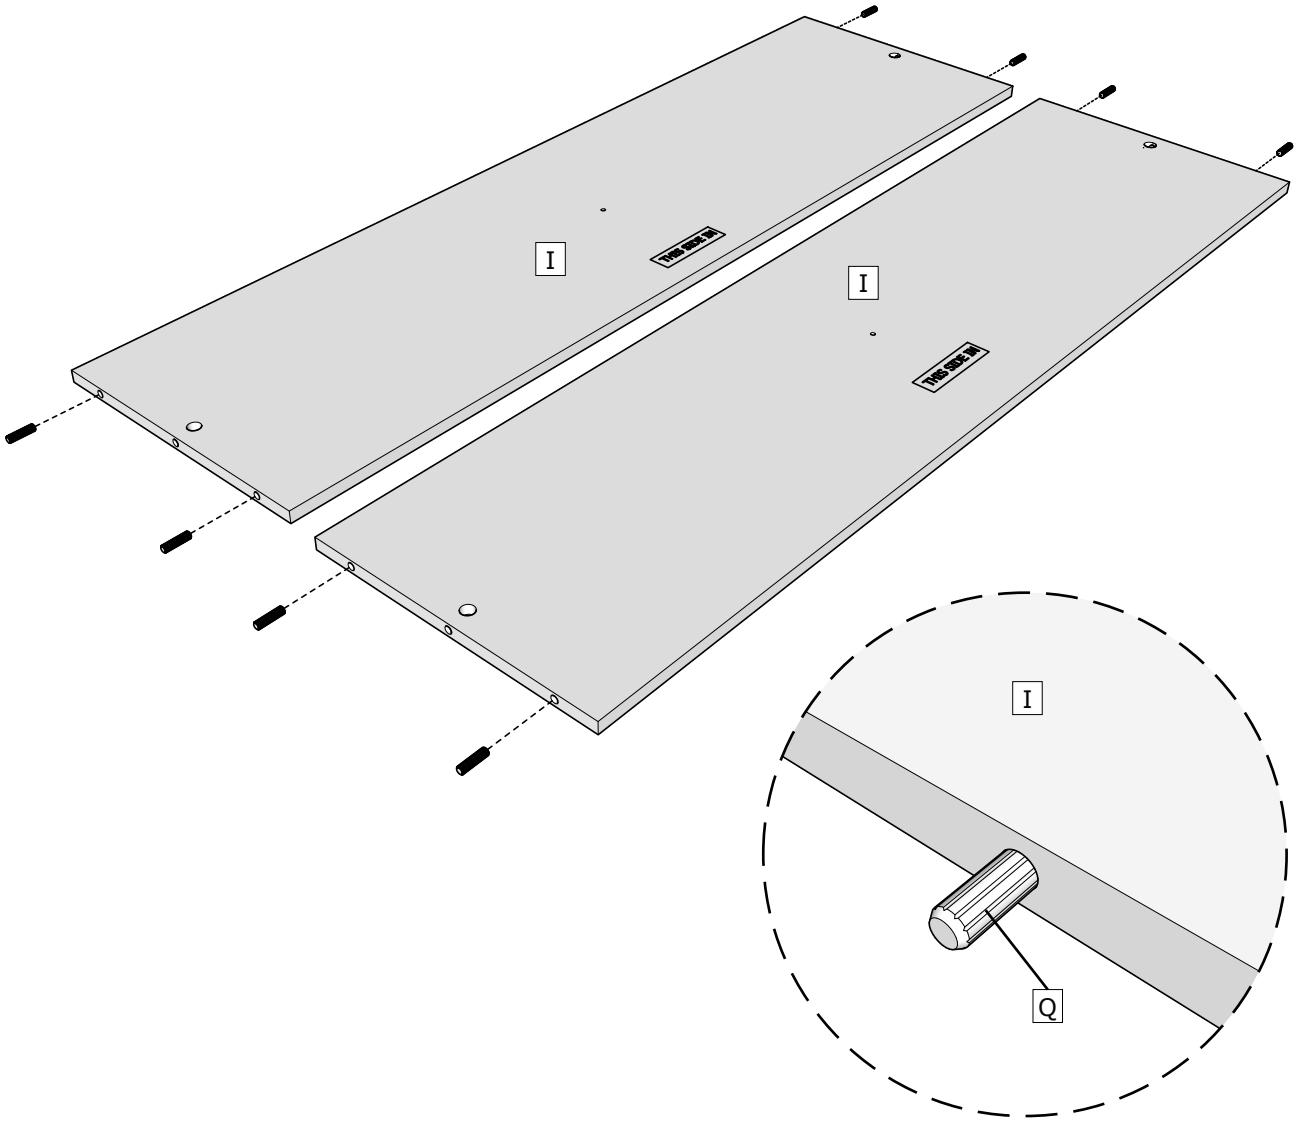


• Insert Q into I as shown.

Assembly Step 4

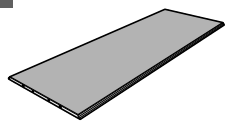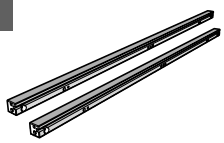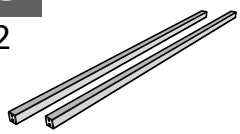
C Top Panel	F Upper Rail	G Front Rail	R Dowel
x1 	x2 	x2 	x12  M6 x 30mm

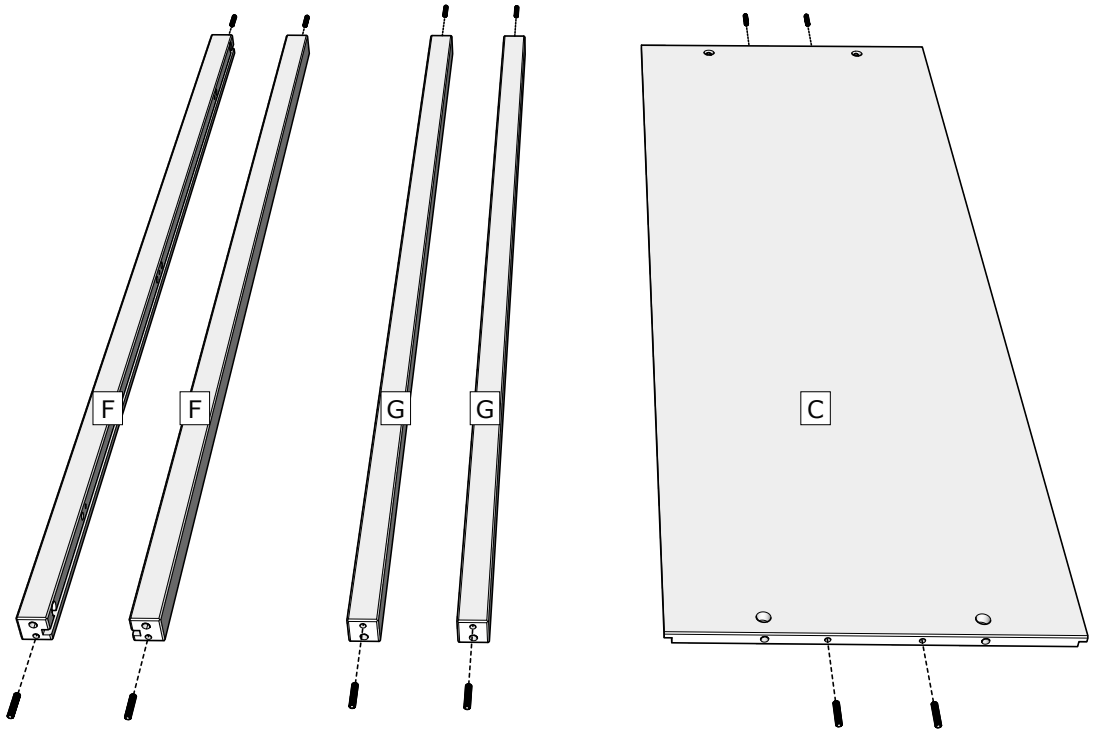


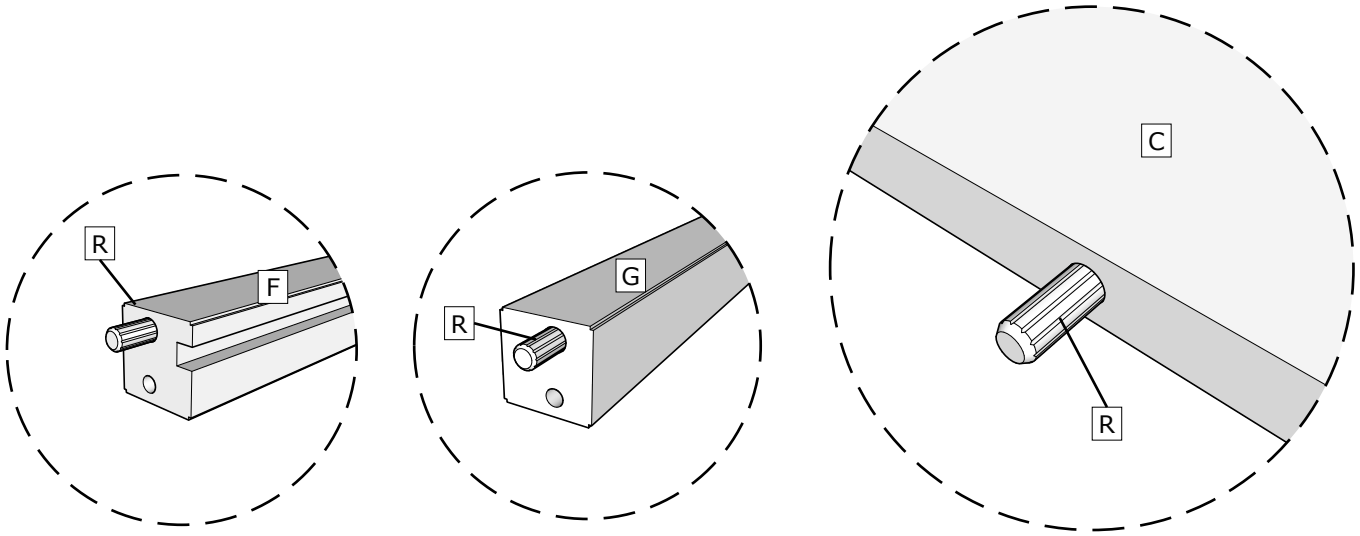

• Insert R into C , F , and G as shown.



Assembly Step 5


U	V	AH
Metal Bracket	Screw	Phillips Screwdriver
x2	x2	x1
		
M22 x 11 x 13mm	M3.5 x 14mm	M35 x 100mm

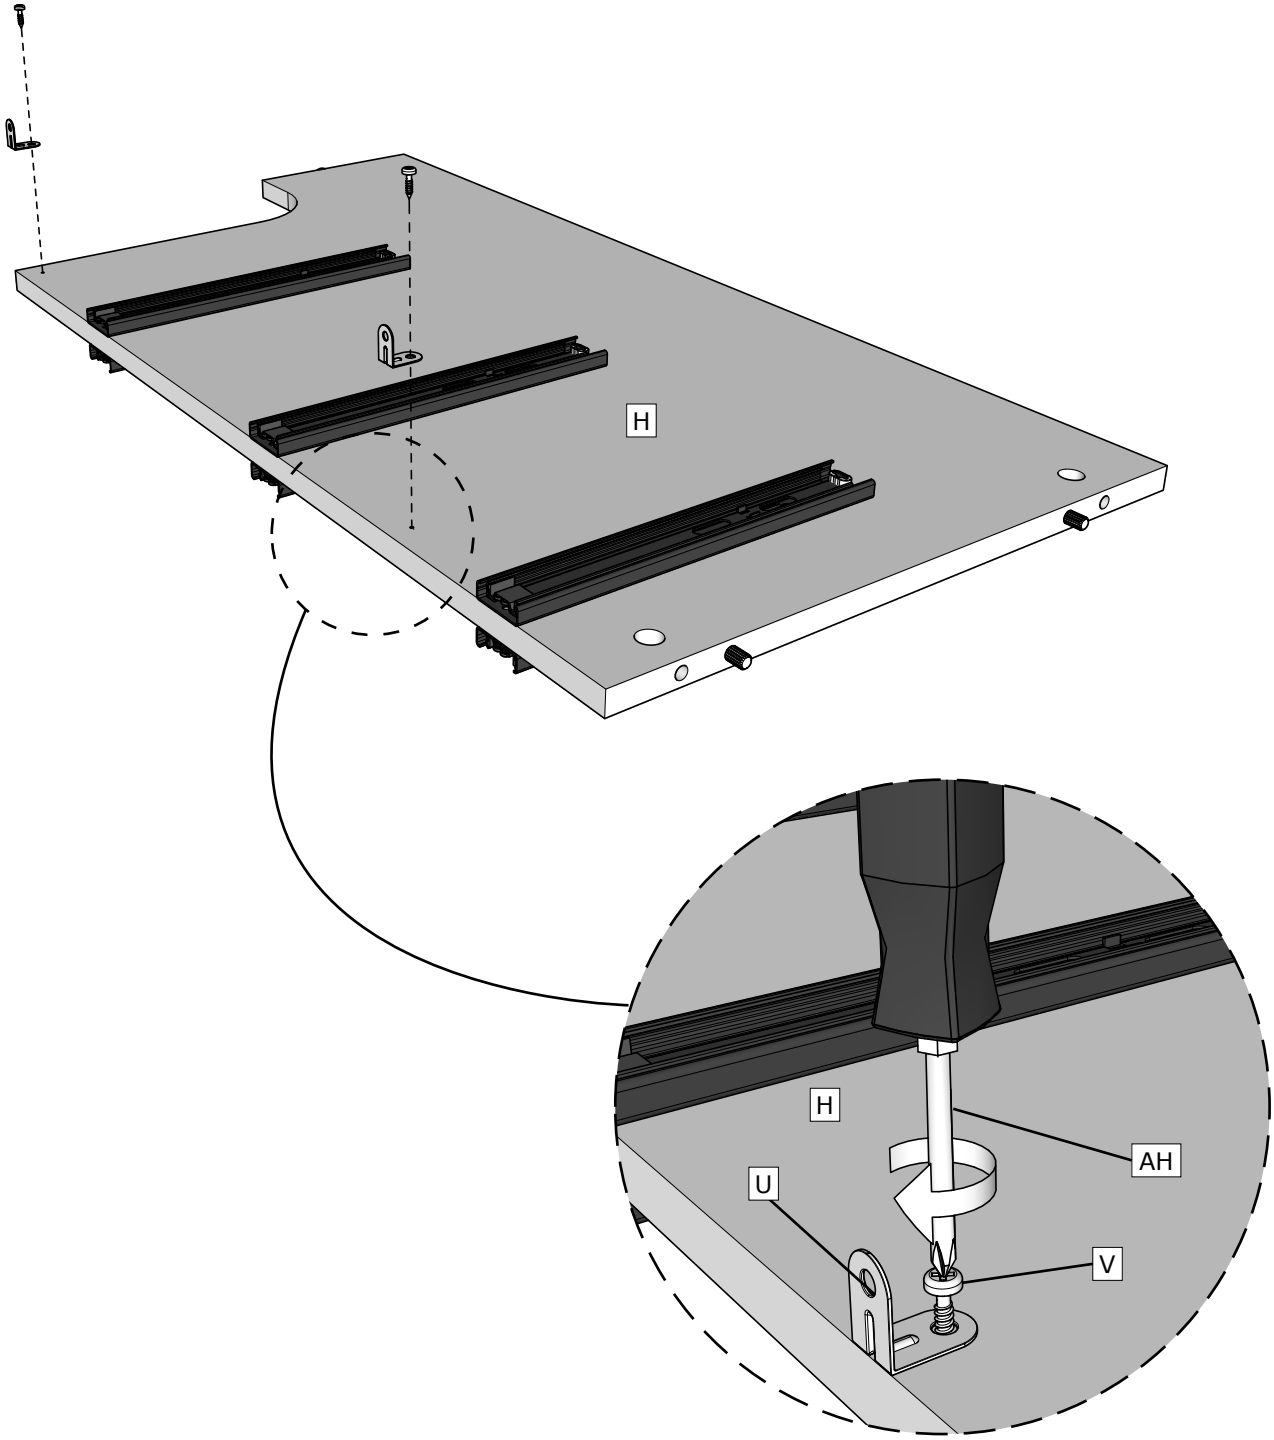

• Attach [U] to [H] with [V] using a Phillips Screwdriver [AH] as shown.





Assembly Step 6


A Side Panel Left x1 	B Side Panel Right x1 	S Cam Bolt x22  M6 x 31mm	AH Phillips Screwdriver x1  M35 x 100mm

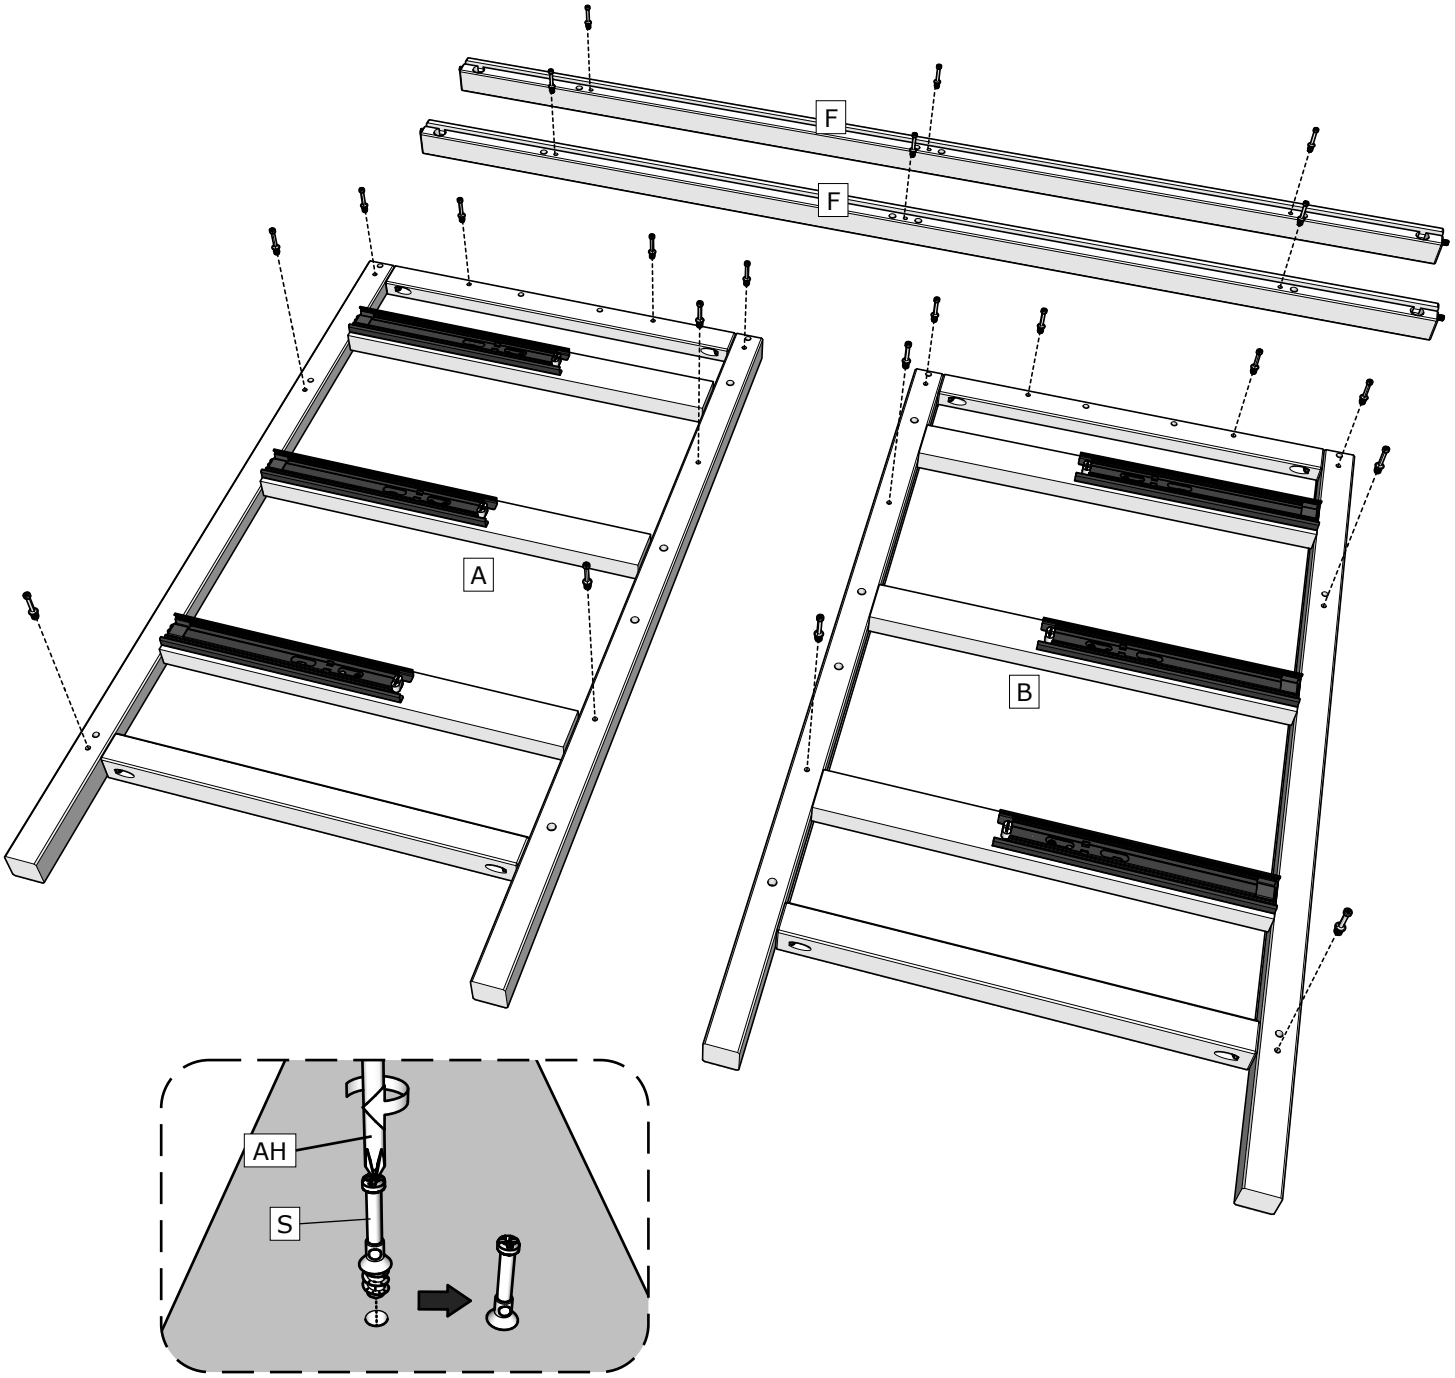


• Insert S into A , B and F using a Phillips Screwdriver AH as shown.

Assembly Step 7


J	K	S	AH
Upper Drawer Face	Lower Drawer Face	Cam Bolt	Phillips Screwdriver
x2	x4	x26	x1
		 M6 x 31mm	 M35 x 100mm

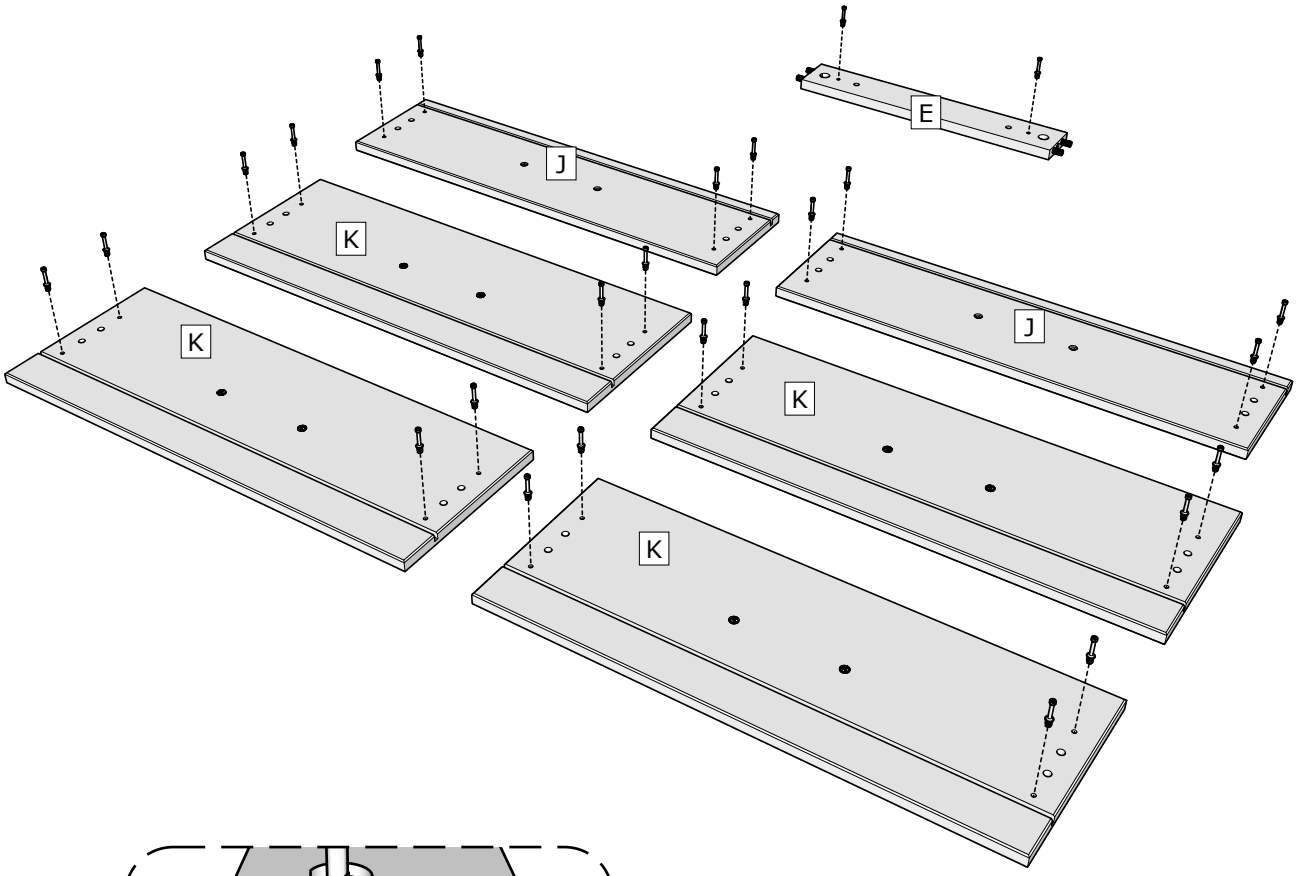

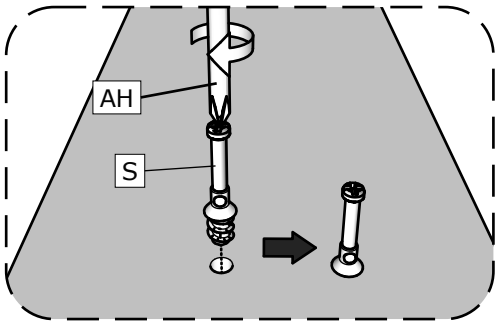


• Insert S into E , J , and K using a Phillips Screwdriver AH as shown.


Assembly Step 8

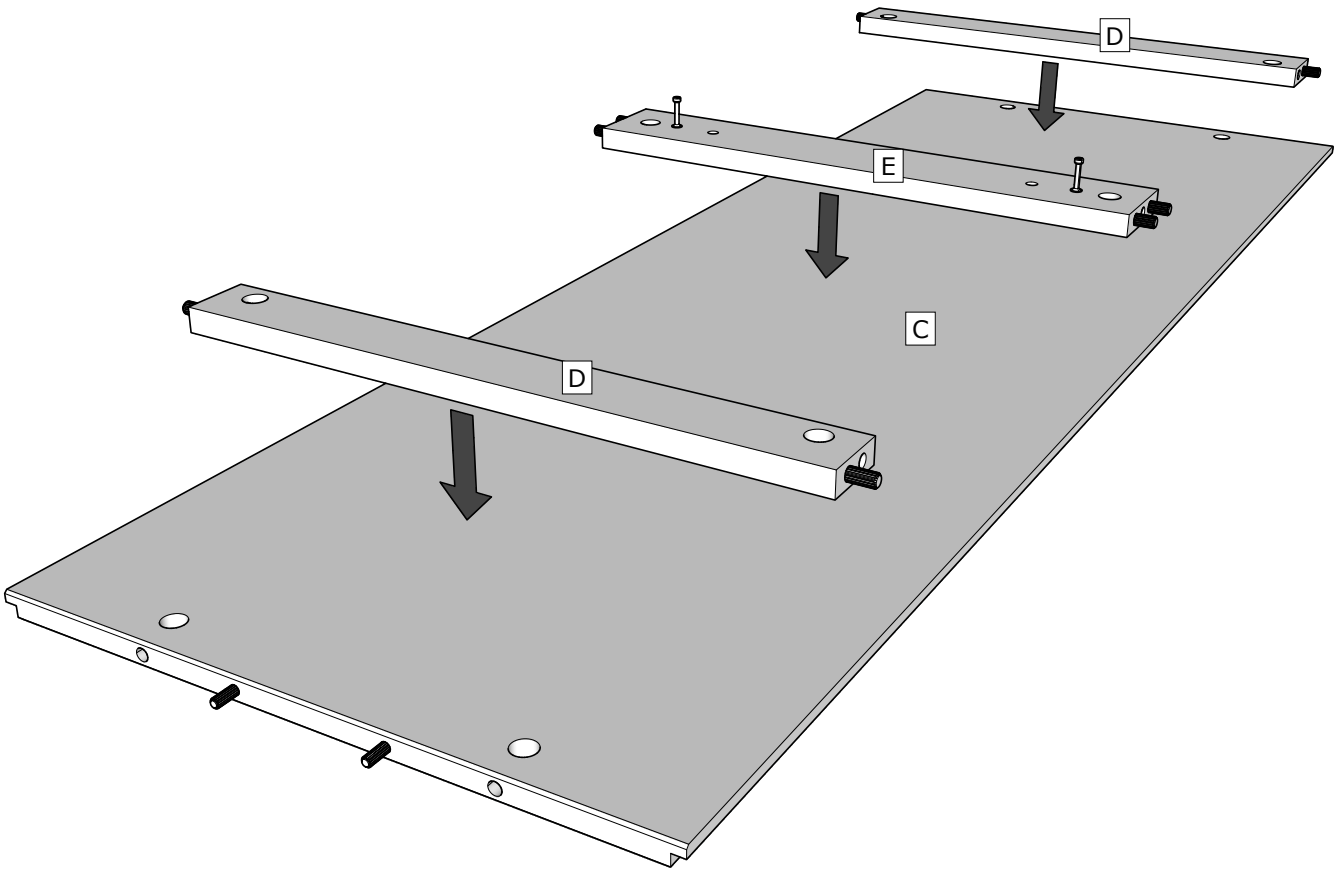


- Place Side Top Rails [D] and Center Top Rail [E] onto Top Panel [C] as shown.


Assembly Step 9

T	Cam Lock	AH	Phillips Screwdriver
x6		x1	
M15 x 11mm		M35 x 100mm	

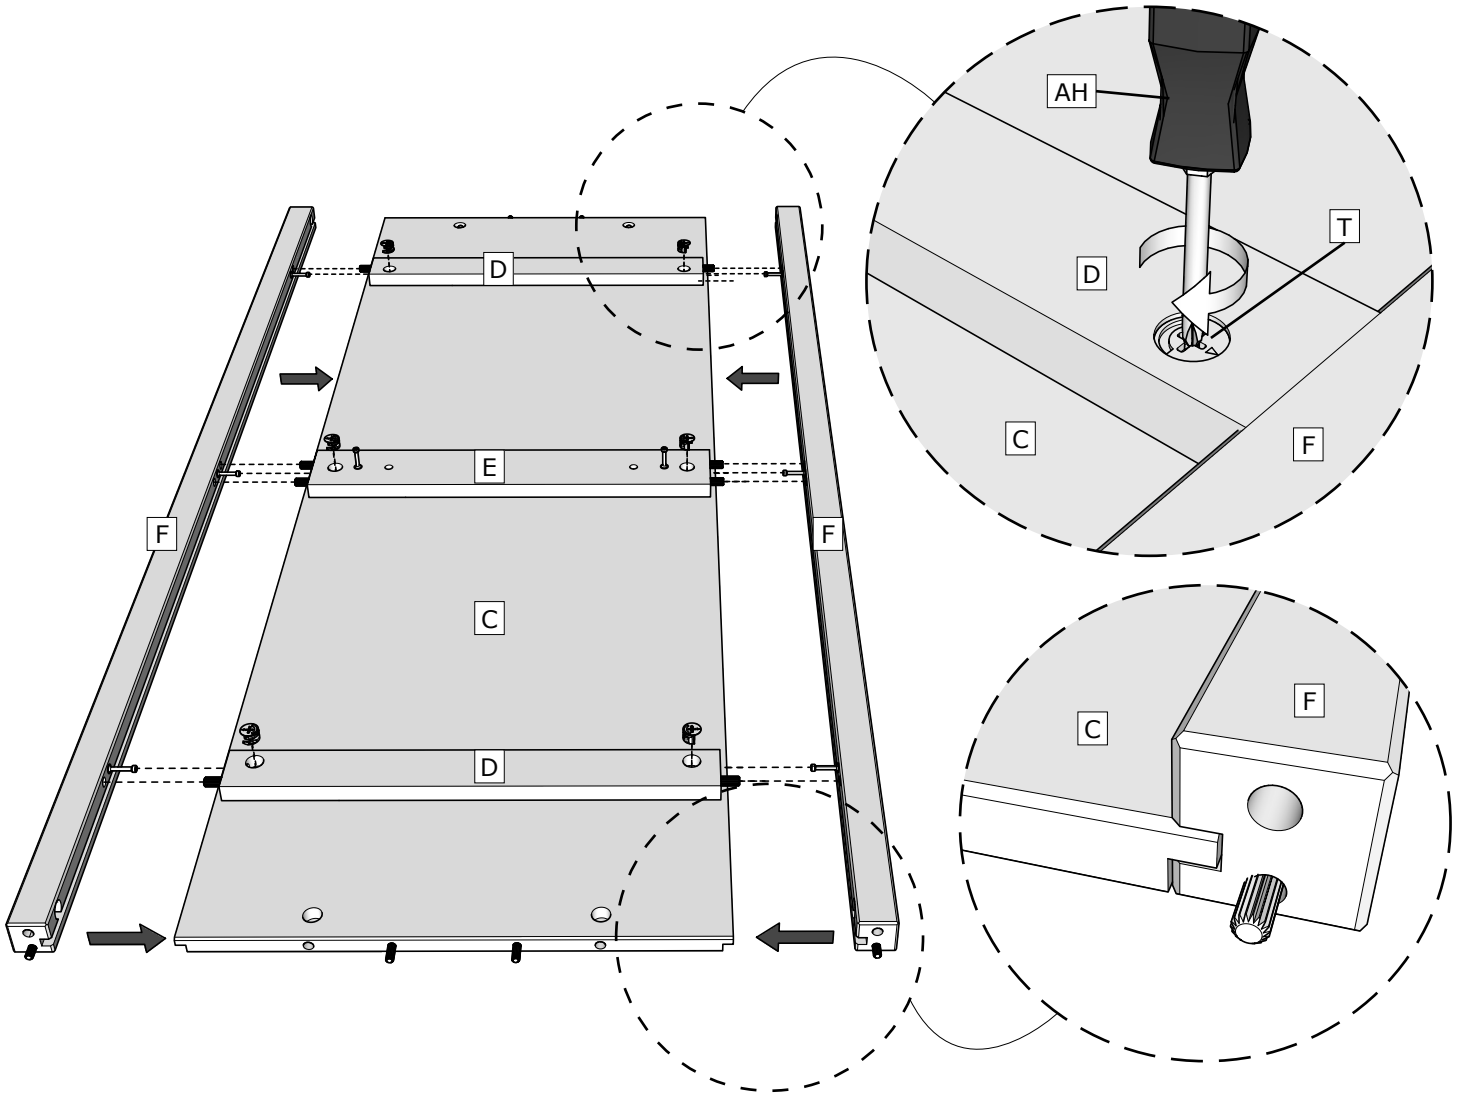


Note: Align the cam lock opening with the hole in the panel.

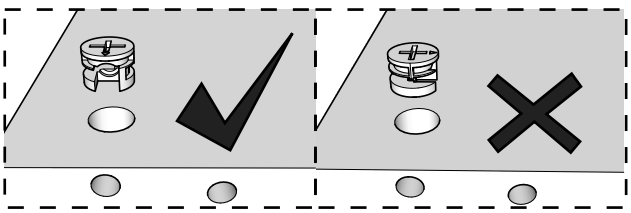


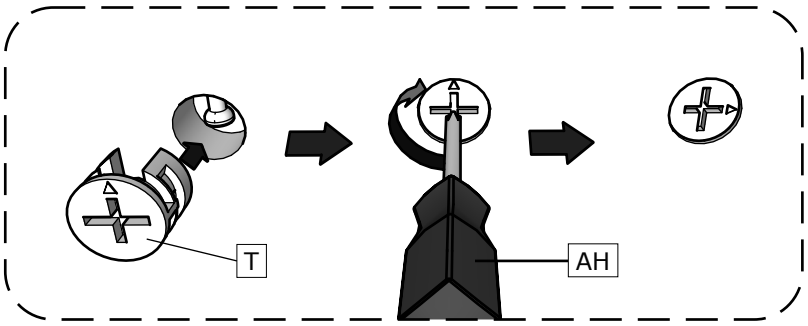

- Align the cam bolts on F and the dowels on D and E with their corresponding holes, then attach F to C.
- Secure D and E with T using the Phillips Screwdriver AH.


Assembly Step 10

T	Cam Lock	AH	Phillips Screwdriver
x6		x1	
M15 x 11mm		M35 x 100mm	

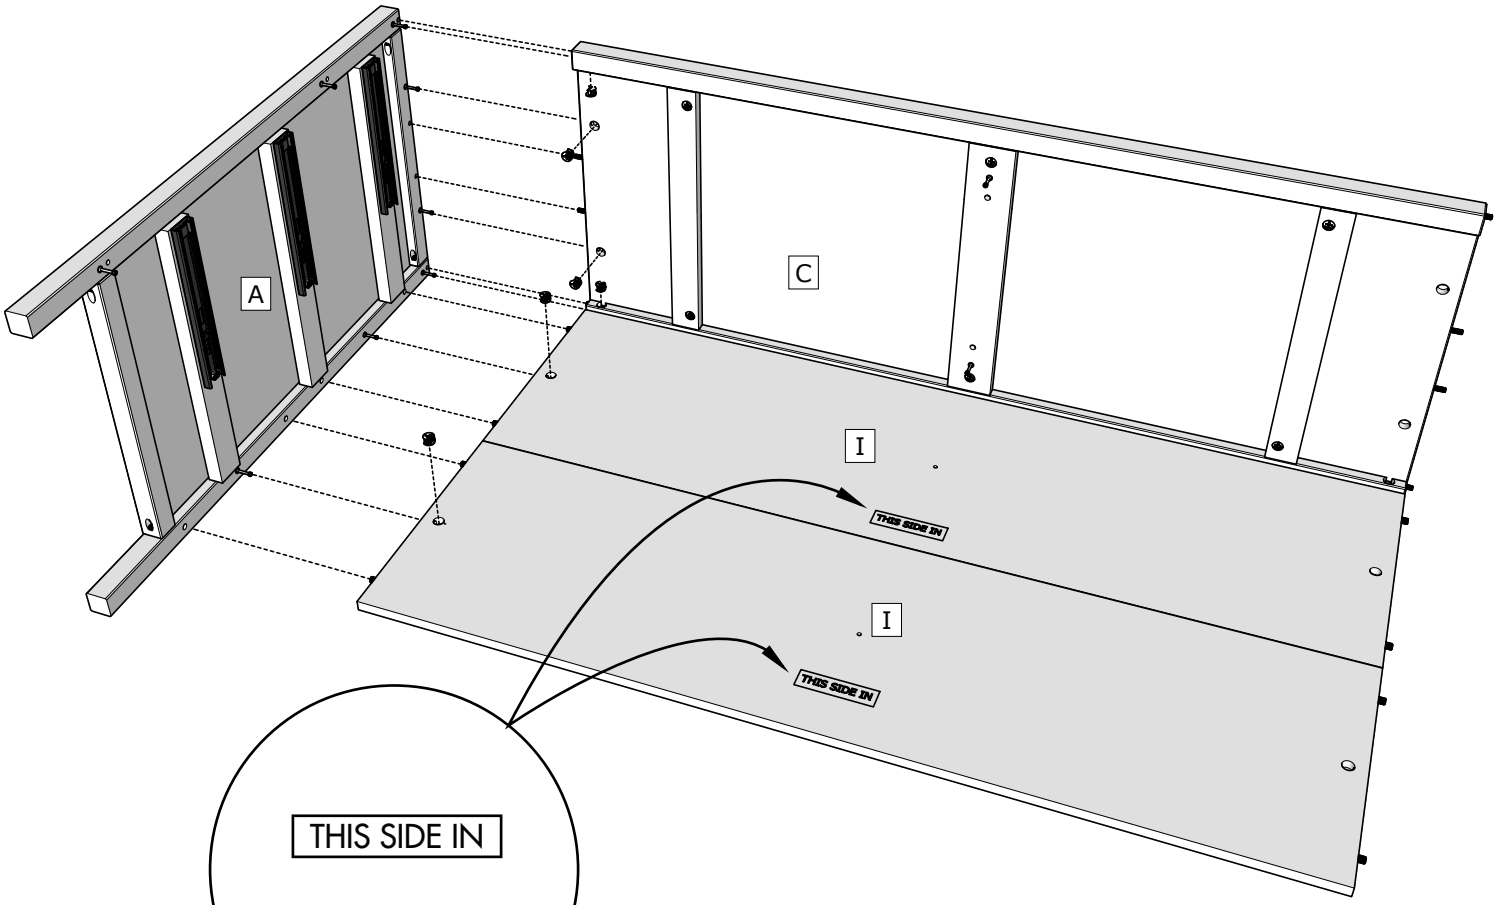


THIS SIDE IN

Sticker facing inwards

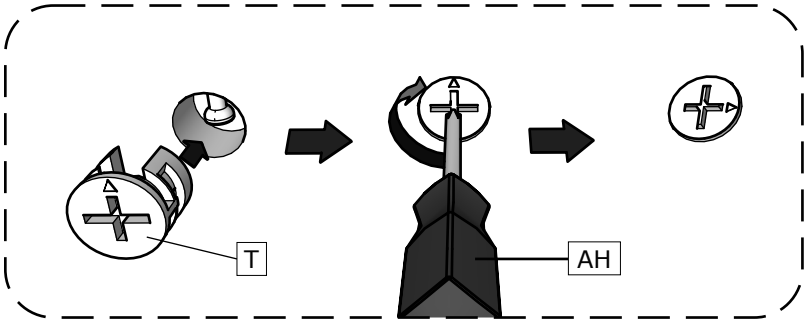



Note: Align the cam lock opening with the hole in the panel.

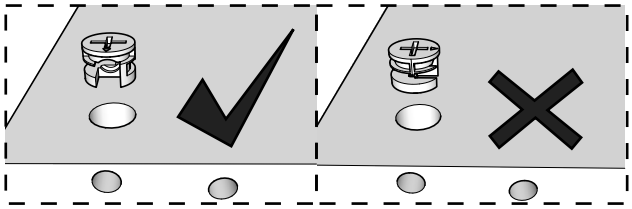


- Attach Panel A to Assembled Top C and I using T as shown.
- Tighten with a Phillips Screwdriver AH.


Assembly Step 11

T	Cam Lock	AH	Phillips Screwdriver
x2		x1	
M15 x 11mm		M35 x 100mm	

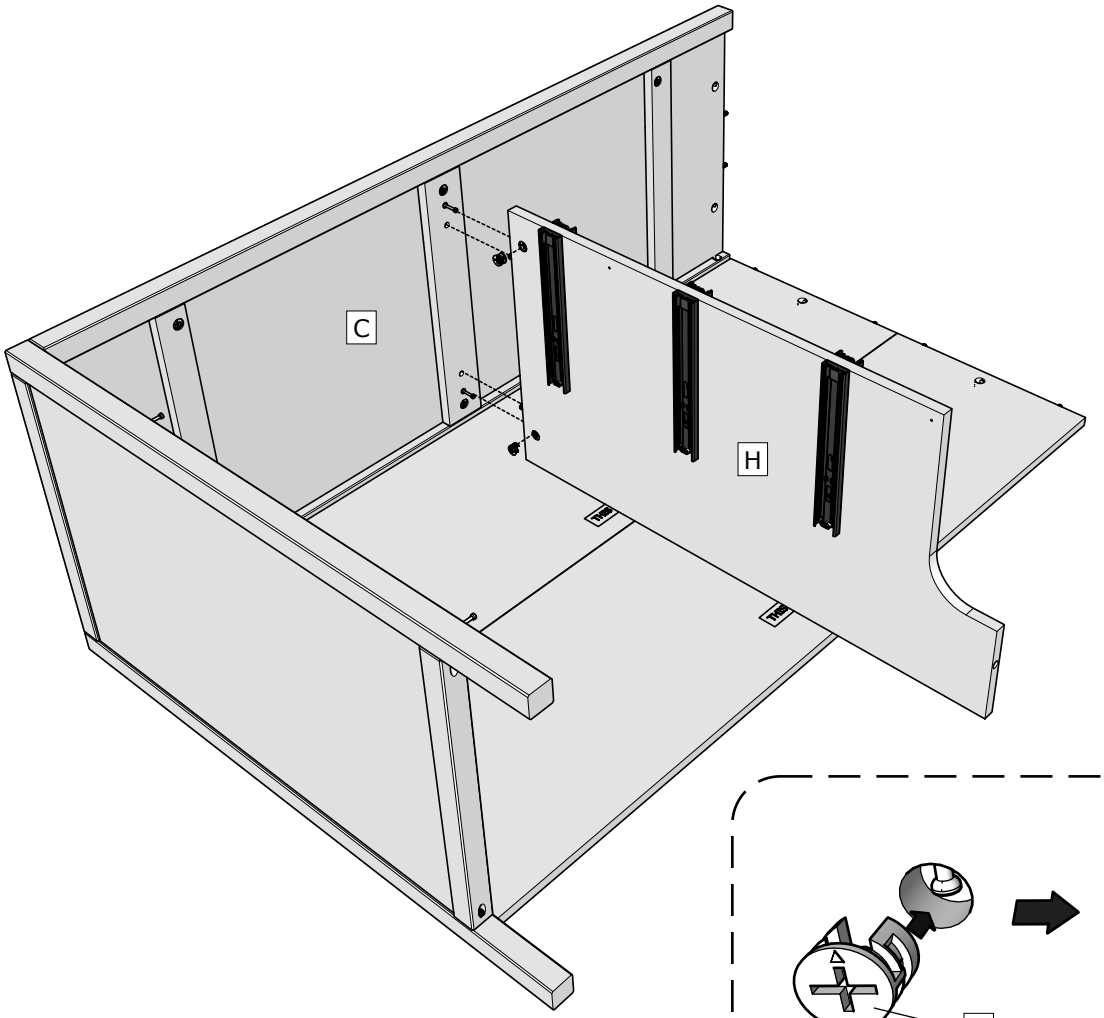

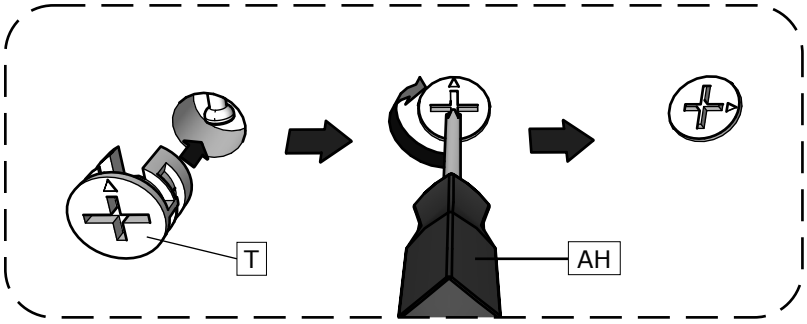



Note: Align the cam lock opening with the hole in the panel.

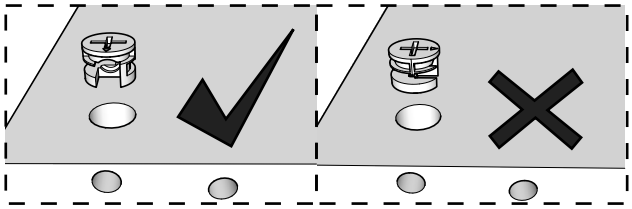


• Attach H to Assembled Top C and Assembled Dresser with T as shown.
• Tighten with a Phillips Screwdriver AH.


Assembly Step 12

T	Cam Lock	AH	Phillips Screwdriver
x2		x1	
M15 x 11mm		M35 x 100mm	

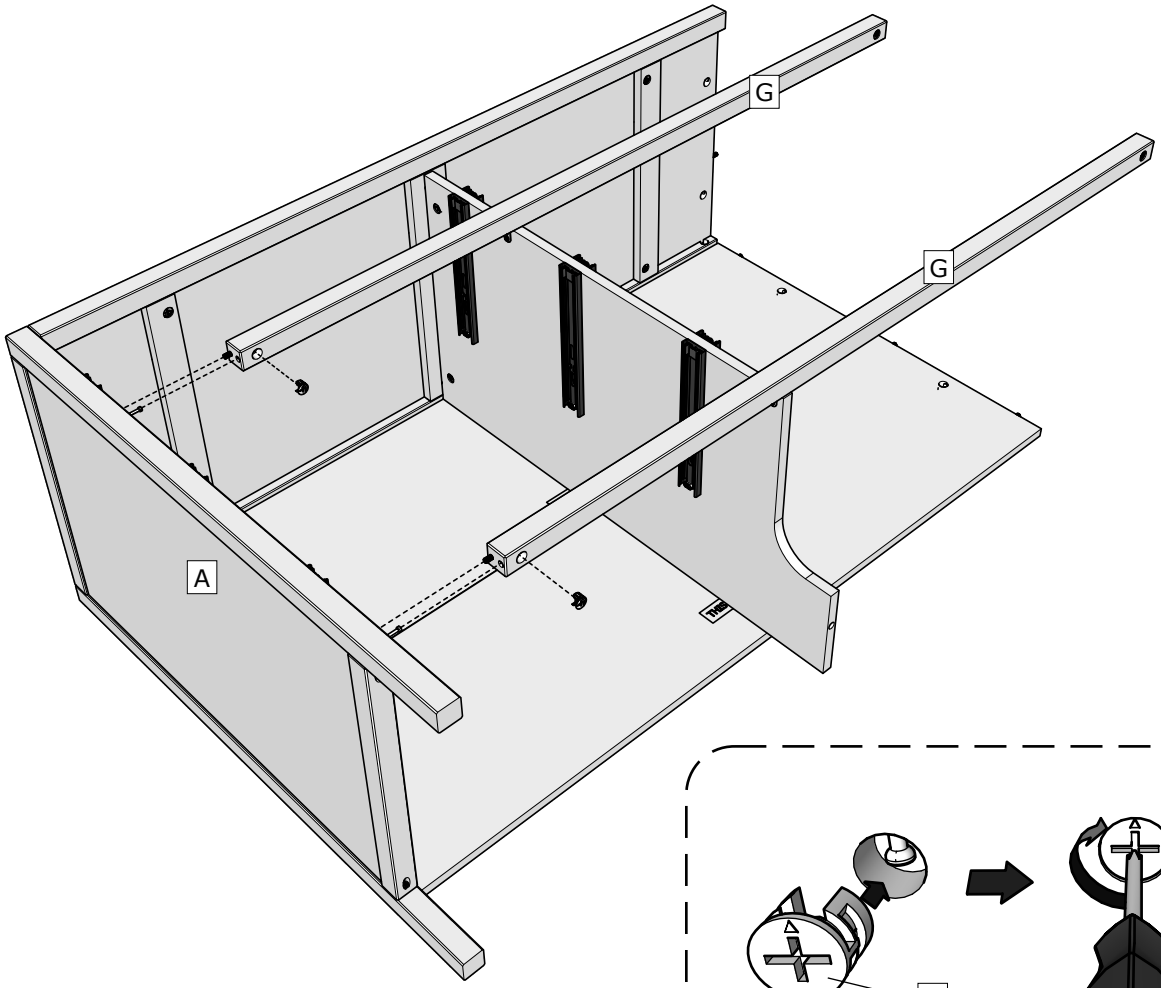

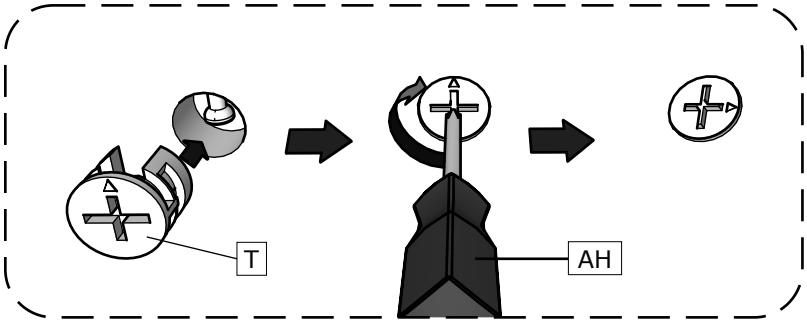


Note: Align the cam lock opening with the hole in the panel.

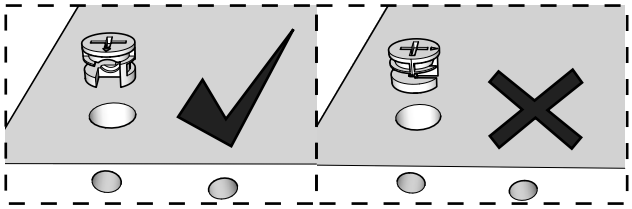



- Attach G to A and Assembled Dresser with T as shown.
- Tighten with a Phillips Screwdriver AH.

Assembly Step 13

V	Screw
x2	
M3.5 x 14mm	


AH	Phillips Screwdriver
x1	
M35 x 100mm	

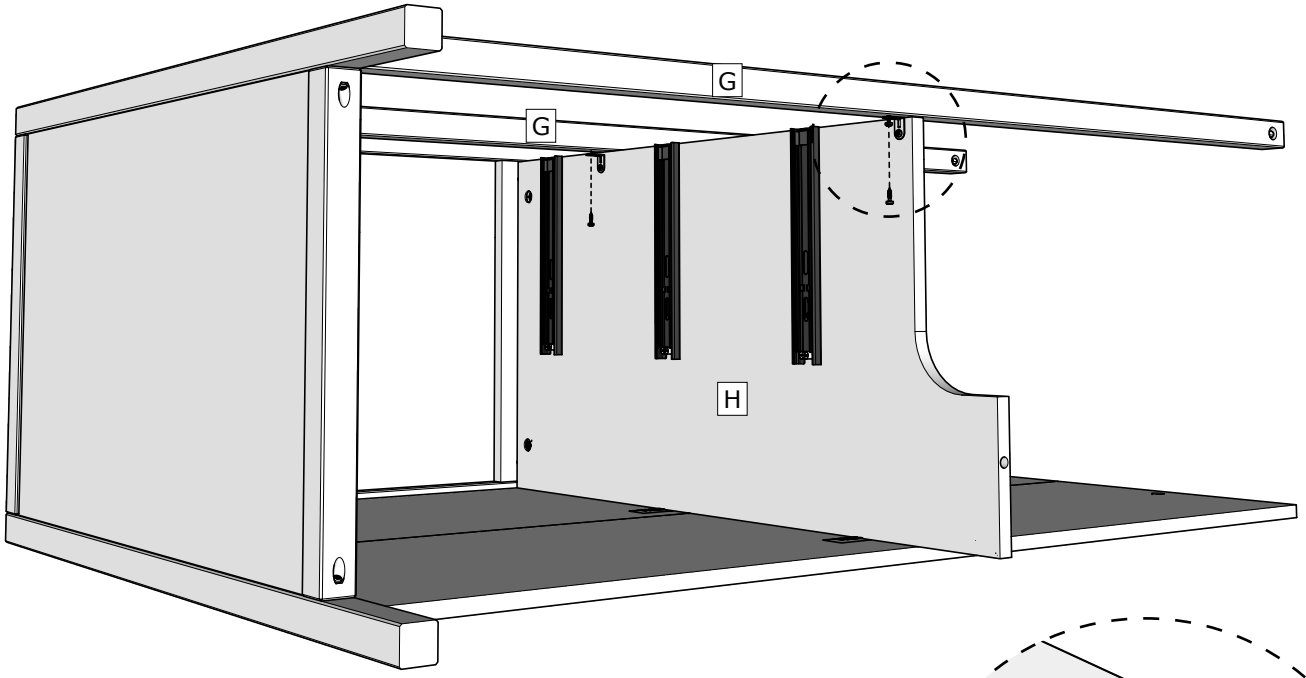


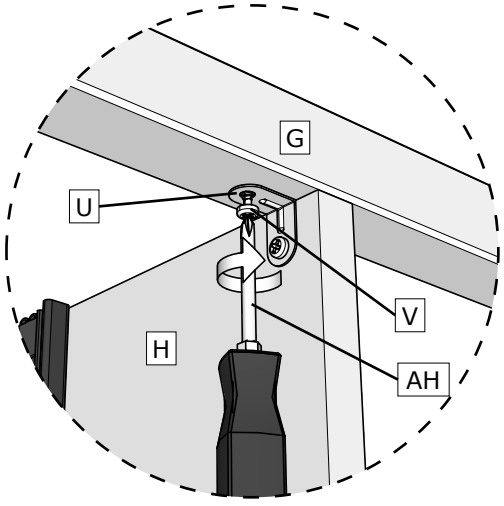


• Affix V to G with a Phillips Screwdriver AH as shown.


Assembly Step 14

T	Cam Lock	AH	Phillips Screwdriver
x8		x1	
M15 x 11mm		M35 x 100mm	

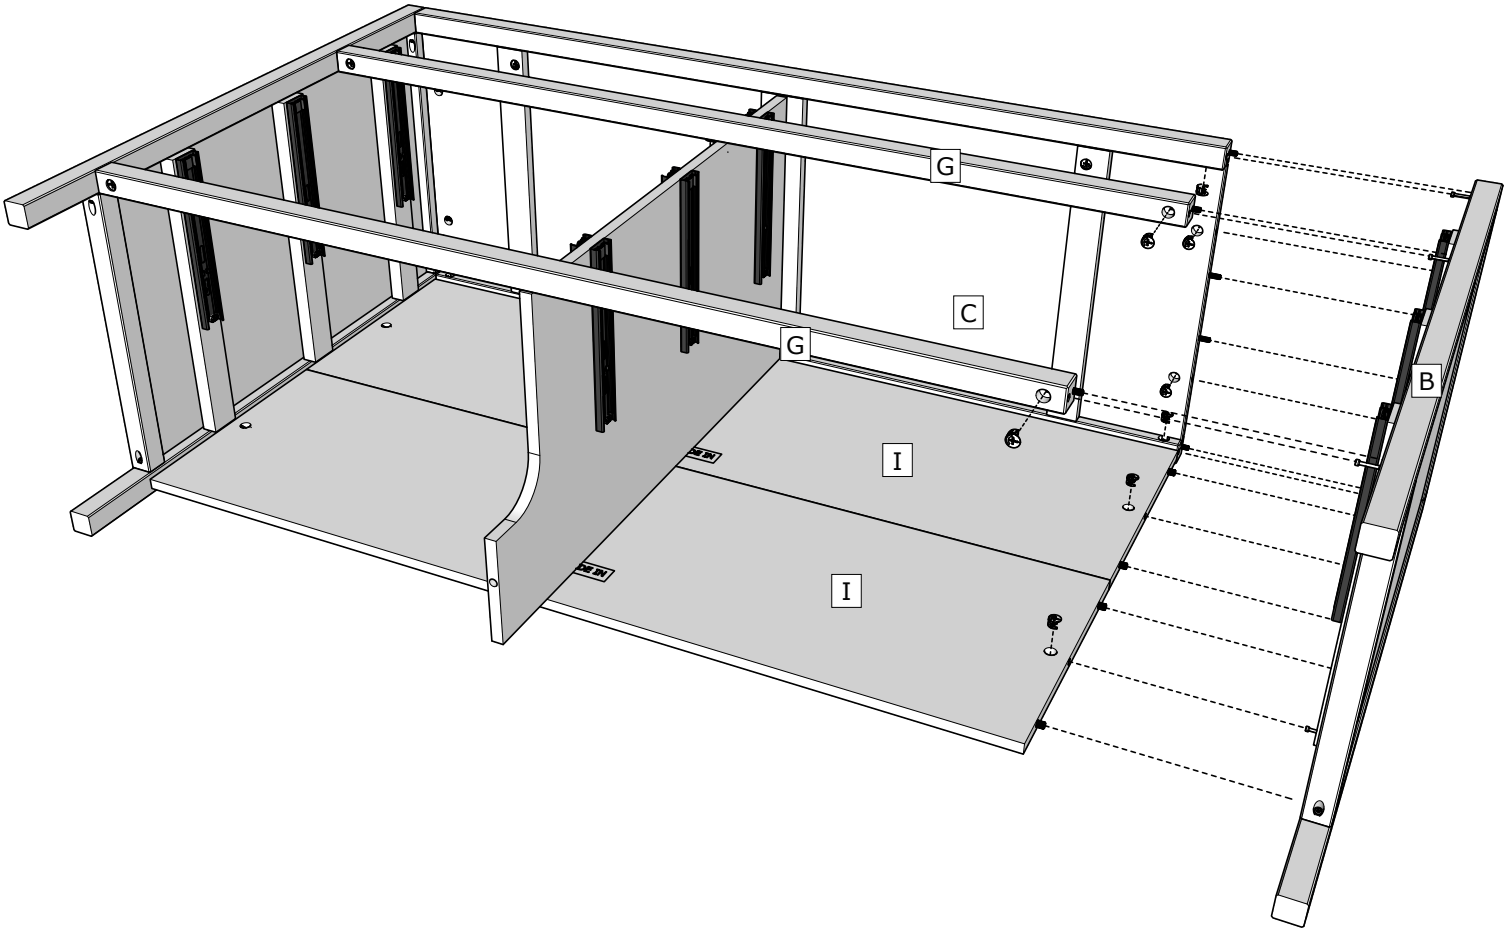


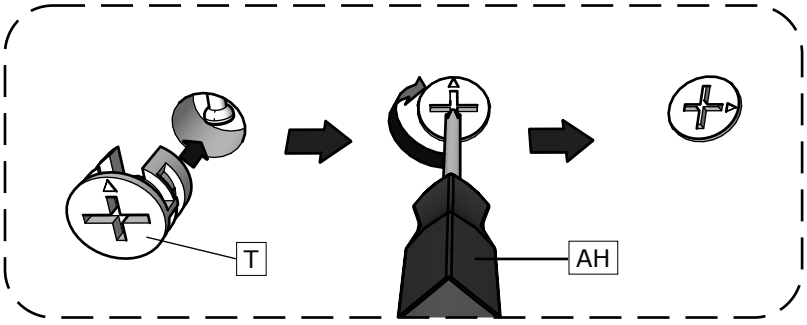



Note: Align the cam lock opening with the hole in the panel.

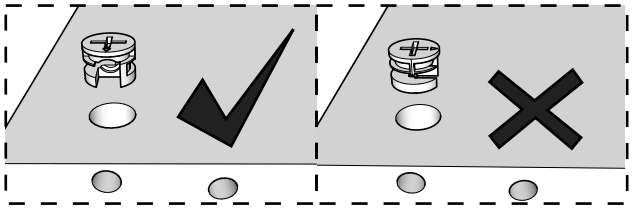

- Attach Panel B to Assembled Dresser with T as shown.
- Tighten with a Phillips Screwdriver AH.



Assembly Step 15


W	X	Y
Leveling Feet	Leveling Bush	Adhesive Felt Pad
x1	x1	x4
		
M17 x 25mm	M13 x 19mm	20mm x 20mm

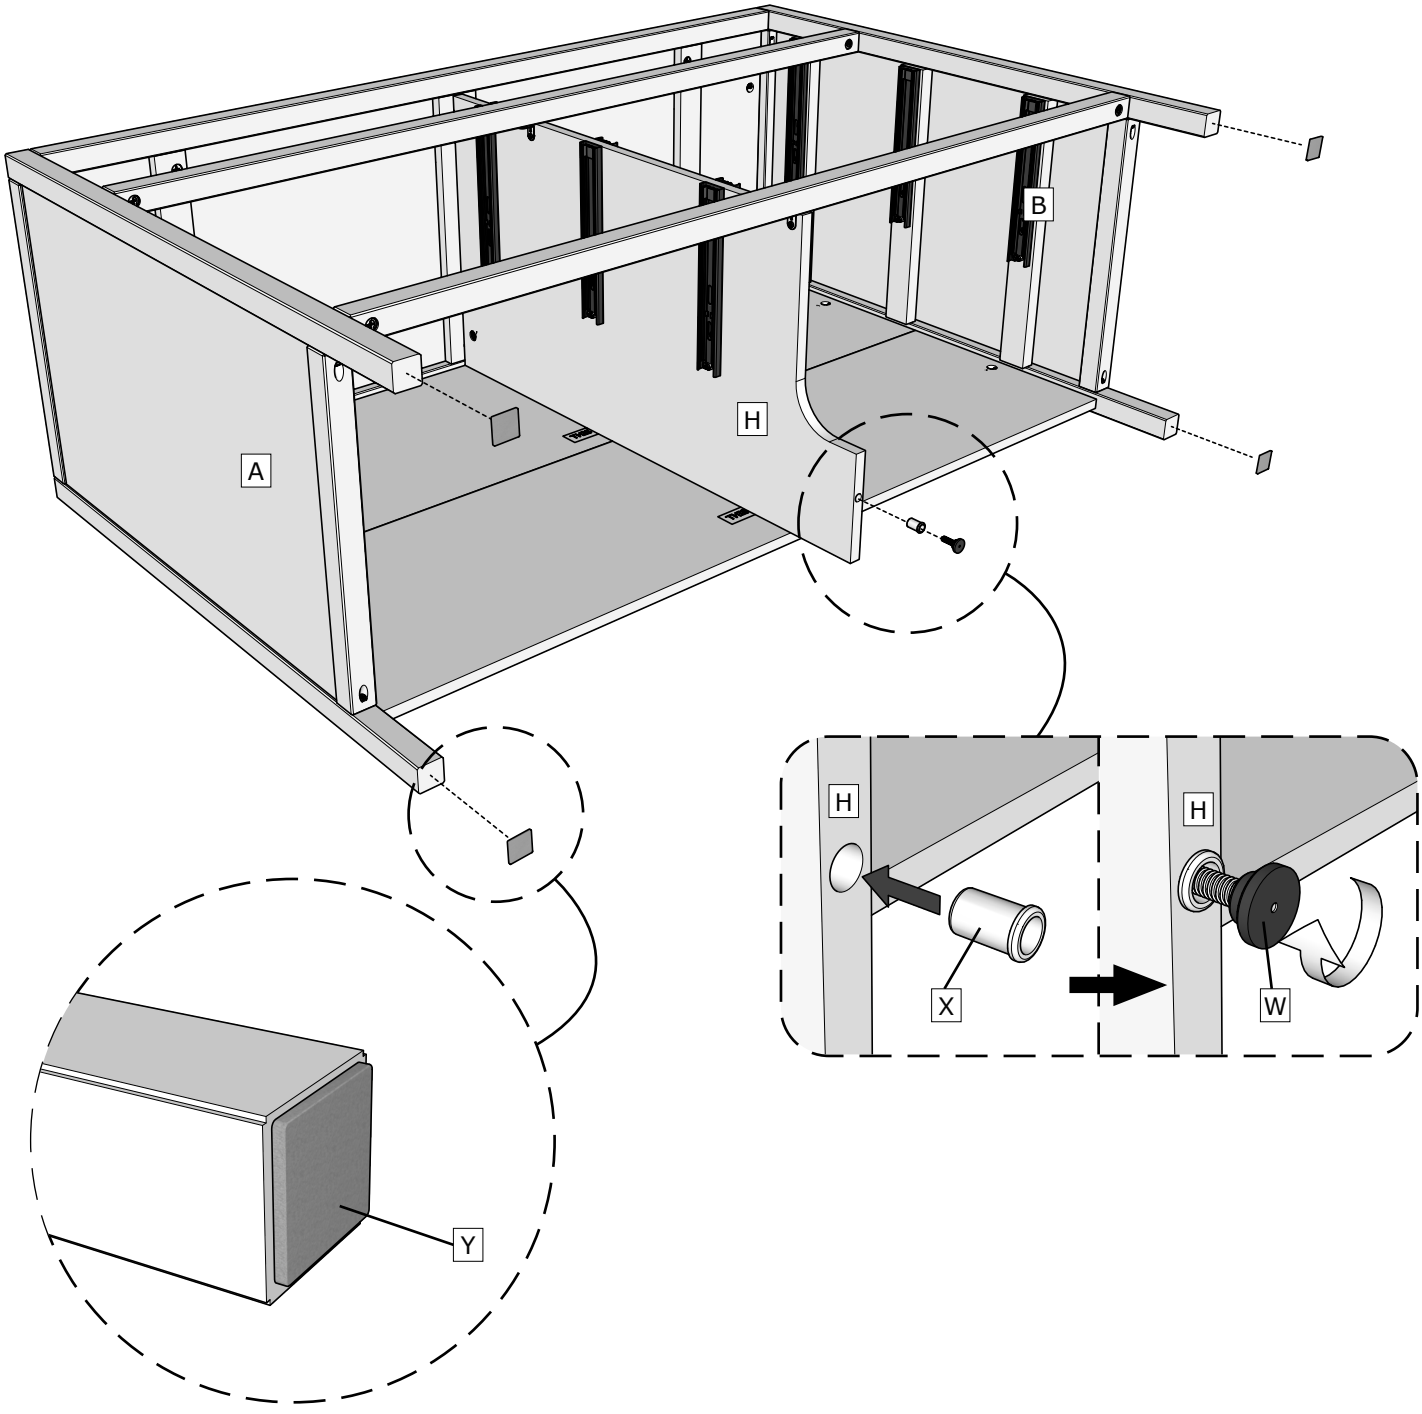

- Stick Y to Assembled Dresser as shown.
- Insert X into the Assembled Dresser, then insert W into X and turn to secure.


Assembly Step 16


Z	Screw	AH	Phillips Screwdriver
x2		x1	
M3.5 x 35mm		M35 x 100mm	

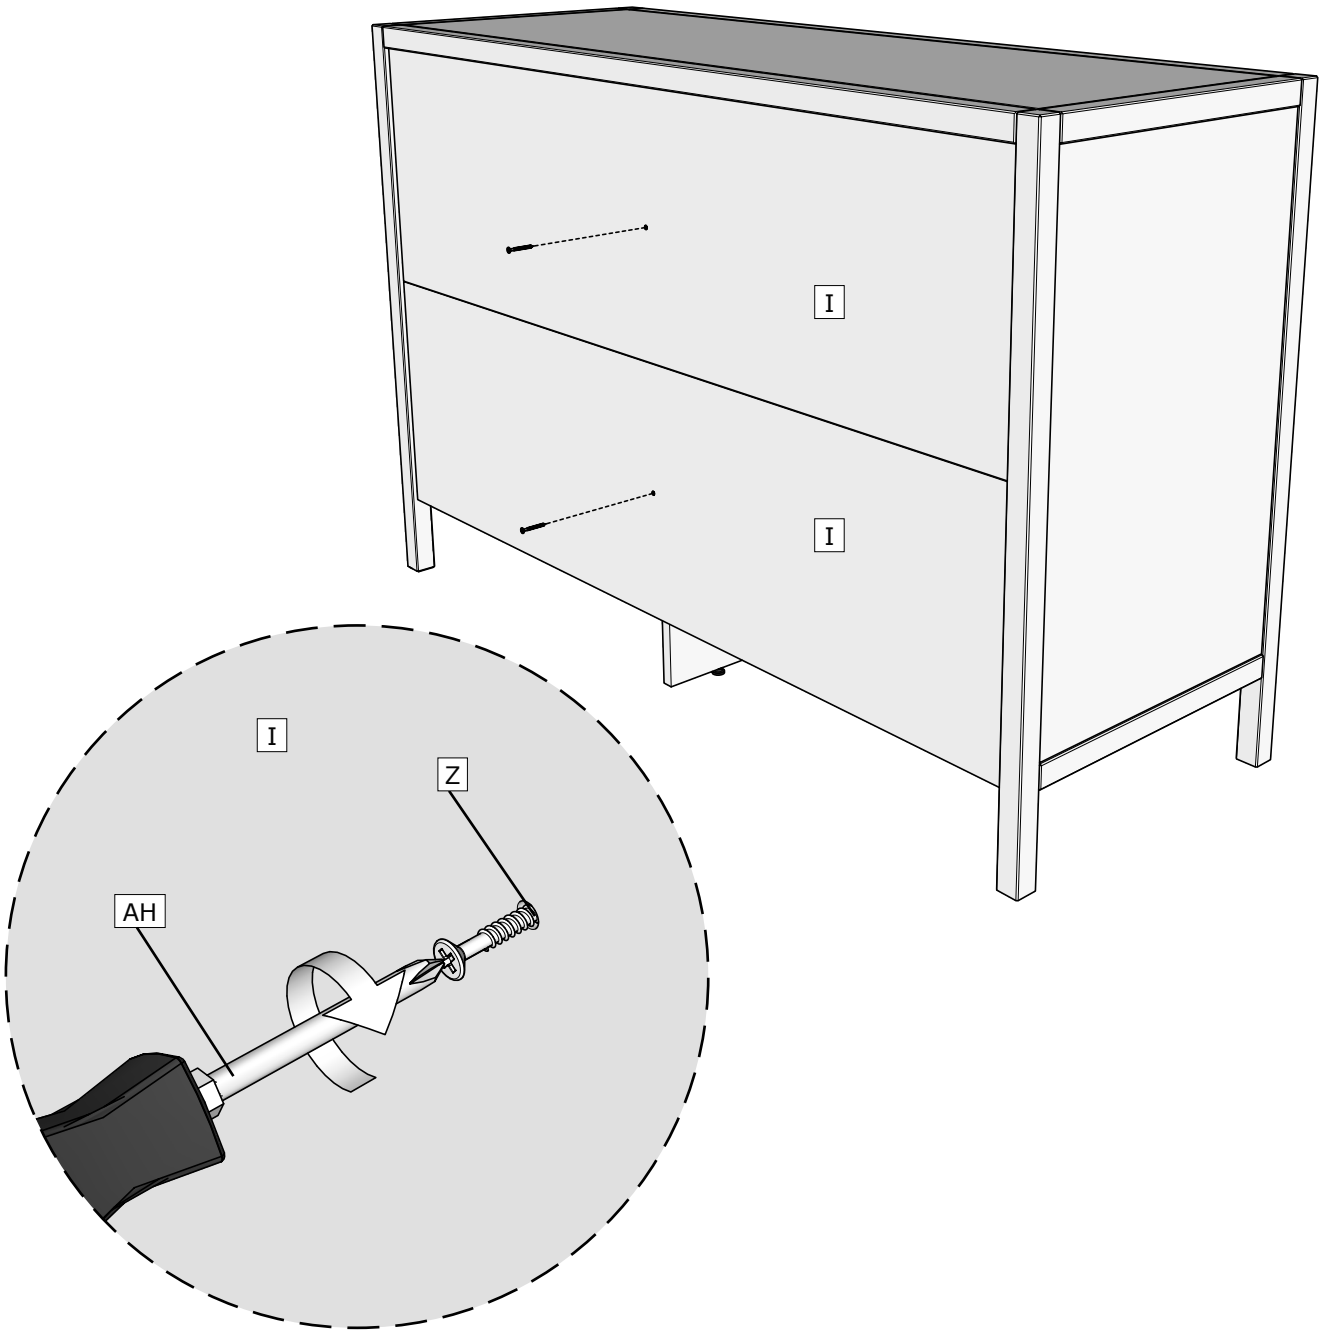



• Affix Z to Assembled Dresser using a Phillips Screwdriver AH as shown.


Top Drawer Assembly
Assembly Step 17

T	Cam Lock	AH	Phillips Screwdriver
x8		x1	
M15 x 11mm		M35 x 100mm	

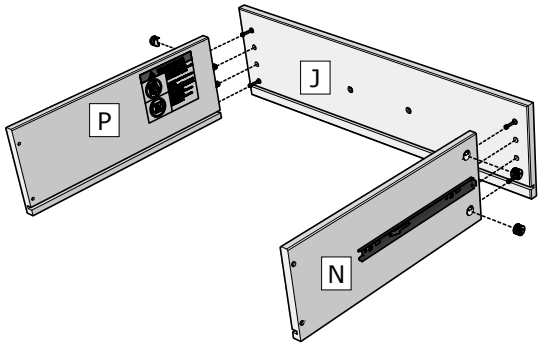


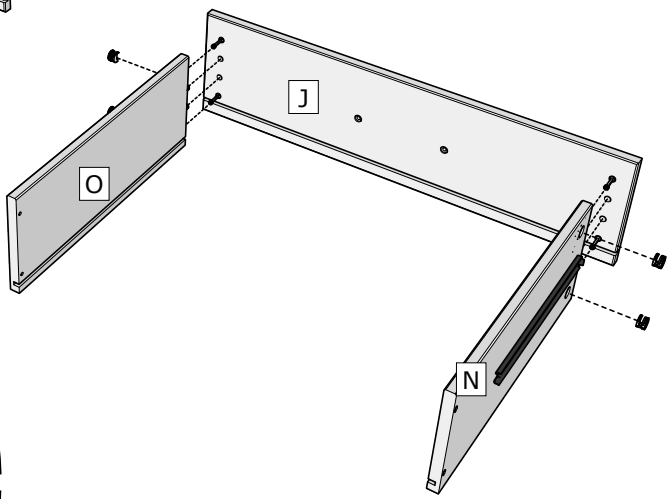

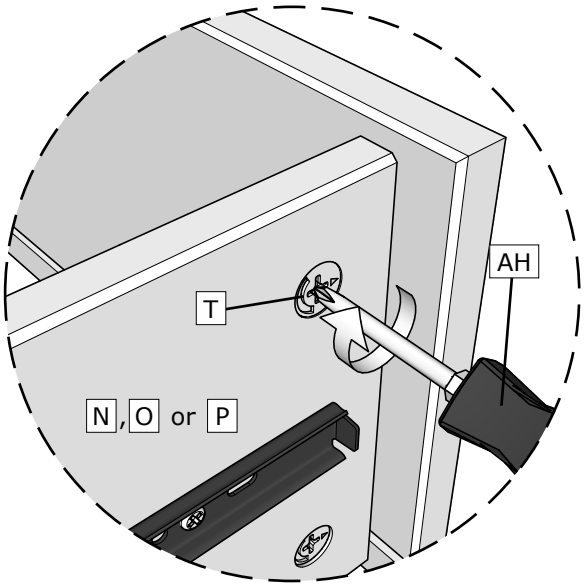

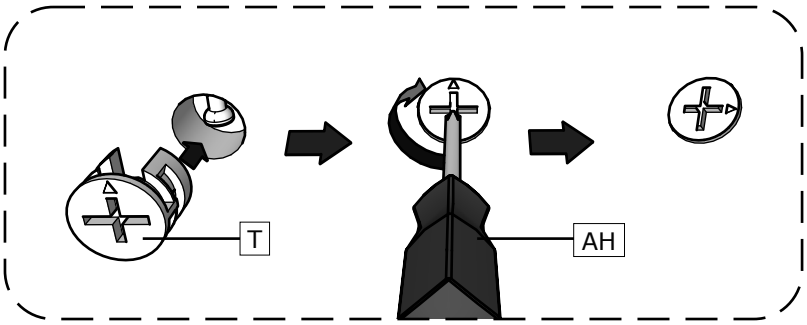



Note: Align the cam lock opening with the hole in the panel.

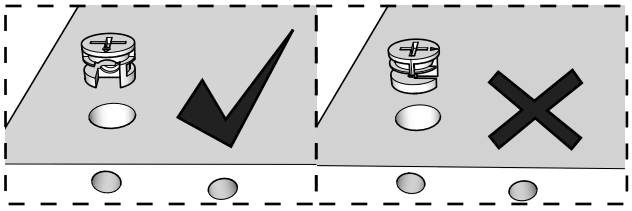



• Attach J to N and O or P with T using a Phillips Screwdriver AH as shown.


Top Drawer Assembly
Assembly Step 18

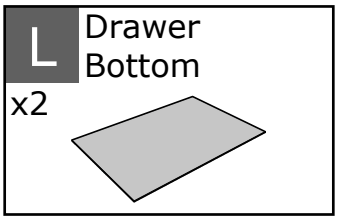

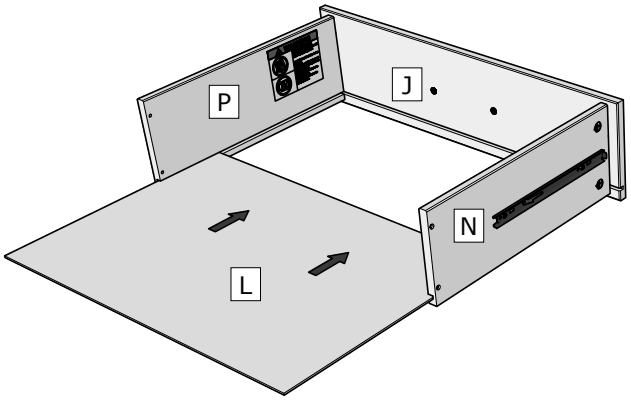

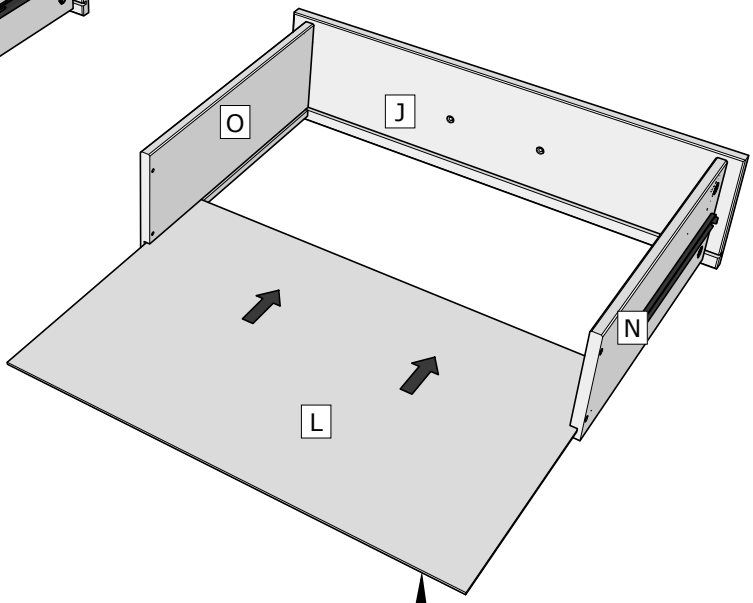

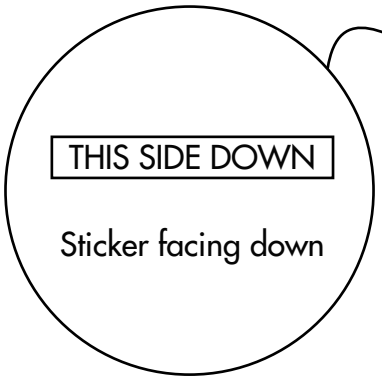


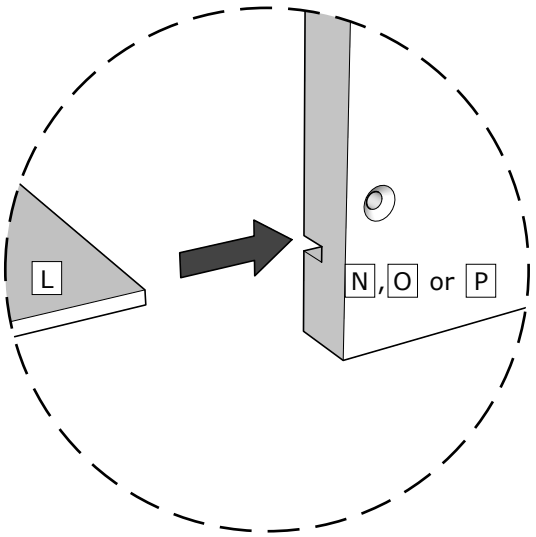



• Slide L into J, N, and O or P as shown.

Top Drawer Assembly
Assembly Step 19

M Drawer Back x2	Z Screw x8 M3.5 x 35mm	AH Phillips Screwdriver x1 M35 x 100mm


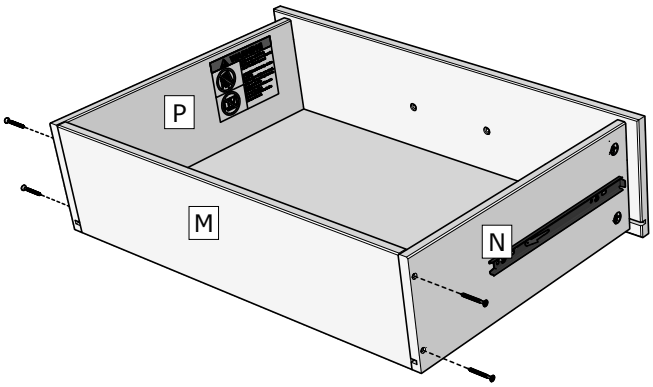


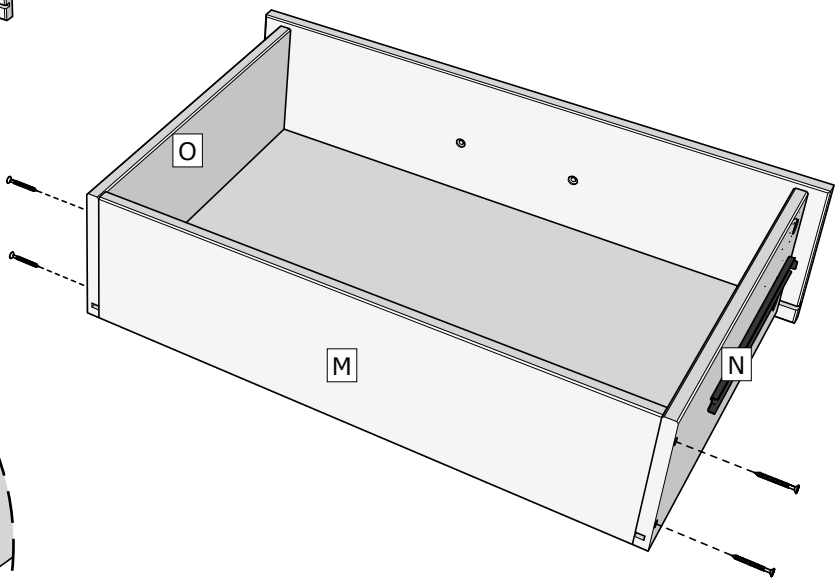


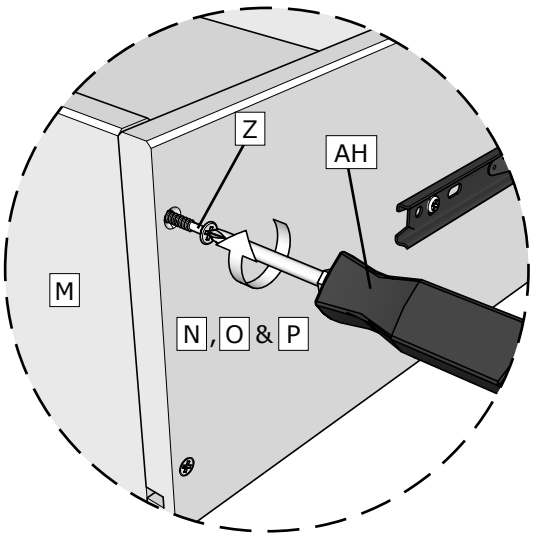



• Attach M to Assembled Drawer Boxes with Z using a Phillips Screwdriver AH as shown.

Top Drawer Assembly
Assembly Step 20

AA Handle	AB Screw	AH Phillips Screwdriver
x2  M135 x 20 x 11mm	x4  M4 x 22mm	x1  M35 x 100mm

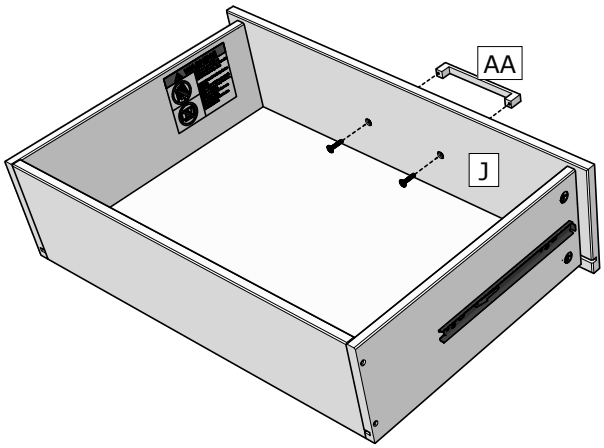


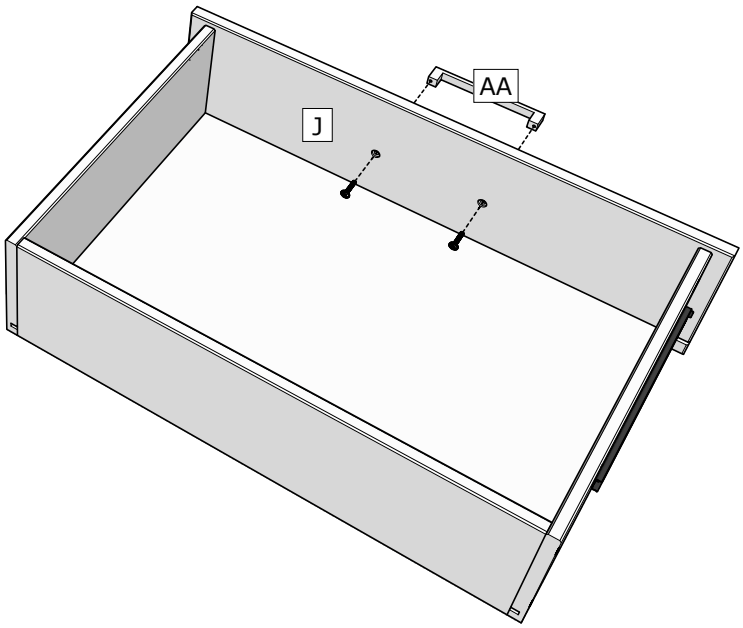


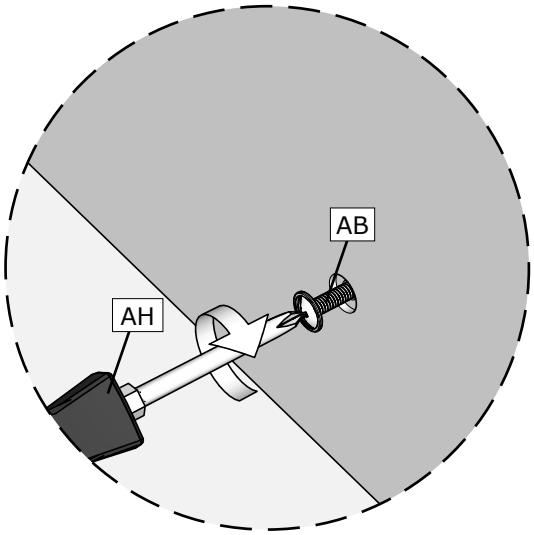

• Attach AA to Assembled Drawer Boxes with AB using a Phillips Screwdriver AH as shown.

Bottom Drawers Assembly
Assembly Step 21


T	Cam Lock	AH	Phillips Screwdriver
x16		x1	
M15 x 11mm		M35 x 100mm	

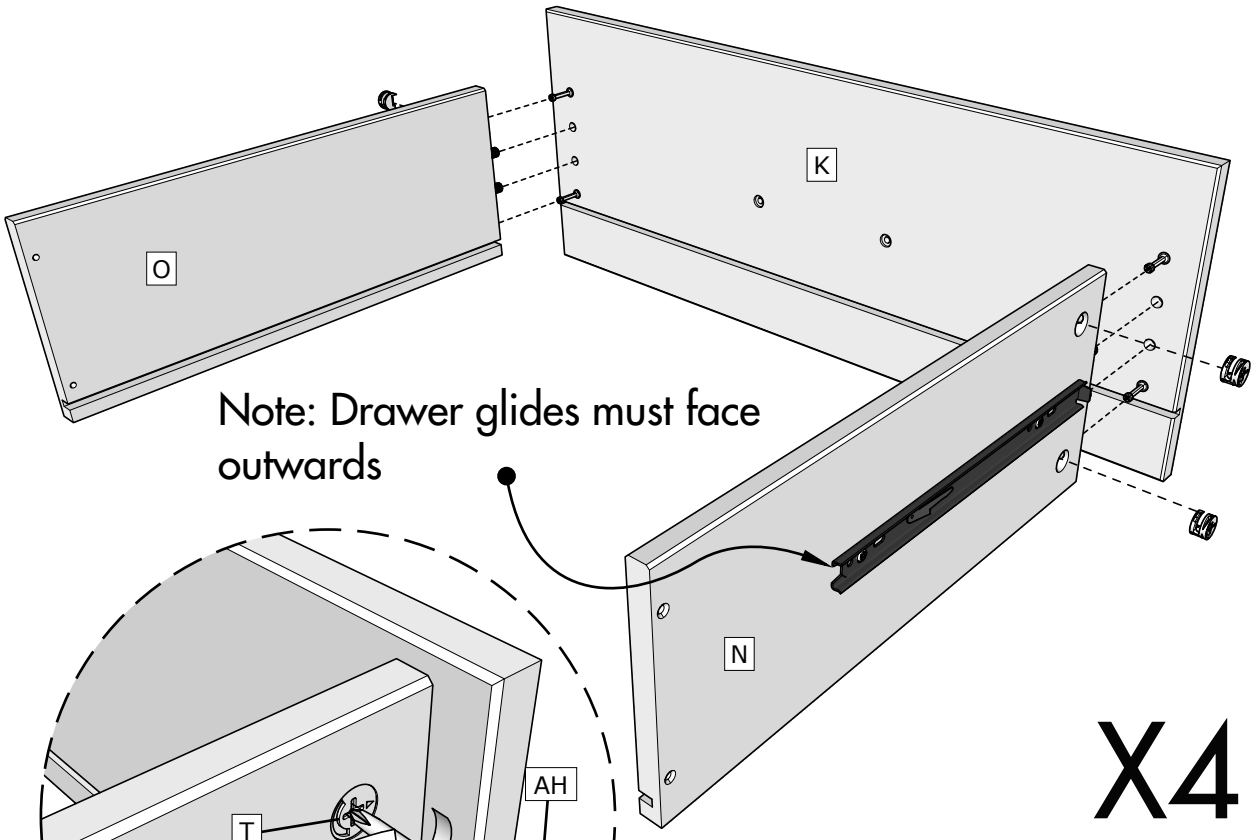


Note: Drawer glides must face outwards

X4

Note: Align the cam lock opening with the hole in the panel.

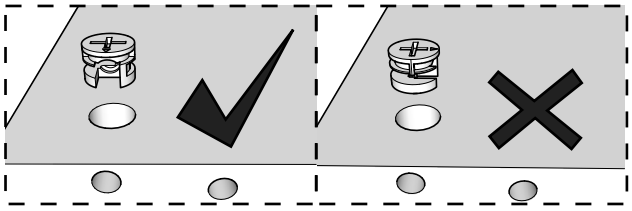


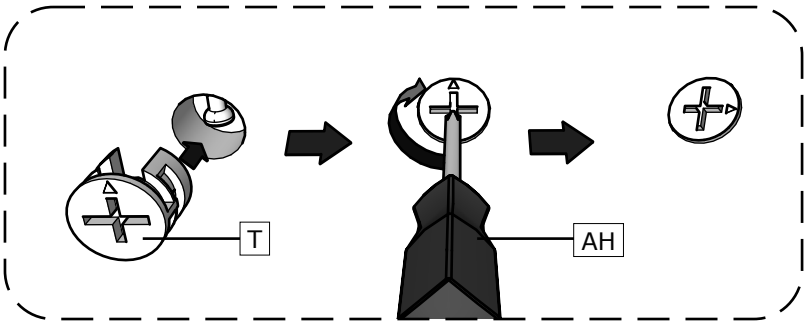


• Attach K to N and O with T using a Phillips Screwdriver AH as shown.

Bottom Drawers Assembly
Assembly Step 22

L Drawer Bottom
x4

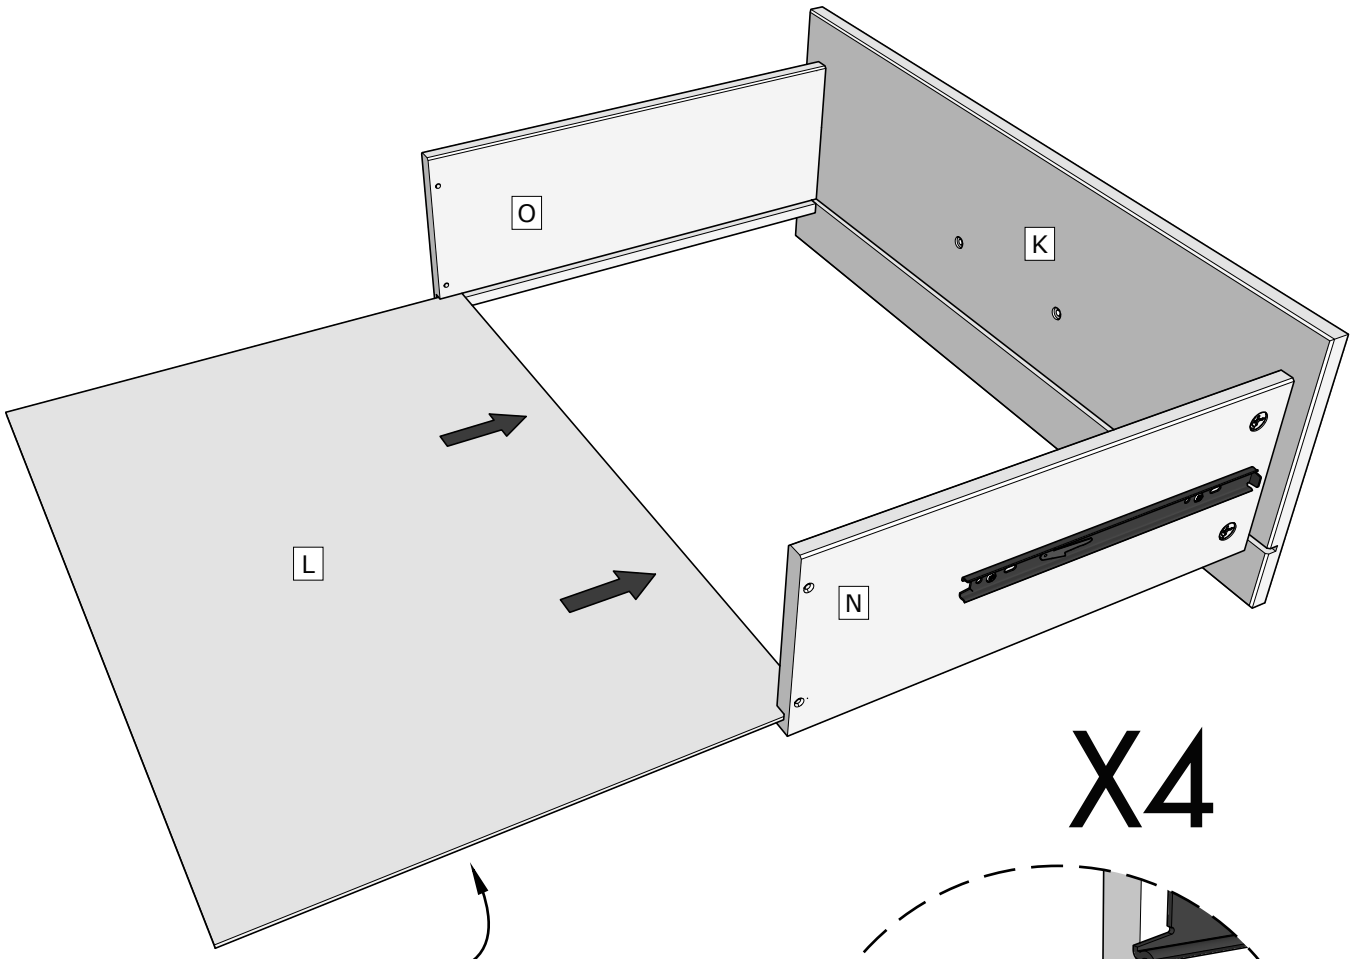

X4

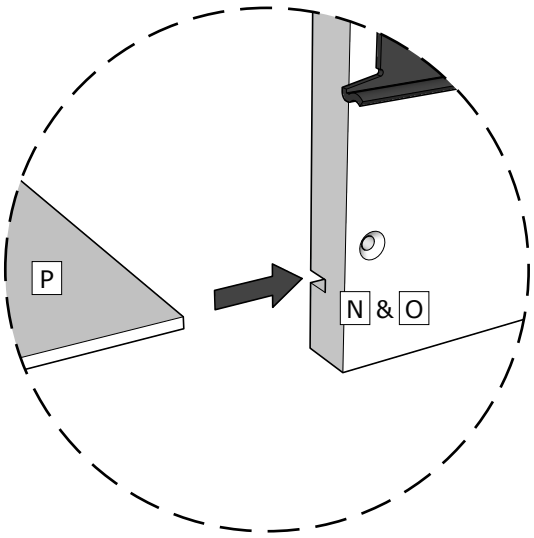


THIS SIDE DOWN

Sticker facing down


• Slide L into N , O , and K as shown.

Bottom Drawers Assembly
Assembly Step 23

M Drawer Back x4	Z Screw x16 M3.5 x 35mm	AH Phillips Screwdriver x1 M35 x 100mm


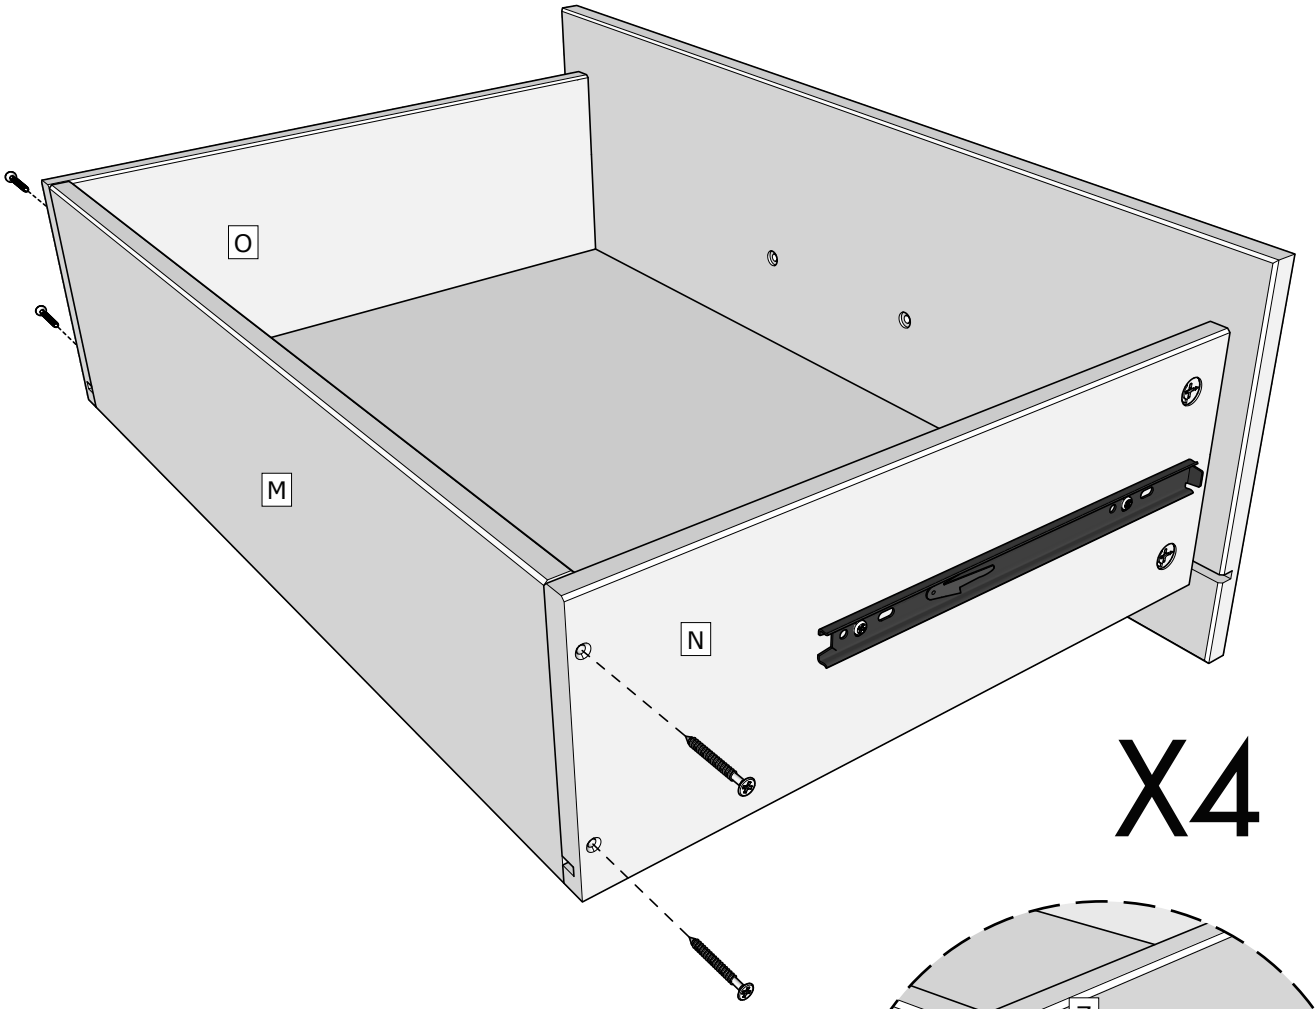



X4

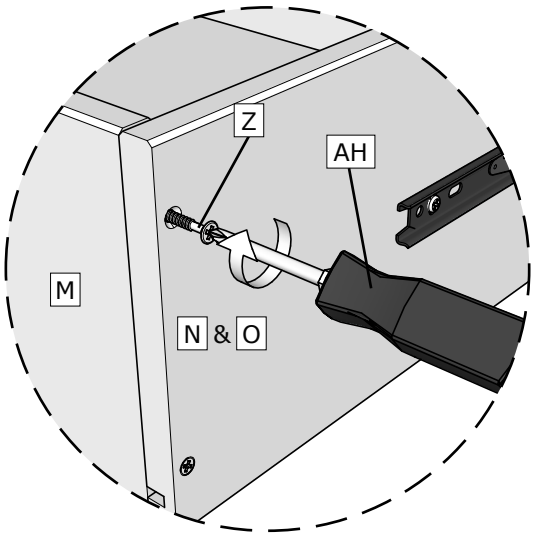


• Attach M to Assembled Drawer Box with Z using a Phillips Screwdriver AH as shown.

Bottom Drawers Assembly
Assembly Step 24

AA Handle	AB Screw	AH Phillips Screwdriver
x4  M135 x 20 x 11mm	x8  M4 x 22mm	x1  M35 x 100mm

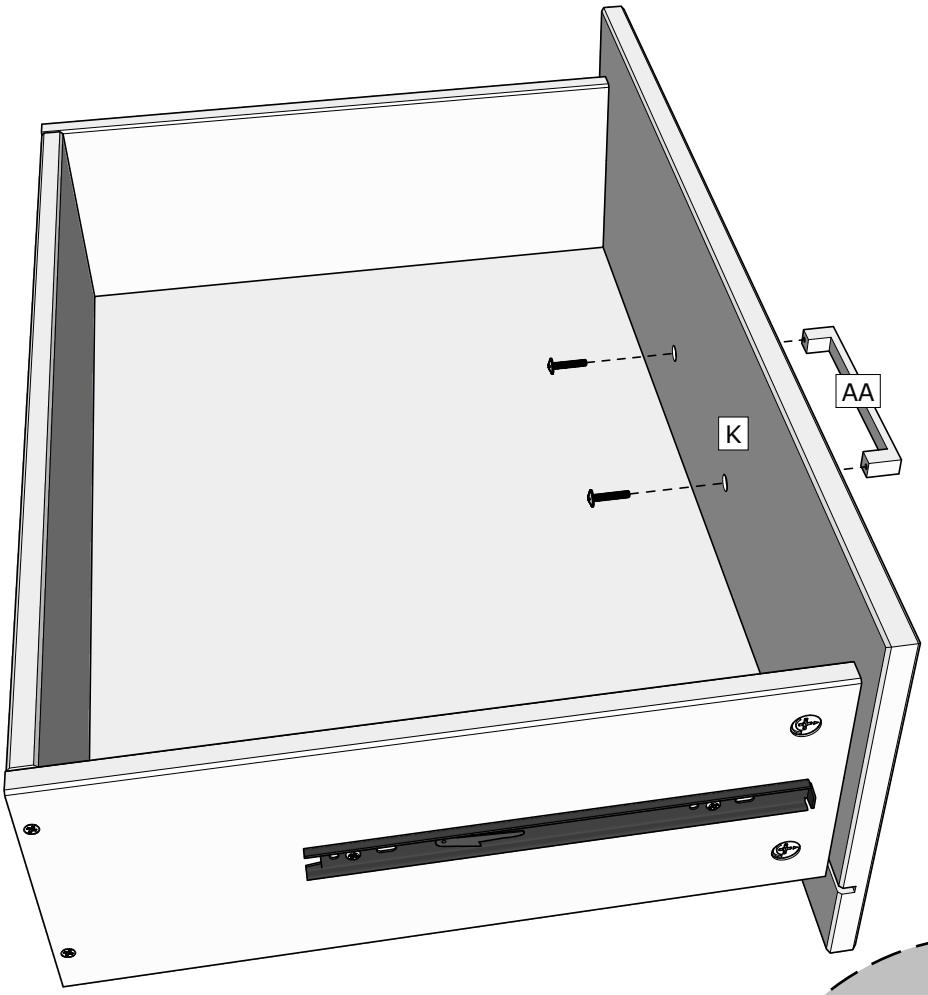

X4

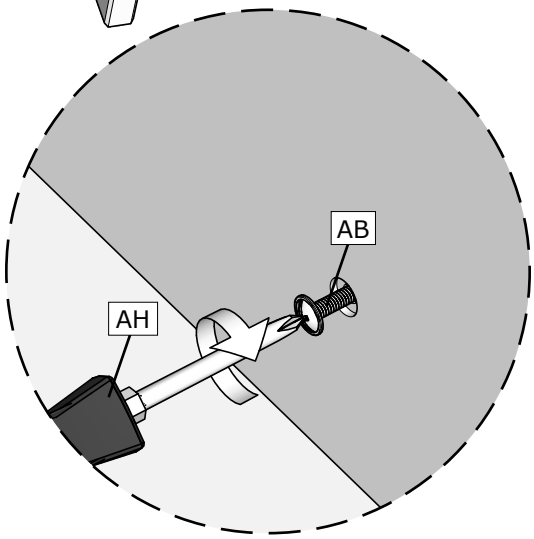


• Attach AA to Assembled Drawer Box with AB using a Phillips Screwdriver AH as shown.

Assembly Step 25




NOTE: Pull the cabinet glides fully outward until they stop. Align the drawer glides with the cabinet glides and slide the drawer into place.

The Drawer with **Warning Label** should be placed as the highest drawer

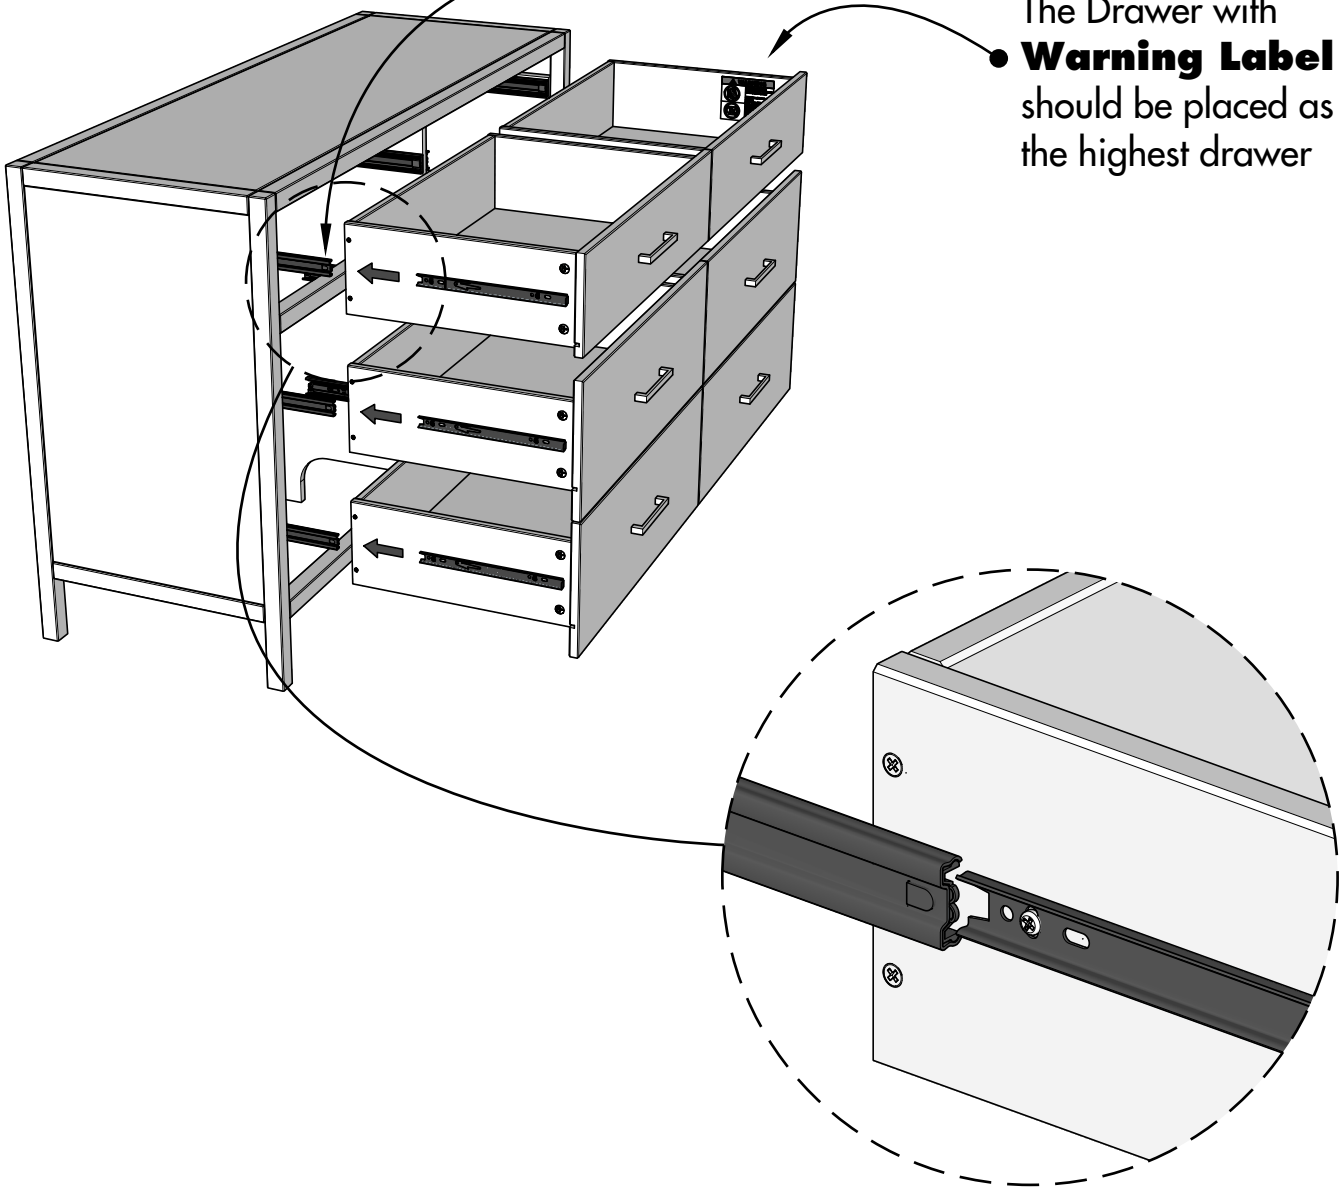


• Slide the assembled drawers into the glides as shown.

Adjust Drawer Gaps
Assembly Step 26


V Screw x12  M3.5 x 12mm	AH Phillips Screwdriver x1  M35 x 100mm

This can be found on Left and Right side of the drawer


Pull out the drawer.
Loosen the screw slightly until the drawer box can be repositioned.
Then slide the drawer box into position.

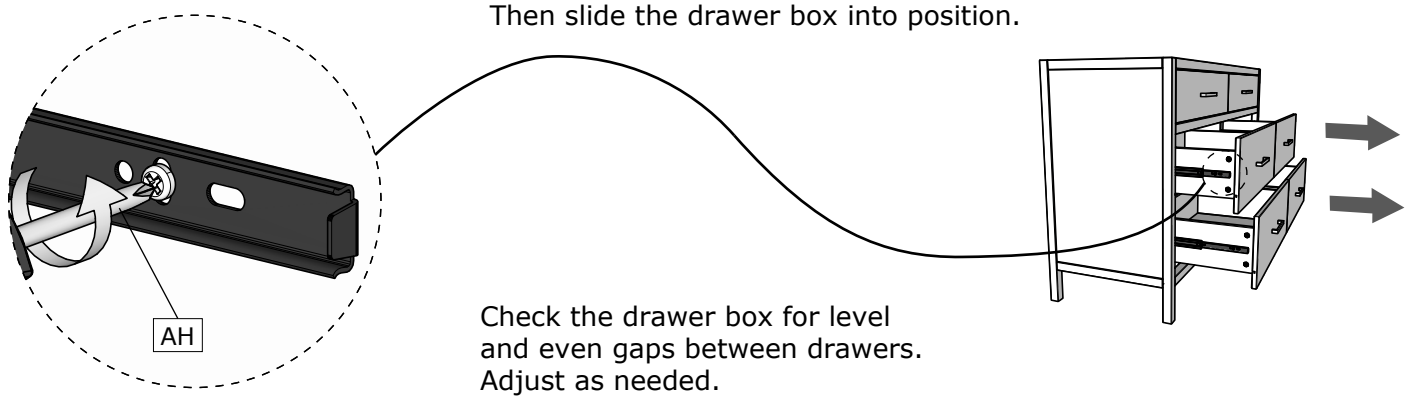

Check the drawer box for level
and even gaps between drawers.
Adjust as needed.

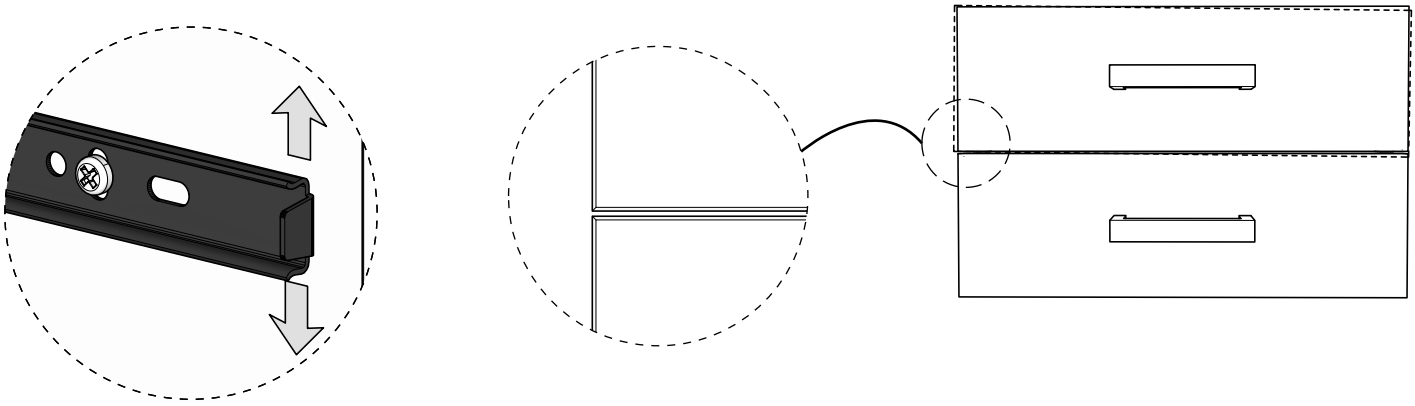


Once everything is level and gaps are evenly distributed,
pull the drawer out and tighten the screw.
Next add another screw beside it to put it in place.

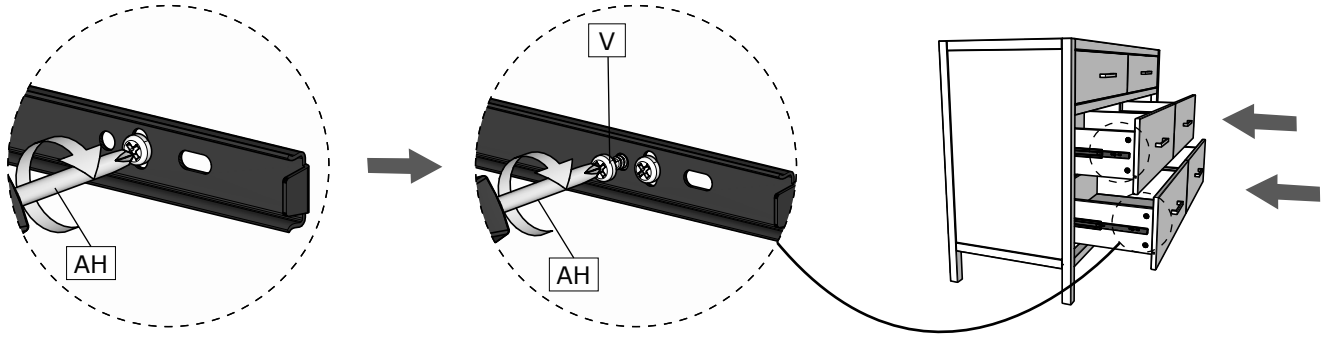


- Adjust the Drawer Gaps as shown with V using a Phillips Screwdriver AH.

Assembly Step 27

AC Anti Tipping Ribbon x1 M150 x 30mm	AD Flat Washer x2 M10 x 1mm	AE Screw x1 M4 x 16mm	AF Screw x1 M4.5 x 40mm
AG Wall Anchor x1 M6 x 35mm	AH Phillips Screwdriver x1 M35 x 100mm		

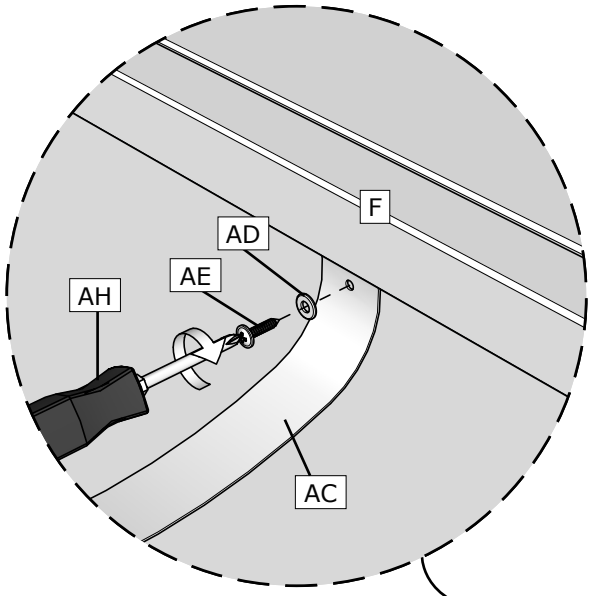


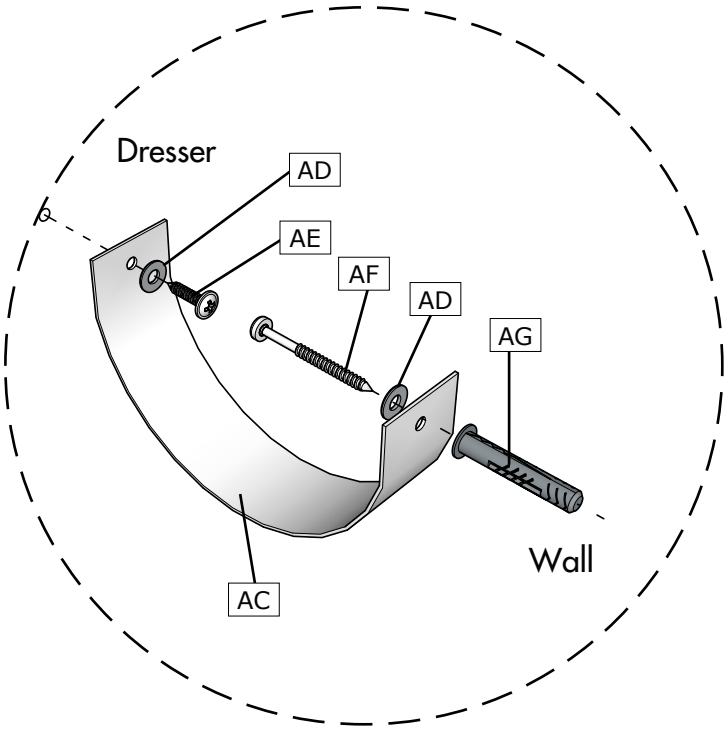

Note:

For concrete walls:
Insert Wall Anchor AG into the wall before driving Screw AF into it.

For drywall:
Drive Screw AF directly into a wall stud for a secure hold.

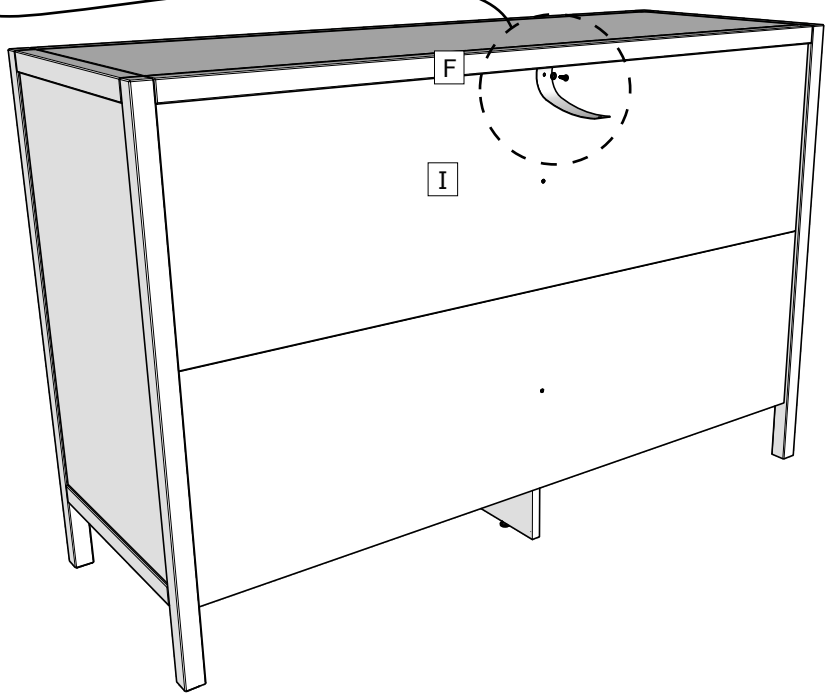


- Attach AC to Assembled Dresser with AD and AE using a Phillips Screwdriver AH as shown.
- Attach AC to the wall with AF , AD, and AG using a Phillips Screwdriver AH as shown.

How to Remove the Drawer


Left Side


Pull the plastic clip **up**.

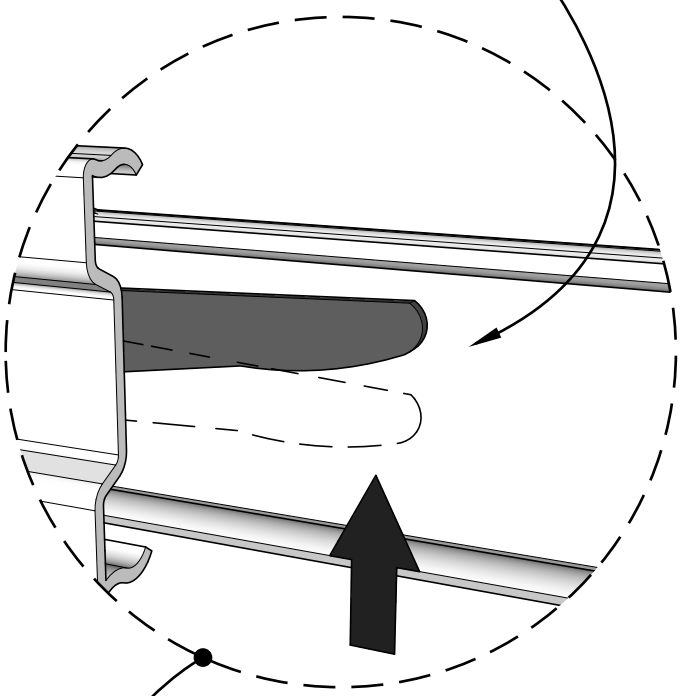

Right Side

Push the plastic clip **Down**.

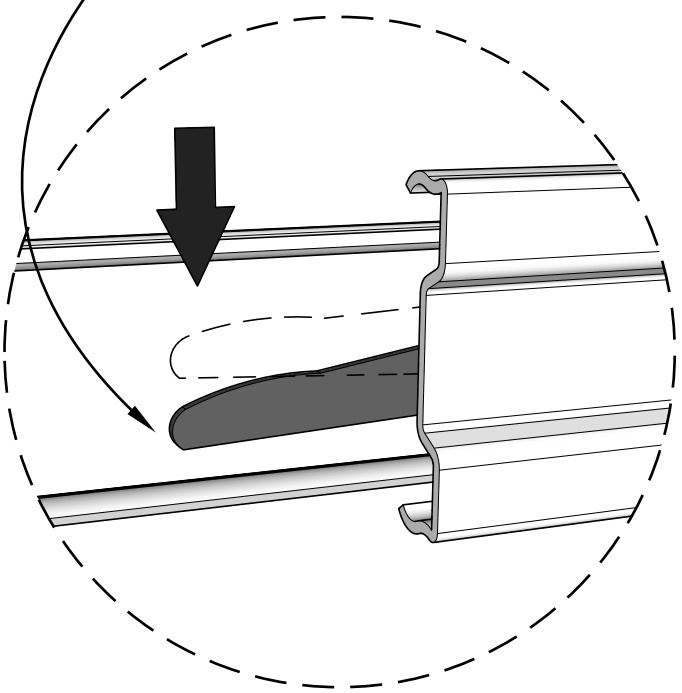

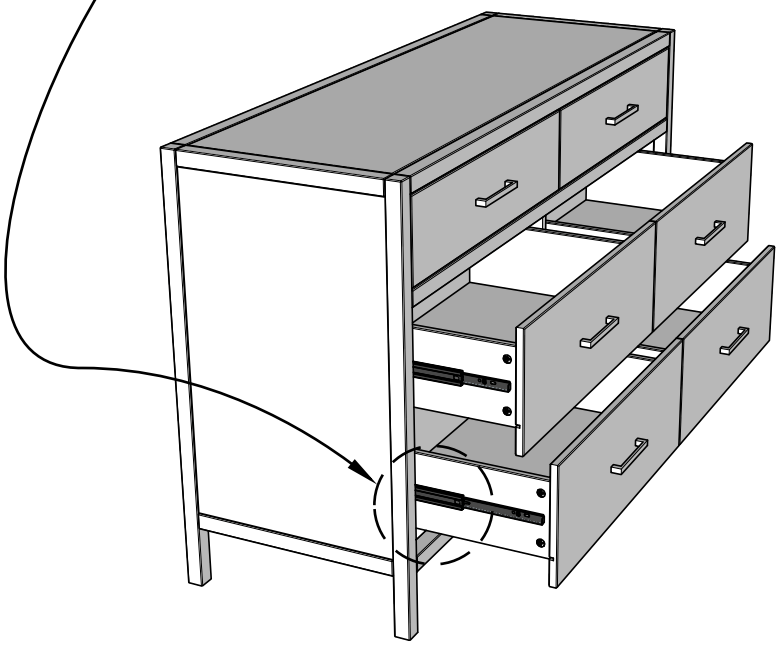


Note:
Press both clips at the same time while pulling the drawer outward.

FAQs FREQUENTLY ASKED QUESTIONS

WE ARE OPEN MONDAY TO FRIDAY TO ASSIST YOU AND WILL REPLY TO ANY OF YOUR MESSAGES WITHIN 24-48 HOURS. THE AVERAGE RESPONSE TIME IS WITHIN 24 HOURS. IF YOU ENCOUNTER AN ISSUE THAT IS NOT MENTIONED BELOW, PLEASE MESSAGE US IN OUR CONTACT PAGE BY VISITING WWW.DGCASA.COM


WHERE IS THE REST OF MY ORDER? THE PACKAGE I RECEIVED SAYS CARTON NO. 1 OF 3, CARTON NO. 3 OF 5, OR CARTON NO. 5 OF 6 ETC.

THE MARKETPLACE ONLY ALLOWS 1 TRACKING NUMBER TO BE UPLOADED IN THE SYSTEM. HOWEVER, THE PRODUCT IS SHIPPED IN MULTIPLE PACKAGES. YOU CAN CONFIRM THE NUMBER OF PACKAGES TO RECEIVE BY REFERRING TO THE CARTON NO. PRINTED ON THE PACKAGE THAT WAS DELIVERED TO YOU. FOR EXAMPLE, YOU RECEIVED 1 PACKAGE AND THE PACKAGE SHOWS CARTON NO. 1 OF 3, THEN CARTON NO. 2 OF 3 AND CARTON NO. 3 OF 3 IS IN TRANSIT TO YOU. THE REST OF THE PACKAGES CAN BE DELIVERED WITHIN THE SAME DAY AS THE FIRST PACKAGE OR WITHIN A FEW DAYS. ONCE THE ORDER IS SHIPPED CONFIRMED, OUR TEAM WILL SEND YOU A MESSAGE TO PROVIDE YOU WITH ALL THE TRACKING NUMBER THAT COMPLETES YOUR ORDER. IF YOU DID NOT RECEIVE THIS MESSAGE, PLEASE CHECK YOUR EMAIL'S SPAM FOLDER, OR LOG INTO THE MARKETPLACE ACCOUNT AND SEND US A MESSAGE.

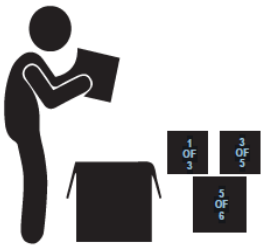

MY ORDER IS DAMAGED, WHAT DO I DO?

CONTACT US ON OUR WEBSITE WWW.DGCASA.COM INCLUDE THE ORDER NUMBER AND ATTACH APPLICABLE IMAGES TO EXPEDITE THE CLAIM AND ENSURE OUR TEAM WILL PROVIDE THE APPROPRIATE RESOLUTION

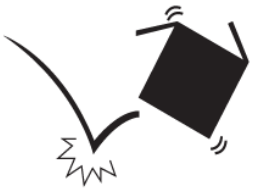

I TRACKED THE PACKAGE AND IT SHOWS MY PACKAGE WAS DELIVERED, BUT I NEVER RECEIVED THE PACKAGE. I DOUBLE CHECKED WITH MY FAMILY MEMBER AND NEIGHBOR; THEY DO NOT HAVE THE PACKAGE. WHAT DO I DO?

CONTACT US ON OUR WEBSITE WWW.DGCASA.COM INCLUDE THE ORDER NUMBER AND LET US KNOW WHICH CARTON NUMBER OR TRACKING NUMBER YOU DID NOT RECEIVE, AND A TEAM MEMBER WILL REPLY TO YOUR MESSAGE ACCORDINGLY.



LOVE THE PRODUCT?

LOG INTO THE MARKETPLACE YOU MADE THE ORDER AND SHARE YOUR EXPERIENCE WITH THE PRODUCT AND WHAT YOU LIKE MOST ABOUT IT. ELEVATE THE PRODUCT REVIEW BY INCLUDING IMAGES OF THE PRODUCT TO SHARE WITH EVERYONE.

★★★★★