



Assembly Instruction

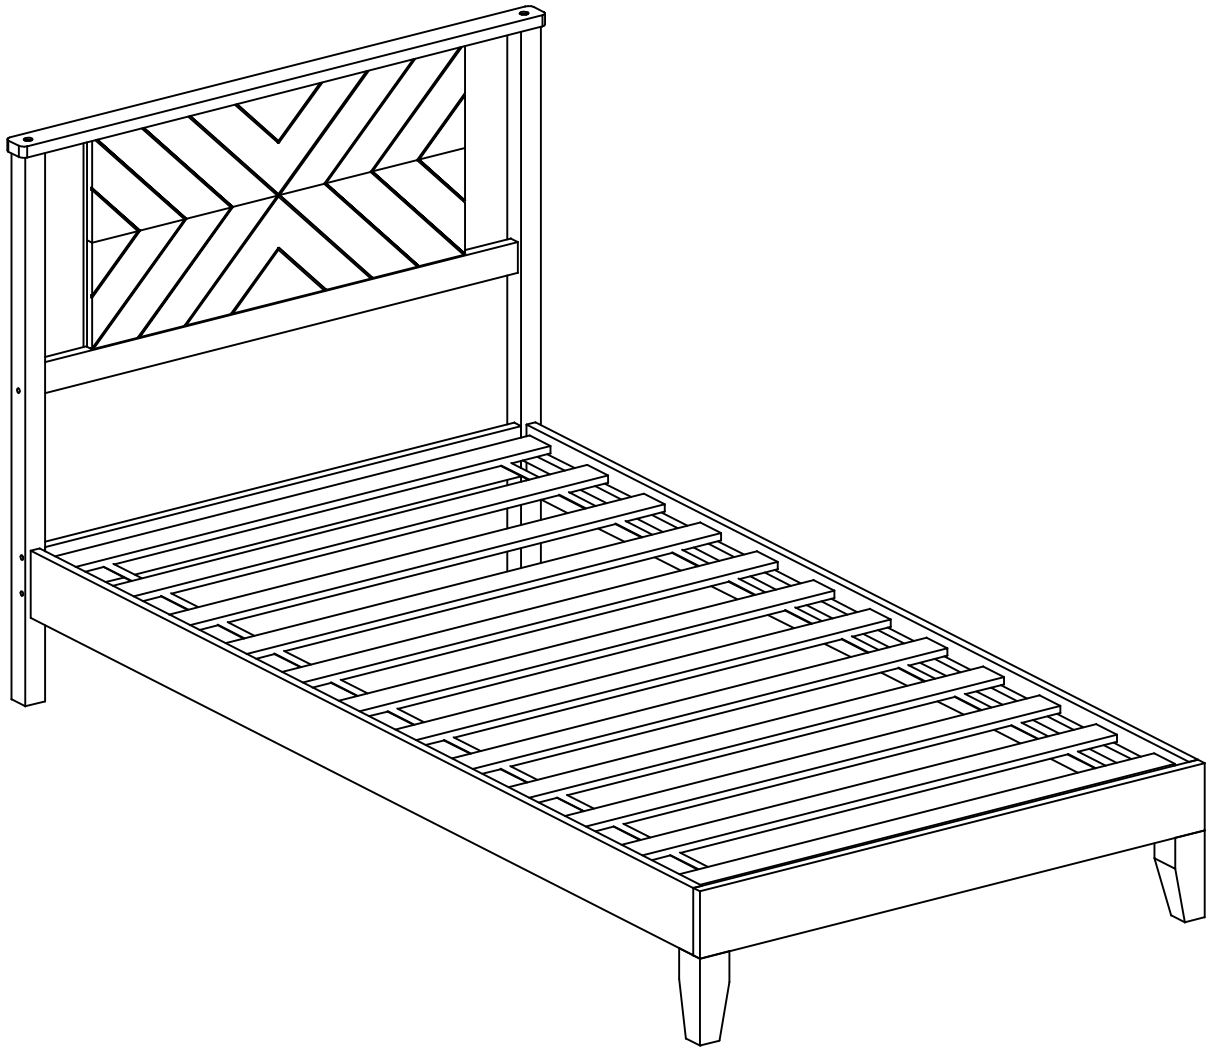






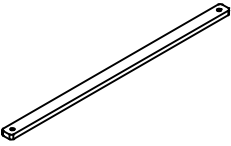
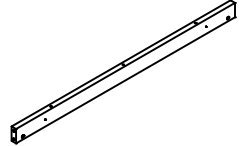
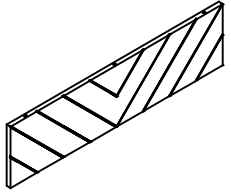
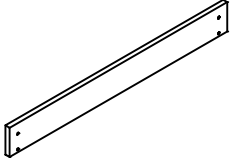
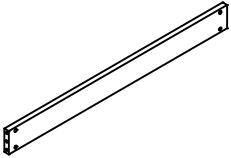
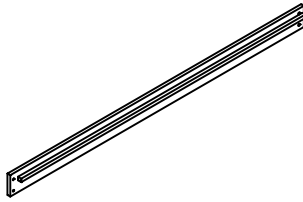
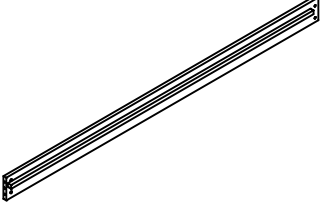

NOTE:

1. When receiving the goods, please confirm the product according to the instructions. Once you find less pieces, please provide relevant pictures to contact us. We will deal with it in the time.
2. Please install goods with the instruction manual.
3. It is recommended that the installation should not be too tight to adjust easily. After the structure is installed, firm the interface for more stability.
4. Warning: Do not jump off / on or hang from this loft/Bunk bed; The surface of the mattress must be at least 5" below the upper edge of the guardrails for safety reason






Component decomposition

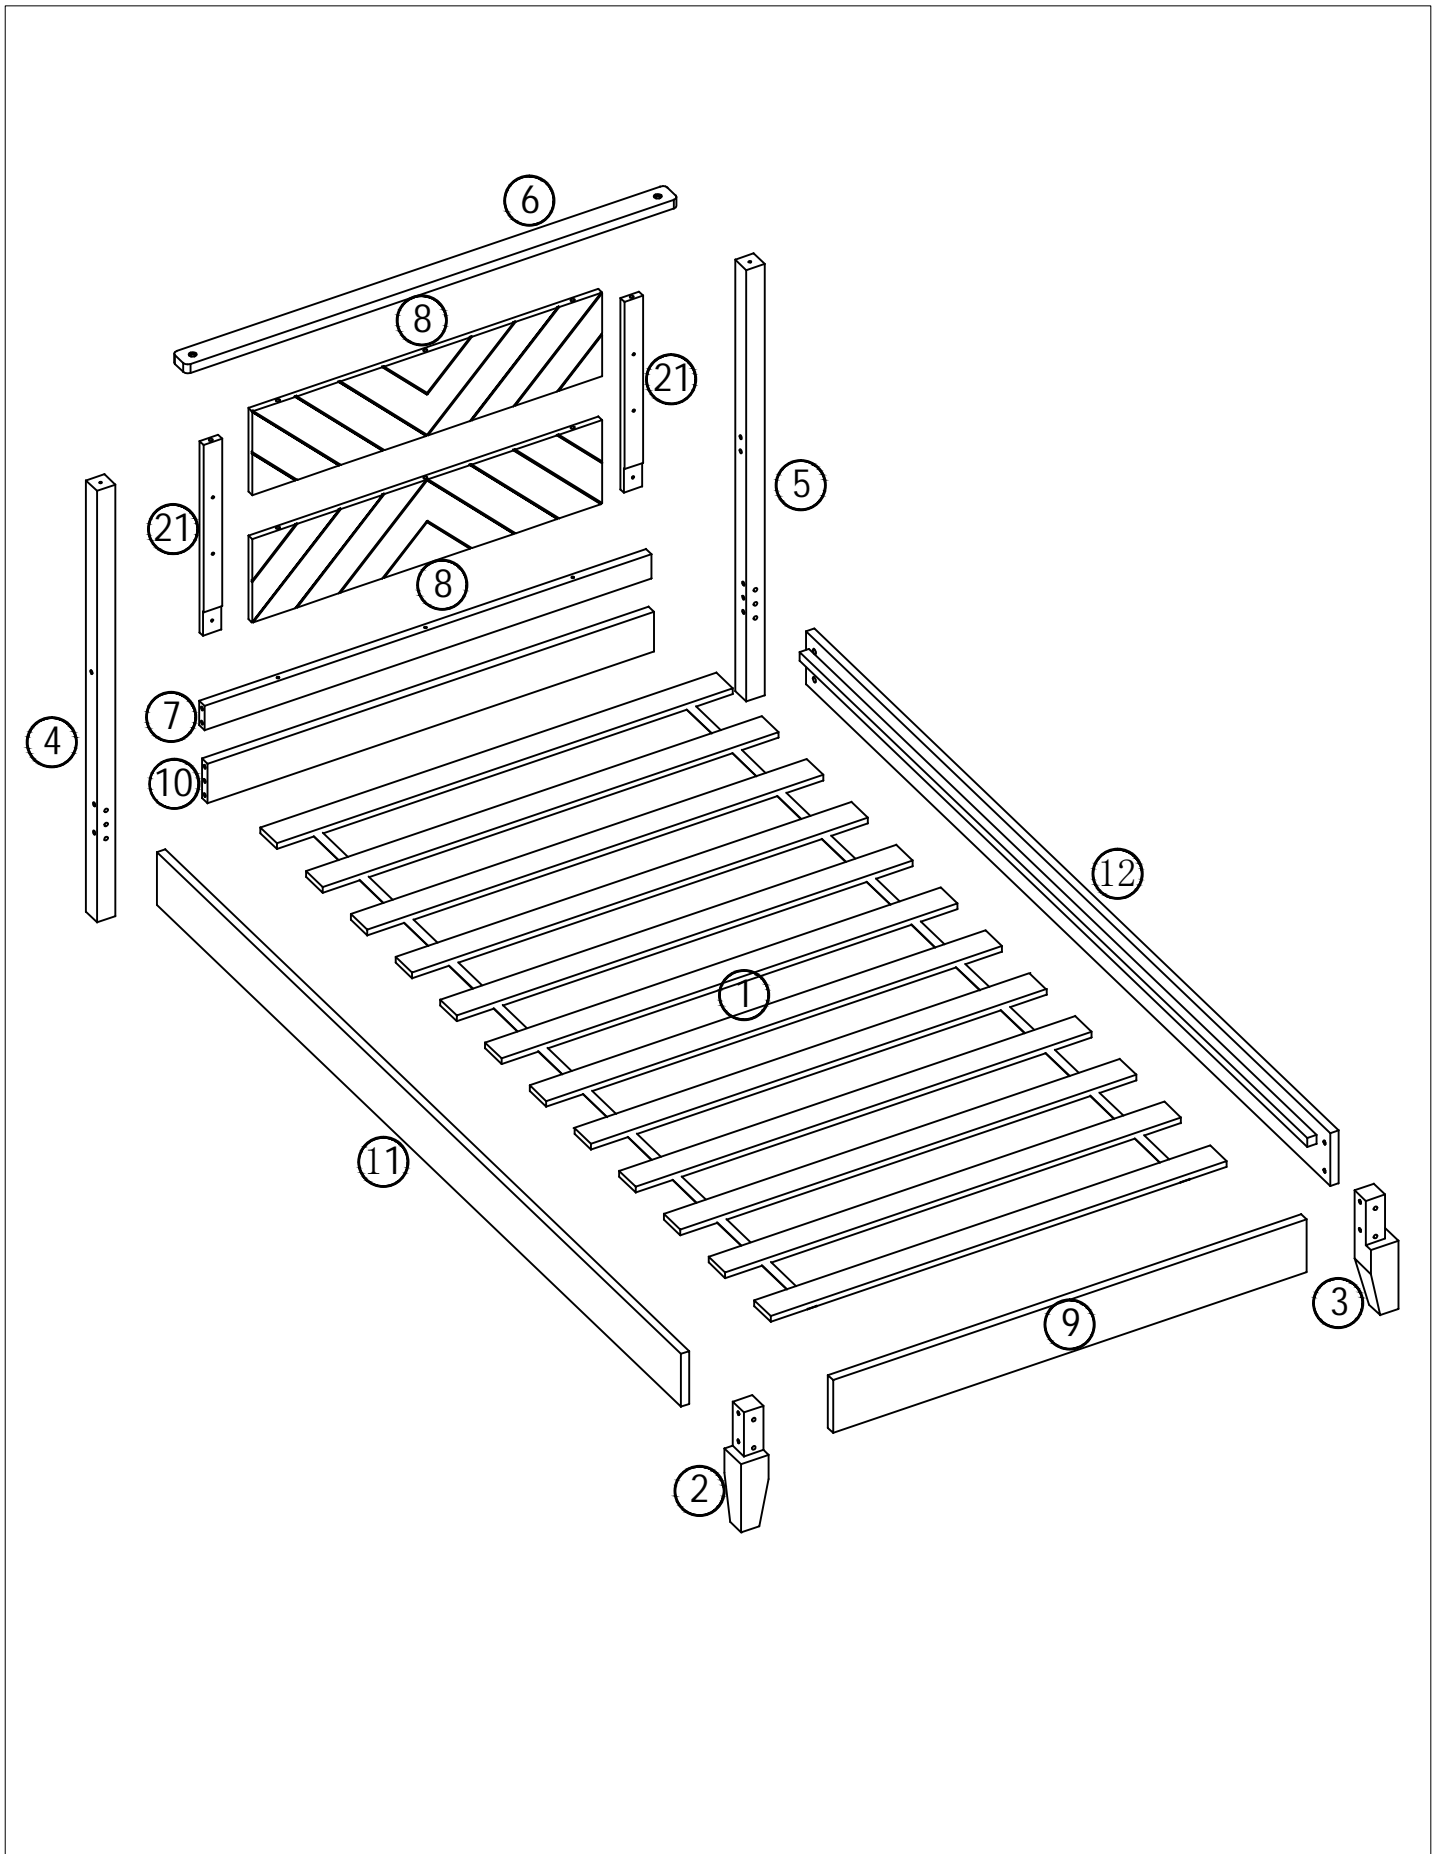






Bed with window guardrail

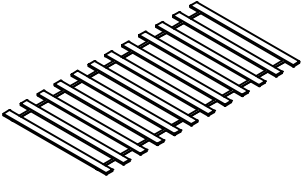
<p>1</p>  <p>990*60*13mm 12PC</p>	<p>2</p>  <p>255*60*60mm 1PC</p>	<p>3</p>  <p>255*60*60mm 1PC</p>	<p>4</p>  <p>980*40*40mm 1PC</p>
<p>5</p>  <p>980*40*40mm 1PC</p>	<p>6</p>  <p>1070*50*20mm 1PC</p>	<p>7</p>  <p>970*55*20mm 1PC</p>	<p>8</p>  <p>760*190*13mm 2PC</p>
<p>9</p>  <p>1030*120*20mm 1PC</p>	<p>10</p>  <p>970*90*20mm 1PC</p>	<p>11</p>  <p>1910*120*20mm 1PC</p>	<p>12</p>  <p>1910*120*20mm 1PC</p>
<p>21</p>  <p>435*40*15mm 2PC</p>			

Hardware

A		φ 8*30	9
B		φ 10*13	10
C		M6*80	10
D		M4	1
F		φ 6*40	8



G		φ 15*9	8
H		φ 4*25	6
J		M6*55	8
K		φ 4*30	24
L		φ 6*60	2

STEP: 1

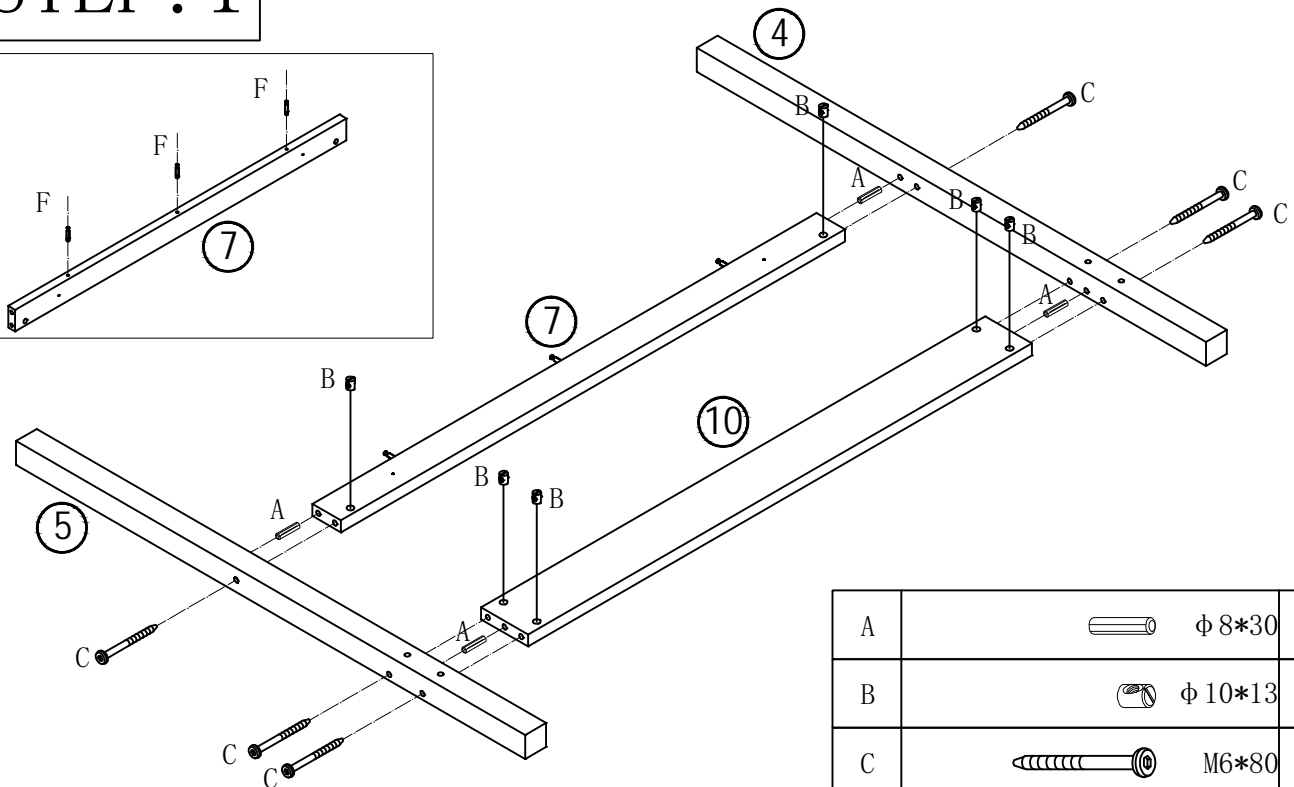


A		Φ 8*30	4
B		Φ 10*13	6
C		M6*80	6
F		Φ 6*40	3
D		M4	1




STEP: 2

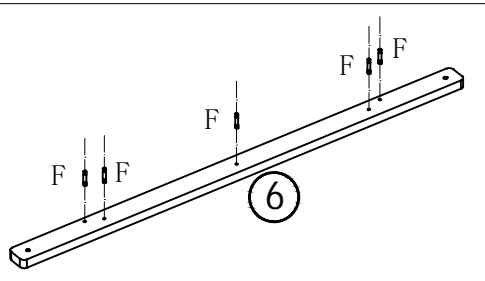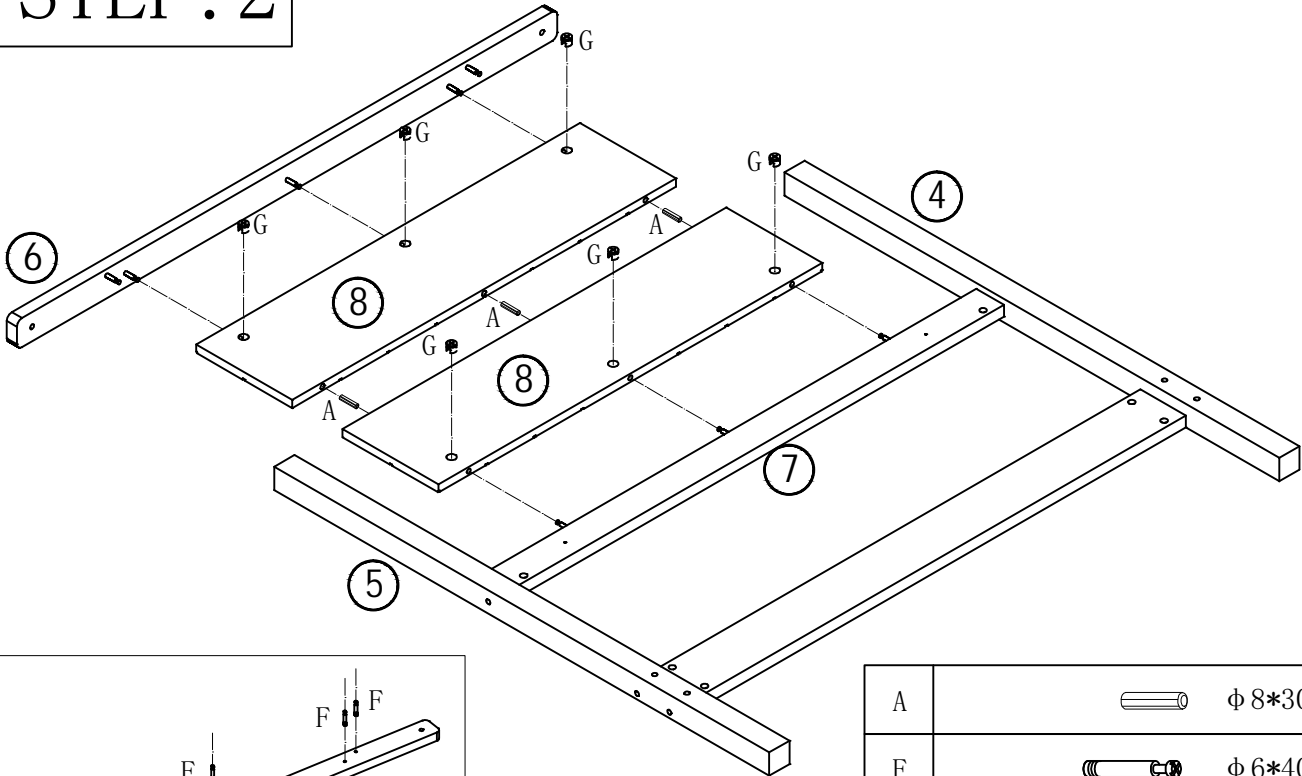


A		Φ 8*30	3
F		Φ 6*40	5
G		Φ 15*9	6
D		M4	1



STEP: 3

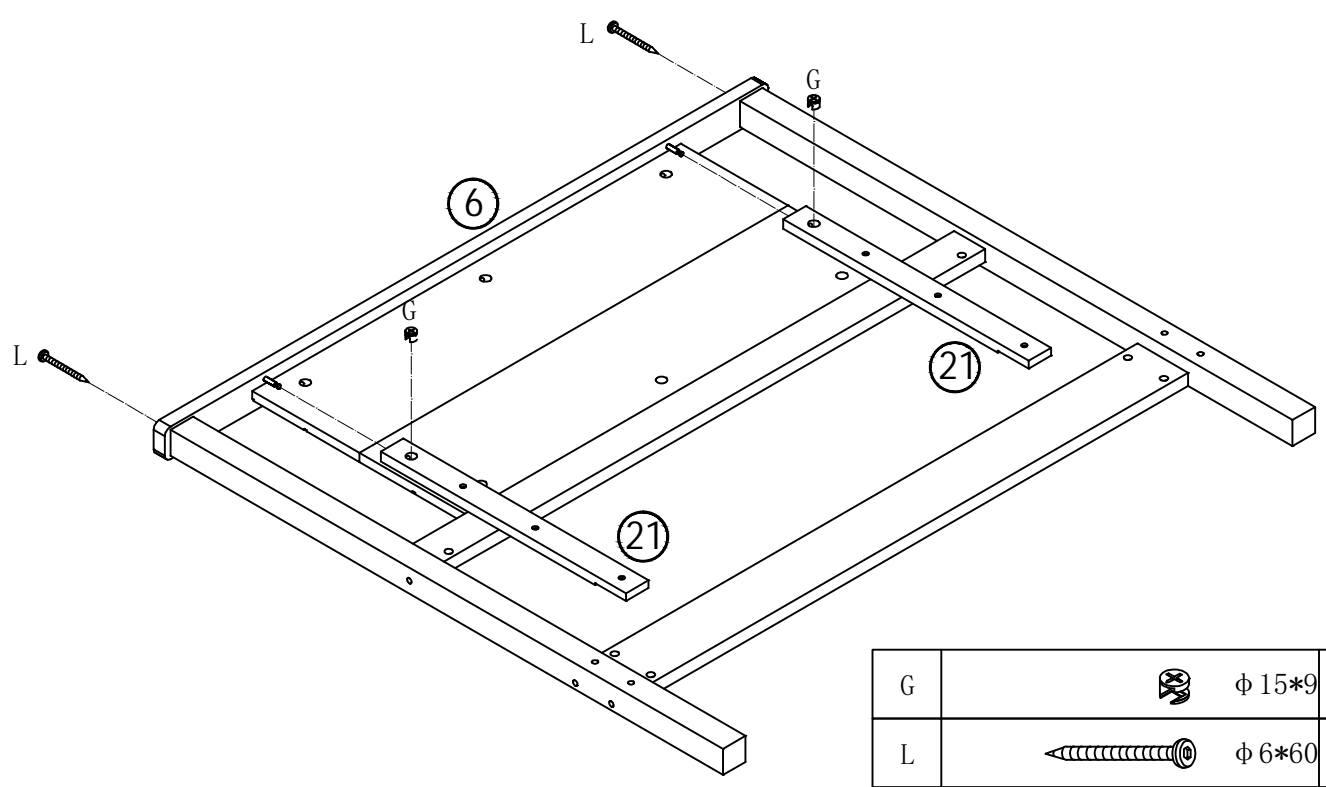


G		Φ 15*9	2
L		Φ 6*60	2
D		M4	1



STEP: 4

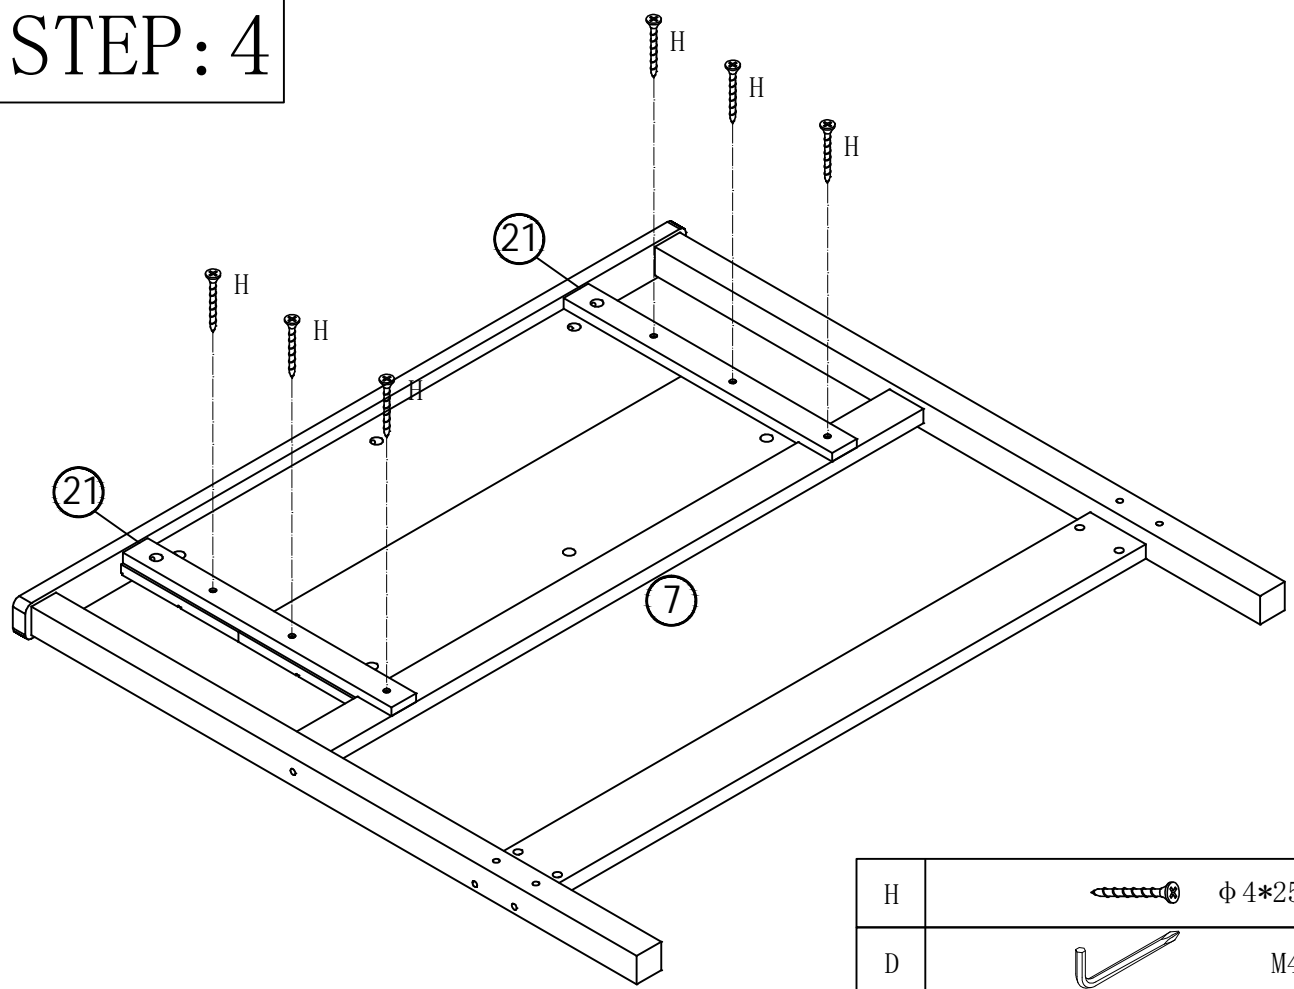


H		Φ 4*25	6
D		M4	1



STEP: 5

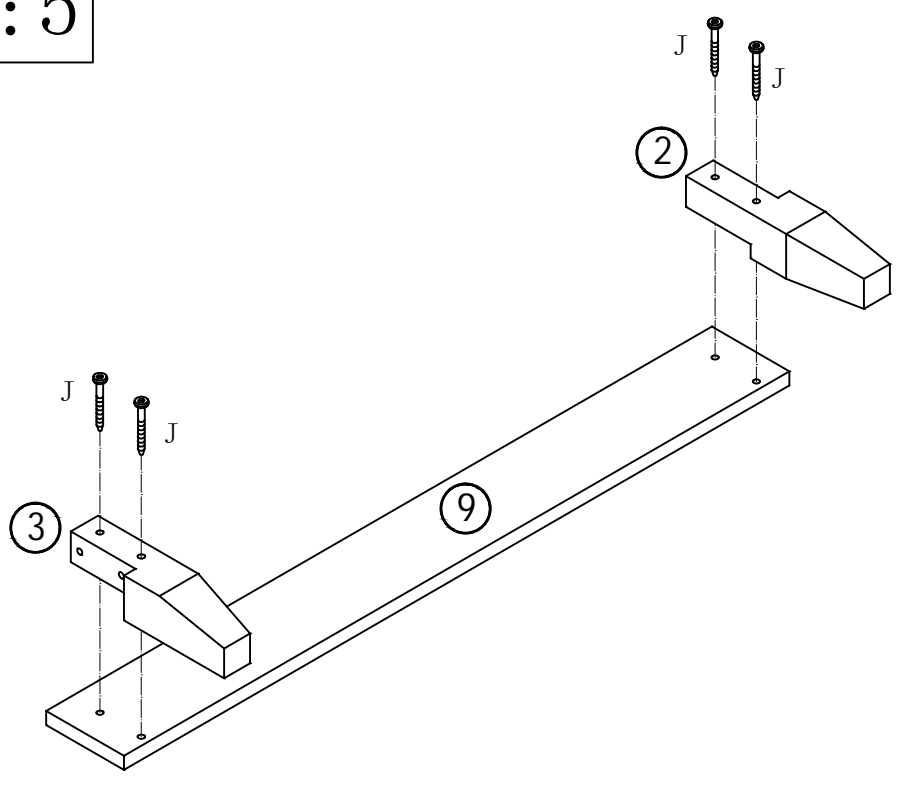


J		M6*55	4
D		M4	1

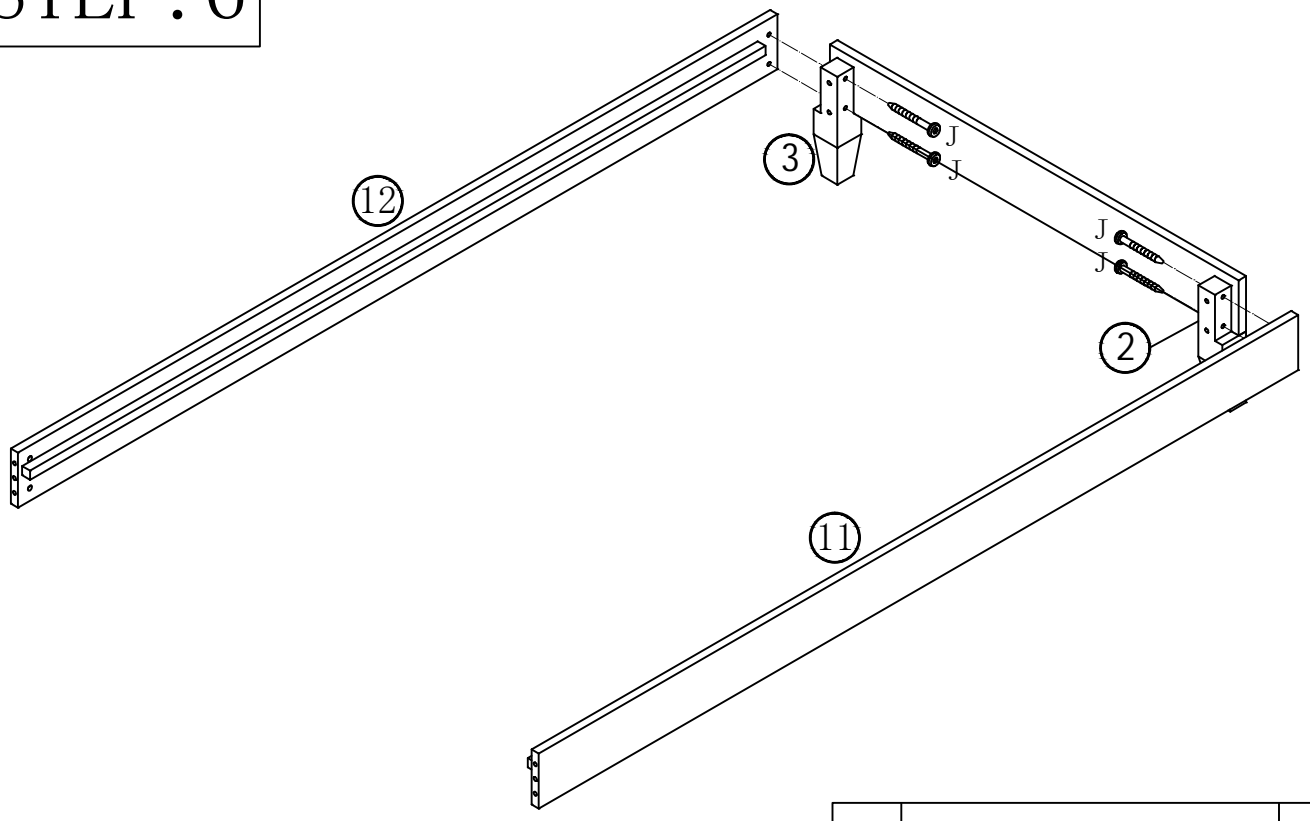



STEP: 6




J		M6*55	4
D		M4	1

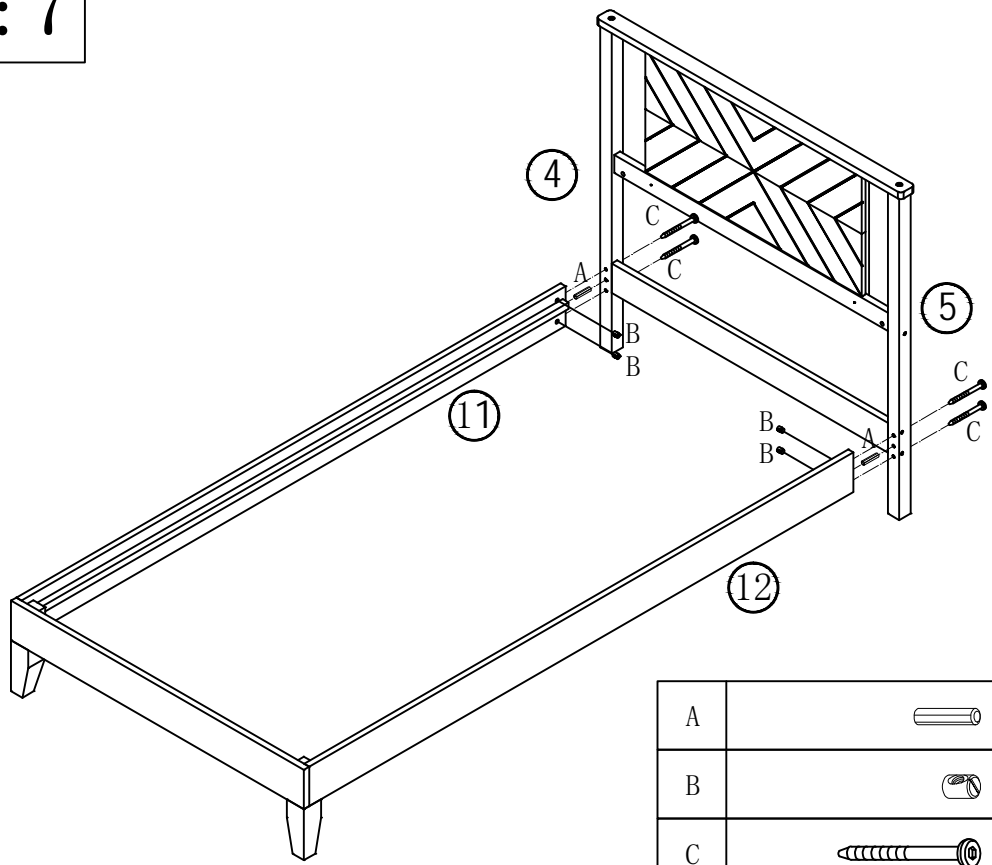

STEP: 7




A		φ 8*30	2
B		φ 10*13	4
C		M6*80	4
D		M4	1

STEP: 8

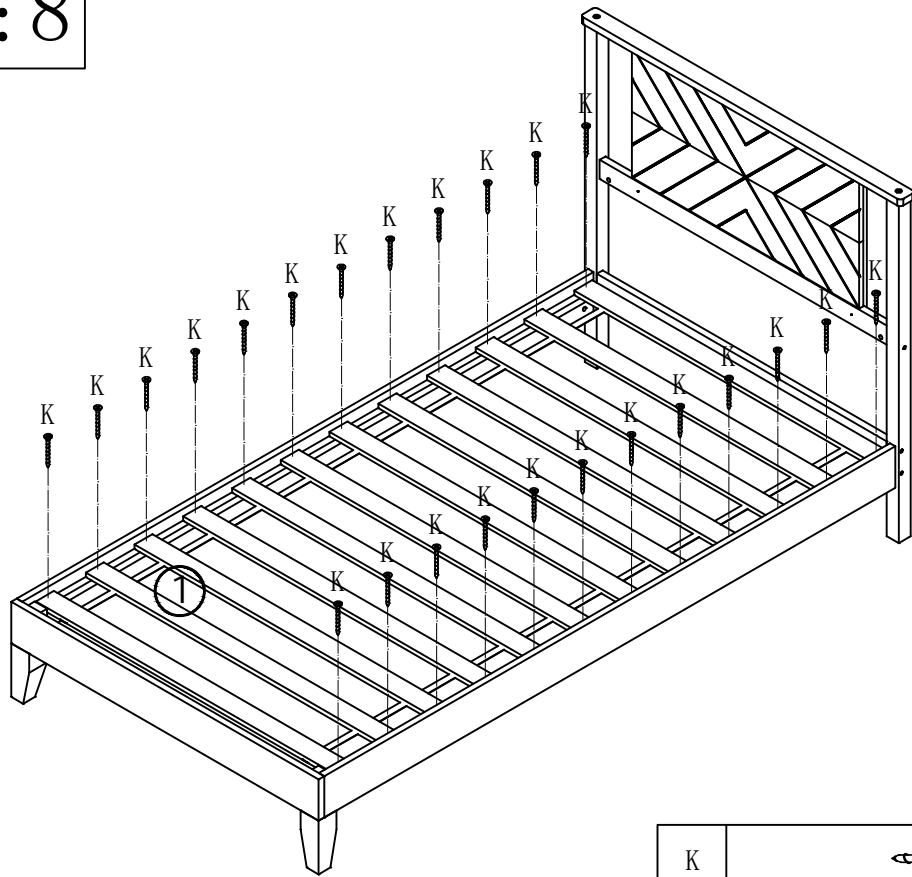

K		φ 4*30	24
D		M4	1

STEP: 9

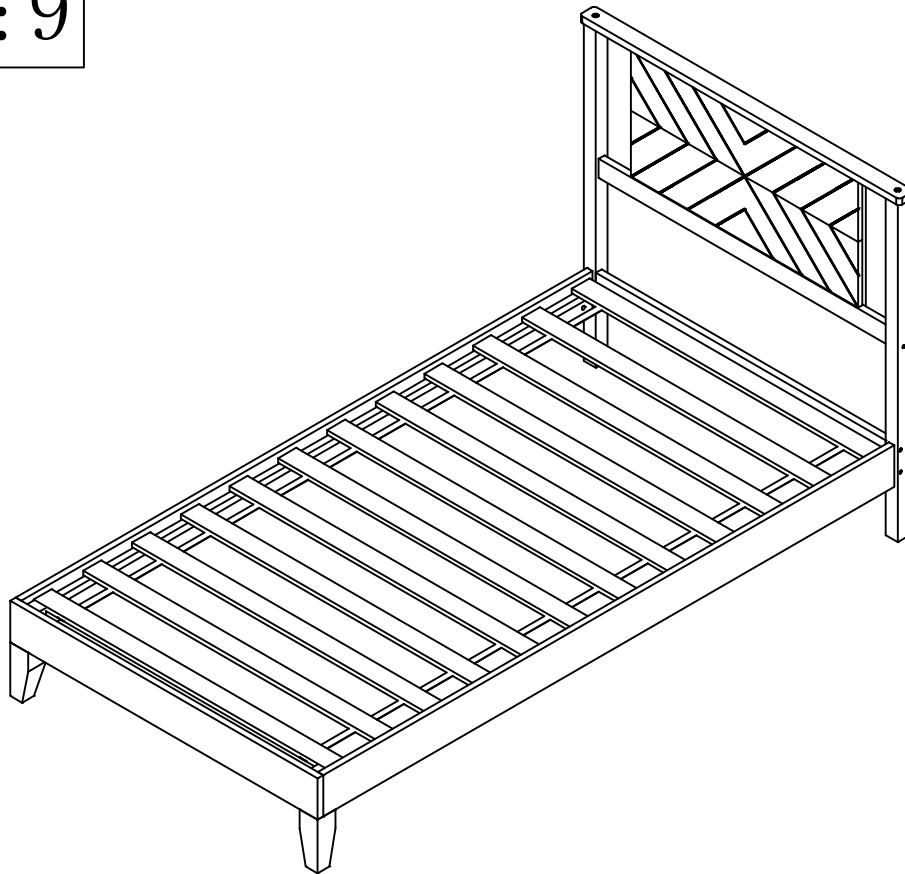

CA WARNING: This product can expose you to chemicals including **Wood Dust**, which is known to the State of California to cause cancer. For more information go to <https://www.P65Warnings.ca.gov>