
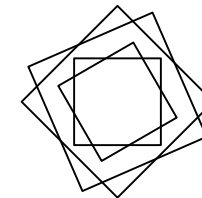


Installation Manual-BV B120 E24B GWH

MOTIVATE
YOUR LIFE !

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.


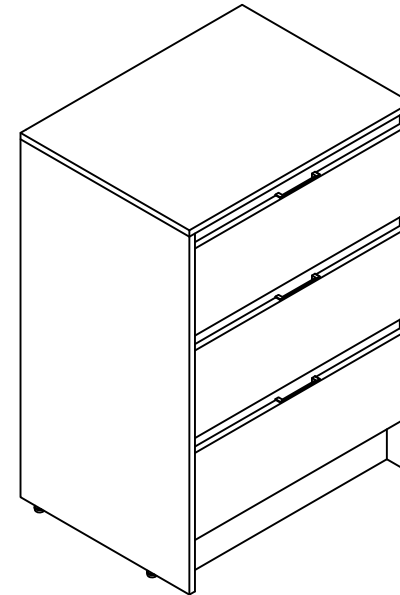


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Item NO.:BV B120 E24B GWH


Hardware

NO.	Draw	QTY	NO.	Draw	QTY
A	 Screws Ø4x14mm	30	G	 Screws Ø4x20mm	12
B	 Two-in-one connector	64	H	 Adjustable feet	4
C	 Two-in-one connector	64	I	 Track	3
D	 Wood plug	8	J	 Anti-collision gasket	12
E	 Plastic anchor(Ø10mm)	2	K	 Screwdriver	1
F	 Screws for fix on the wall	2			


Recommended tools

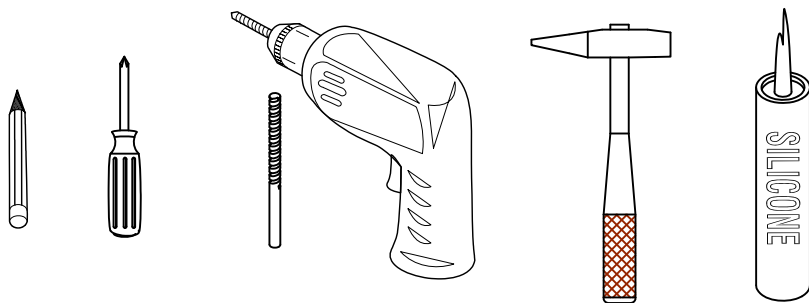


Dimensions

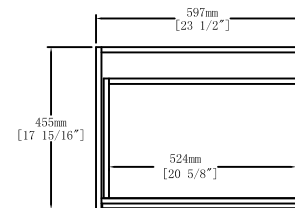

Top View

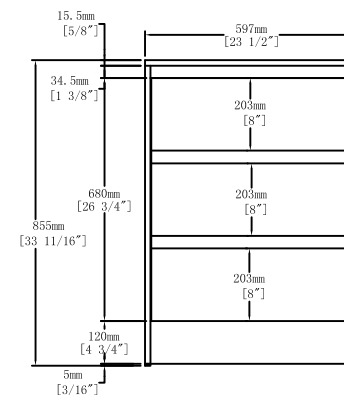

Front View

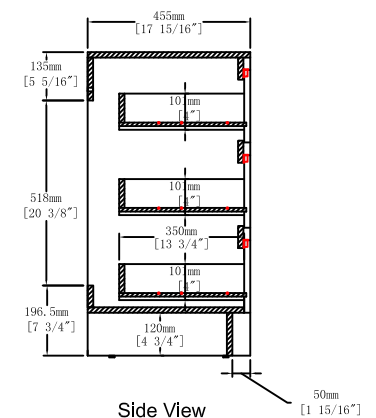


Side View


CARE CLEANING AND MAINTENANCE

1. Dust regularly with a soft , dry cloth.
2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
3. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
4. Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.


Finished

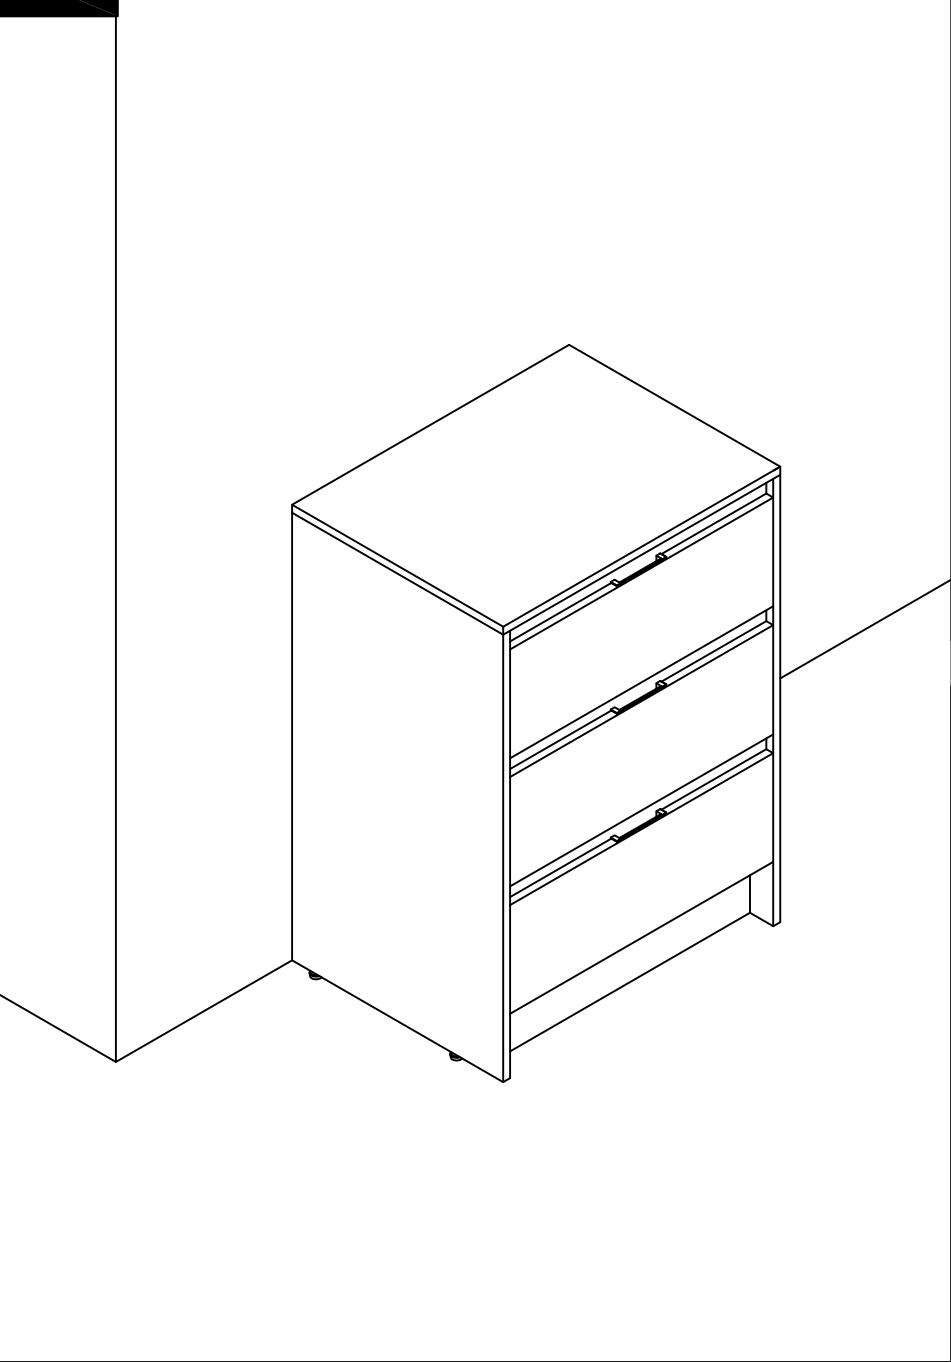

Dimensions



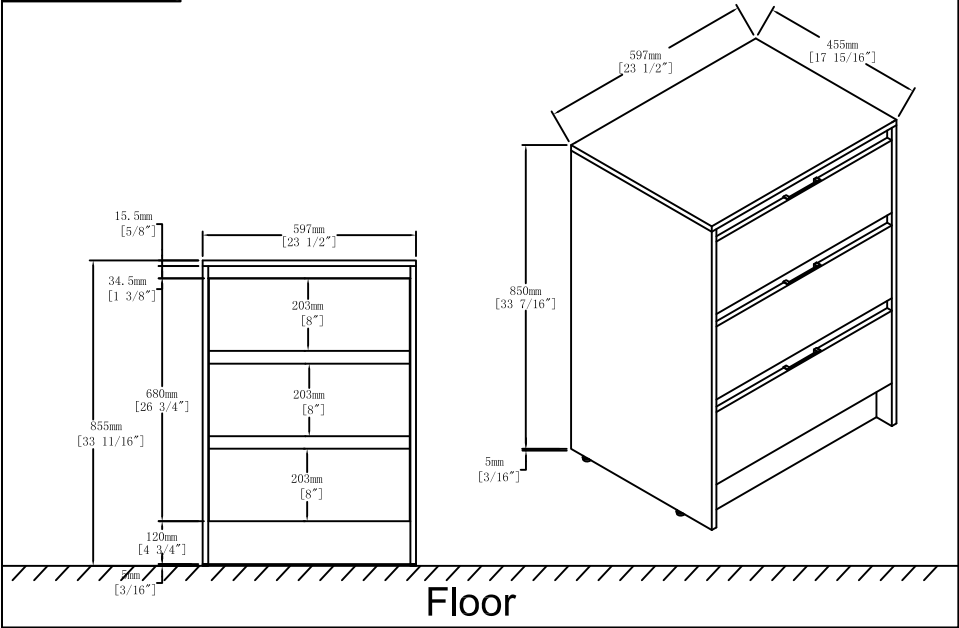


Components


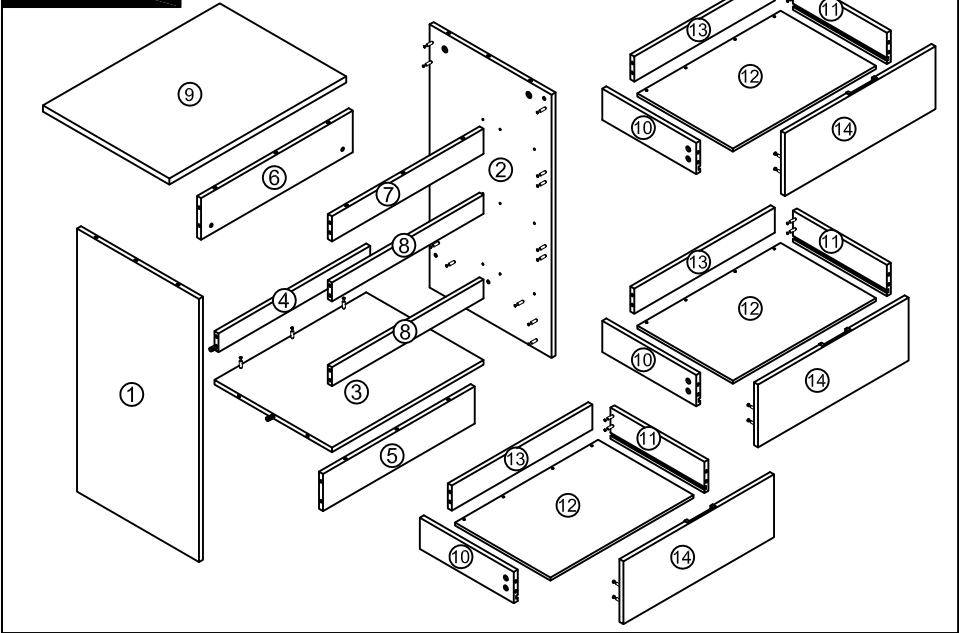


Step 1



Note: Follow the holes positions exactly.

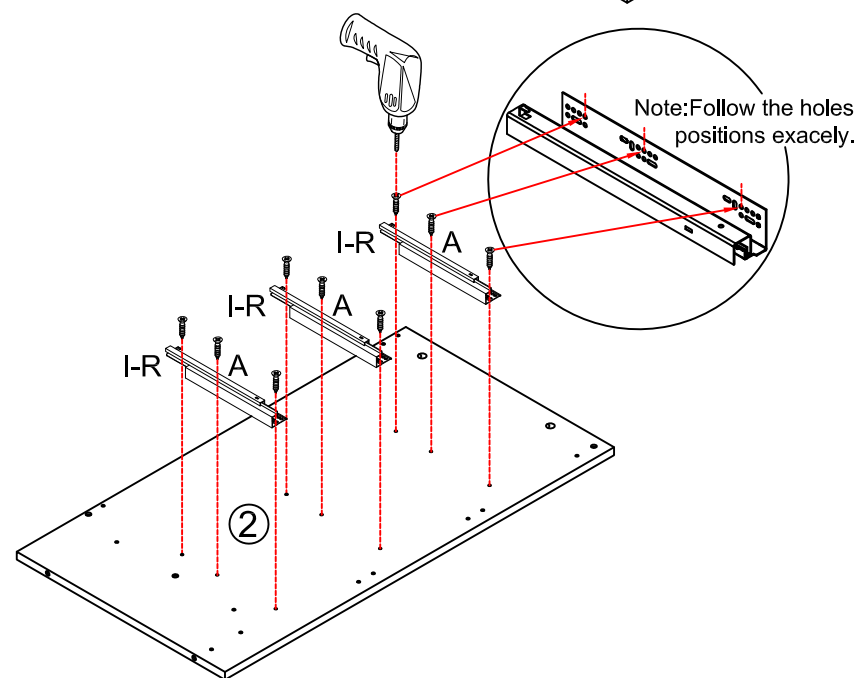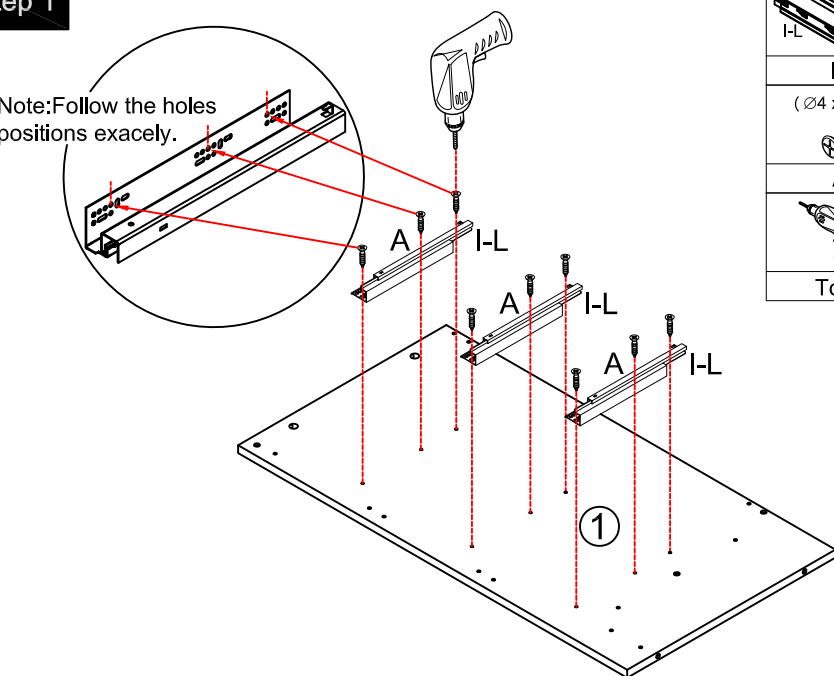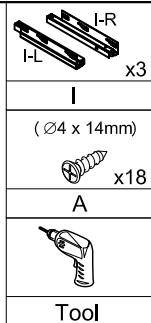

Step 16

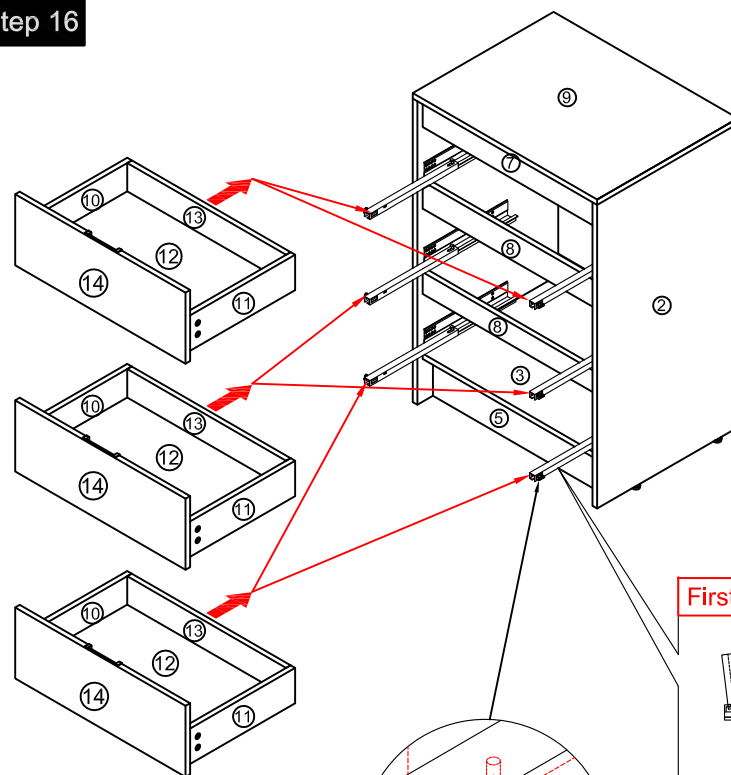
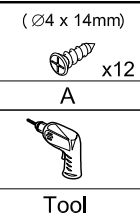


First

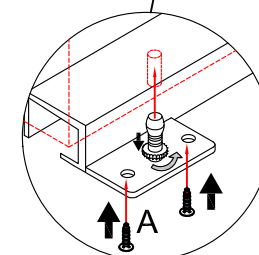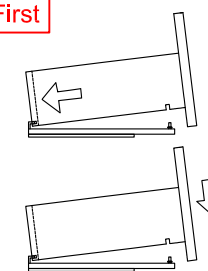




Third step: The bottom of the rail is fixed with screw A.

Second step: Tuck the rear holes.




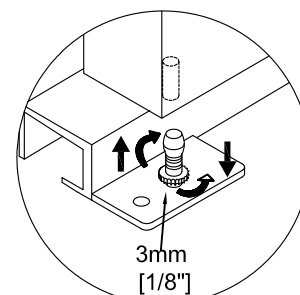
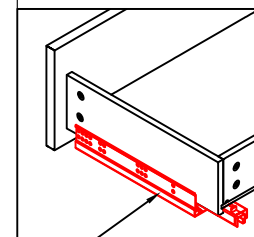


Note: The rails adjust their height 3mm.

Step 15

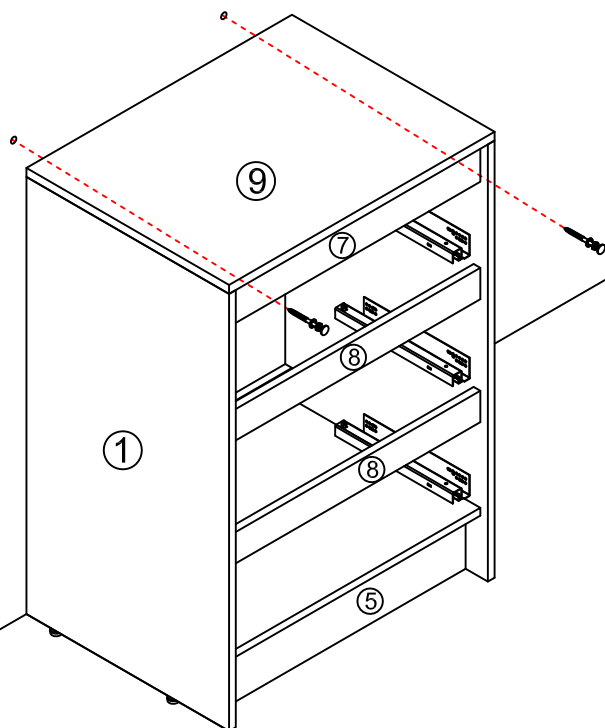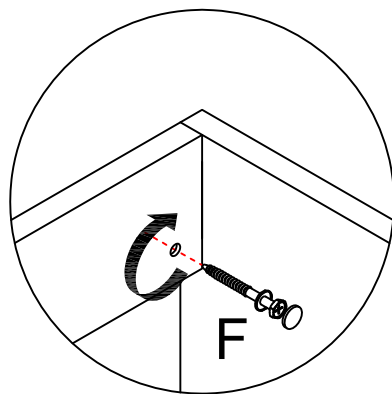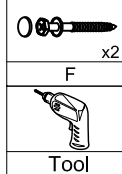


Step 2

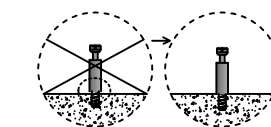
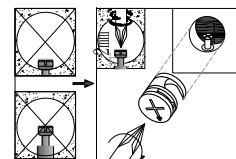
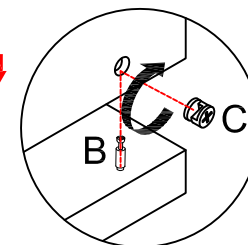
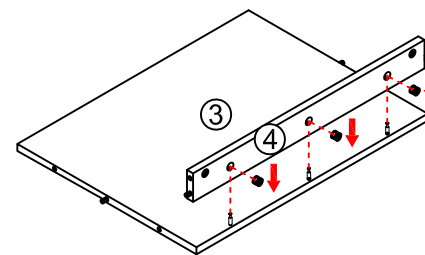
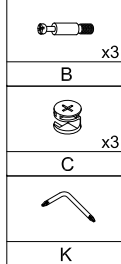


Notes: Screw installation depth as shown


Attention: Cam lock arrow point to the steel rod.

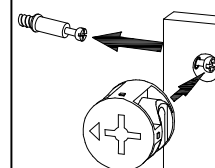


Step 3

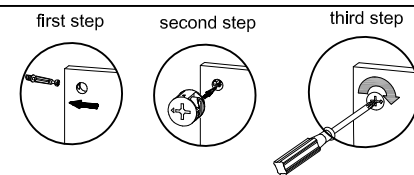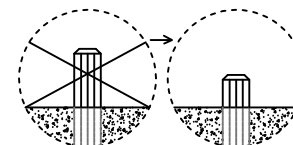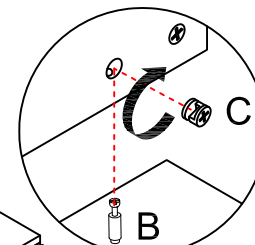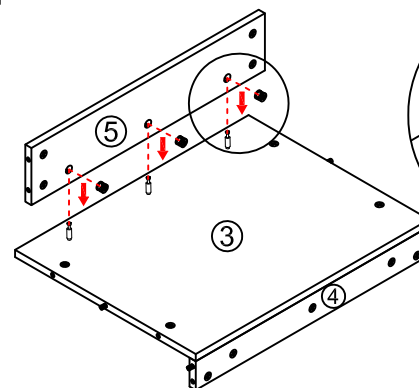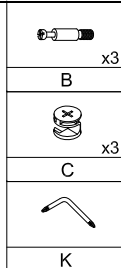


Step 4

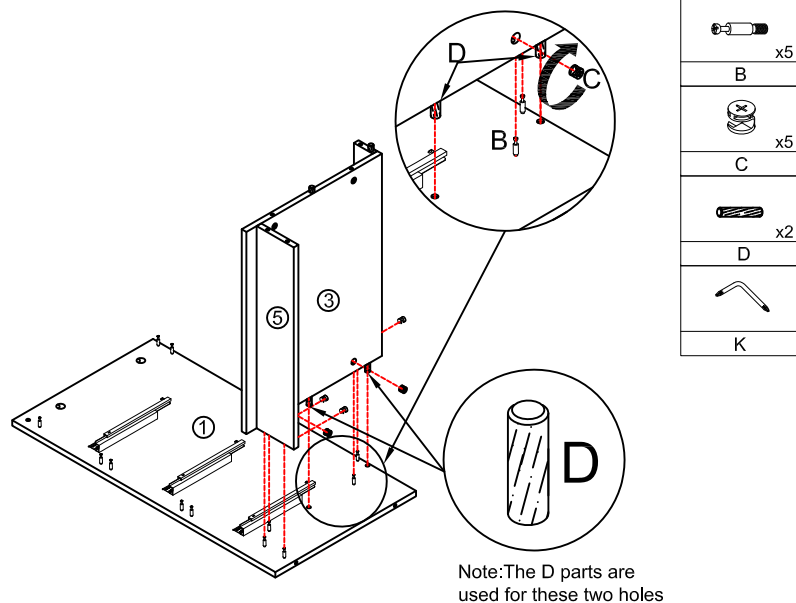


Step 13

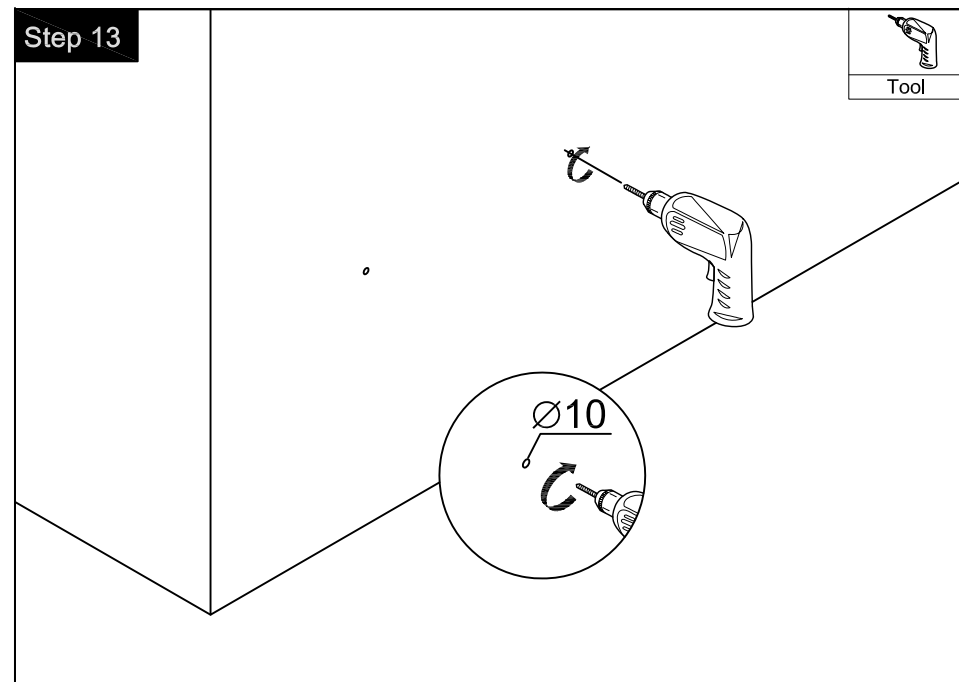



Step 5

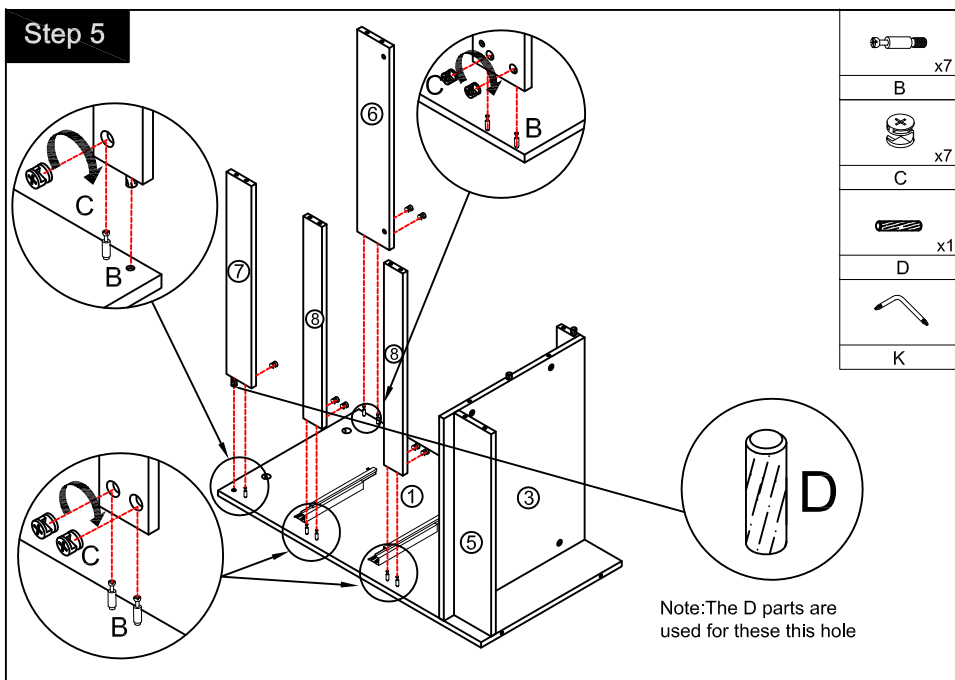


Step 14

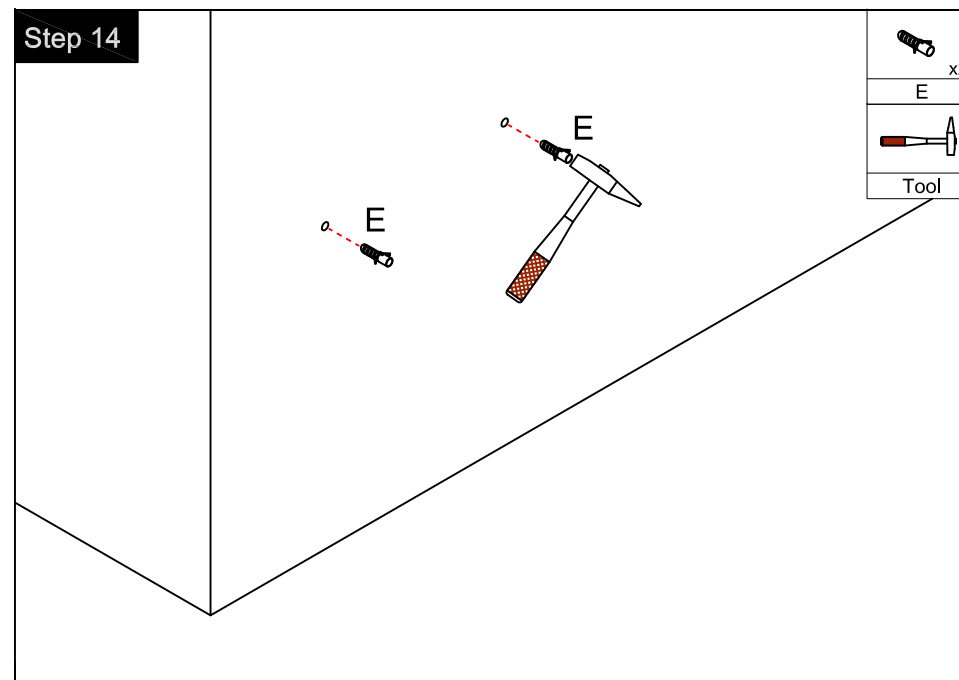


Step 11

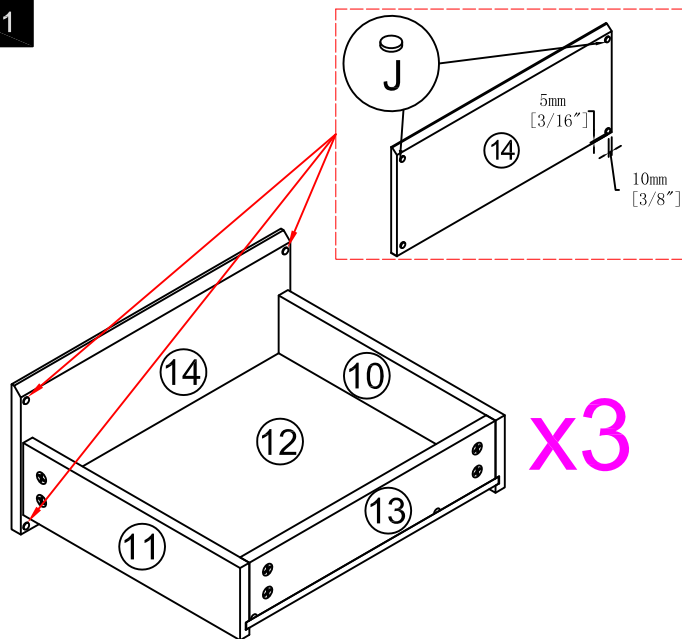


Step 12

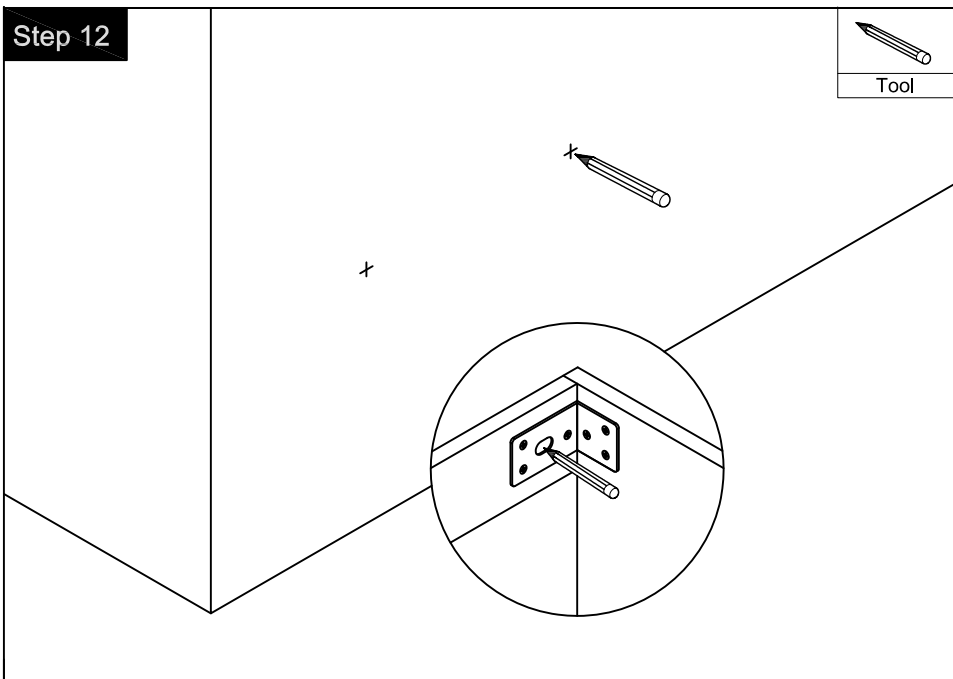


Step 6

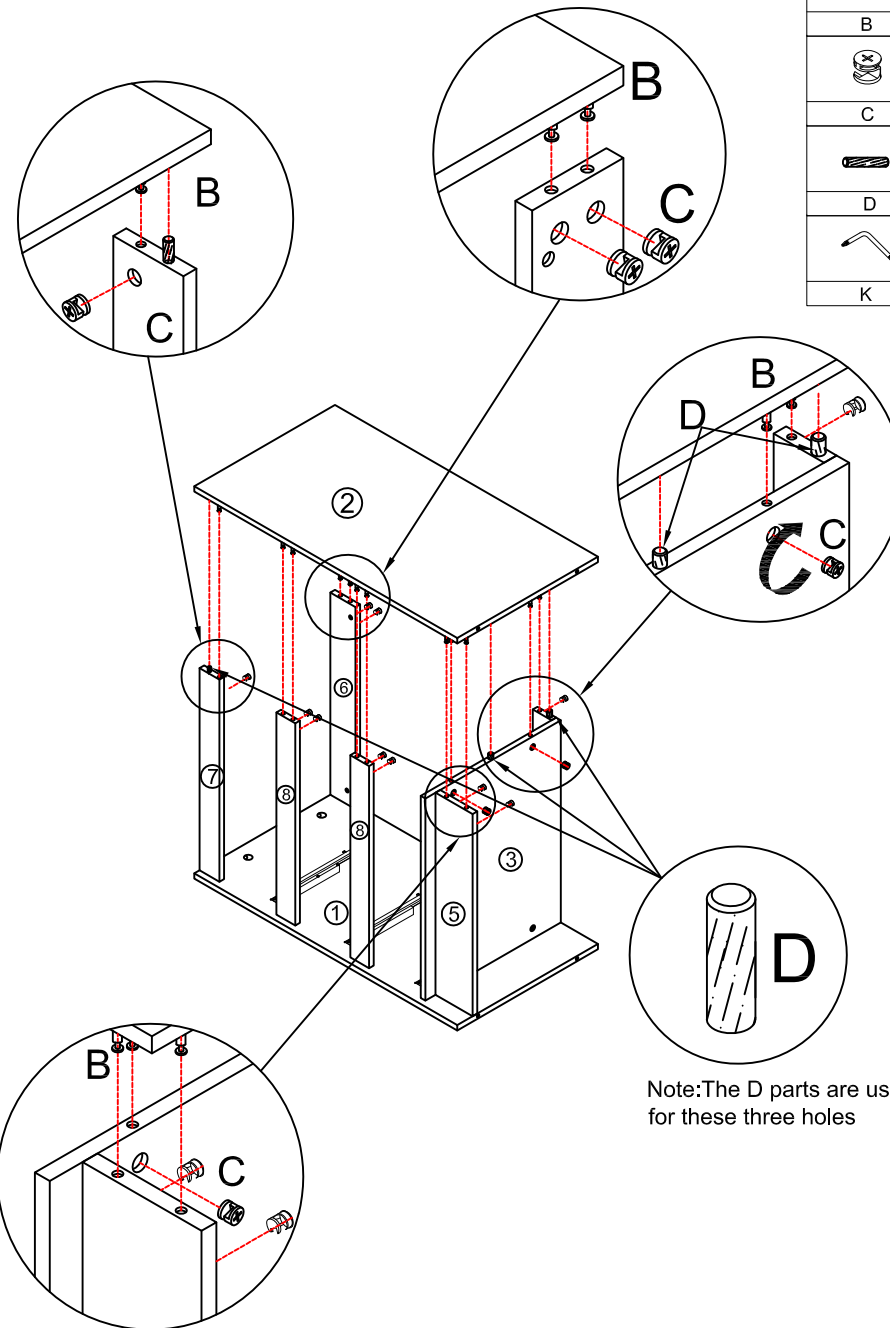


Step 7

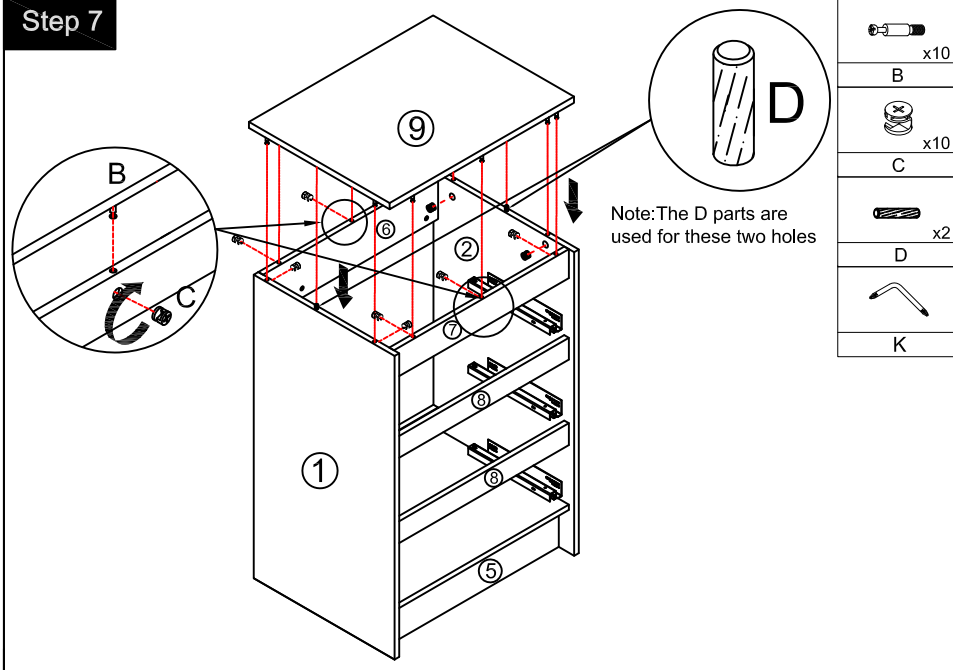

Step 8

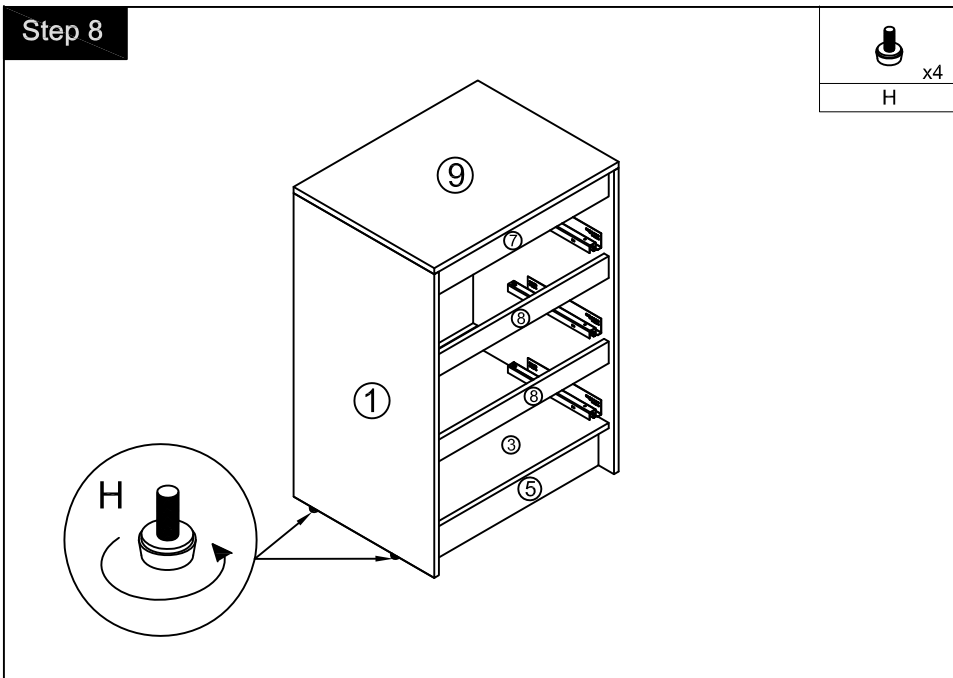

Step 9

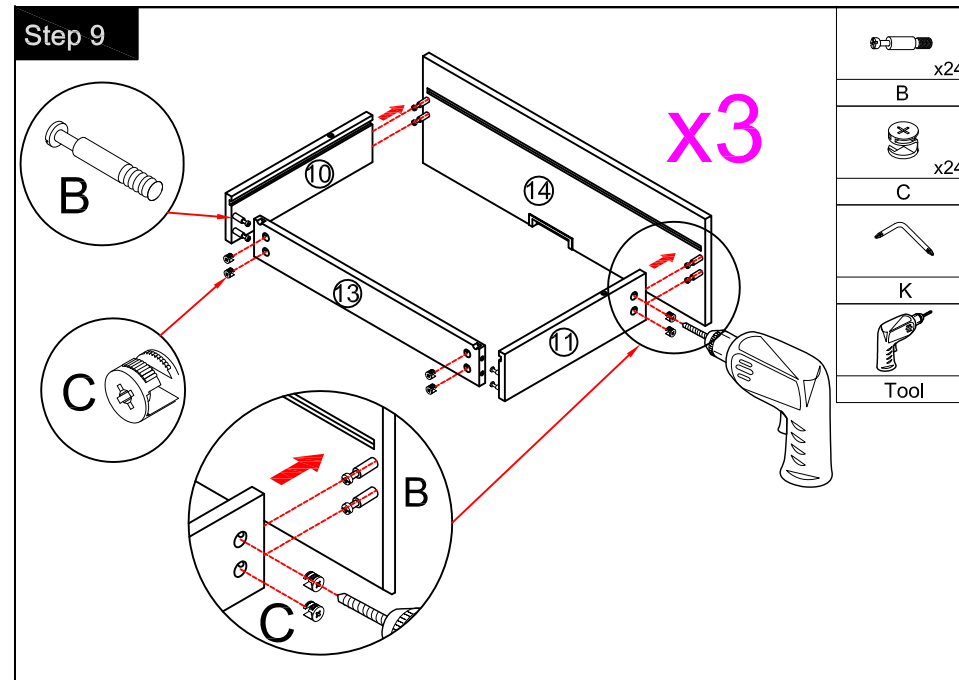

Step 10

