
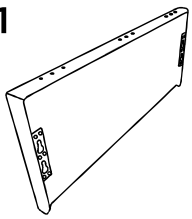
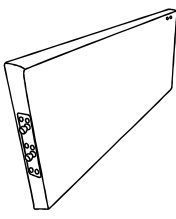
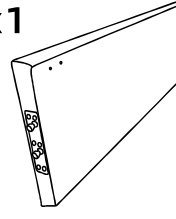
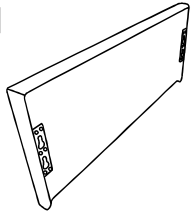
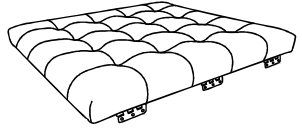
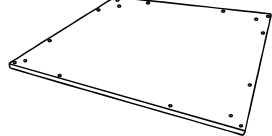

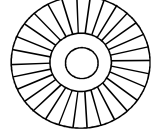
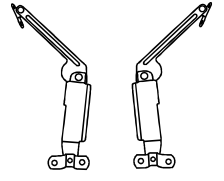


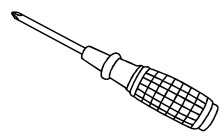



ASSEMBLY INSTRUCTION

Ax1 	Bx1 	Cx1 	Dx1 
Ex1 	Fx1 	Gx4 	Hx4 
Ix2 	Jx17  4x25mm	Kx12  4x40mm	Lx1 
			Mx12  6x13x1mm

Installation Steps

step1

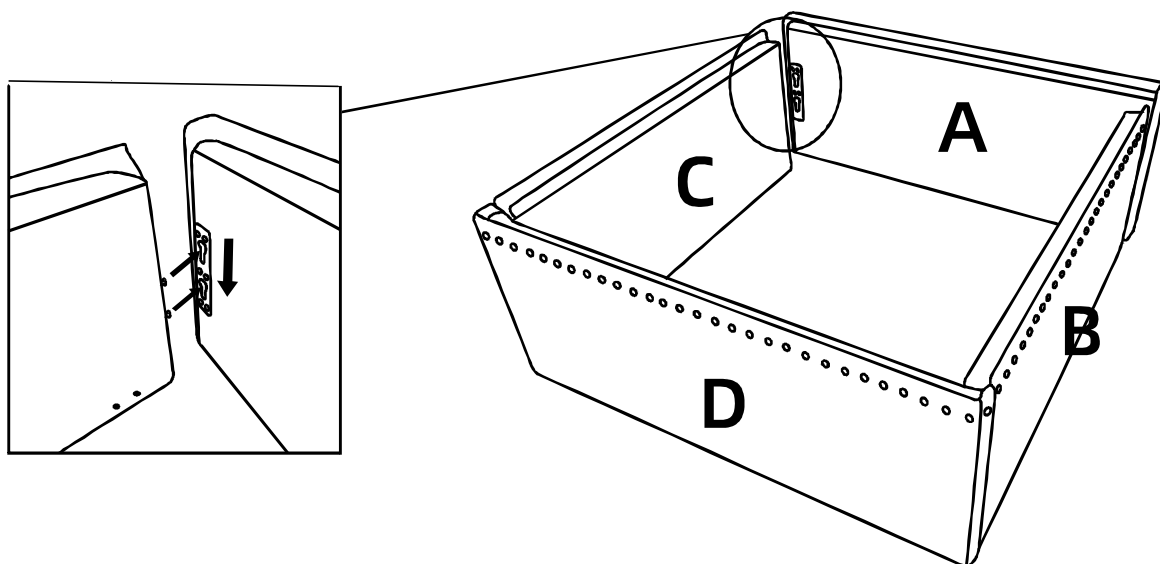


Insert Parts B & C into the pin holes of Parts A & D, and press them downward firmly to secure.

(Note: Parts A, B, D, and C must be placed in the exact order as shown.)

Installation Steps


step2

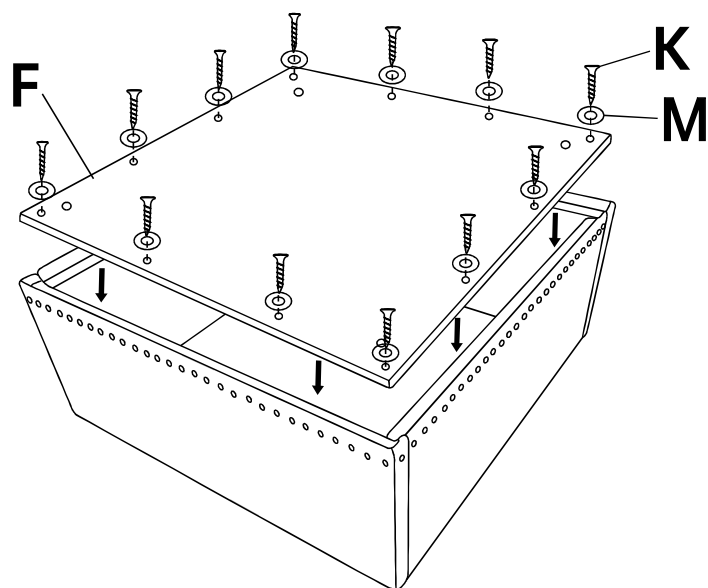

Align Part K ,M with the pilot hole on Part F, and tighten Part K,M using a screwdriver.

(Note: Install the screws at the four corners first, then proceed with the remaining screws.)


step3

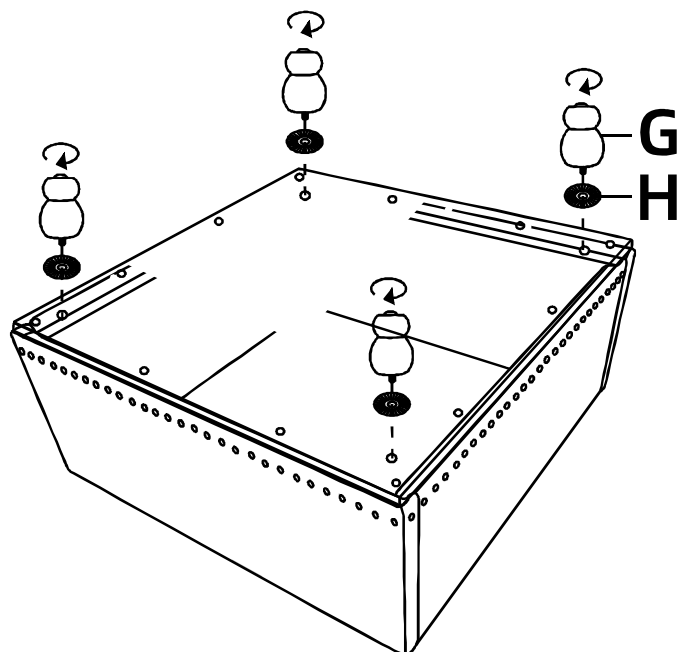

Insert Part G into the hole of Part H, and hand-tighten Part G by rotating it.


Installation Steps

step4

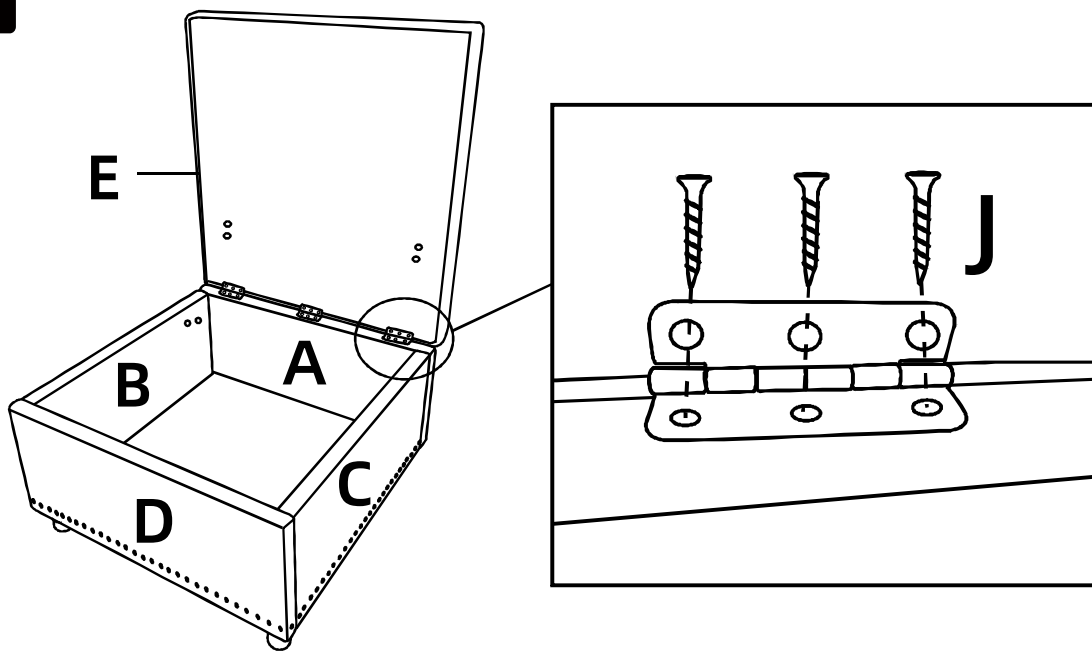

Turn the storage ottoman upright, align the hinge of Part E with the pilot hole on Part A, and tighten Part J using a screwdriver.

step5

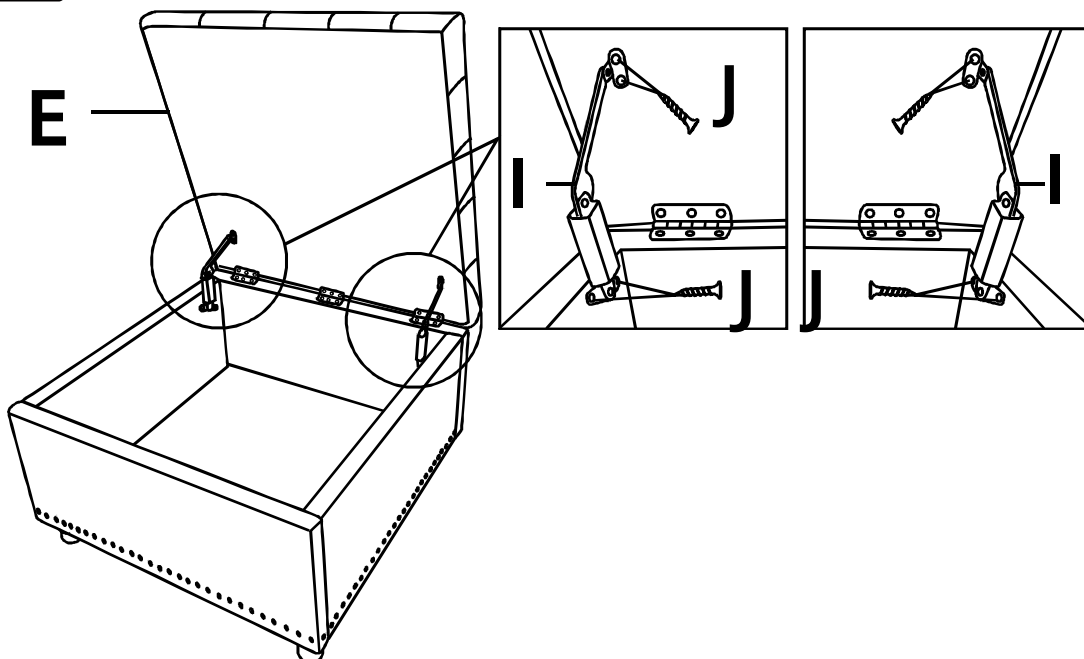

Connect Part E to Parts B & C using Part I, and tighten Part J with a screwdriver.

Installation Steps

step6

(Note: For the storage ottoman, only Part G is installed via screw holes. All other pilot holes require screws to be driven in with a screwdriver. Use of an electric screwdriver is recommended.)

