

CARE AND MAINTENANCE







Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.


NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- \* This item may require periodic tightening.
- \* Do not tighten bolts until completely assembled.

Product Dimensions:  $\phi 18"$ x19-1/4"H

Part List and Hardware List

| PIECE | DESCRIPTION            | PICTURE  | QUANTITY |
|-------|------------------------|--|----------|
| A     | Seat cushion           |               | 1x       |
| B     | U type metal frame     |              | 1x       |
| C     | L type metal frame     |             | 2x       |
| H1    | Allen bolt             |  1/4"x 5/8" | 12x      |
| H2    | Crisscross metal plate |  3x60x60mm  | 1x       |
| H3    | Allen key              |  M4         | 1x       |

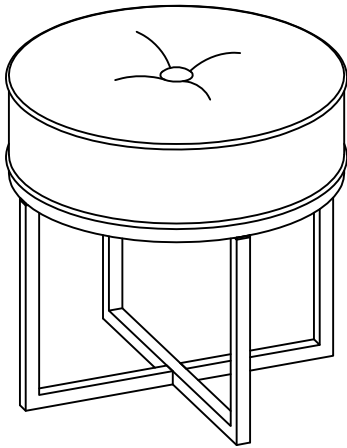


Weight capacity:275lbs  
WARNING:DO NOT STAND ON THE OTTOMAN

## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.  
If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key

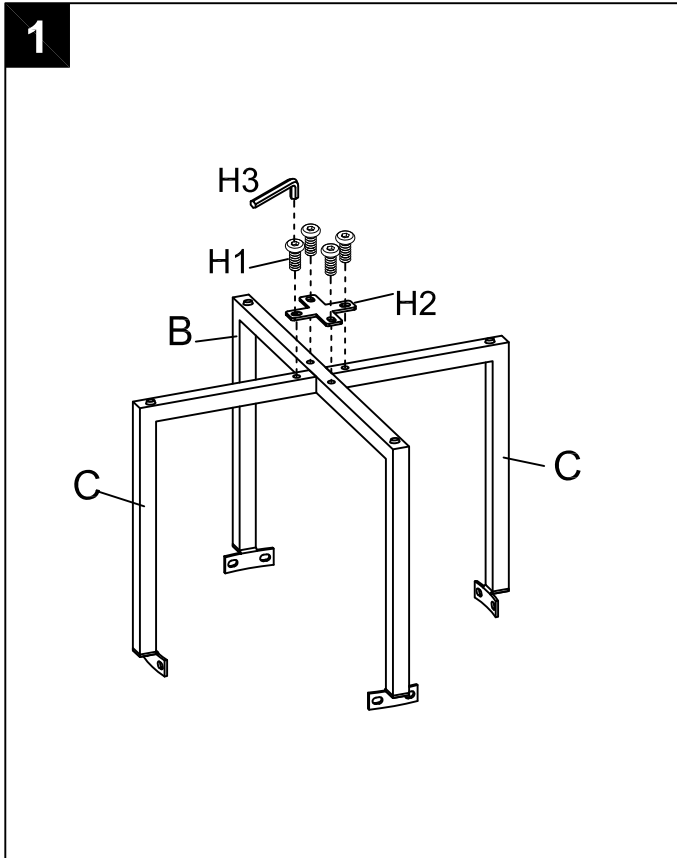


### Step 1

Attach 1\*U type metal frame (B) & 2\*L type metal frames (C) together with crisscross metal plate (H2), Use Allen Key (H3) to lock through holes on crisscross metal plate with 4\*Allen bolts (H1), as picture.

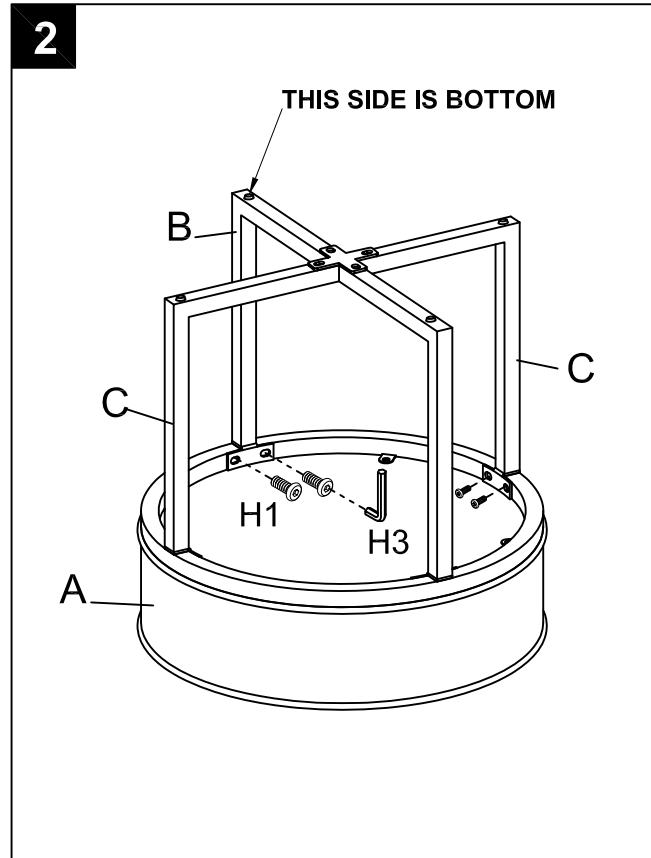

### Step 2

Attach the assembled metal base (as step 1) with the bottom side of seat cushion (A) and aligning, Use Allen Key (H3) to lock 8\*Allen bolts (H1), as picture.

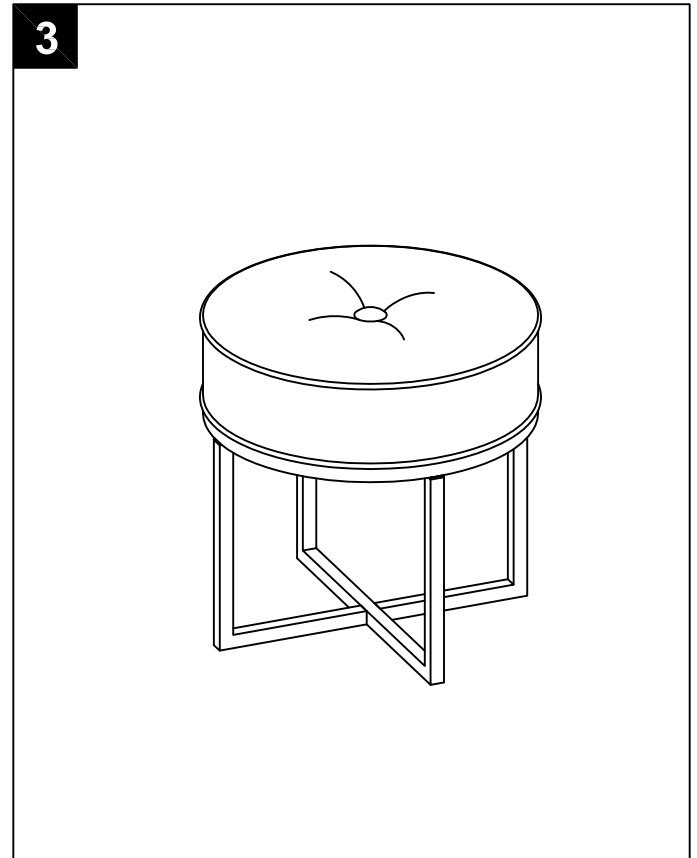

### Step 3

Straighten up the assembled table, Assembly is completed.