
CORNER SOFA

Instruction Manual

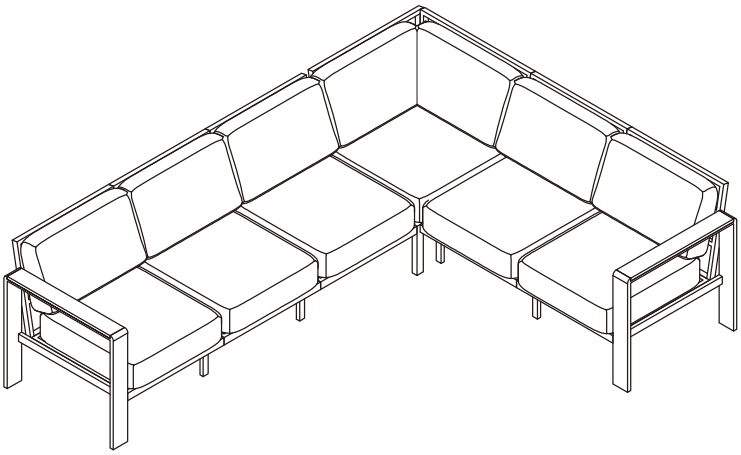

- Excellent weather resistance
- Easy to clean and maintain

Instruction Manual

ASSEMBLYINSTRUCTIONS:

· Our clear, easy-to-follow, step-by-step instructions will guide you through the project from start to finish.

· Do not skip any steps. It is of utmost importance to assemble all of the parts according to the directions.

· Item identi cation: For ease of identi cation, all parts are labeled to correspond to the step number in which the part is used.

IMPORTANT:

· Read following instructions carefully before using the sofa.

· Be aware that some parts are heavy and have sharp edges.

· Do not overtighten screws (Insert all screws before tighten screws).

· Firmly secure all bolts, screws and nuts before use.

· Please do not exceed the weight limitations of this item.

· Recon rm that all bolts, screws, and nuts are secure every 90 days.

CARE &SAFETY:

· Always use on rm level ground.

· Keep all children and pets away from assembly area. Children and pets should be supervised while the product is being assembled.

· The assembled product should be located at least 6 feet (2m) from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.

· Do not use or store this item in the proximity of open flame or flammable/-combustible chemicals.

· In case of fire, do not attempt to extinguish any burning polypropylene with water.

· Please contact Customer Service if you have any problems or discover any missing parts.

Care & Maintenance



Do not clean furniture with harsh cleansers or polish, avoid using steel wool to clean the furniture.



To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain and snow.Whenever possible cover the product and /or place under patio or awnings.



Stains may be removed with mild soap solution and damp cloth.



Keep away from sources of ignition.




Dust and pick-up spills using a clean,non-colored, lint-free cloth.





Do not use sharp objects on the product surface.

ASSEMBLY PARTS

K 	L 	M 
M6 Washers: 24pcs	M6*35 Screws: 14pcs	M6*45 Screws: 14pcs




N 	O 	P 
M6*55 Screws: 12pcs	M8 Washers: 1pc	Ø30 Washers: 1pc




Q 	R 	S 
Socket Wrench: 1pc	M8 leg Stud: 1pc	Wrench: 1pc



T 	U 	V 
Foot Pad: 1pc	M6 Nuts: 12pcs	Allen Wrench: 1pc




Y1 
M8 Nuts: 2pcs



ASSEMBLY PARTS

A 	B 	C 
Right Armrest: 1pc	Left Armrest: 1pc	Seat Panel: 5pcs


D 	E 	F 
Backrest: 5pcs	Center Leg: 8pcs	Corner Seat Panel: 1pc


G 	H 	I 
Big Corner Backrest: 1pc	Small Corner Backrest: 1pc	Corner Leg : 1pc

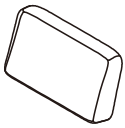
J 	W 	X 
Corner Leg : 1pc	Seat Cushions: 6pcs	Back Cushions: 5pcs

Y 	Z 
Corner Back Cushion 1: 1pc	Corner Back Cushion 2: 1pc

ASSEMBLY PARTS

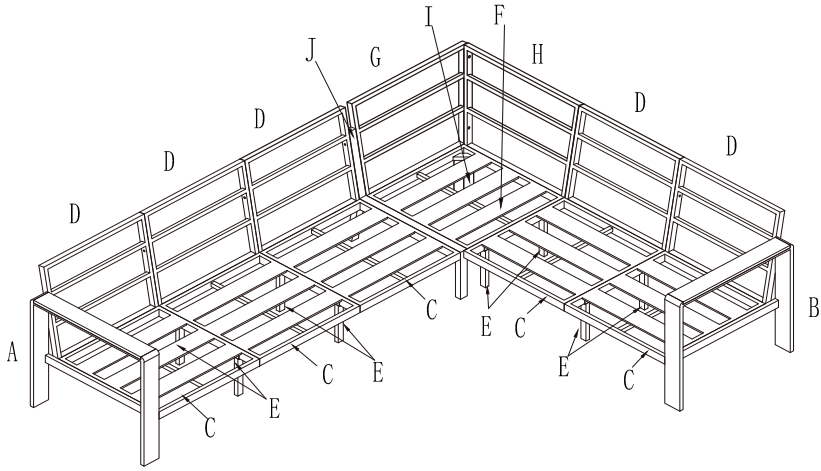


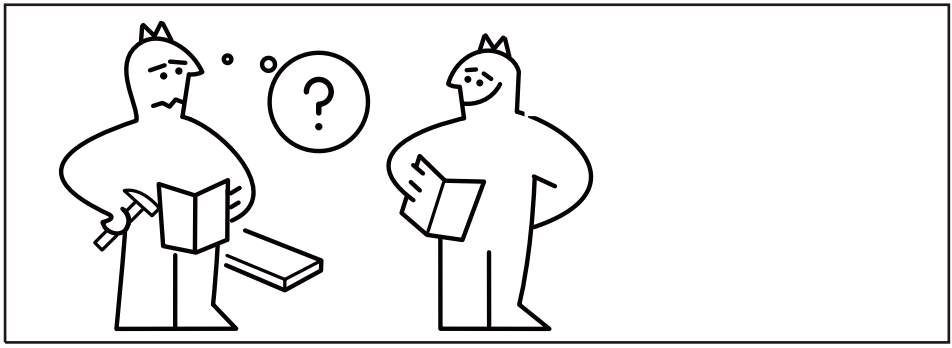


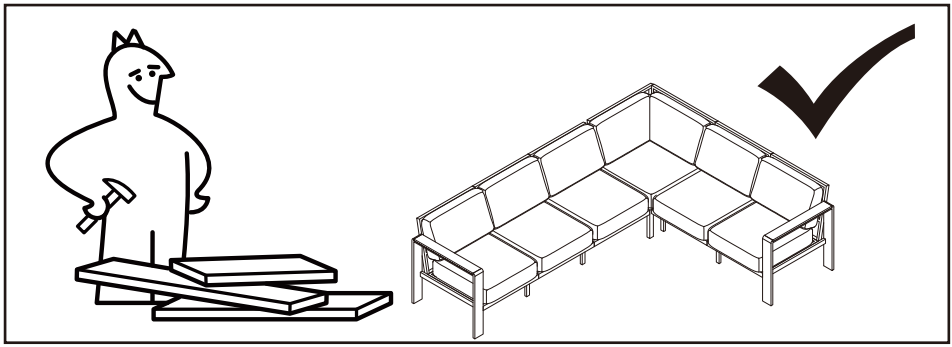

Step 1


Connect 2 Seat Panels (C) and Corner Seat Panel (F) together, then put the Center Legs (E). Place M6 Washers (K) on both sides, insert the M6*55 screws (N) and cover the M6 nuts (U) on the other side, then tighten them 1/2 tight with the Allen wrench (V)and wrench (S).

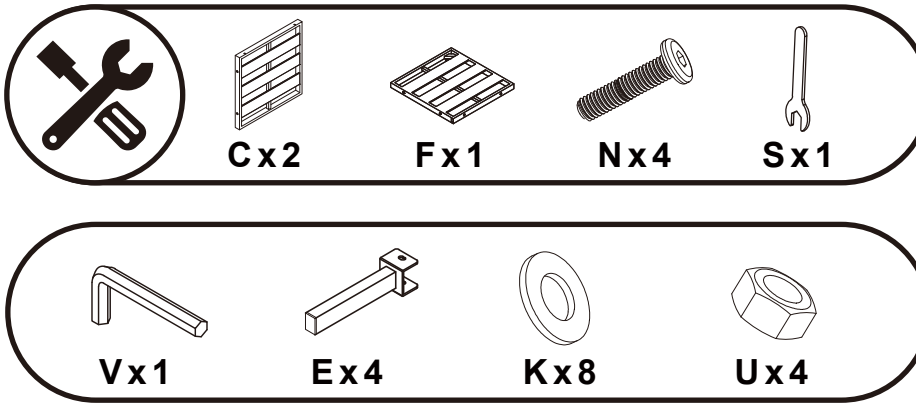


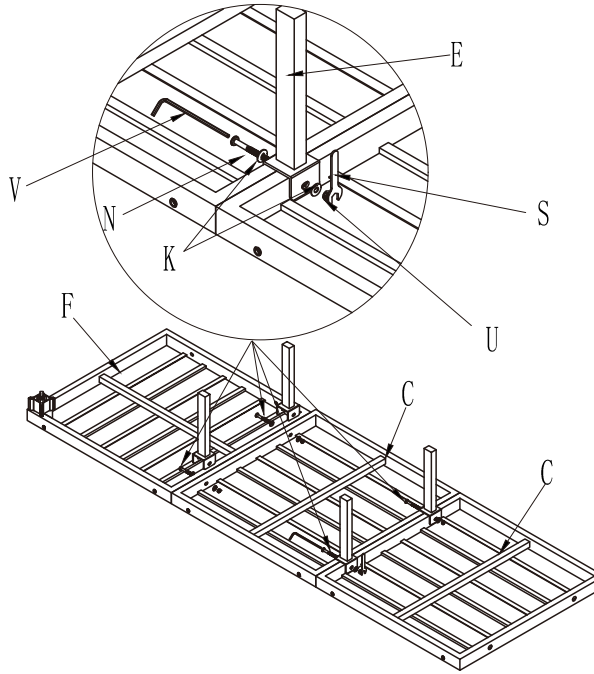


Step 2

Connect the three Seat Panels (C) and Center Legs (E) together.
Place M6 Washers (K) on both sides, then install M6*55 Screws (N) and cover the M6 nuts (U) on the other side, then tighten them 1/2 tight with the Allen wrench (V)and wrench (S).

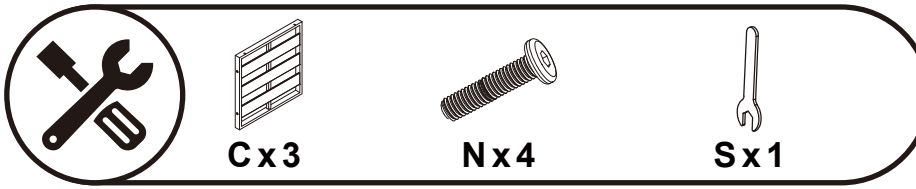


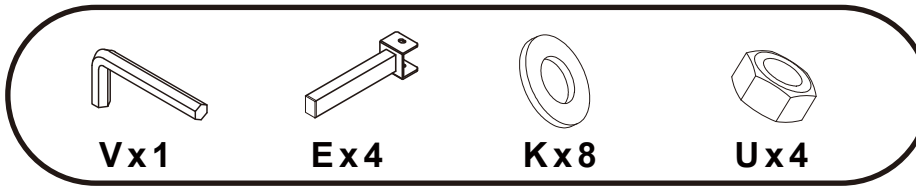


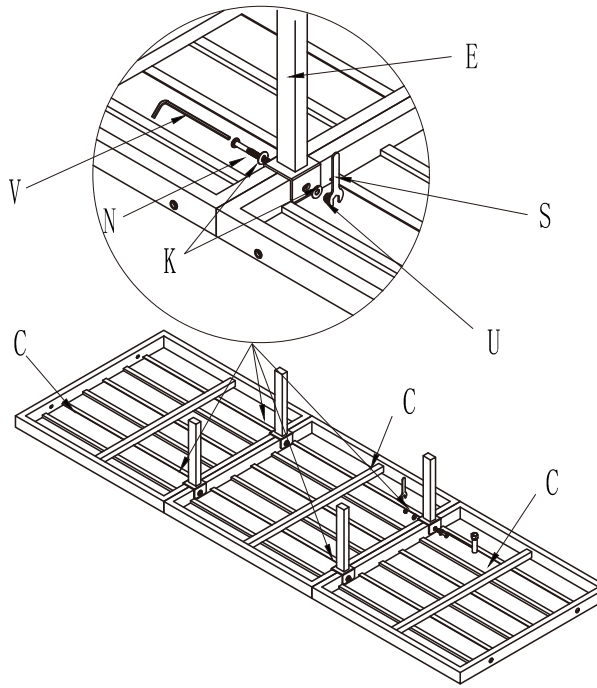

Step 3


Separate the Foot Pad (T) into T1 and T2 with the Socket Wrench (Q) by turning counterclockwise.

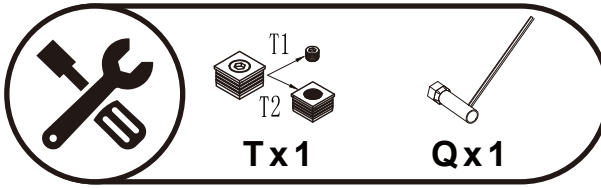


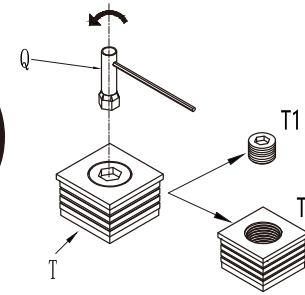

Step 4


Install the M8 Nut (Y1) to the M8 Leg Stud (R) to 2-3 cm, then put the M8 Washer (O) onto it. Then install them to the threaded hole of the Corner Seat Panel (F) and tighten them with the Socket Wrench (Q).

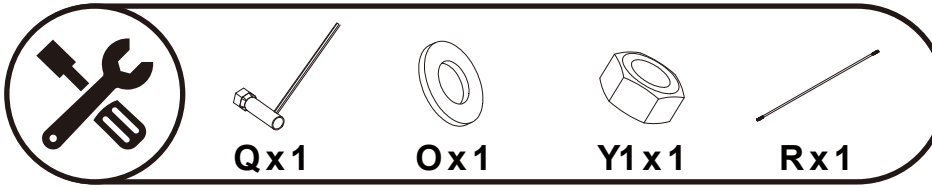


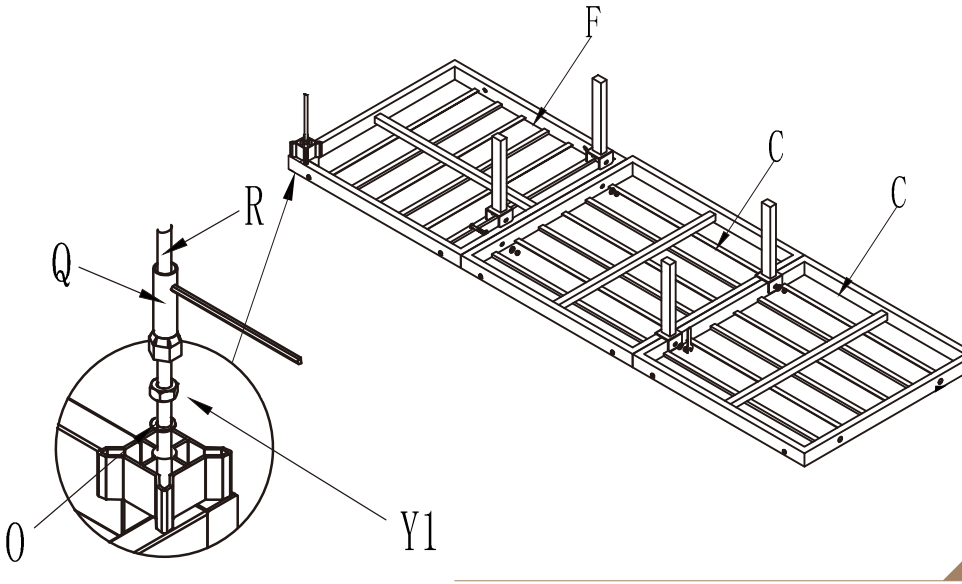


Step 5

Install the Corner Leg (I) to the Corner Seat Panel (F) and assemble the part (T2). Put the Ø30 Washers (P) into it and then put the M8 Nut (Y1). First tighten the M8 Nuts (Y1) with the Socket Wrench (Q), then tighten part (T1) with the Socket Wrench (Q).

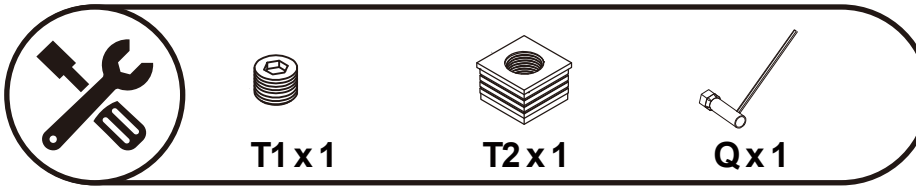


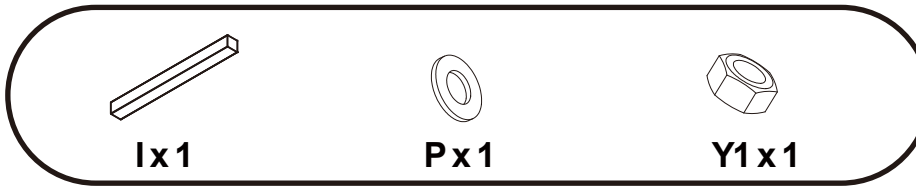


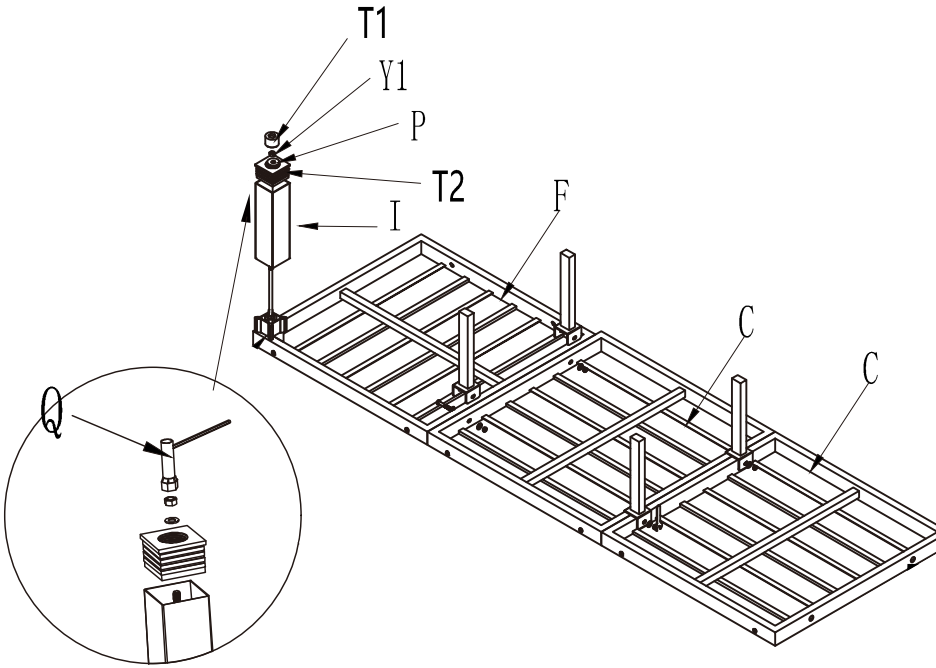

Step 6


Connect the three Backrests (D) together. Place M6 Washers (K) on both sides, then install M6*55 Screws (N) and cover the M6 nuts (U) on the other side. Then tighten them 1/2 tight with the Allen wrench (V)and wrench (S).

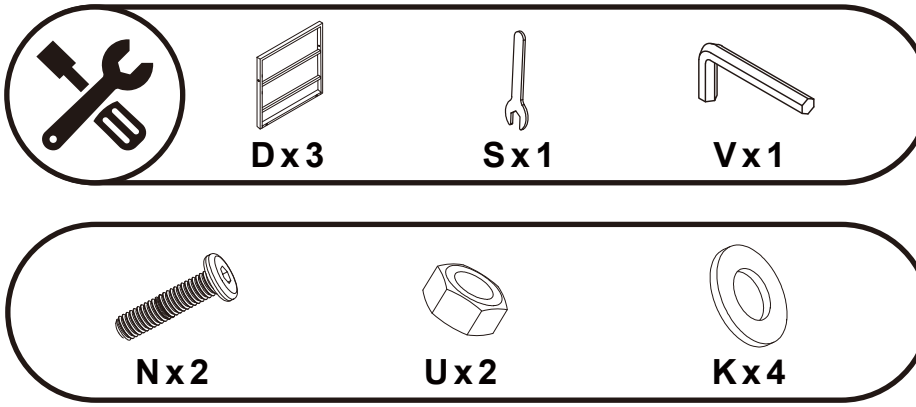


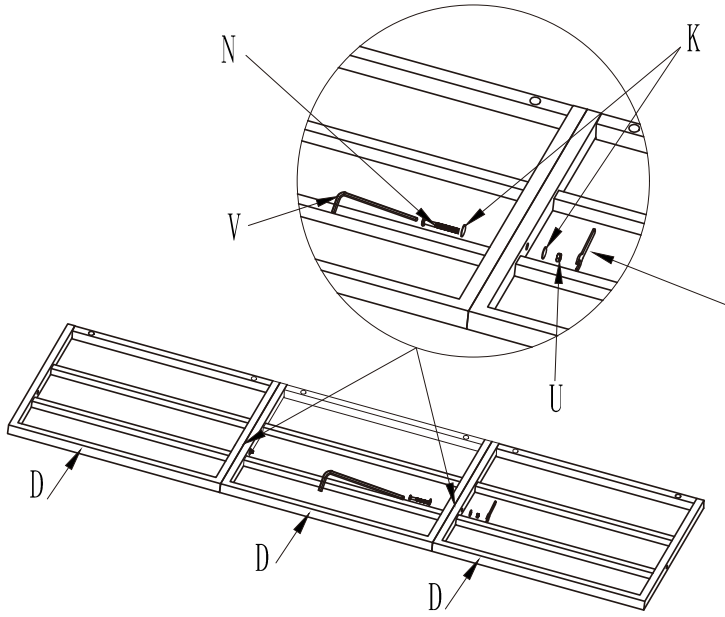

Step 7


Connect the two Backrests (D) and the Small Corner Backrest (H) together. Place M6 Washers (K) on both sides, then install M6*55 Screws (N) and cover the M6 nuts (U) on the other side. Then tighten them 1/2 tight with the Allen wrench (V)and wrench (S).

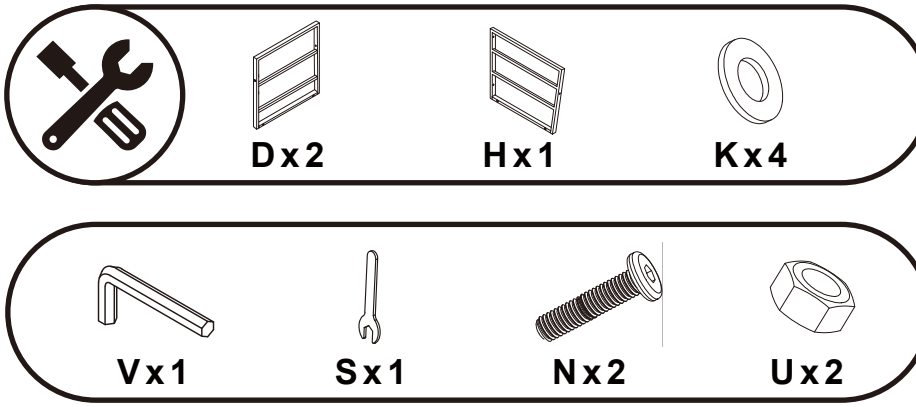


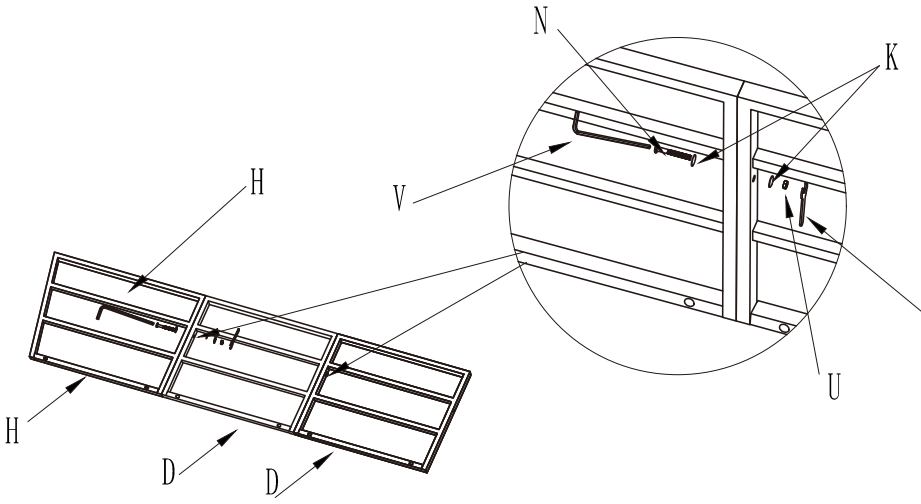

Step 8


Connect the three Backrests (D) and the three Seat Panels (C) together. Insert M6*45 Screws (M) and tighten them 1/2 tight with the Allen wrench (V).

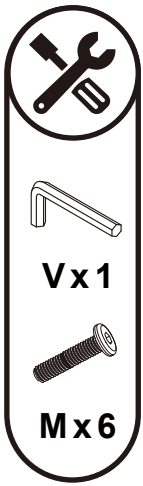


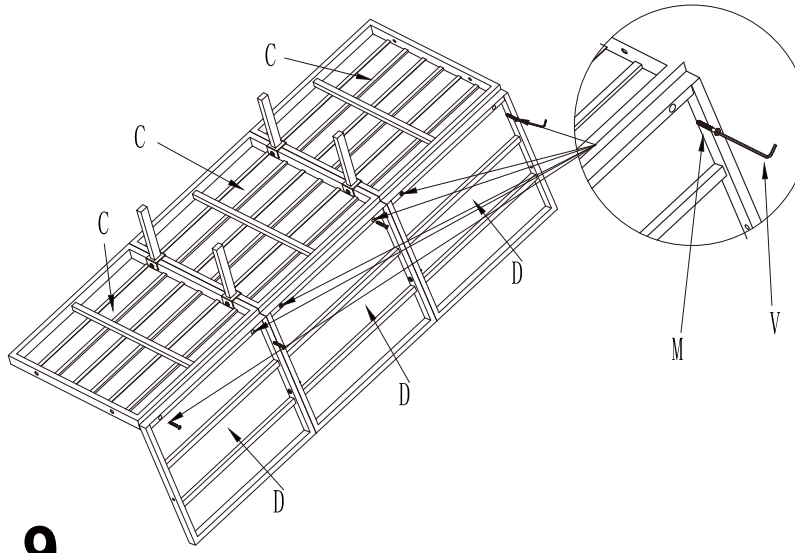

Step 9


Connect the three Backrests (two D and one H) and the three Seat Panels (two C and one F) together. Insert M6*45 Screws (M) and tighten them 1/2 tight with the Allen wrench (V).

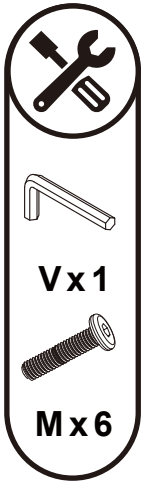


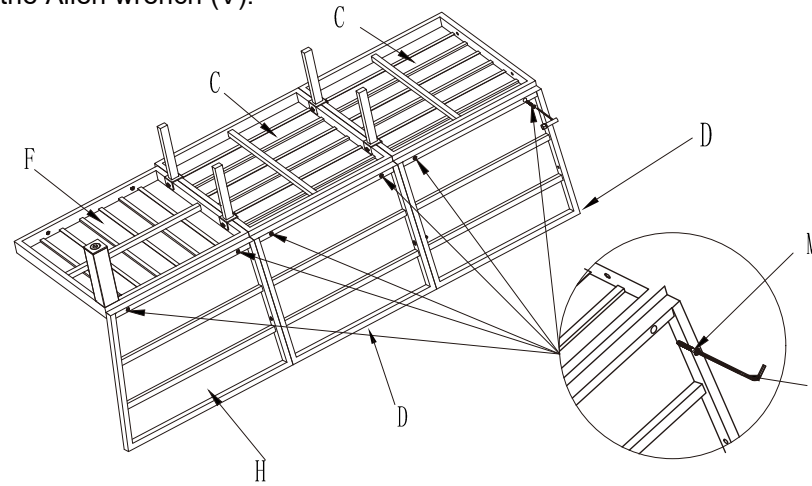

Step 10


Attach the Big Corner Backrest (G) to the Seat Panel (F) and Backrest (H), first insert two M6*35 Screws (L), then insert two M6*45 Screws (M). Finally tighten them all 1/2 tight with the Allen wrench (V).

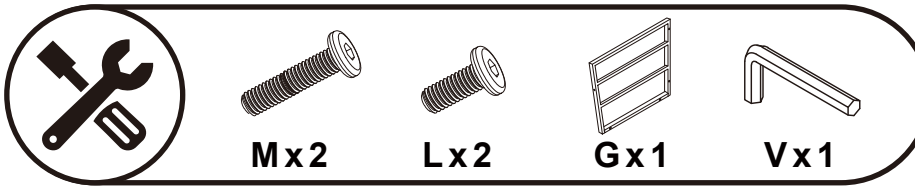


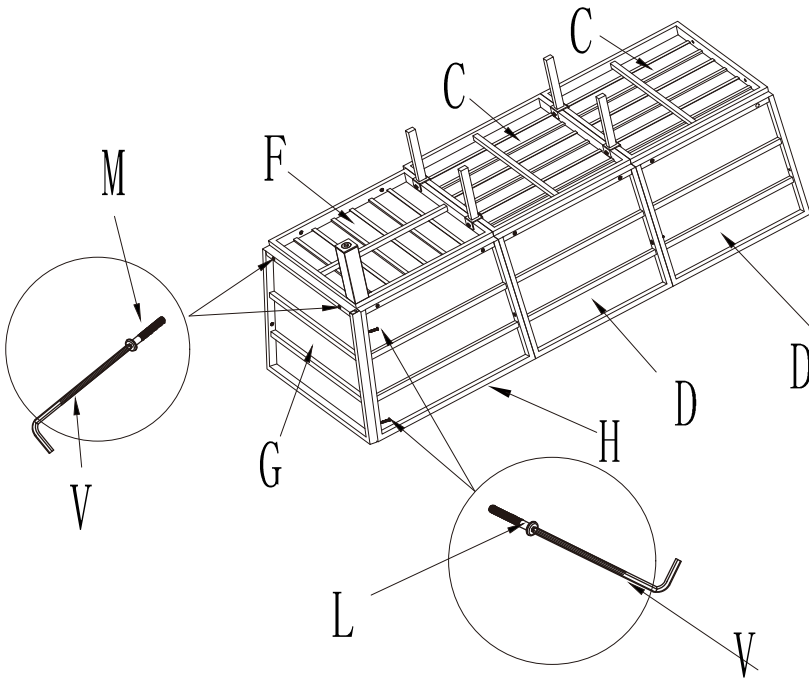

Step 11


Connect the Right Armrest (A), Left Armrest (B) and Corner Leg (J) to the sofa. Then insert the M6*35 Screws (L) (each armrest has three holes, corner leg has three holes both on the left and right sides) and tighten them all 1/2 tight with the Allen wrench (V). Finally tighten all the screws that were not fully tightened before.

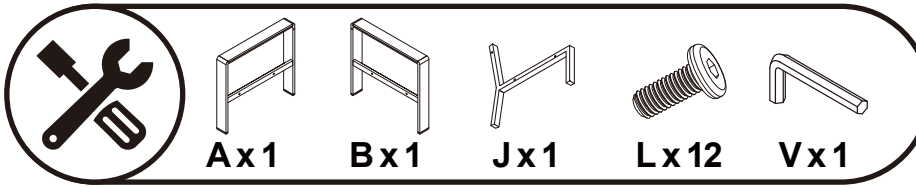


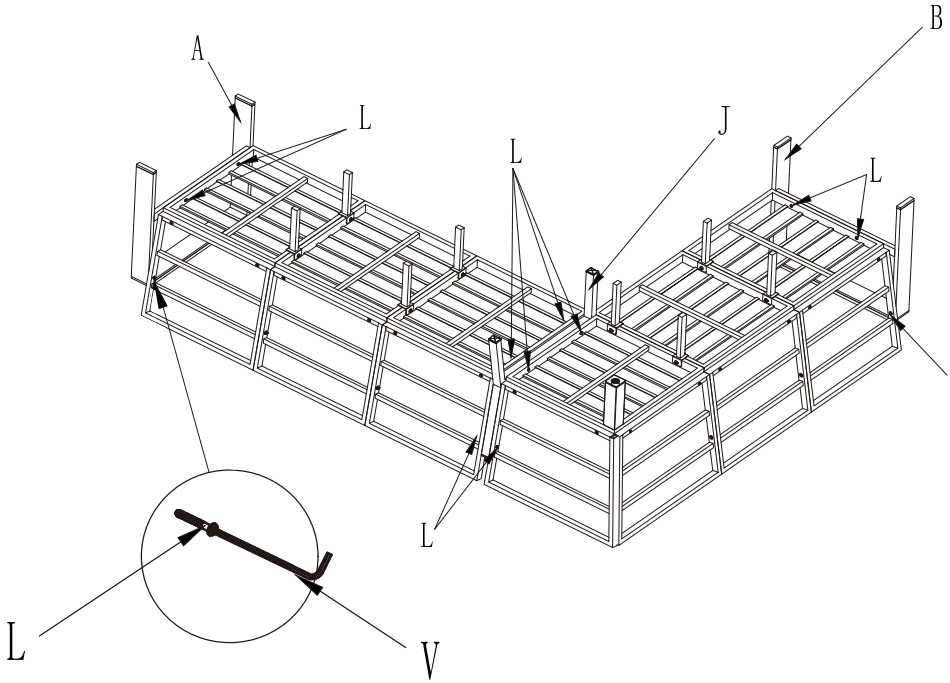

Step 12

Place the Seat Cushions (W), Back Cushions (X), Corner Back Cushion 1 (Y) and Corner Back Cushion 2 (Z) onto the sofa.

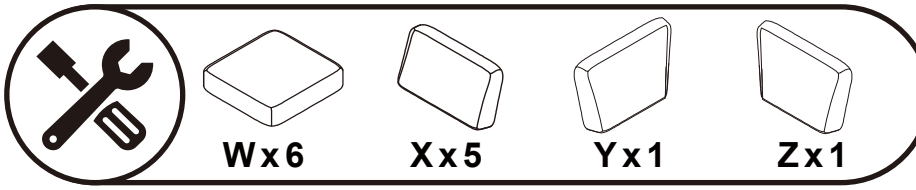


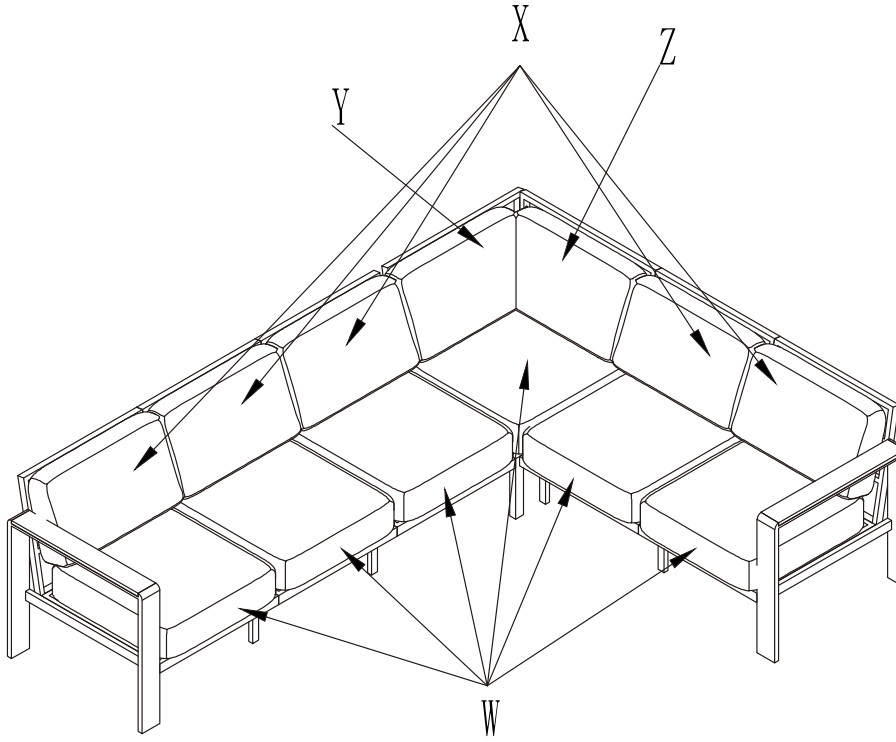

PAY ATTENTION

DO NOT EXCEED THE MAXIMUM LOAD OF *2400 LBS*

DONE !

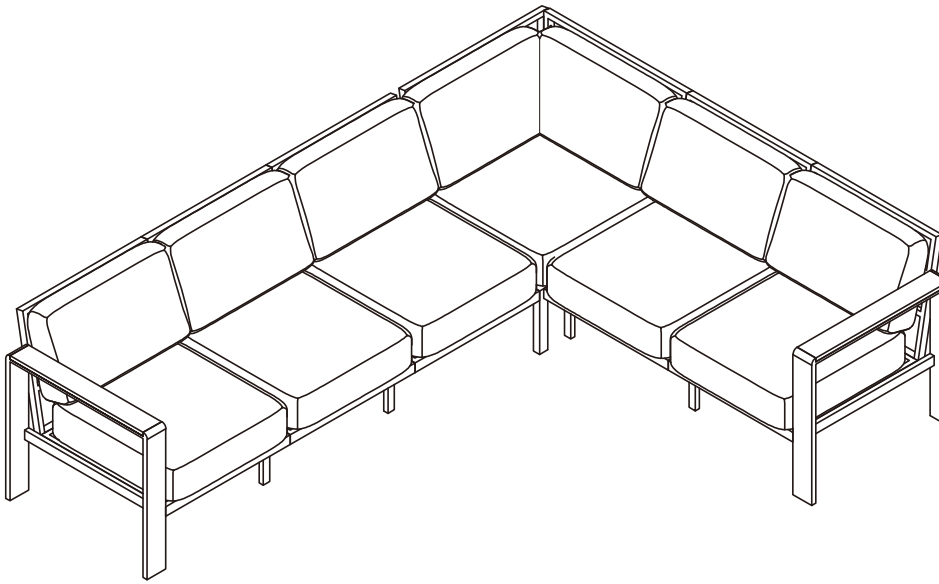

*Due to transportation, the cushion may be slightly compressed and the surface fabric may have creases. It will take time to recover, but gently tapping it can speed up the rebound.

WARRANTY

Corner Sofa
3-year basic Warranty Program

- We offers a 3-year basic warranty on the entire sofa from the date of purchase against defects in material and workmanship. During this period we will repair and replace, at our discretion the defective component.

- This warranty does not apply to improperly installed, handled, abused, damaged by user error, nor to any unit which has been repaired or altered by unauthorized repair companies.

- Under no circumstances will the customer entitled warranty to consequential or incidental damages. This limited 3-year basic warranty will only grant customers certain legal rights; customers may have other rights according to different state laws.