

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance

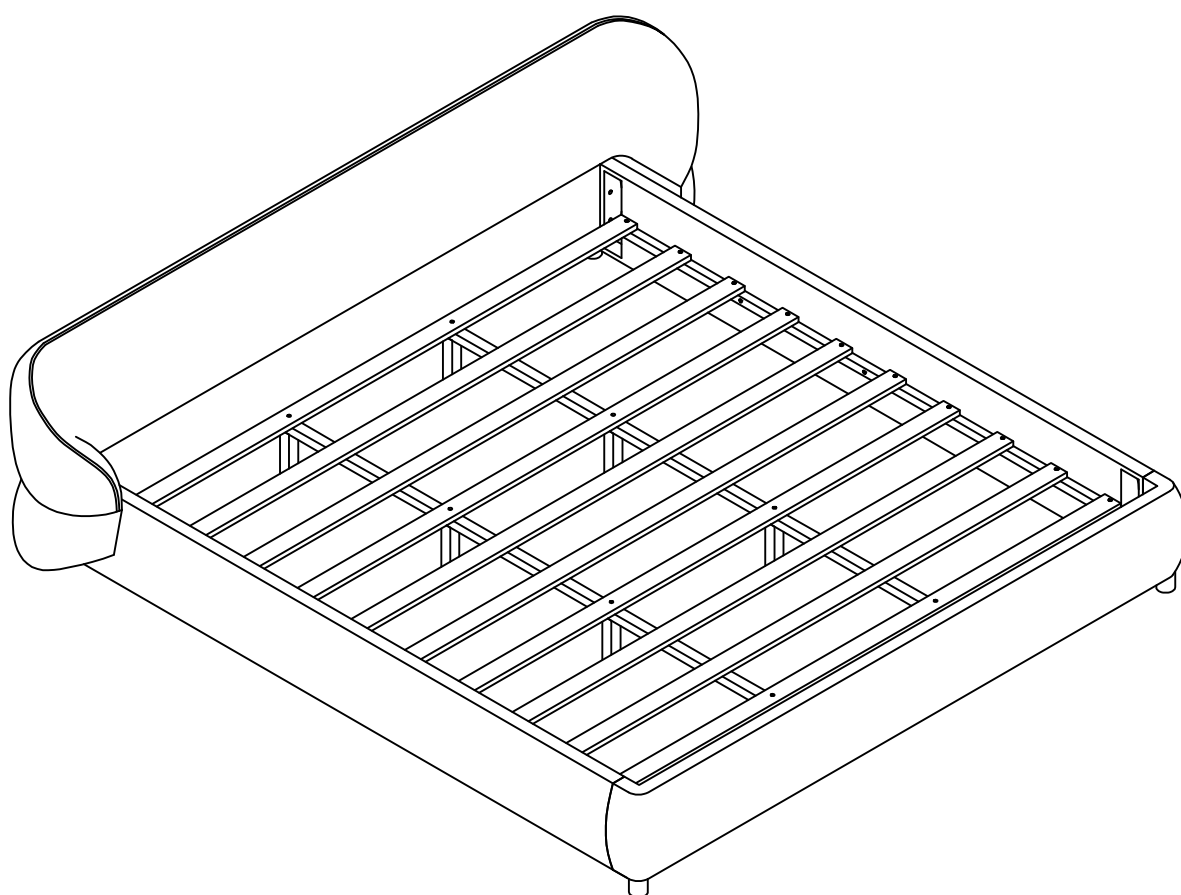
- | | |
|---|---|
| ⊘  | ● Not for commercial use. For residential use only. |
| ✓  | ● Furniture may scratch floors. We recommend using furniture pads to protect your floors. |
| ⊘  | ● Do not put hot items directly on furniture surface. |
| ⊘  | ● Do not clean furniture with harsh cleansers or polish. |
| ⊘  | ● Do not place furniture under direct sunlight. |
| ⊘  | ● Do not place furniture near heating or cooling vents. |
| ⊘  | ● Do not write on furniture without a padded barrier to protect the surface. |
| ⊘  | ● Do not place furniture outside . For indoor use only. |
| ⊘  | ● Stains may be removed with mild soap solution and damp cloth. |
| ⊘  | ● Children should not climb or jump on the furniture. |
| ✓  | ● Dust and pick-up spills using a clean, non-colored, lint-free cloth. |

Please look in the magic tape pouch for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.




KING BED

N736P422039 / N736P422040







Part List

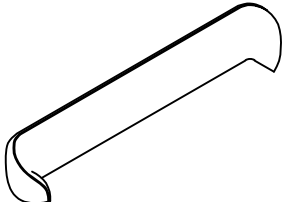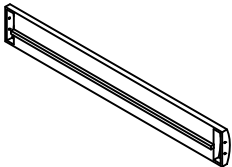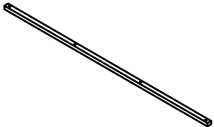N736P422039

Label	Picture	Description	QTY
A		Headboard	1
B		Side rail	2
C		Middle support bar	2





Part List

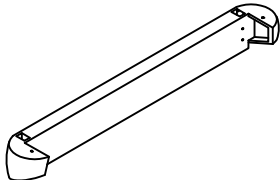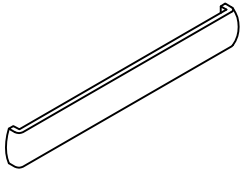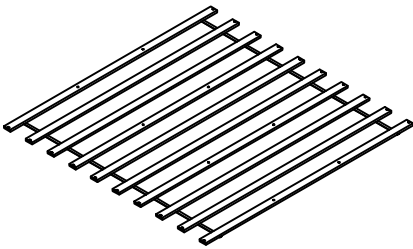N736P422040

Label	Picture	Description	QTY
D		Headboard below	1
E		Footboard	1
F		Middle support legs	8
G		Slats	1
H		Bed legs	4


Hardware

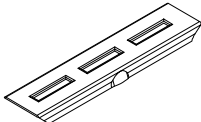N736P422040

Label	Picture	Description	QTY
①	 A technical drawing of a thread bolt. It shows a cylindrical shaft with a threaded section at one end. A dimension line indicates the length of the unthreaded section is 15mmL.	Thread Bolt 5/16"x70mm	10
②	 A technical drawing of a hexagonal nut, showing a hexagonal shape with a central threaded hole.	Hexagonal Nut 5/16"	10
③	 A technical drawing of a bolt, showing a cylindrical shaft with a hexagonal head.	Bolts 1/4"x60mm	8
④	 A technical drawing of a spring washer, showing a coiled spring shape.	Spring washer 5/16"xØ13mm	10
⑤	 A technical drawing of a flat washer, showing a circular shape with a central hole.	Flat washer 5/16"xØ19mm	10
⑥	 A technical drawing of a screw, showing a cylindrical shaft with a threaded section and a pointed tip.	Screws Ø4x30 mm	20
⑦	 A technical drawing of an Allen wrench, showing a T-shaped tool.	Allen wrench	1
⑧	 A technical drawing of an open wrench, showing a U-shaped tool with a handle.	Open Wrench	1
⑨	 A technical drawing of a plastic washer, showing a circular shape with a central hole and a textured surface.	Plastic washer	4
⑩	 A technical drawing of a lock latch, showing a rectangular component with a slot and a pin.	Lock latches	2

Assembly Preparation

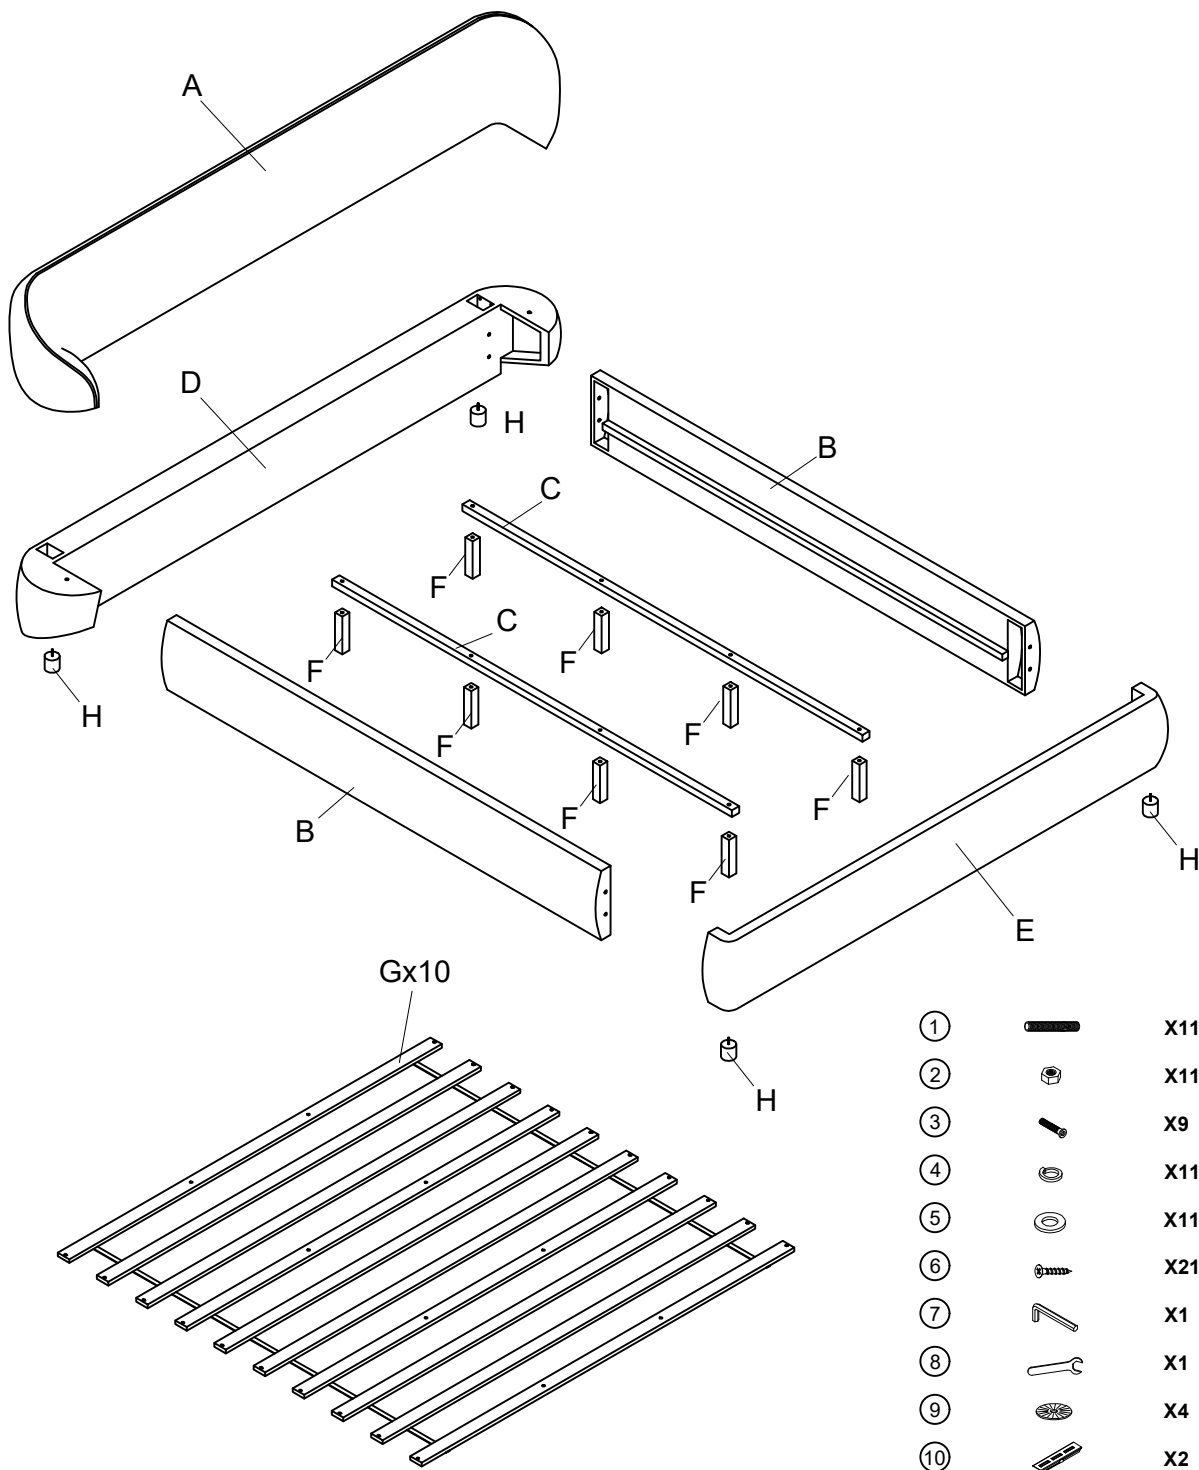Before Beginning Assembly:



● Read instructions, cover to cover-



● Have 2 adults on hand for assembly-



● Do not assemble on flooring or carpet-



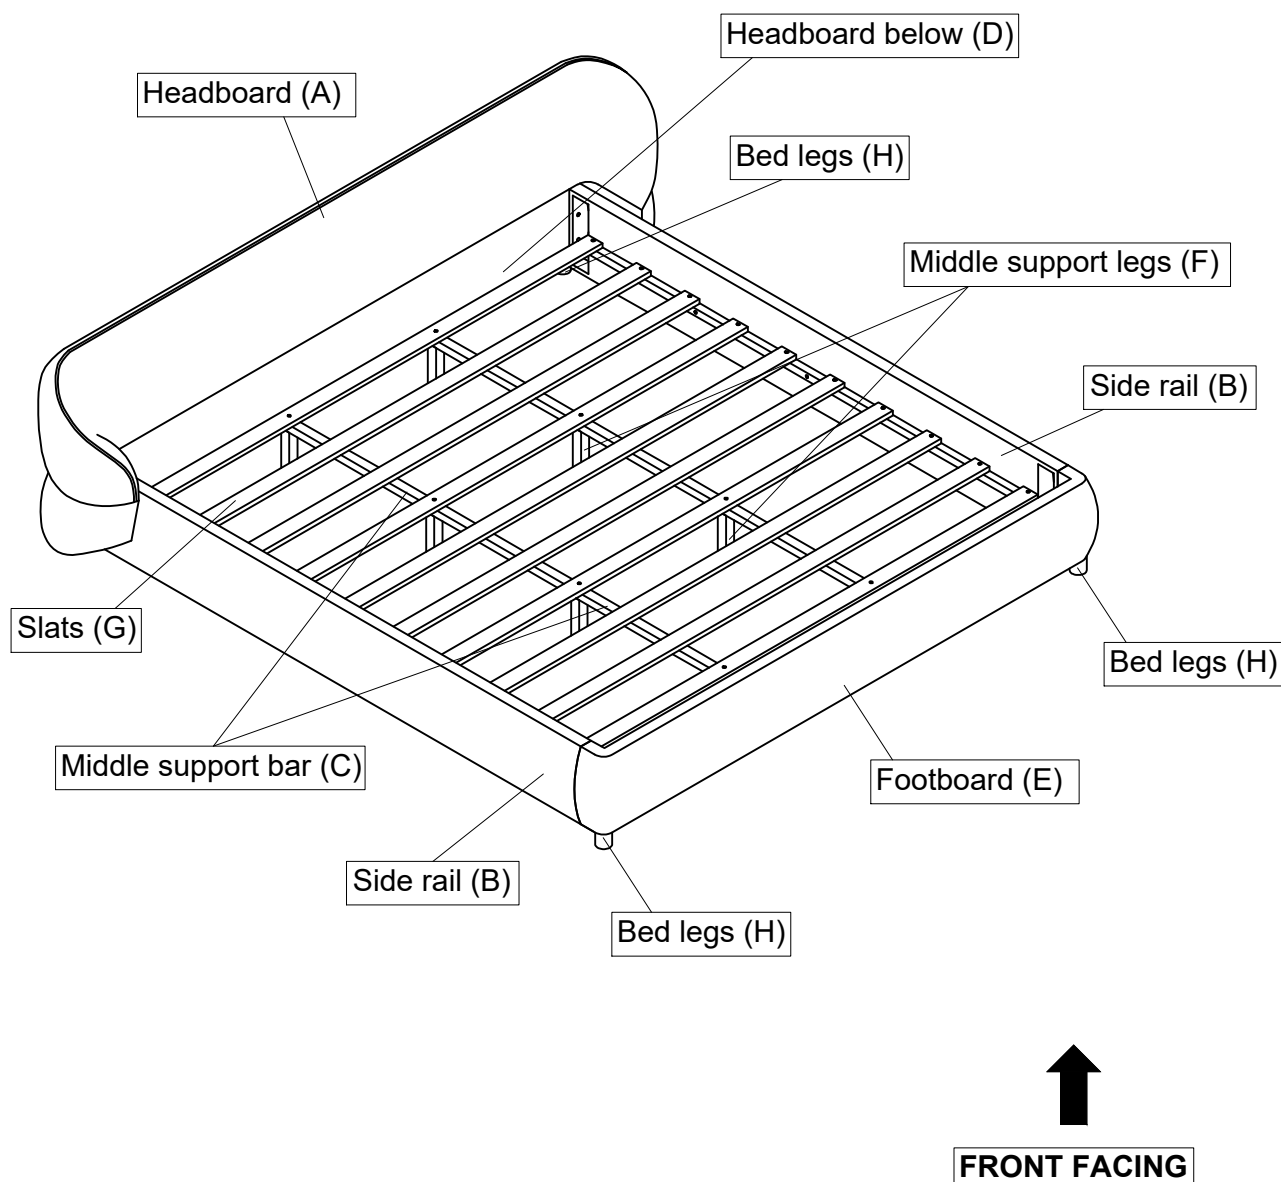
● Assemble on a clean non-marring surface (packing foam)-



● Save all packaging until finished-

Assembly Steps


OVERVIEW



This Bed have multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

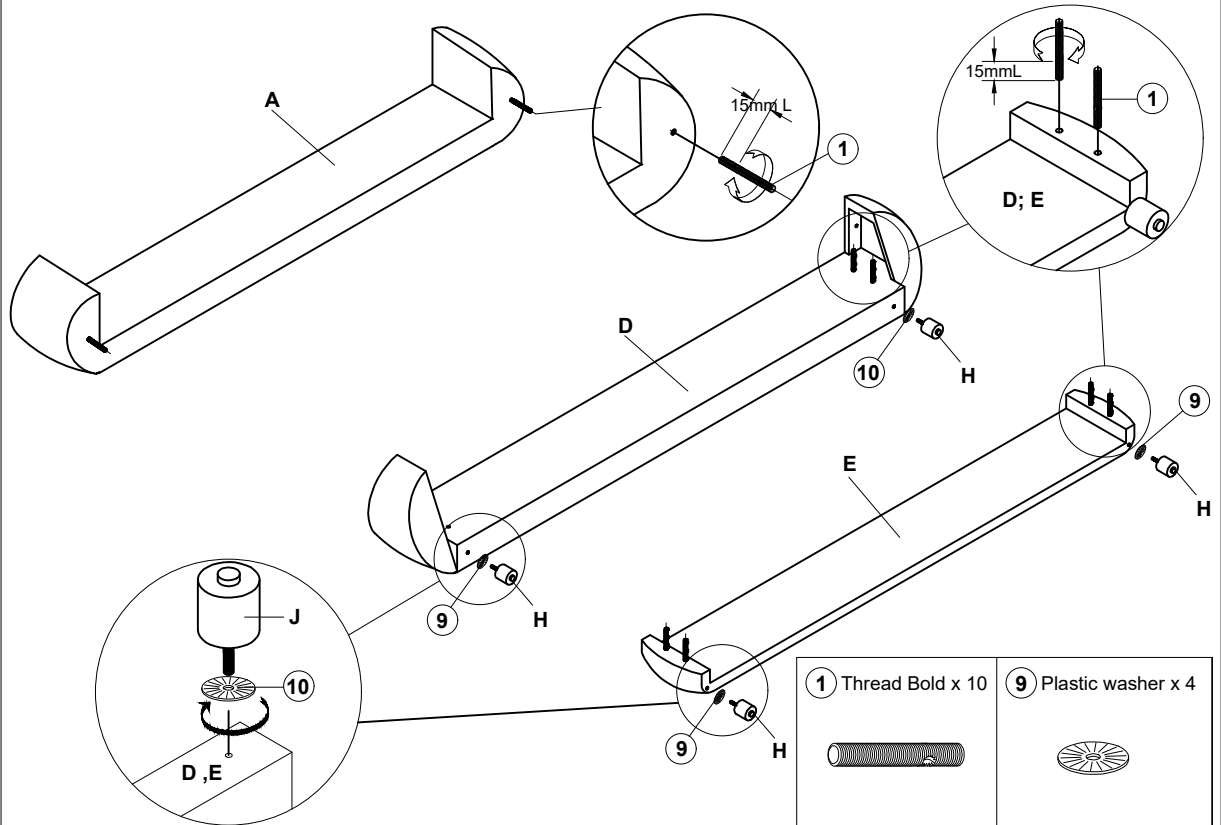Step 1



Attach the bed legs (H) and Plastic washer (9) to the headboard below (D) and the footboard (E)
Attach the Thread Bolt (1) to the headboard below (D), Headboard (A) and the footboard (E).

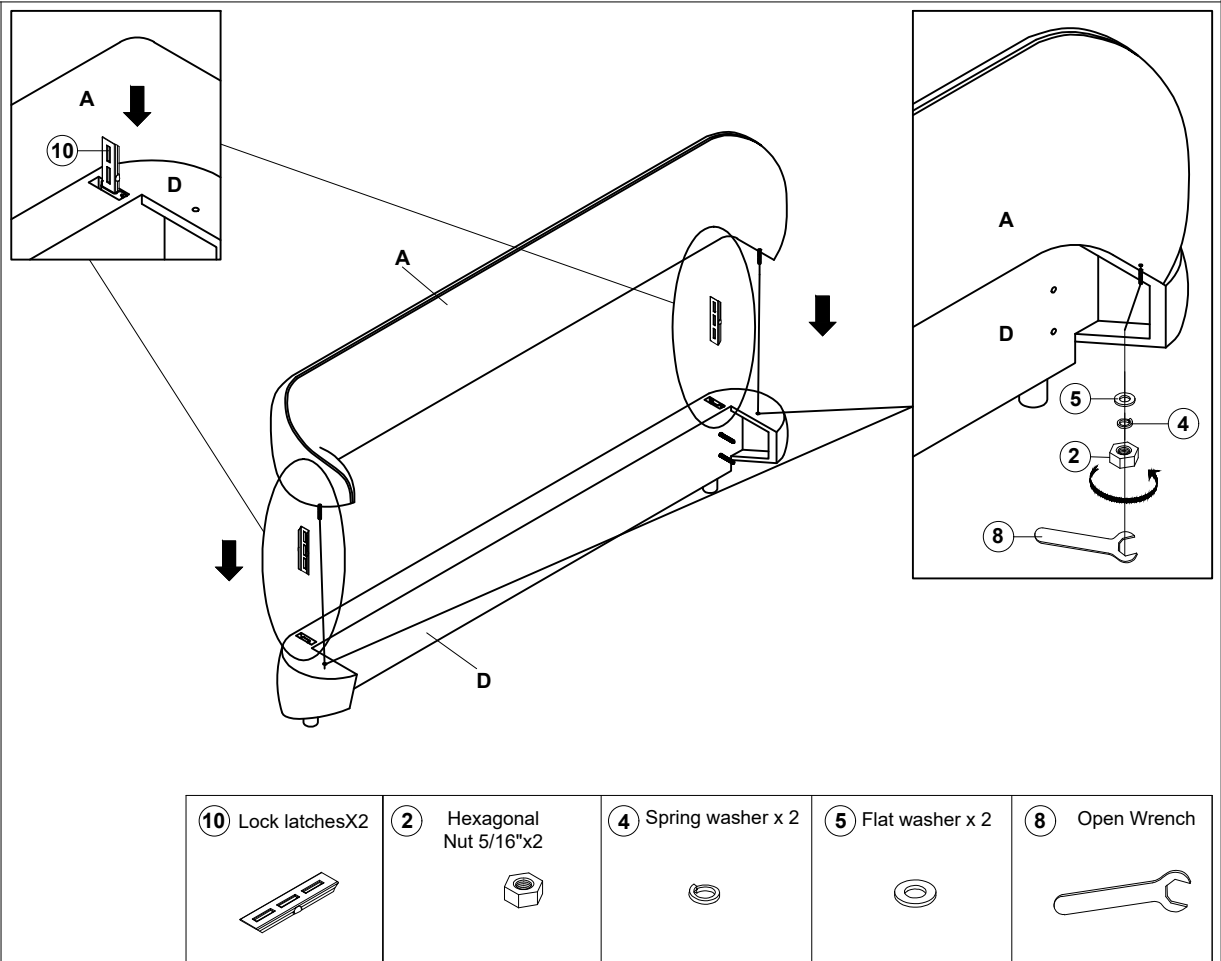
Step 2



Attach the headboard below (D) to the headboard (A) using Lock latches (10).

Attach the headboard below (D) to the headboard (A) using Hexagonal Nut 5/16"(2), Spring washers (4) and Flat washers (5) with Open Wrench (8)

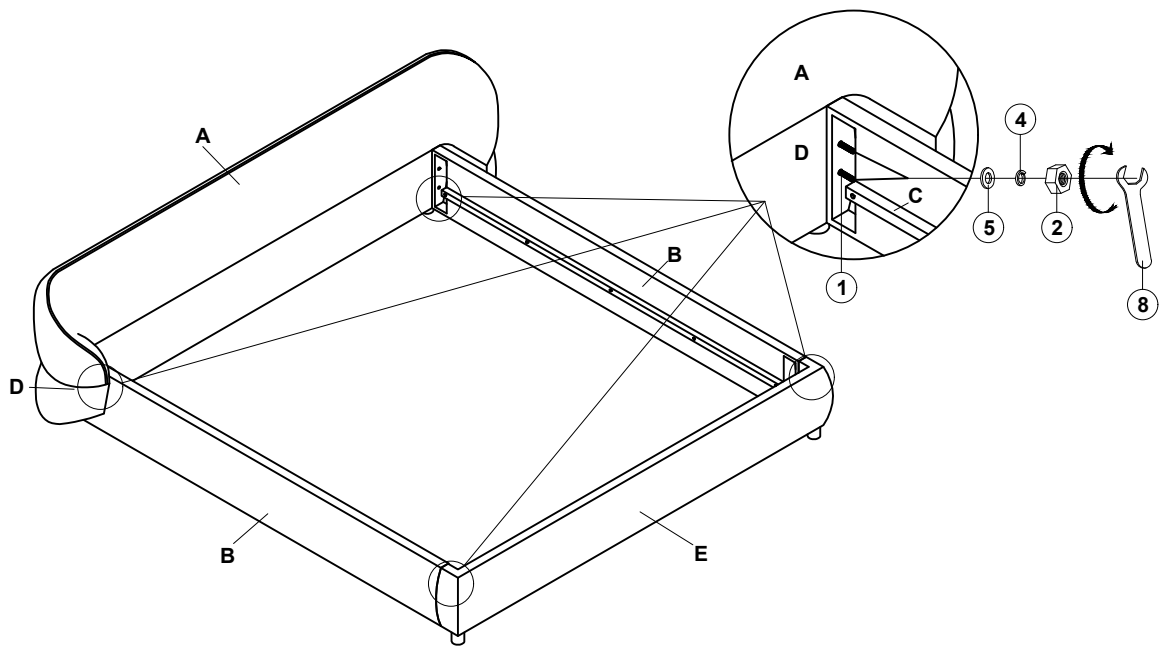
Step 3



② Hexagonal Nut 5/16"x8	④ Spring washer x 8	⑤ Flat washer x 8	⑧ Open Wrench
			

Attach the side rail (B) to the headboard (A/D) and the footboard (E) Hexagonal Nut 5/16"(2), Spring washers (4) and Flat washers (5) with Open Wrench (8)

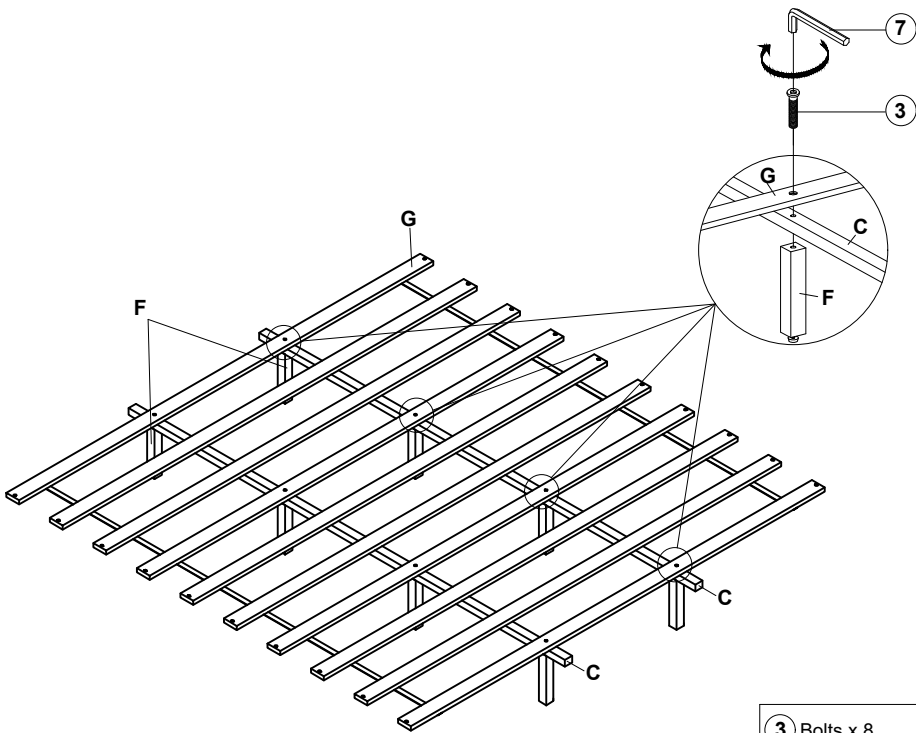
Step 4



③ Bolts x 8	⑦ Allen wrench
	


Attach the middle support legs (F) to middle support bar (C) and the slats (H) using bolts (3), with allen wrench (7).

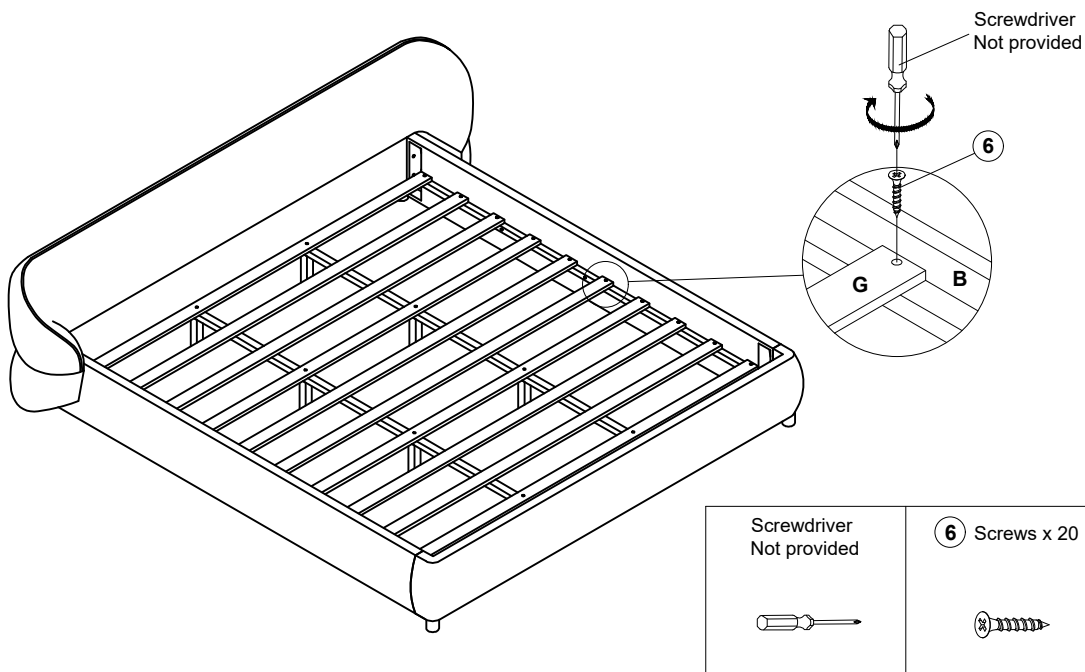Step 5



Attach the completed slats (G), Middle support bar (C), Middle support legs(G) to the side rail (C) using screws (6), by screwdriver (Not provided)

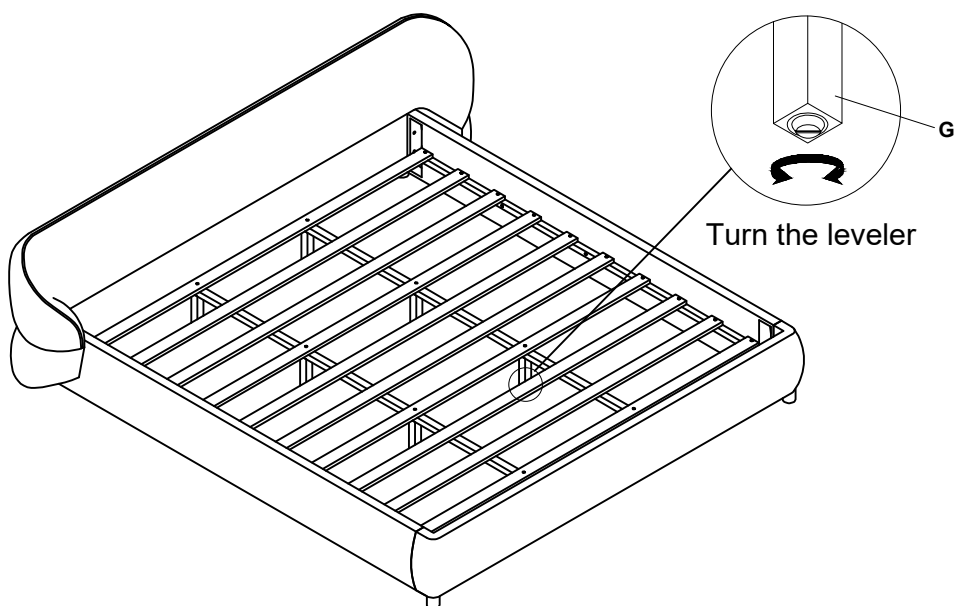Step 6



For the middle support legs (H), turn the leveler in to retract and out to extend.

Place the Bed on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected
Don't push too hard, shake on the bed.
This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.If there is still wobbles, loosen the screws and execute this same process.DO NOT tighten any screw fully and then towards the next one.
WARNING!! IF BED IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT
Ensure all screws are fully ocked into position.The bed is ready to be used.
Caution 2: This Bed can only be used on a flat. level surface