


Over-under King and Queen Bed

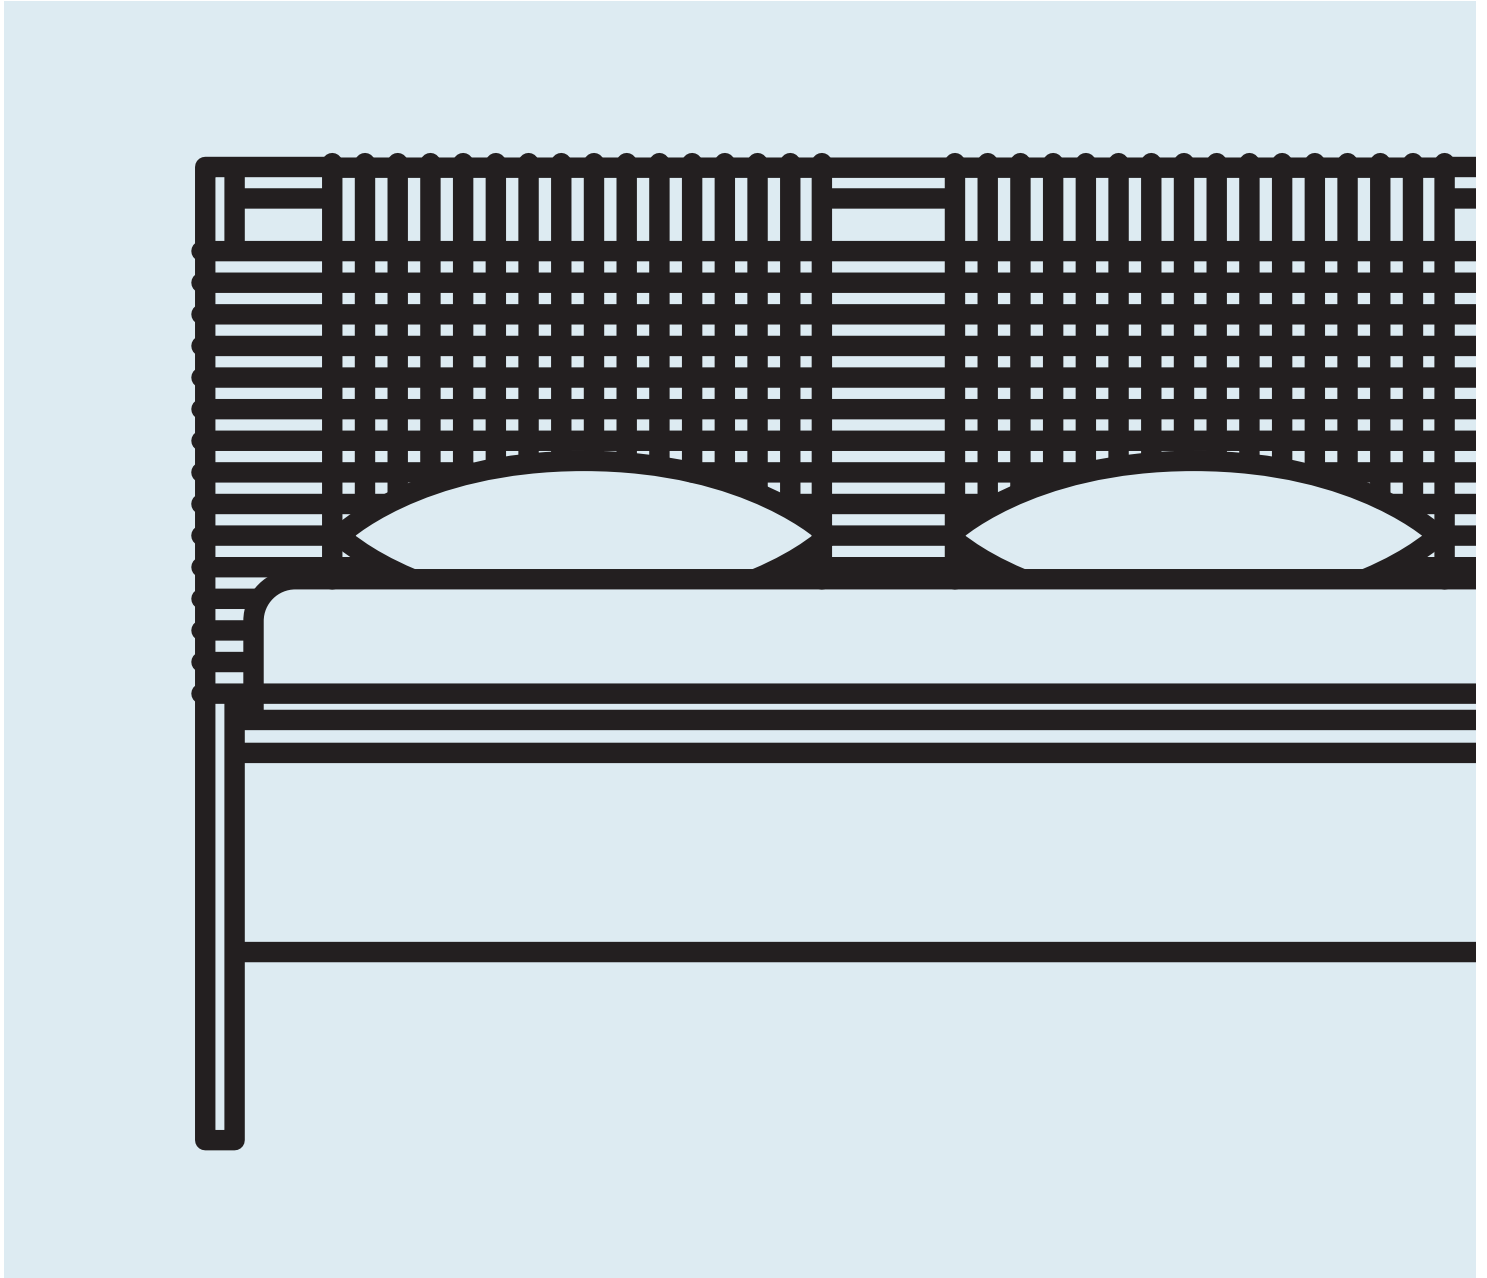

DESIGNED IN 2023

ASSEMBLY NOTES | REV 00




NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.


@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware
Hardware Pack (Box 1)



QTY 8
Pt. 2004

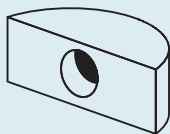


QTY 8
Pt. 9000




QTY 8
Pt. 1219



QTY 4
Pt. 5005

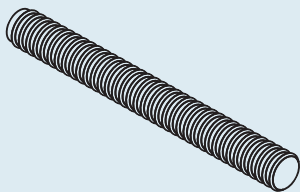


QTY 8
Pt. 8012

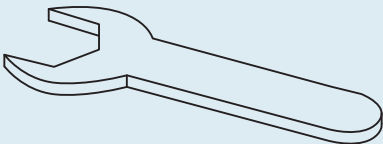


QTY 1
Pt. 9038

Parts (Box 1)

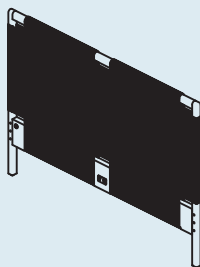


QTY 1
Headboard

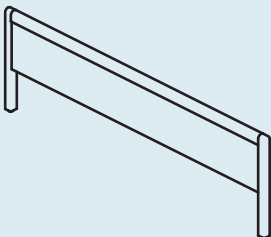


QTY 1
Footboard

Parts (Box 2)

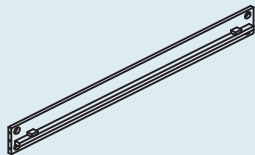


QTY 2
Side Rail

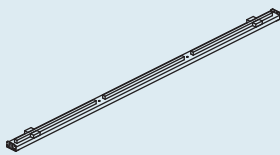

QTY 1
Center Rail



QTY 2
Center Leg

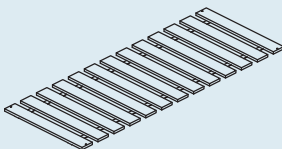


QTY 2
Slat Roll

Parts (Box 3)


Step 01

ASSEMBLE THE FRAME.


Loosely attach the headboard and footboard to the side rails using the hardware provided. Tighten the bolts at the end of this step.

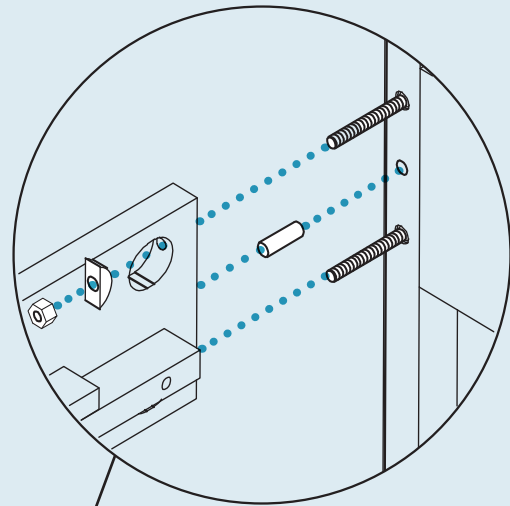

Each corner uses the same hardware

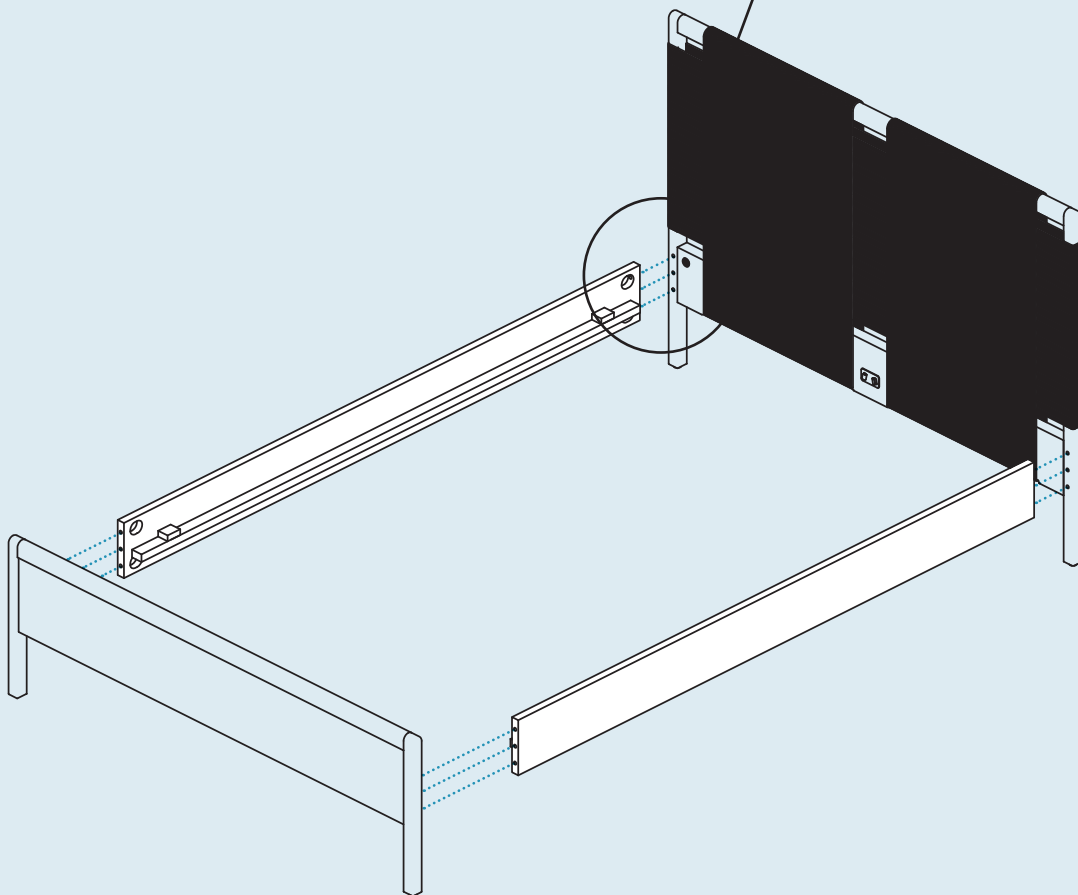

PT. 2004 X 8

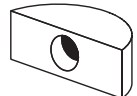

PT. 9000 X 8



PT. 5005 X 4




PT. 8012 X 8

Step 02

CENTER RAIL ASSEMBLY.

Screw the center legs onto the center rail.
Install the center rail by slotting it into the
bracket on the footboard and headboard.

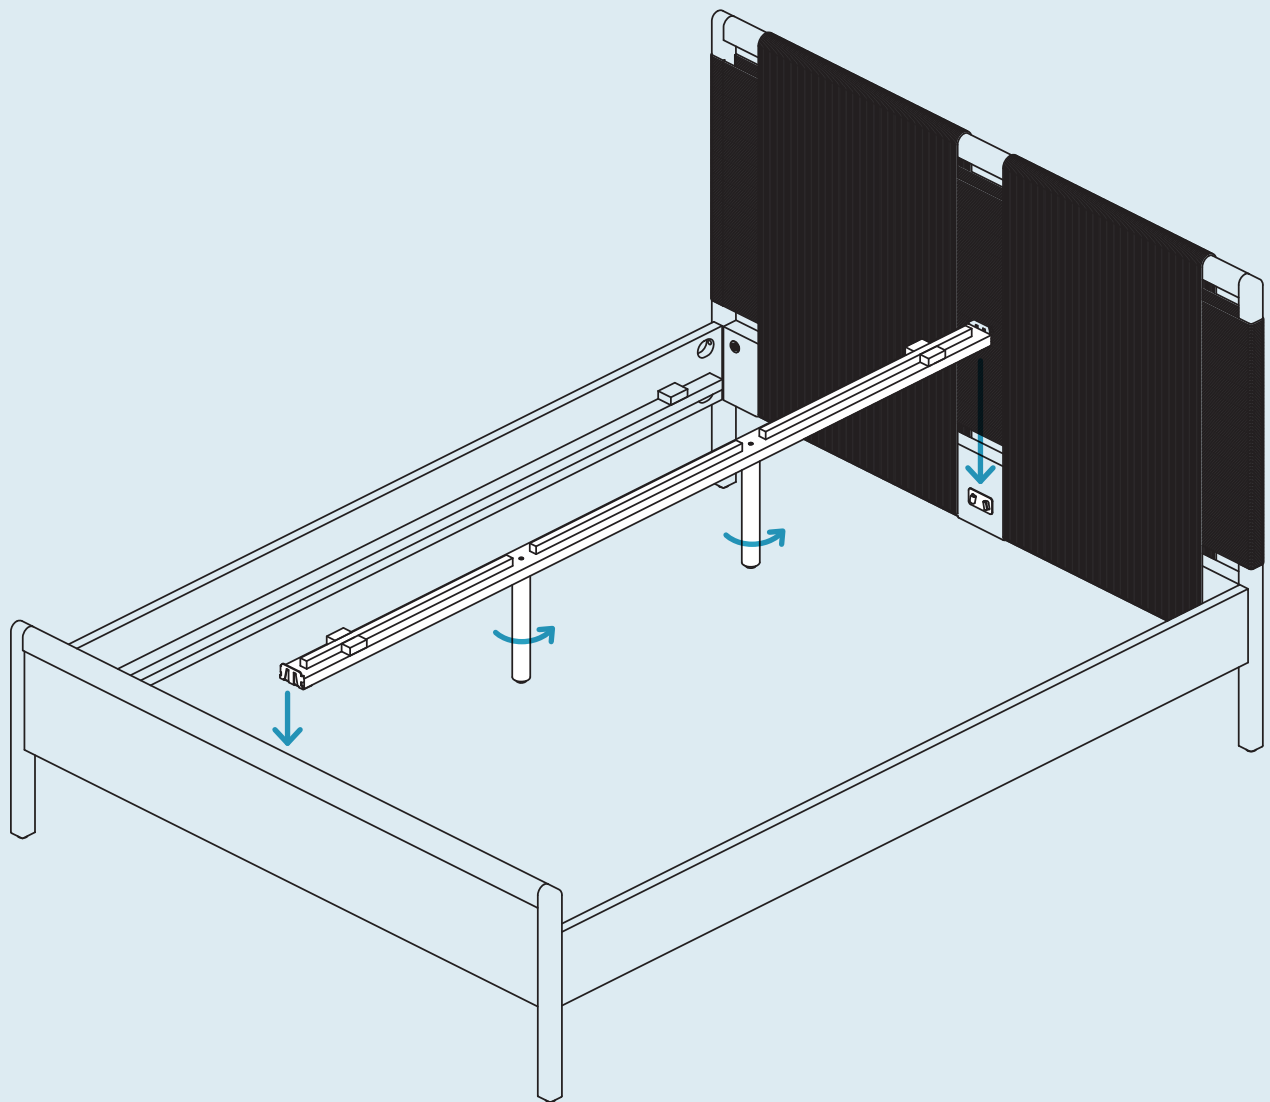

Step 03


INSTALL THE SLAT ROLLS.

Place the slat rolls onto the bed frame, being sure the last slat on each end is aligned with the mounting blocks on the frame.

Secure the slat roll to the frame with a screw on each corner of the roll.




PT. 9016 X 8

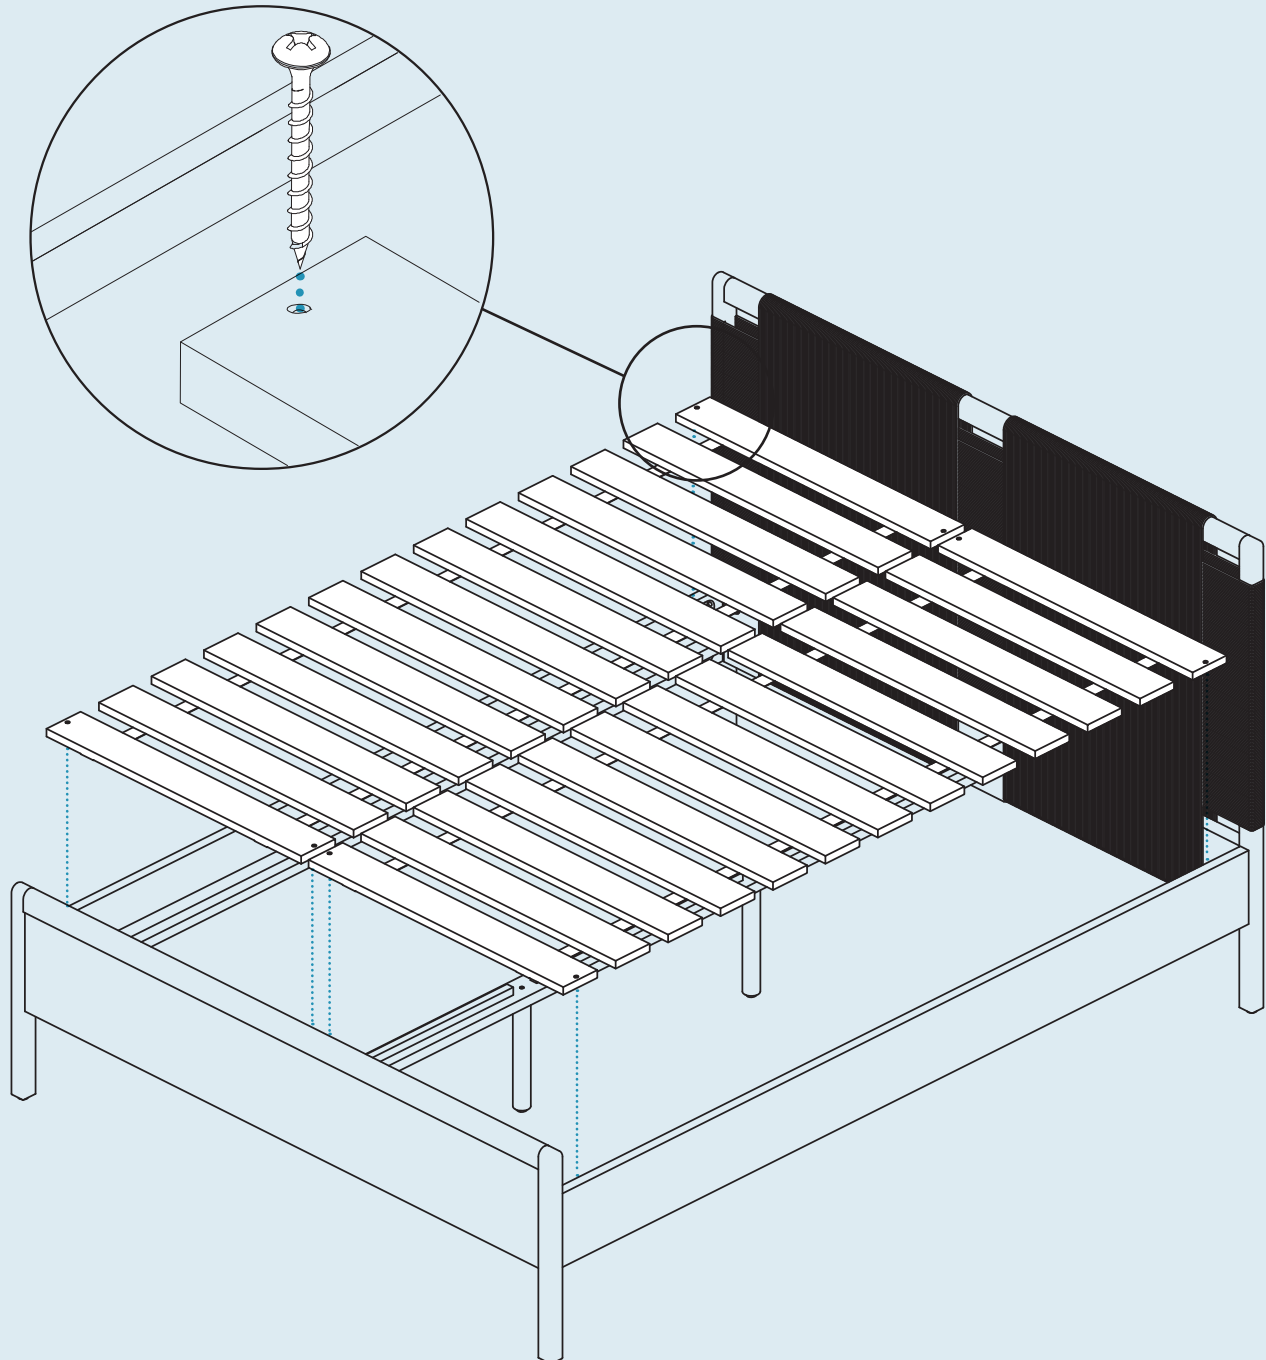


Step 04

LEVEL THE BED.

If needed, rotate the adjustable glides under each leg to ensure the bed is level.

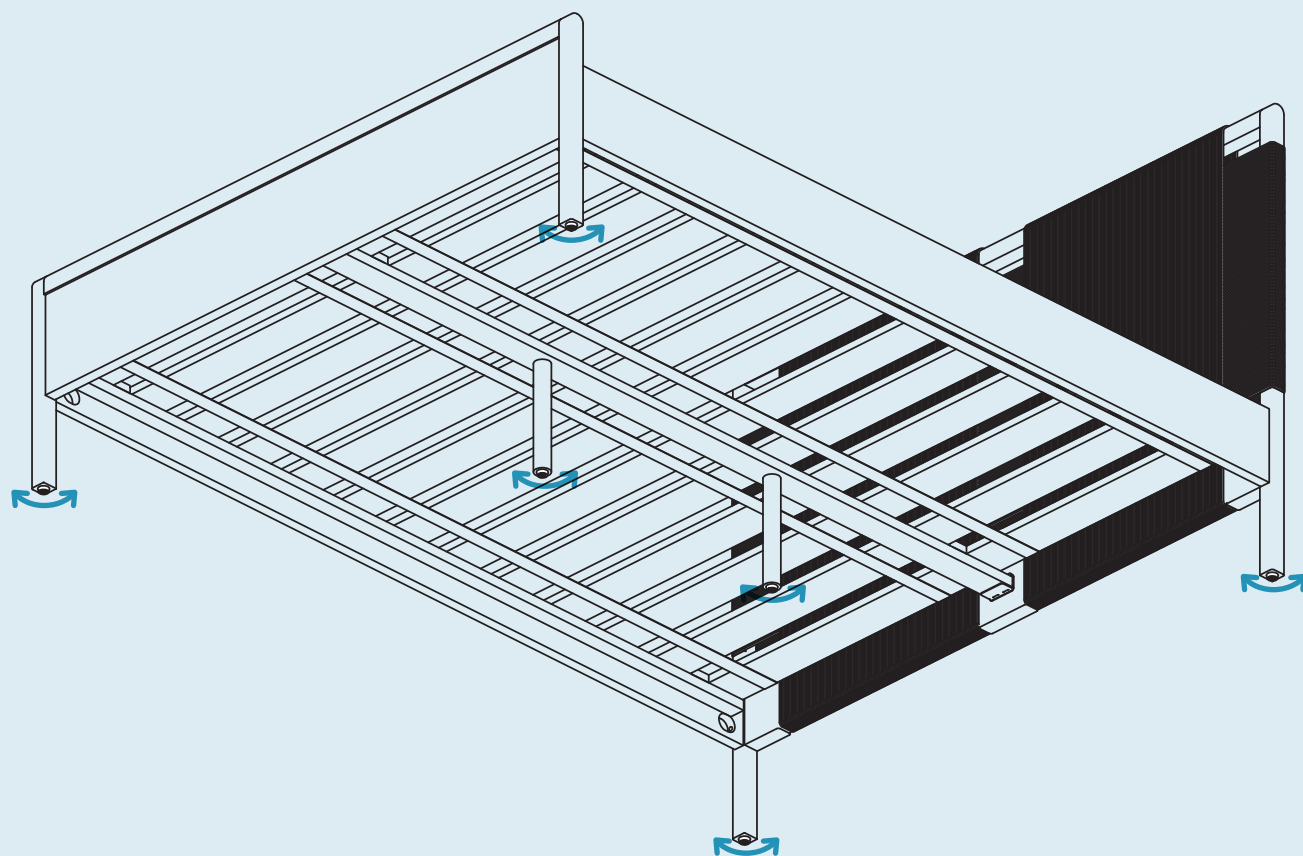



Additional Information

WOOD SURFACE CARE

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

PAPER CORD CARE CARE

Paper cord is a natural material that will last for years and designed to patina over time.

Act quickly with spills. Remove as much of the fluid as possible with a soft cloth and soap solution (made from 1.5 tbsp soap flakes mixed with 5 liters lukewarm water), blot affected area. Do not rub surface.

Avoid water as much as possible, as it will increase the wear of the material and color transfer may occur. Limit daily cleaning to gentle use of a soft brush and vacuum only.

