## ASSEMBLY INSTRUCTIONS SKU#12603

## Before beginning

Unpack all parts and hardware to ensure you have all needed components for assembly.


Read this guide cover before beginning assembly.

Assemble this item on a soft surface such as carpet to protect finish.

Proper assembly of this item requires 2 people & 20 minutes to assemble.

## **CARE INSTRUCTIONS**

Wipe with a soft dry cloth. To protect finish, avoid the use of chemicals and household cleaners, Any liquid spilled on the table should be cleaned up immediately with a damp cloth.

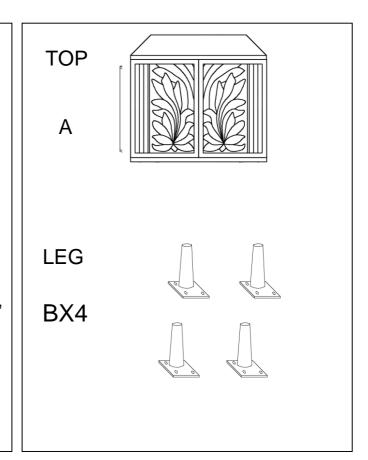

## HOW TO ASSEMBLY

STEP-1 Place the sideboard top upside down on rug.

STEP -2 Insert allen bolt (C) with flat washer (D) then tighten with allen key (E). Always match same numeric sticker while fixing legs.


1-1,2-2,3-3,& 4-4

Aero marking should be followed in assembly.


STEP-3. Turn the sideboard upside top. Sideboard is ready to use

Hardware & Tool Required: -					
No.	Sketch	Description	Size	Qty.	Ext.
С		Allen bolt	(0.78"x0.31")	16	1
D	0	Washer	(0.78"x0.31")	16	1
Е		Allen key	(0.19")	1	0

STEP-1

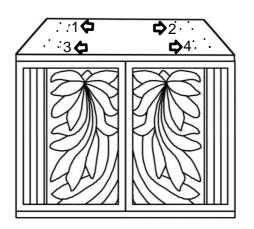


Α

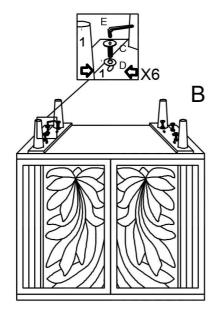

STEP-2

STEP-3

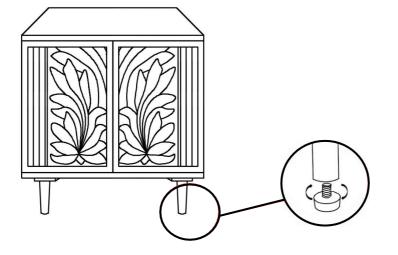

Tip for levelling of product:

When the product rests on an uneven floor surface it will appear to be unbalanced to aid in levelling, try adjusting the levelers located on the bottom of each foot.

**FINAL PRODUCT**