




Children have died from furniture tipover. Fixed wall device have been included with this product; you must install the fixed wall device according to these instructions in order to minimize the risk of furniture. If you have any questions about this product or the Fixed wall device, please contact us immediately.



Never allow children to climb or hang on furniture, including drawers or cabinet doors.






In addition to installing the restrains, to help prevent tip-over.
















1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.



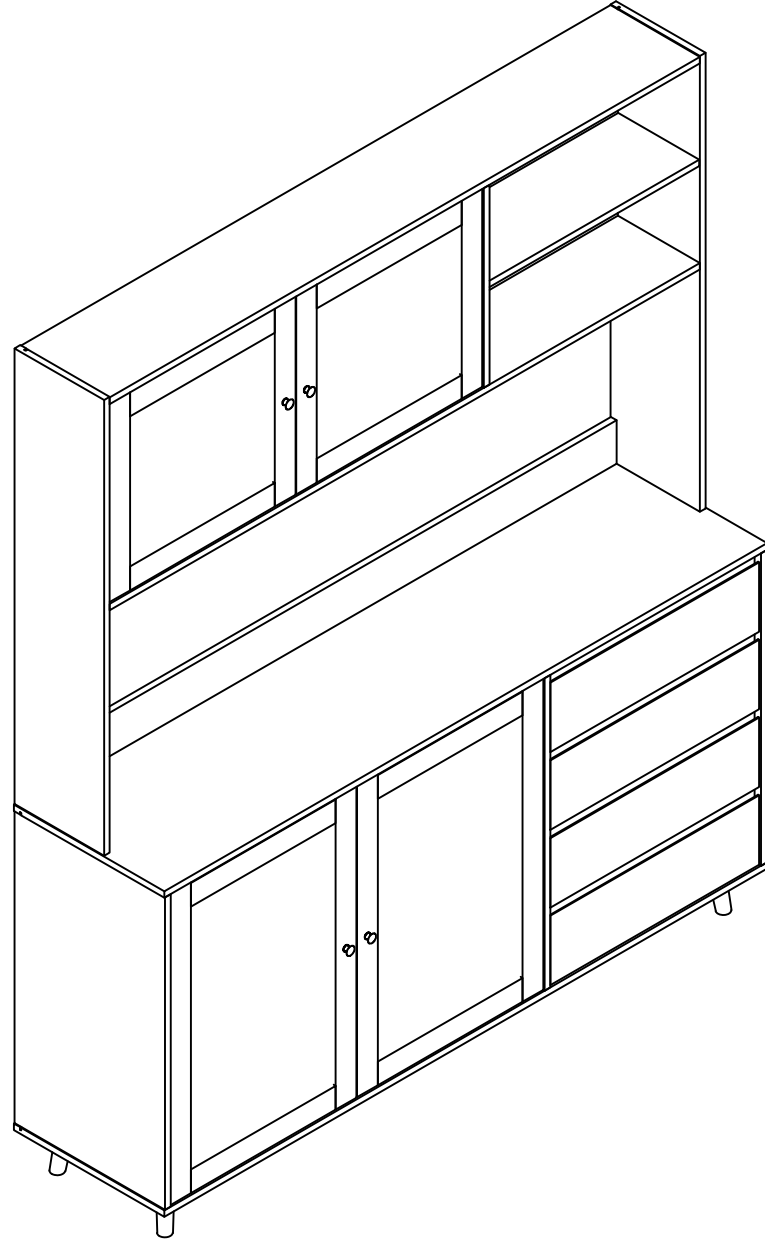

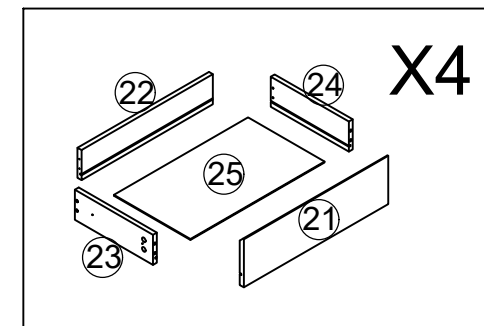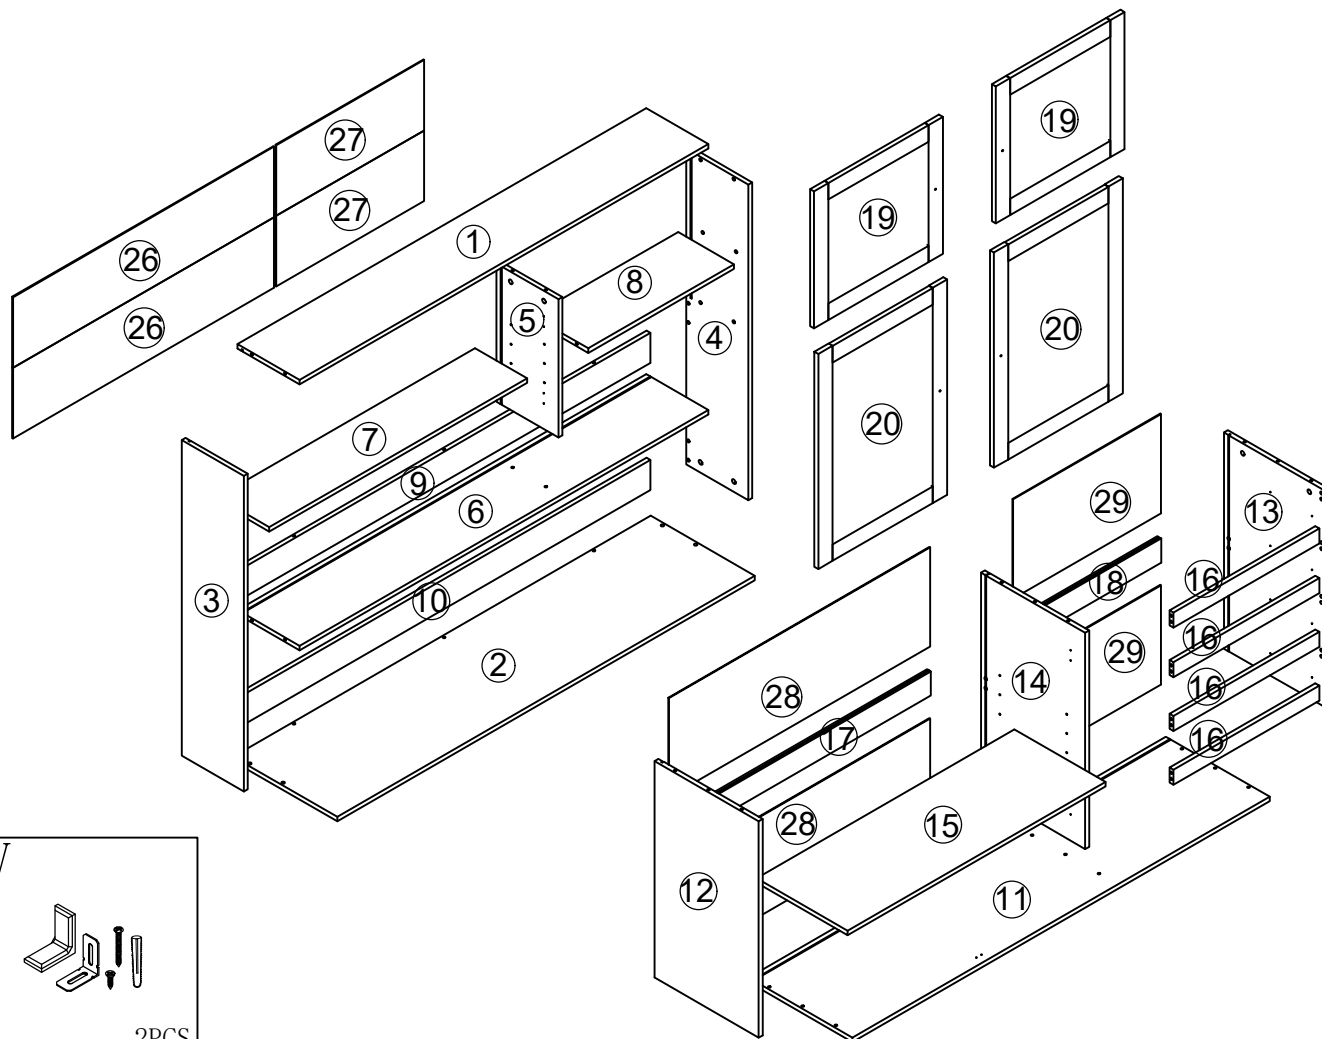

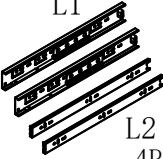U  3PCS	V  2PCS								
K 4*20  4PCS	L 300mm L1  L2 4PCS	M 993mm  1PCS	N 556mm  1PCS	O  8PCS	P  3PCS	Q  4PCS	R  2PCS	S  4PCS	T  2PCS
A  74PCS	B  74PCS	C 8*40  3PCS	D 3.5*14  116PCS	E 3.5*35  16PCS	F 7*50  14PCS	G  8PCS	H  26PCS	I 3*12  26PCS	J  4PCS

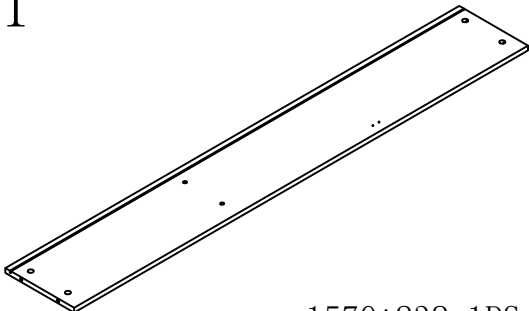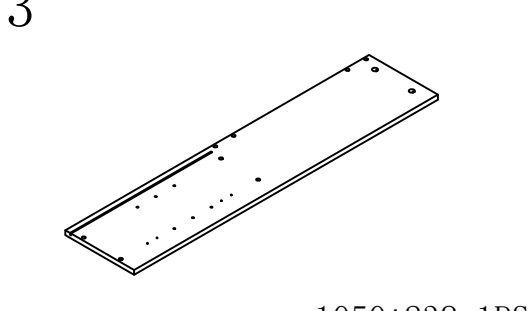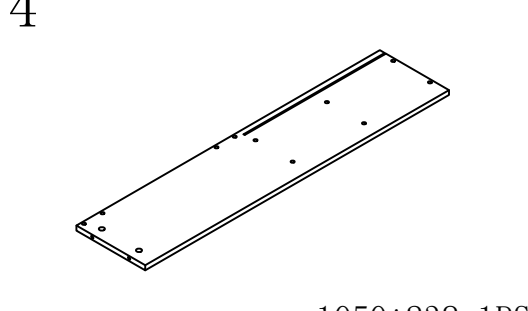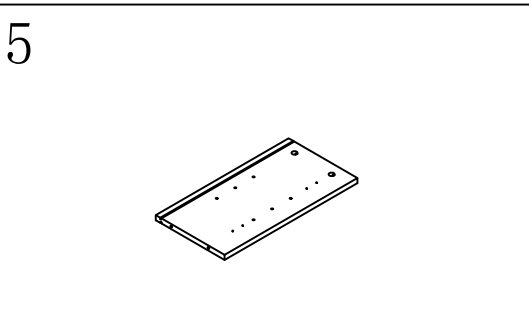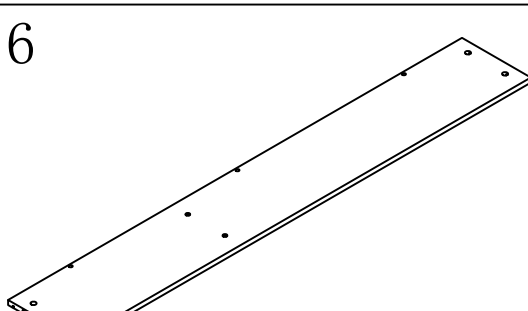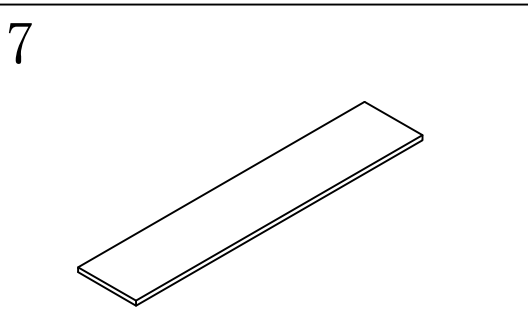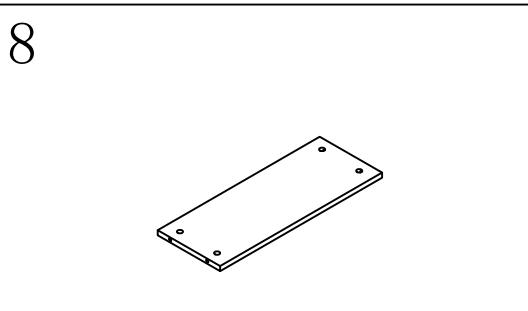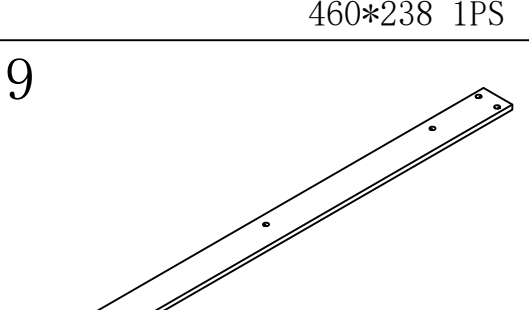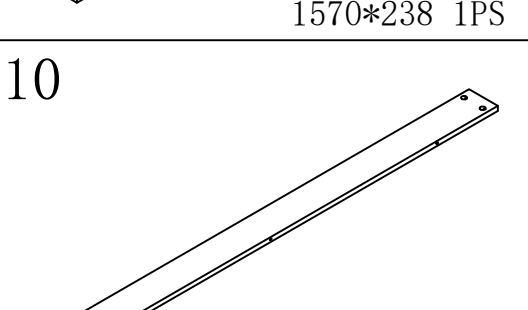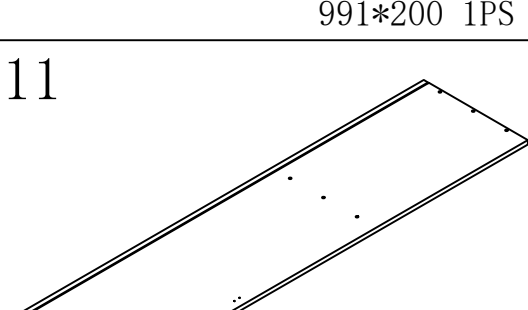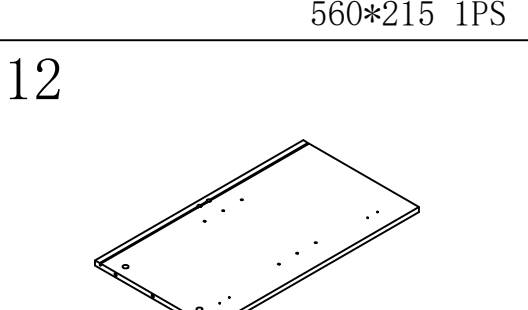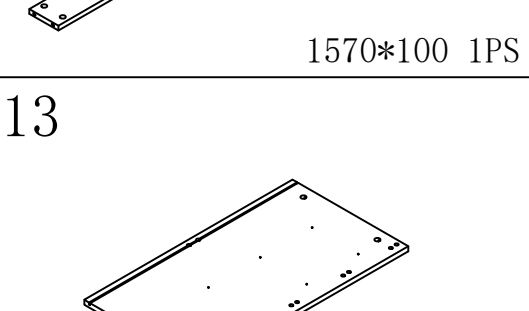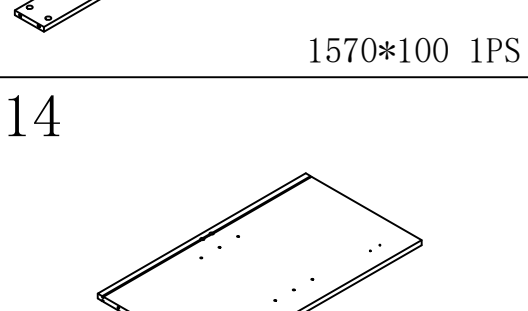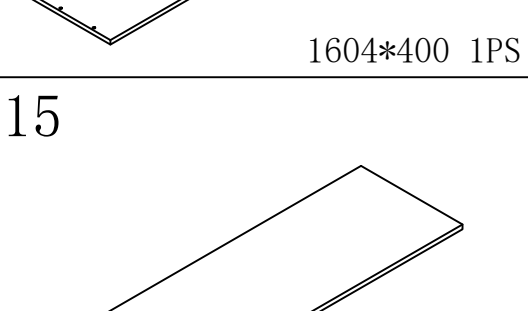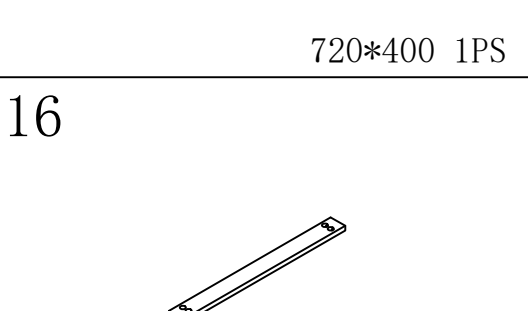1  1570*238 1PS	2  1604*400 1PS	3  1050*238 1PS	4  1050*238 1PS
5  460*238 1PS	6  1570*238 1PS	7  991*200 1PS	8  560*215 1PS
9  1570*100 1PS	10  1570*100 1PS	11  1604*400 1PS	12  720*400 1PS
13  720*400 1PS	14  720*400 1PS	15  991*350 1PS	16  560*50 4PS


17 995*80 1PS	18 560*80 1PS	19 456*495 2PS	20 716*495 2PS
21 555*160 4PS	22 505*100 4PS	23 300*100 4PS	24 300*100 4PS
25 515*294 4PS	26 1003*234 2PS	27 568*234 2PS	28 1003*330 2PS
29 568*330 2PS			




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

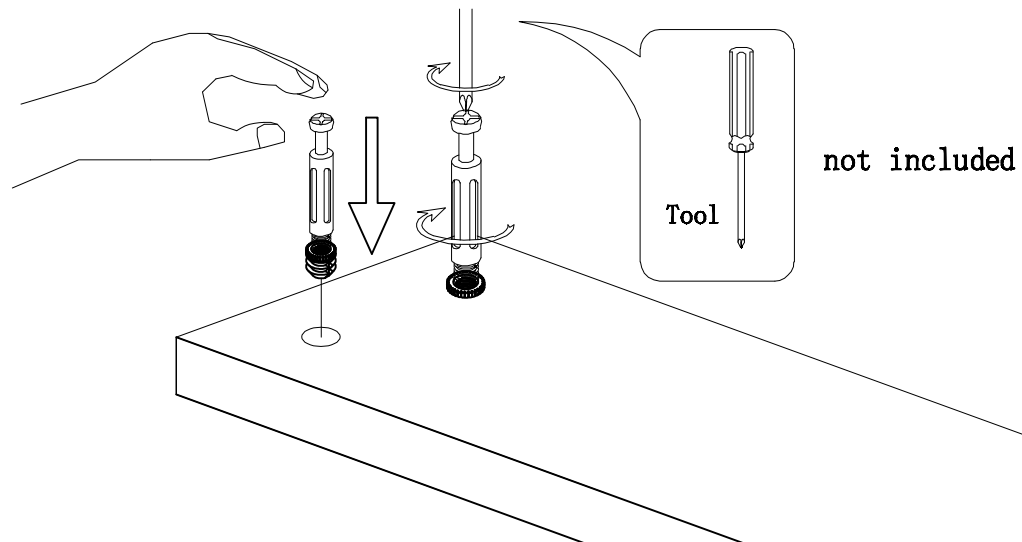


II

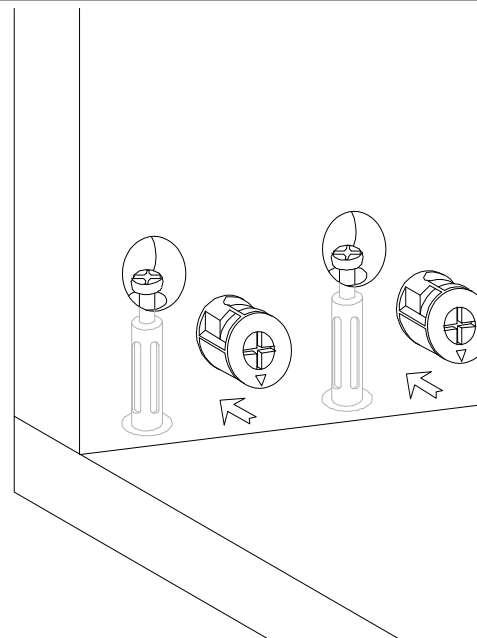

III

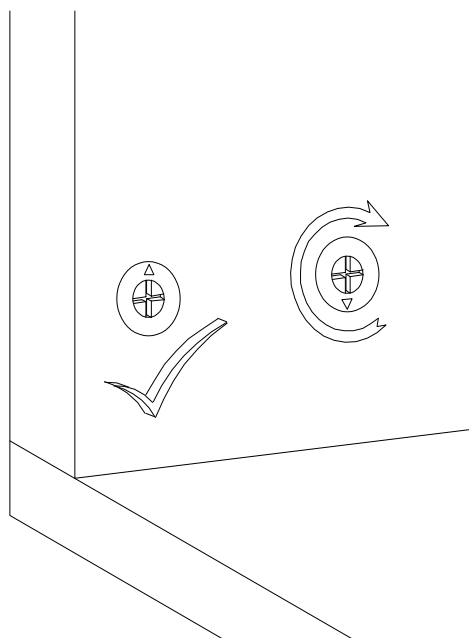


1

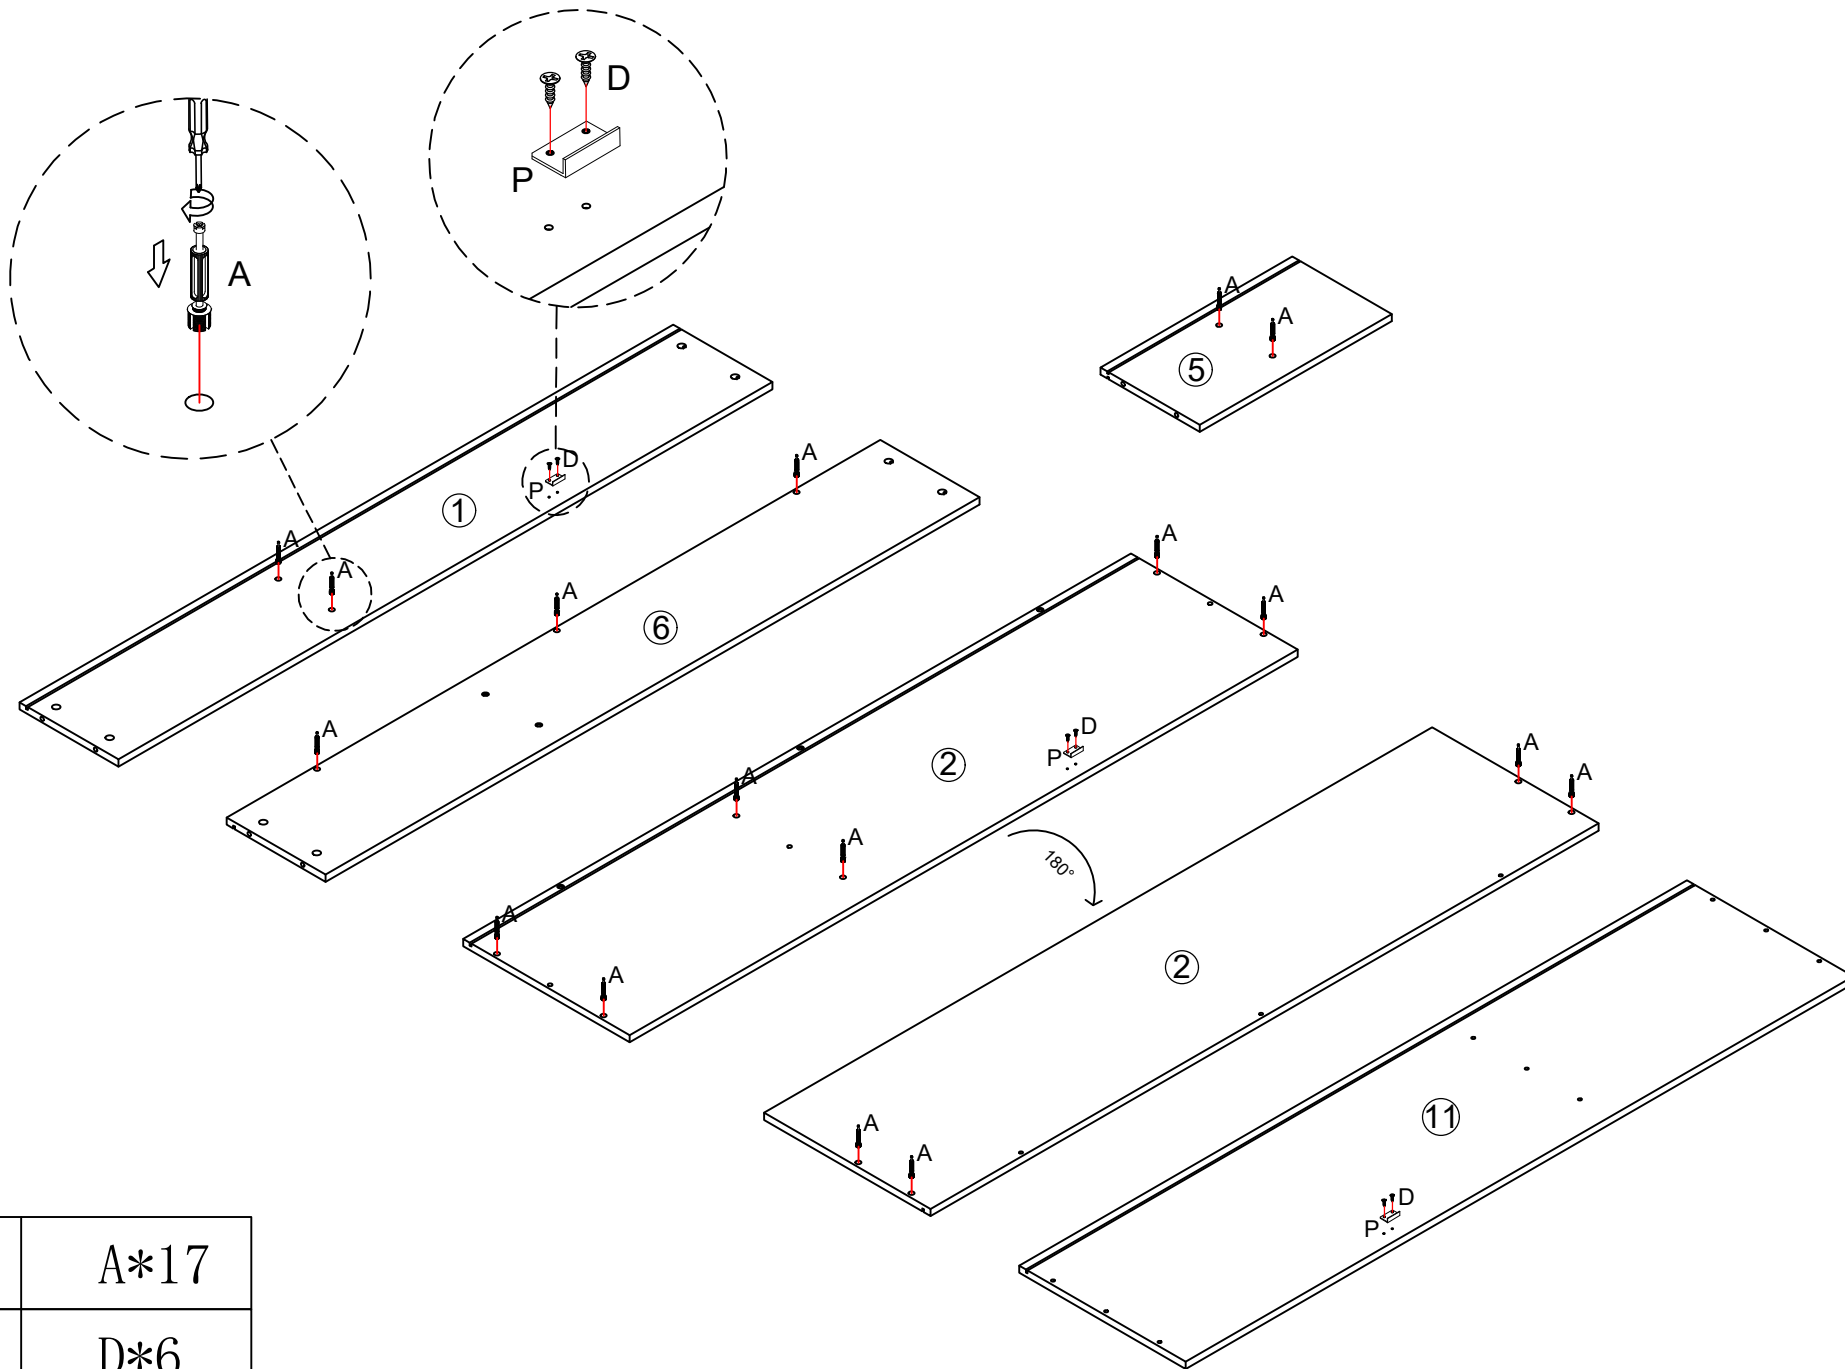

	A*17
	D*6
	P*3

put A on board ①②⑤⑥

2

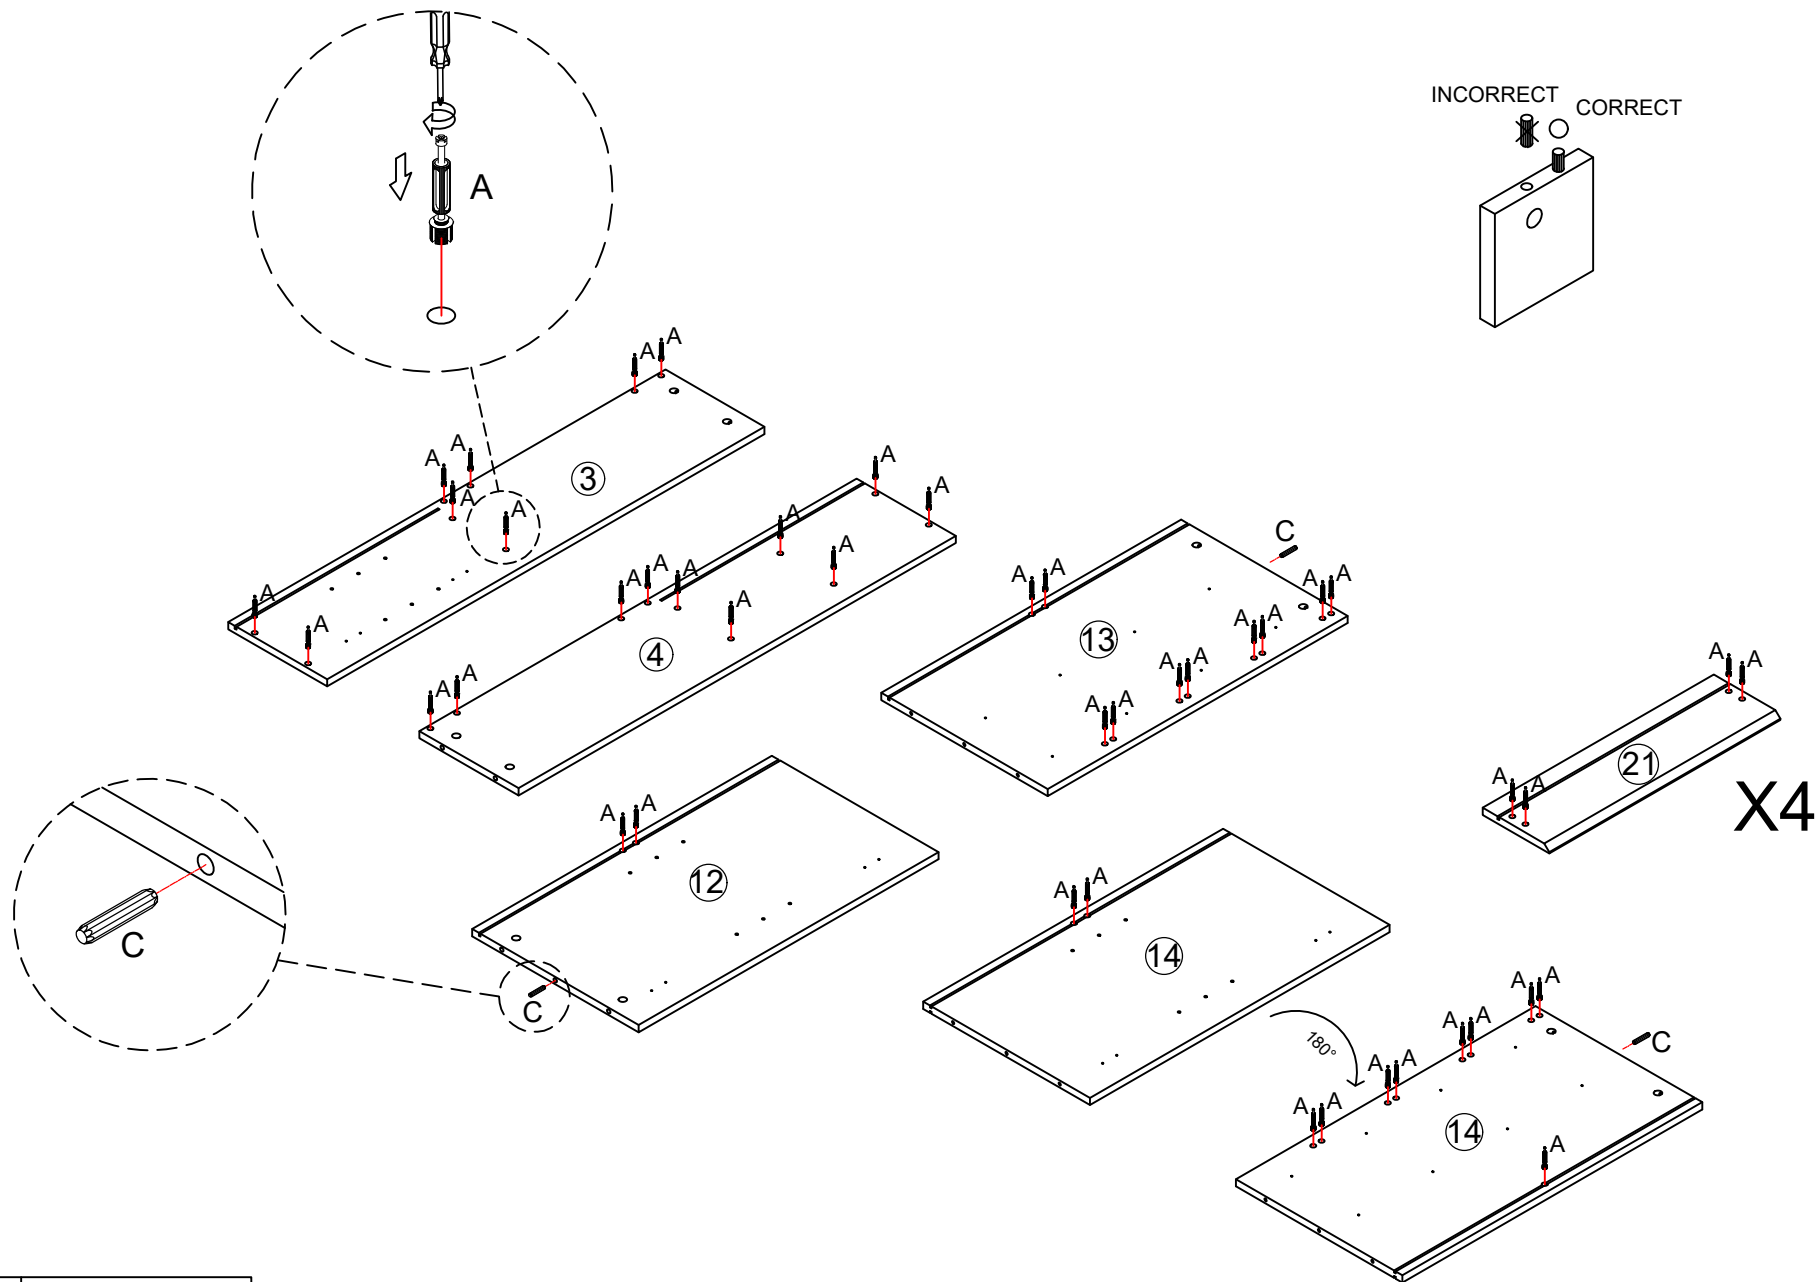

A*57







C*3


put A on board ③ ④ ⑫ ⑬ ⑭ ⑰

put C on board ⑫ ⑬ ⑭

3

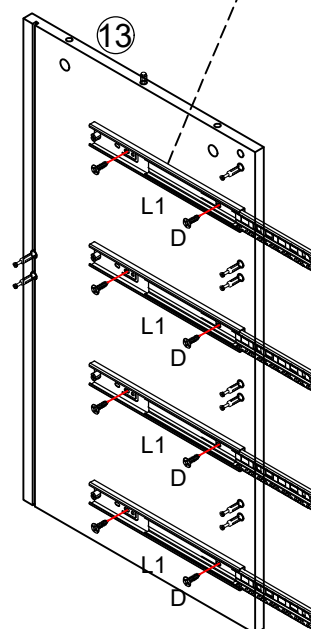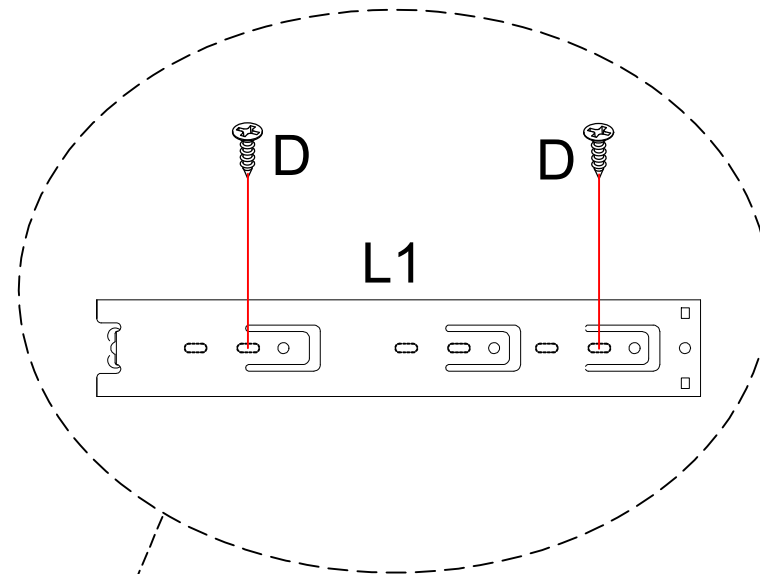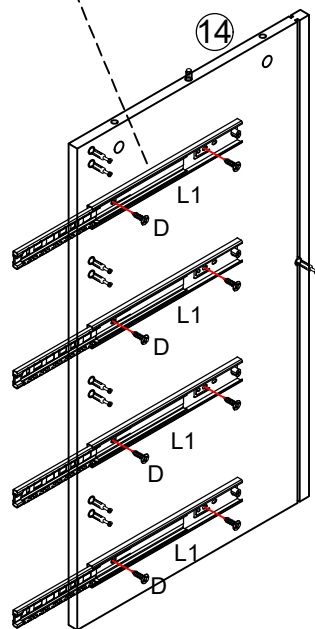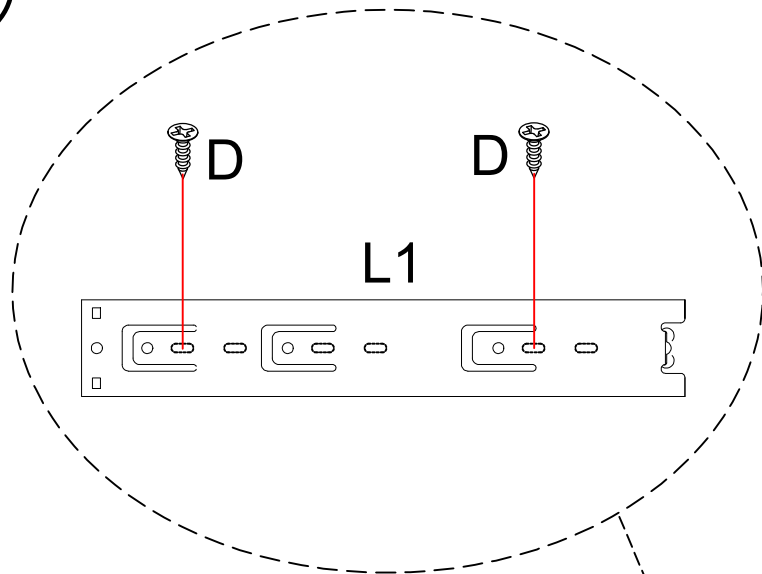



D*16



L1*4

4

Make sure the arrow on the screw align to the hole on the side.

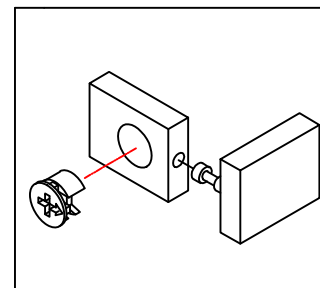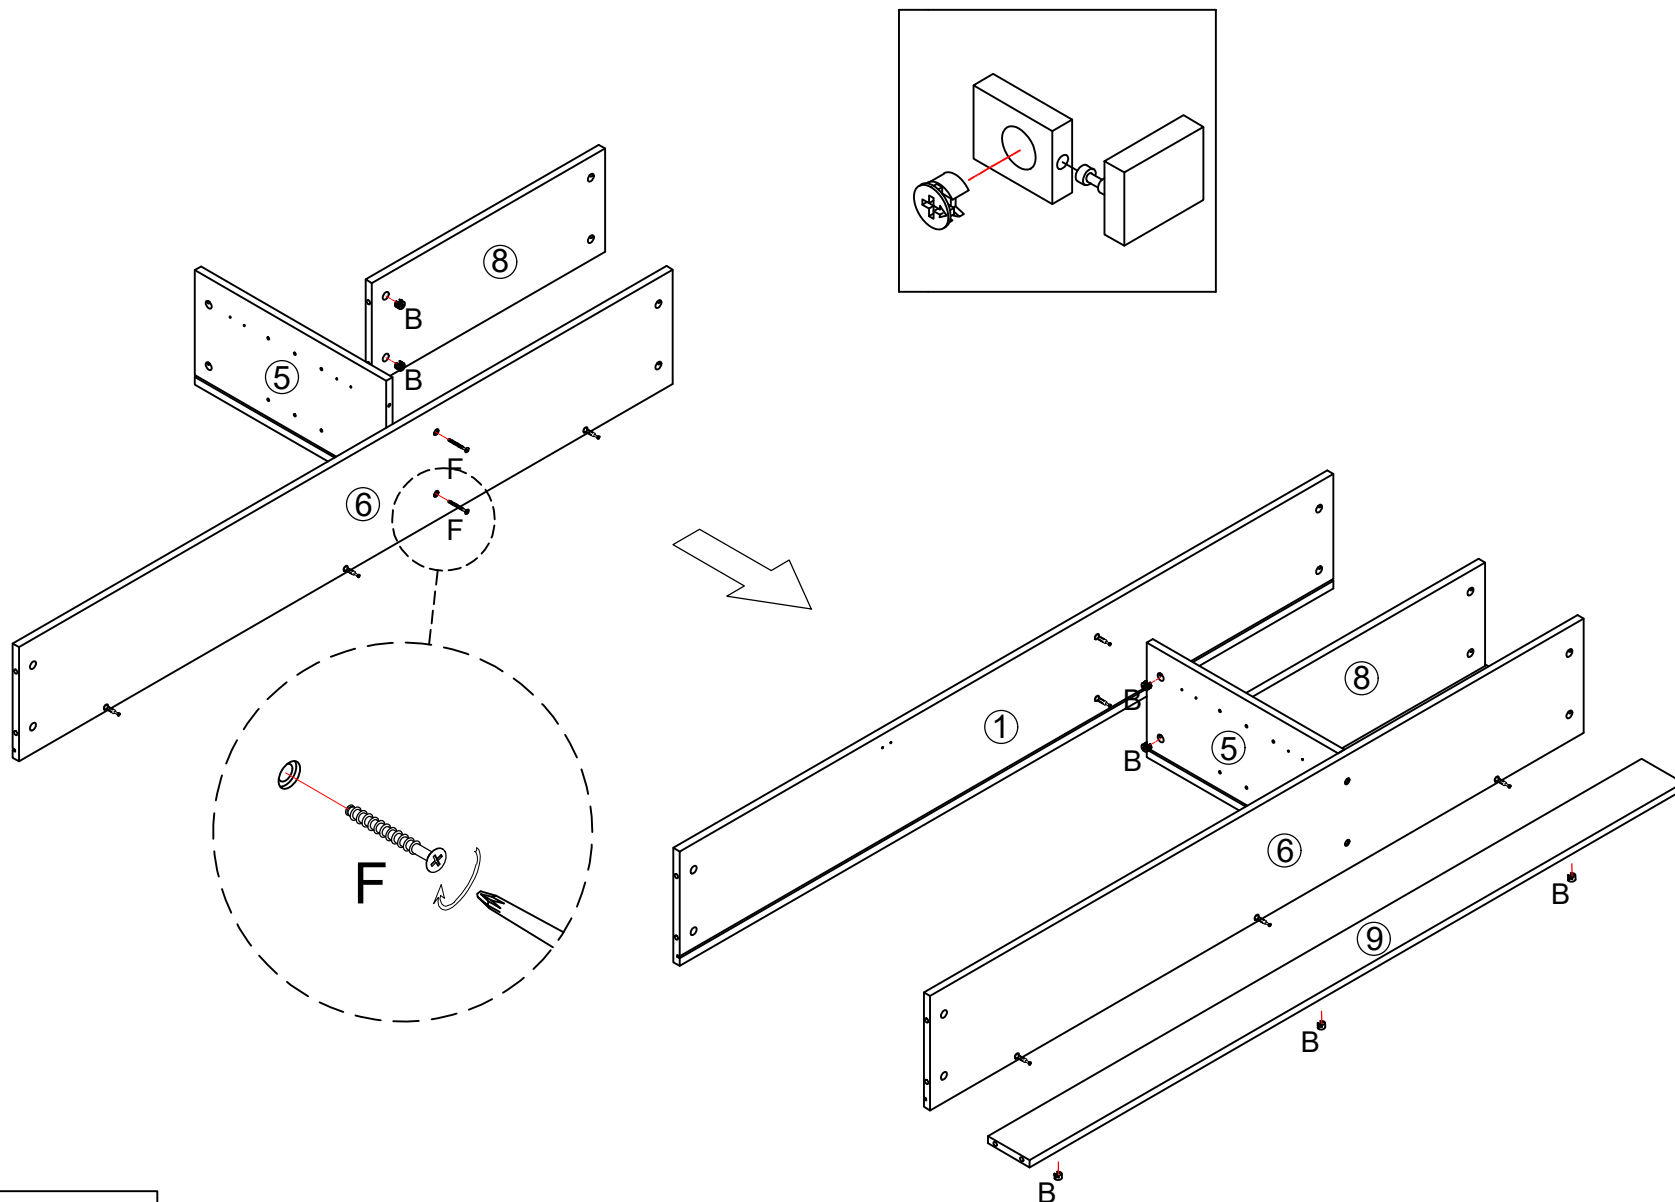


B*7



F*2

put B on board ⑤ ⑧ ⑨

5

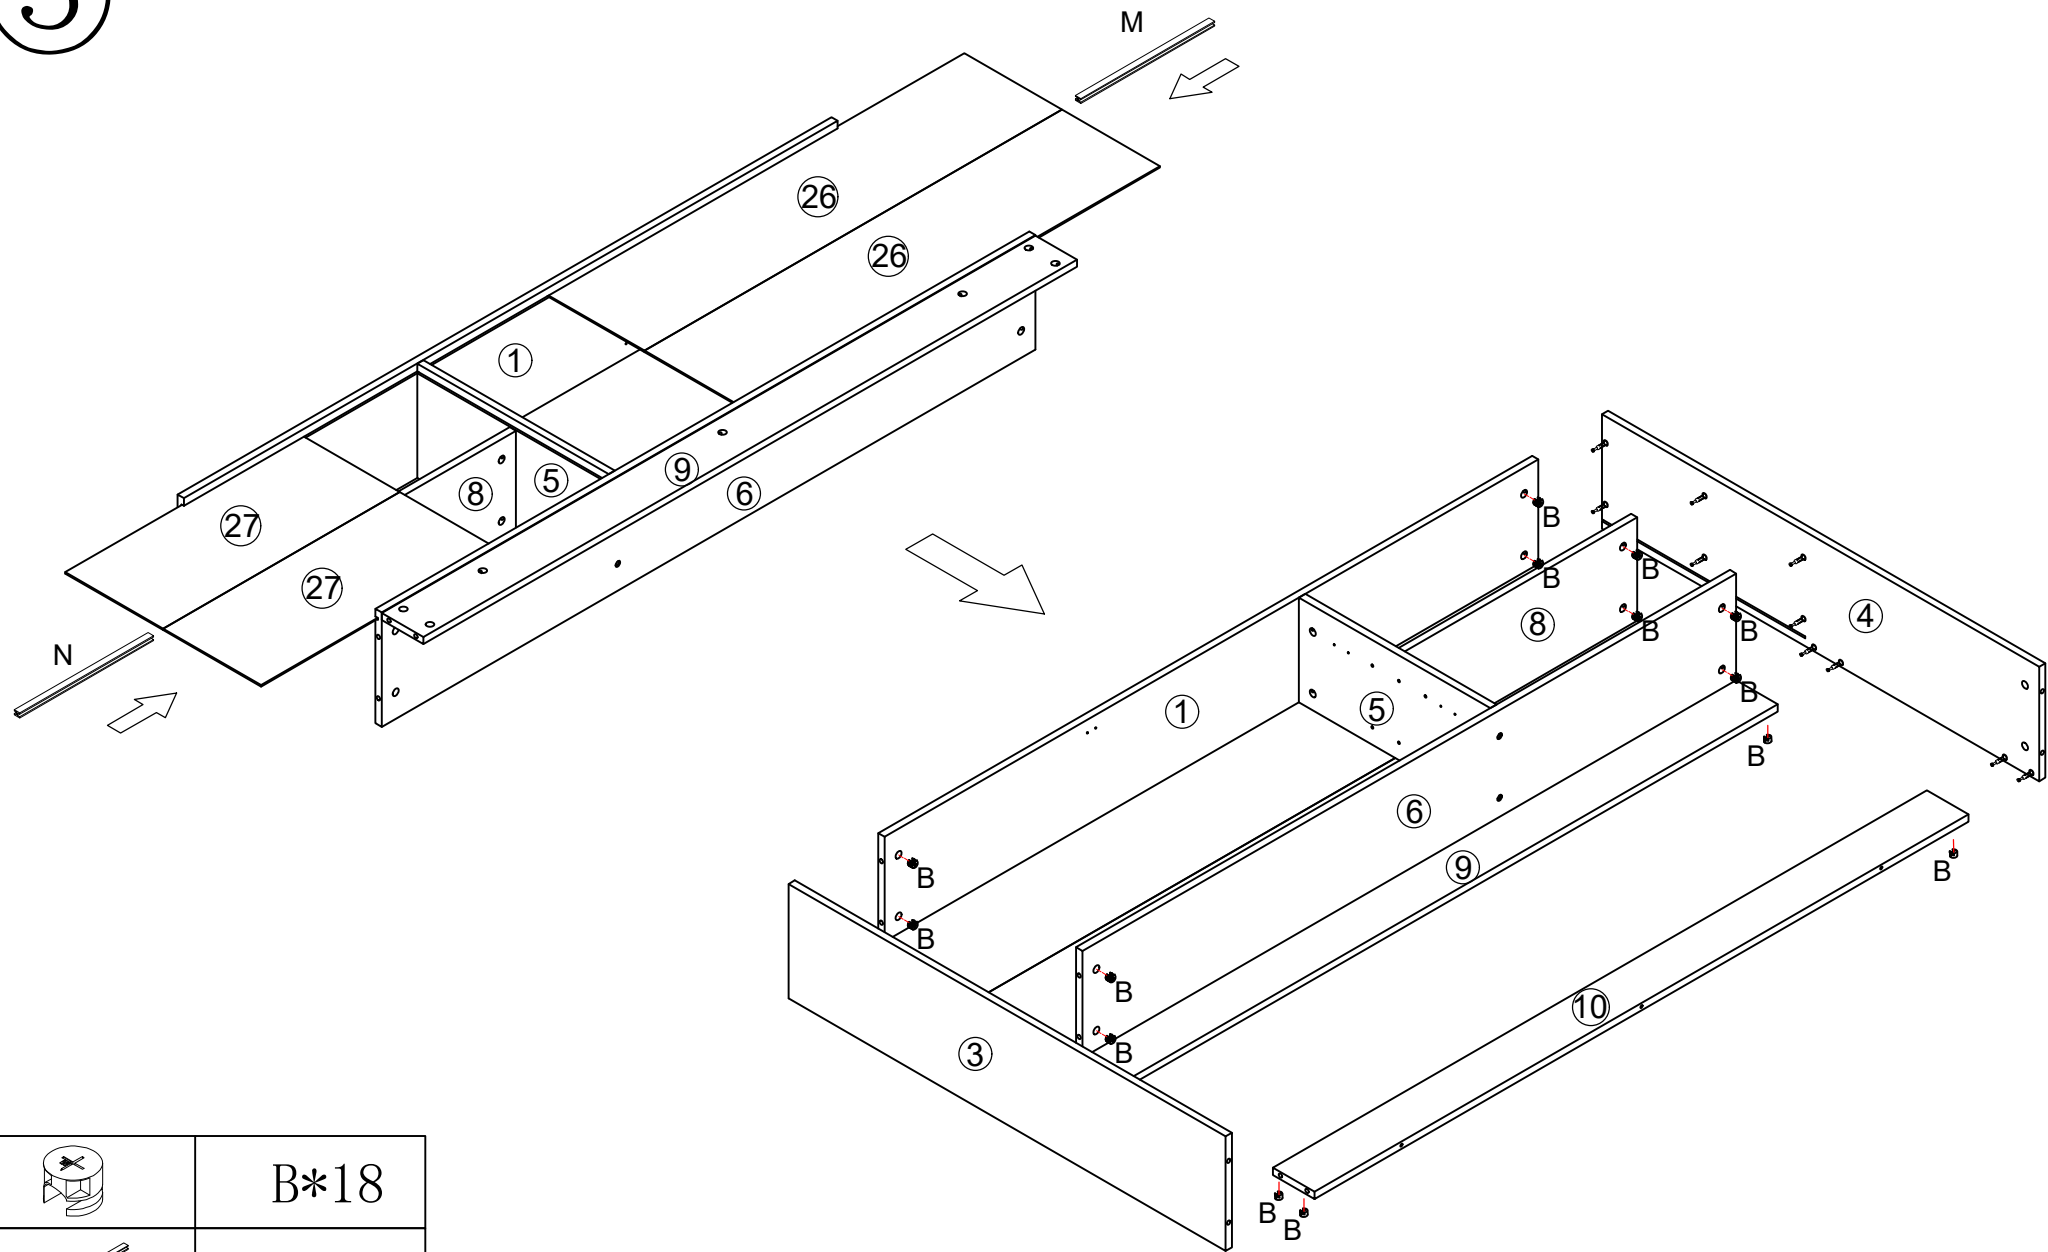

B*18




M*1



N*1

put B on board ①⑥⑧⑨⑩

6

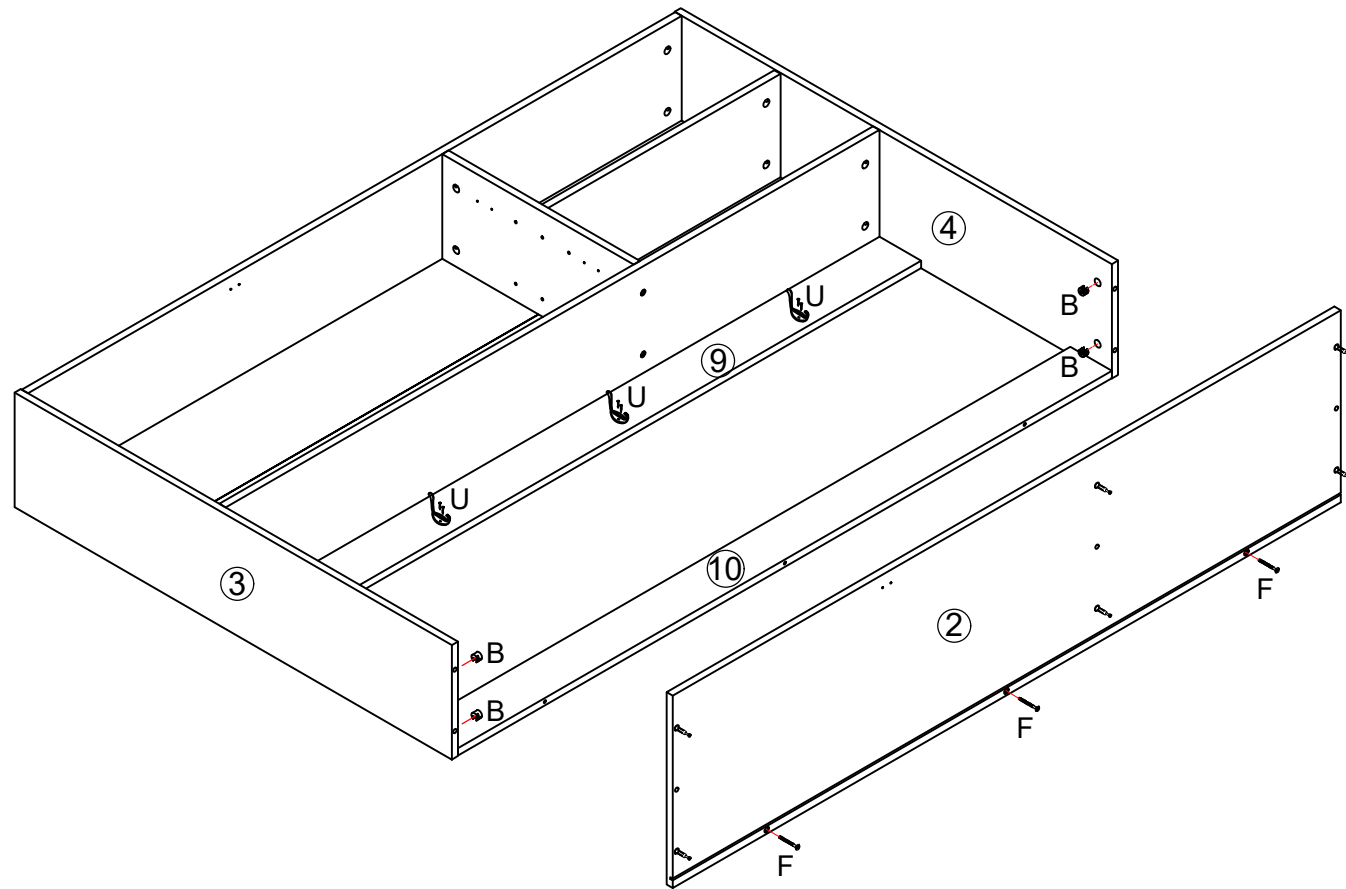

B*4




F*3



U*3

put B on board ③④




7

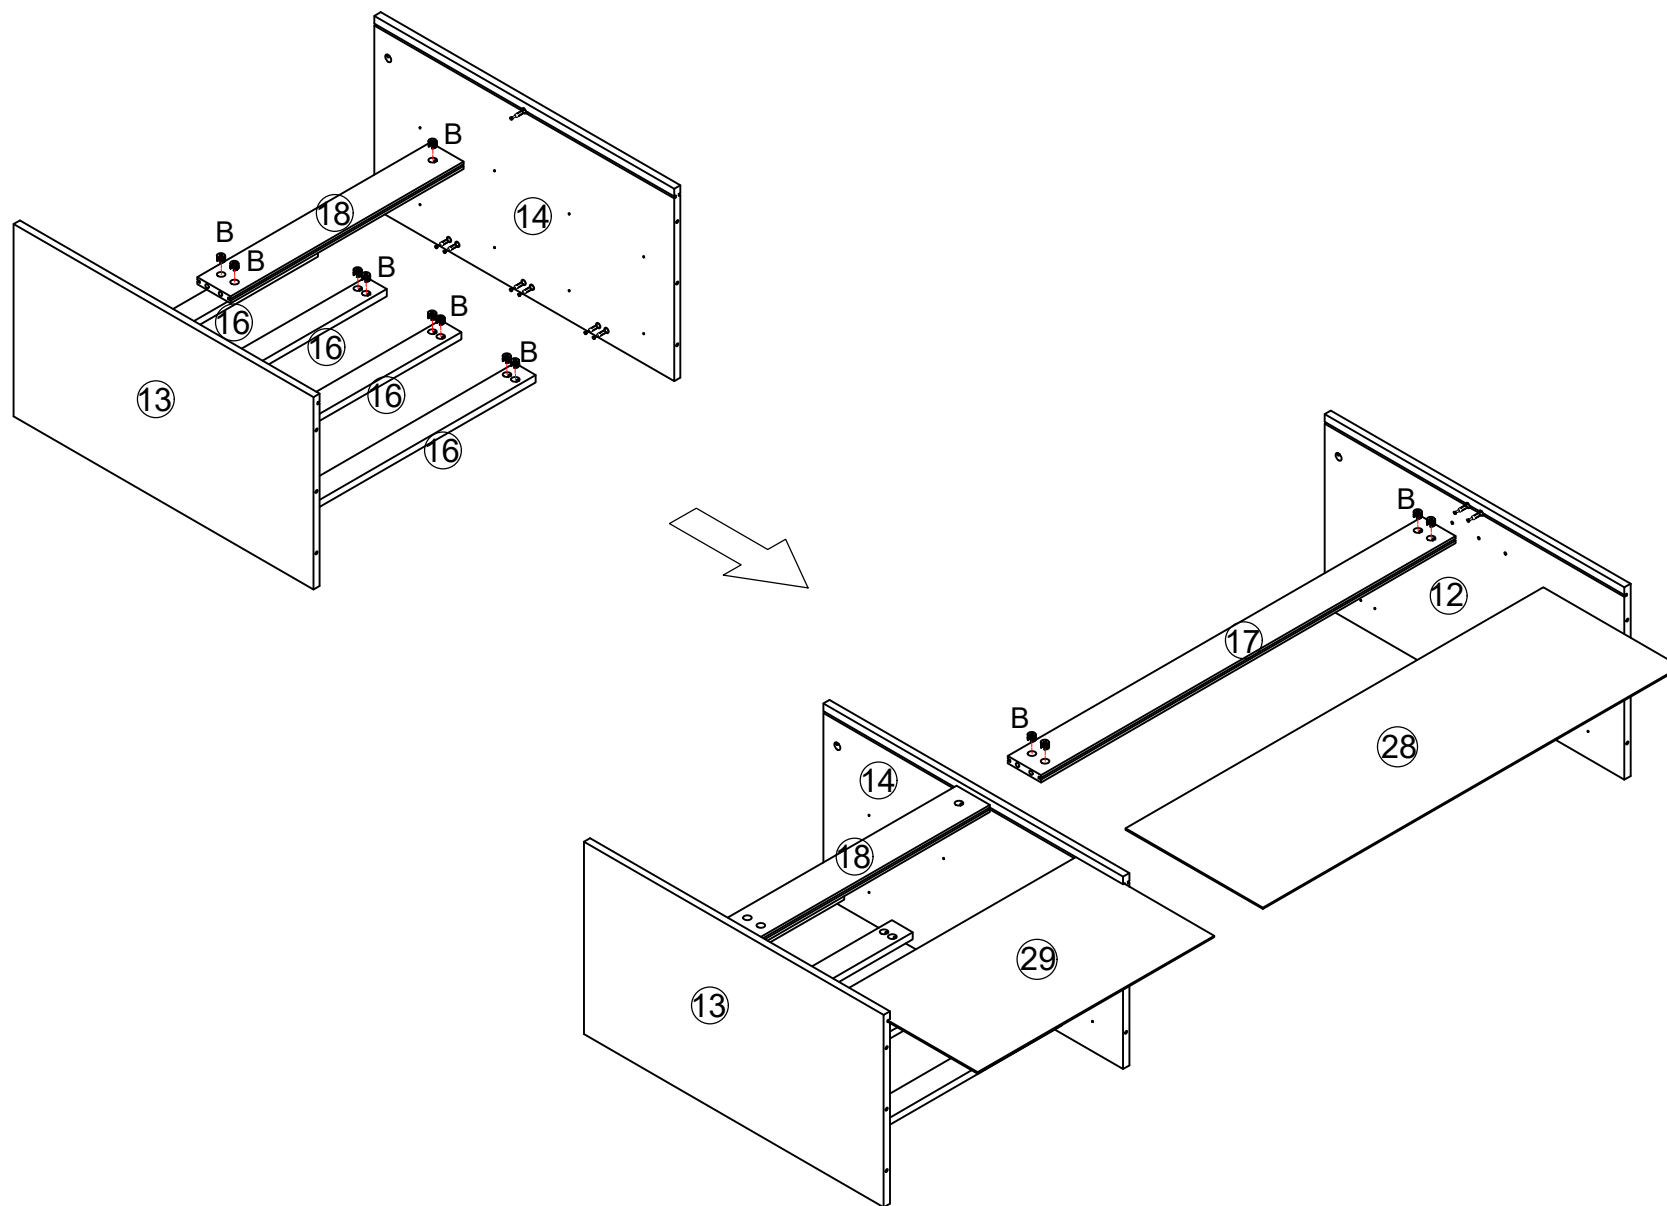

B*23


put B on board 16 17 18

8

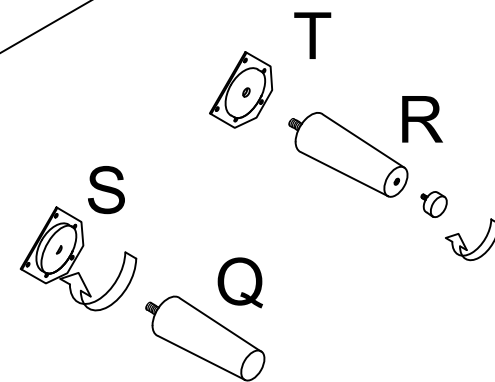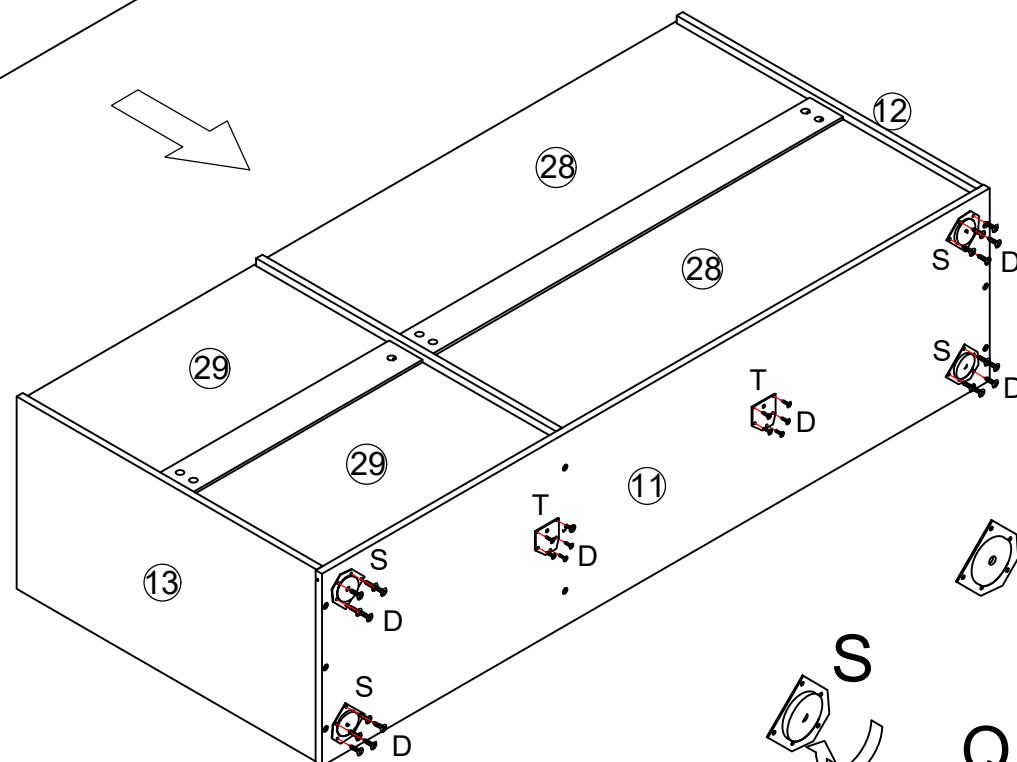
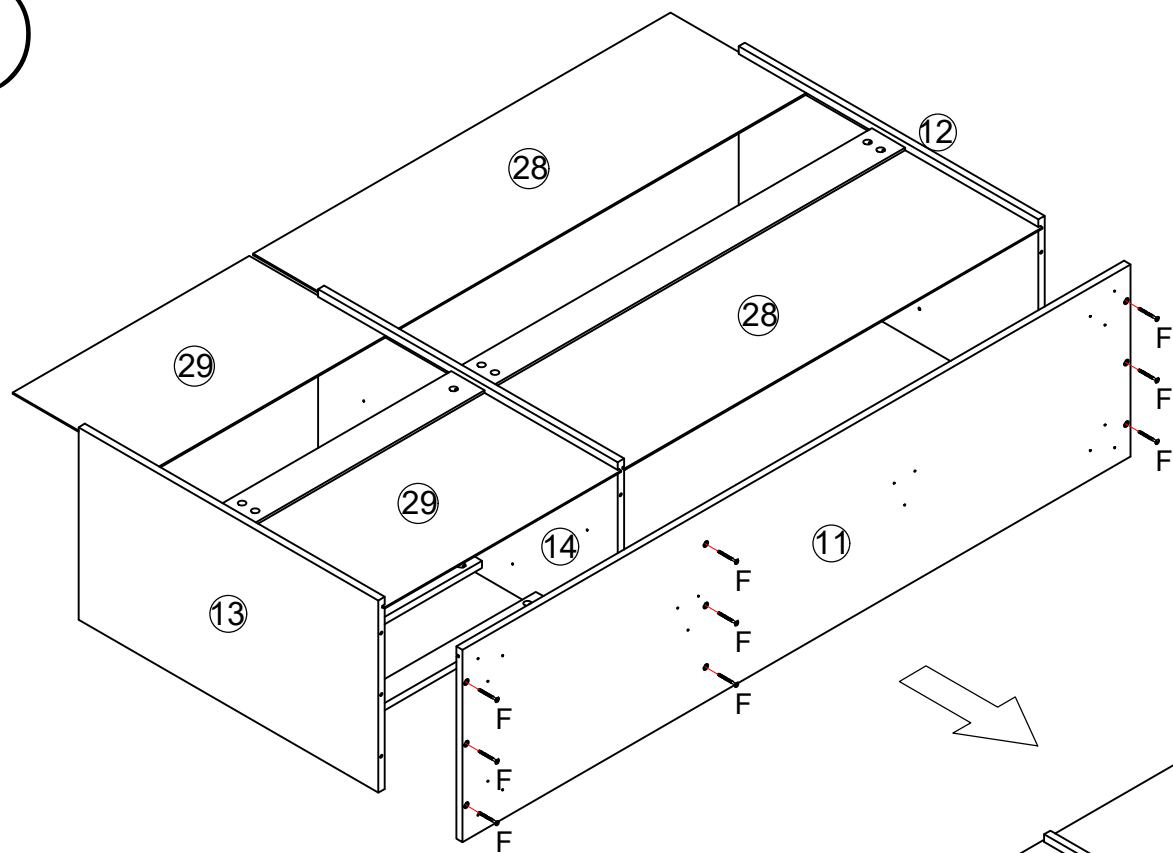


	D*30
	F*9
	Q*4
	R*2
	S*4
	T*2

9

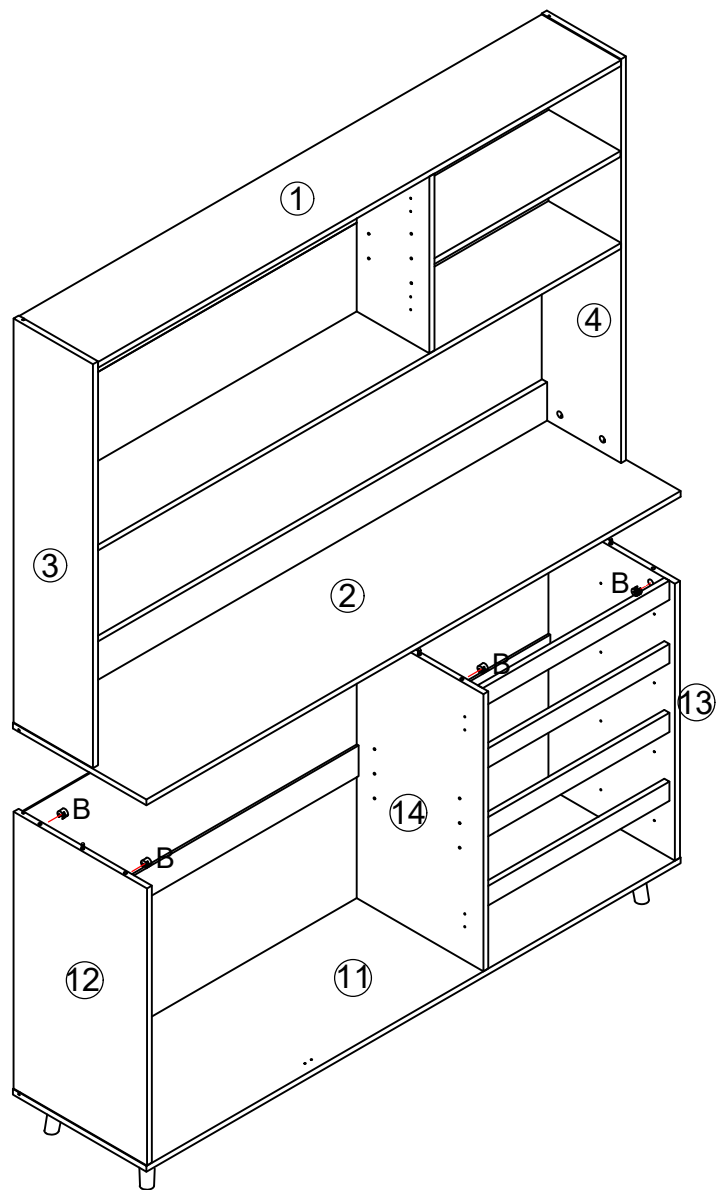

put B on board ⑫ ⑬ ⑭

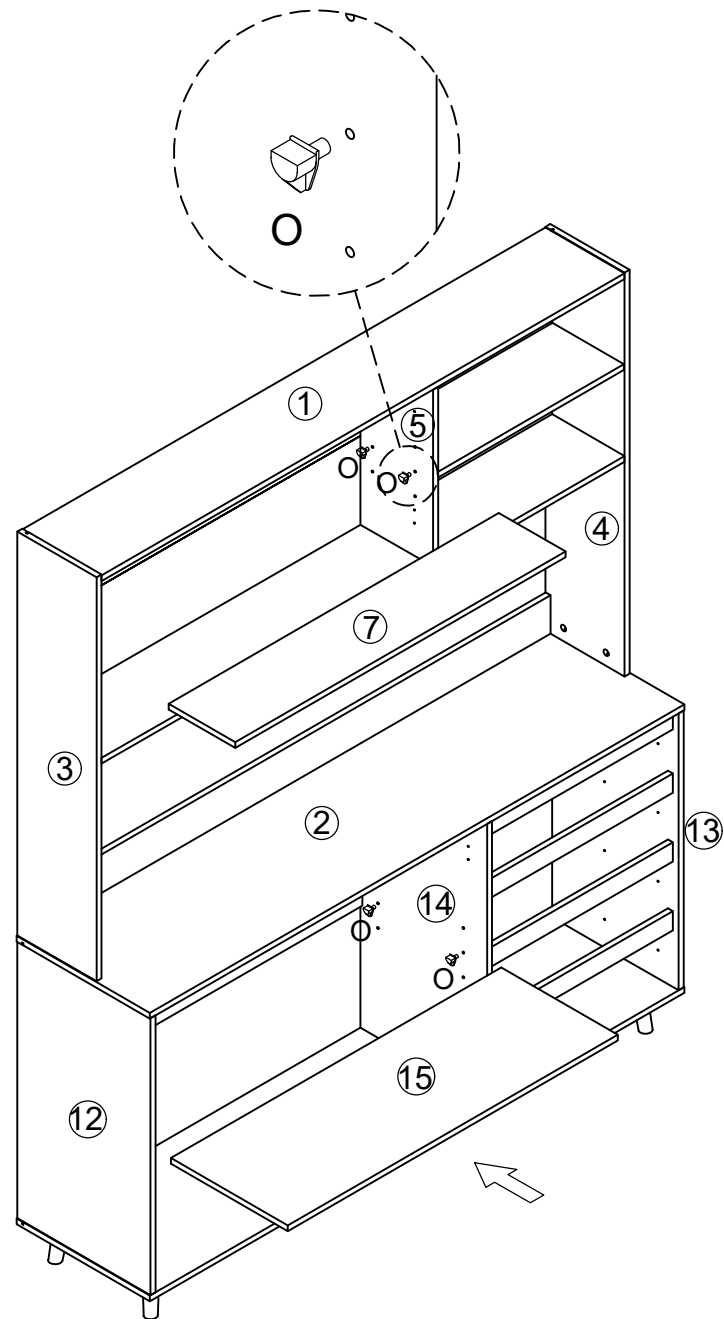


B*6



O*8


10

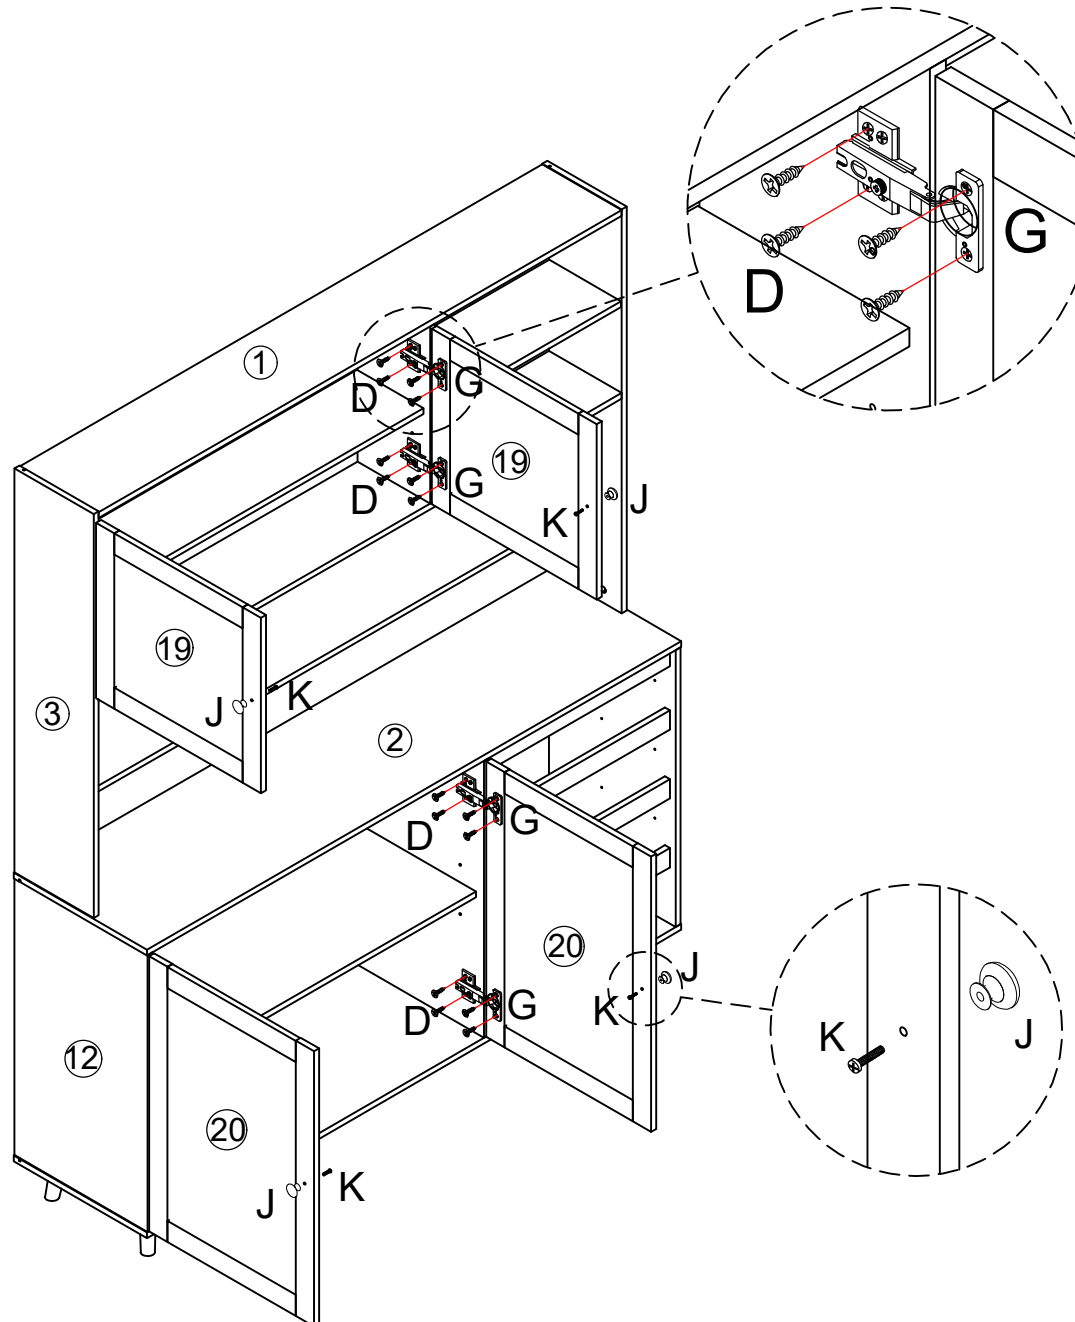

	D*48
	G*8
	J*4
	K*4

11


X4

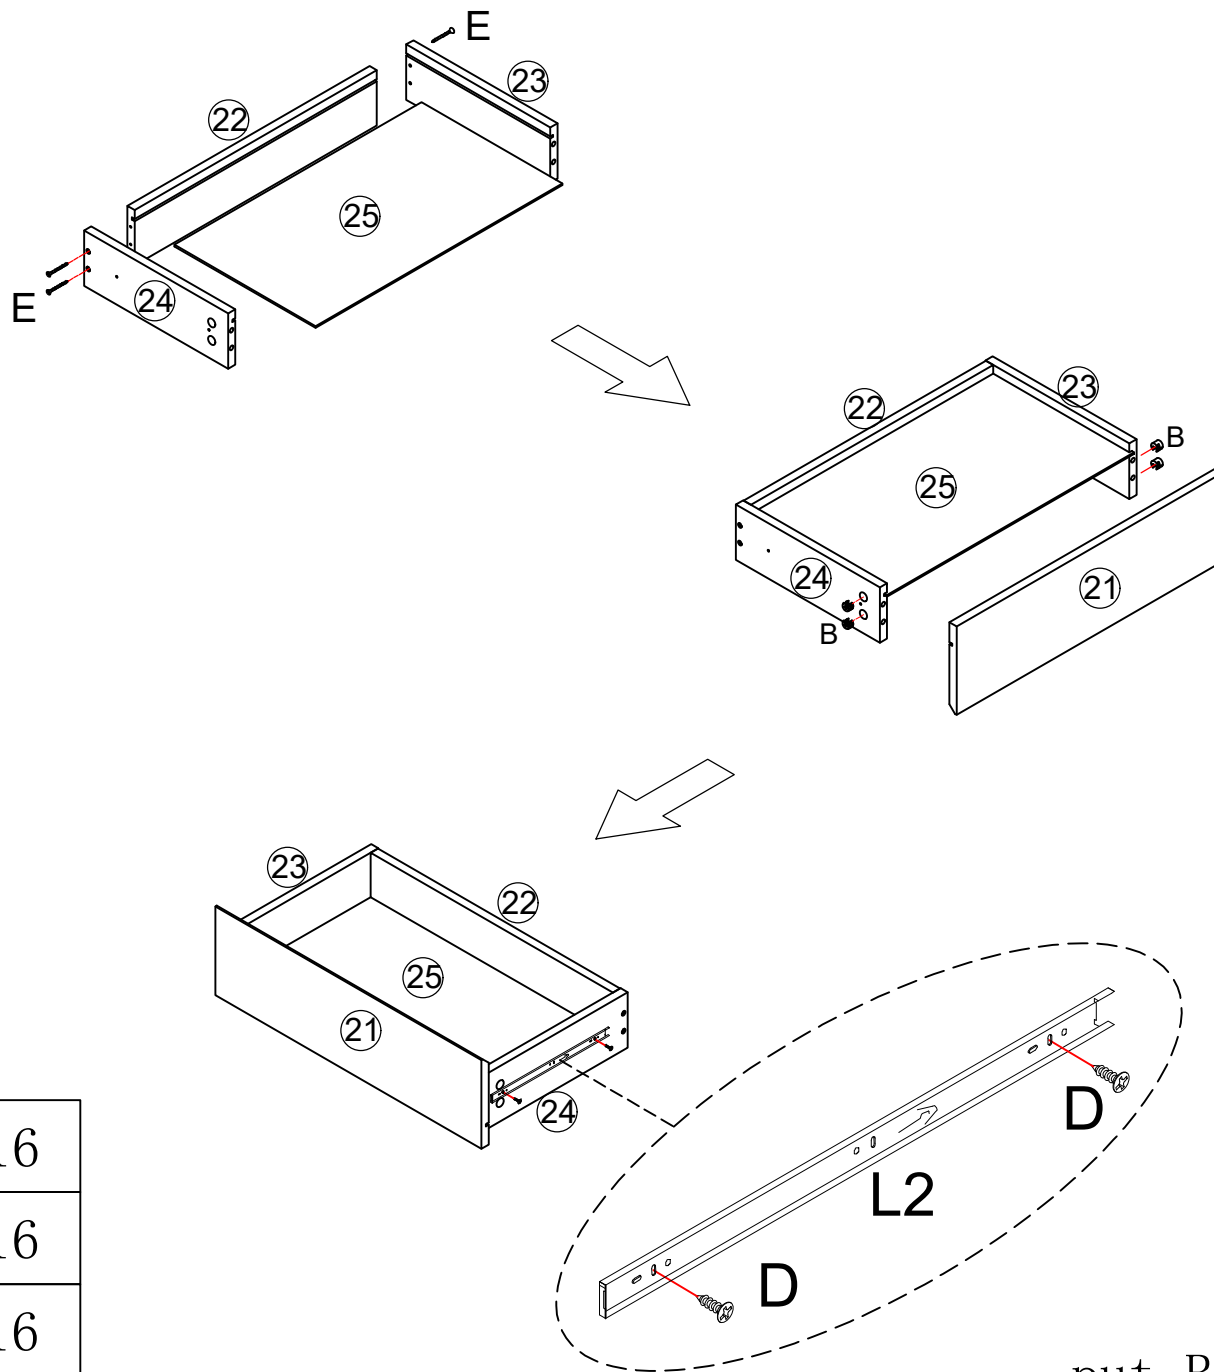


B*16



D*16







E*16



L2*4

put B on board 23 24

12



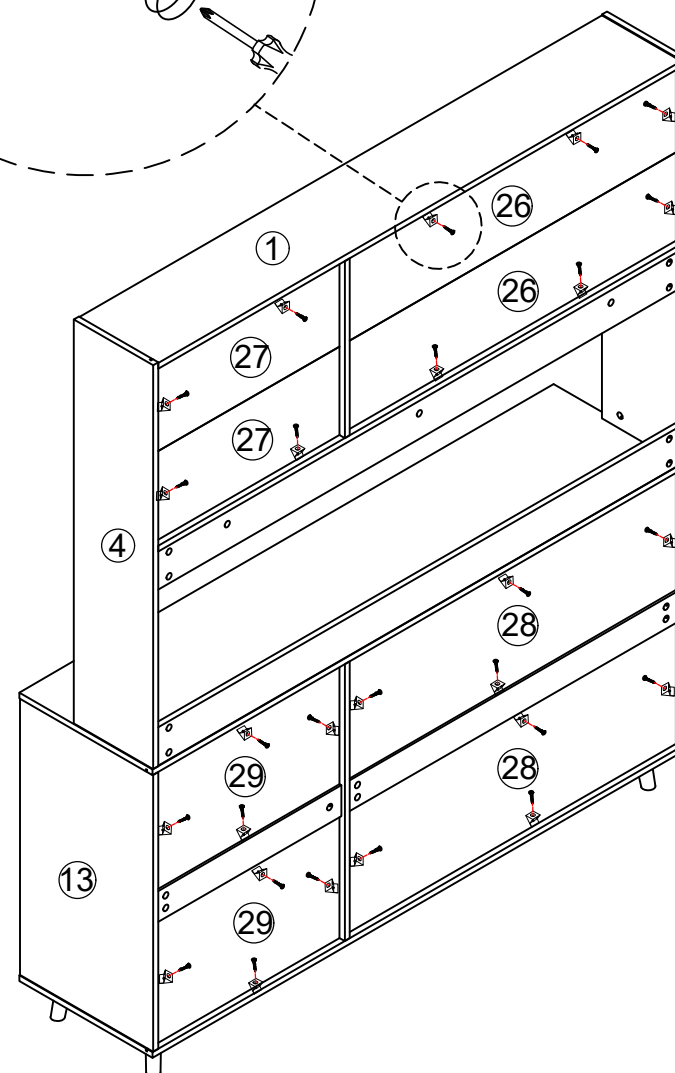

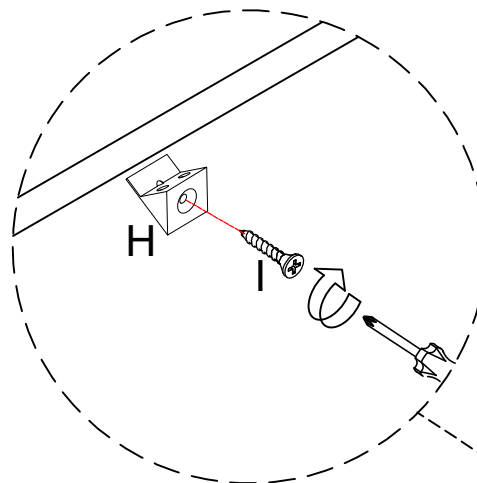
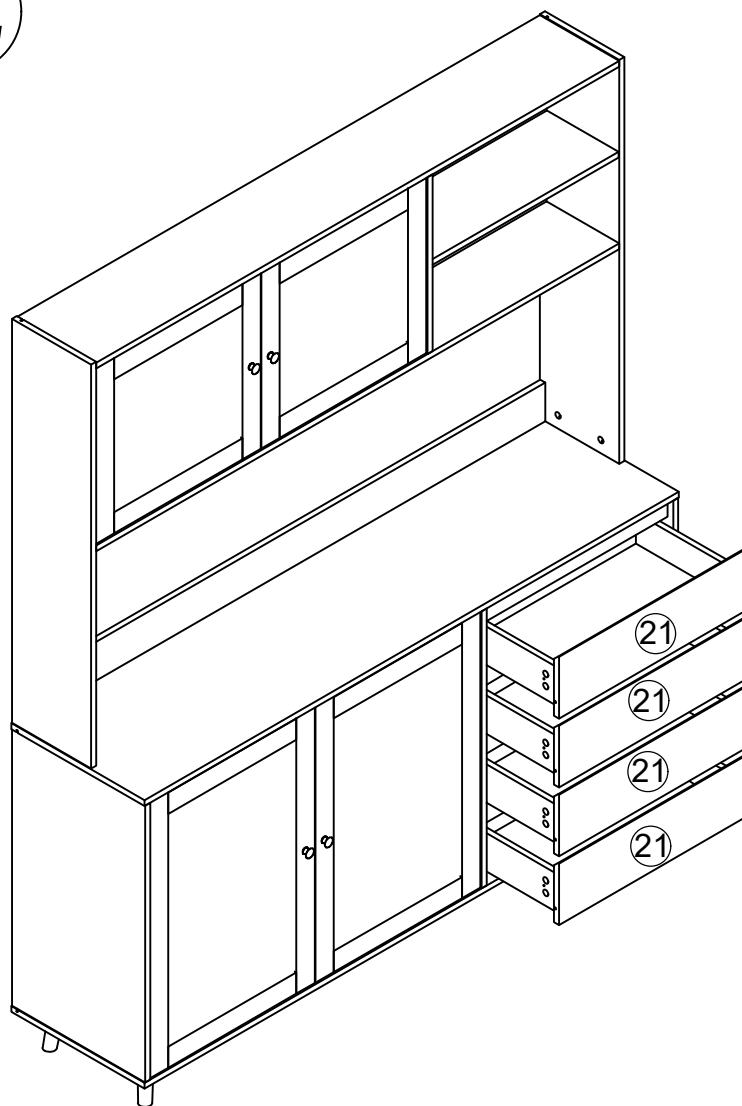


H*26



I*26

13

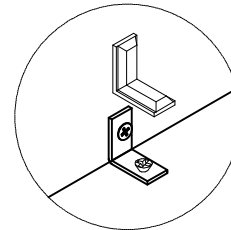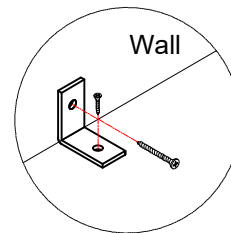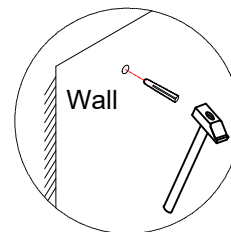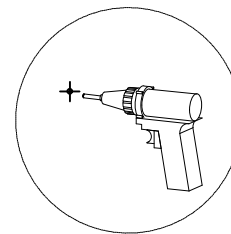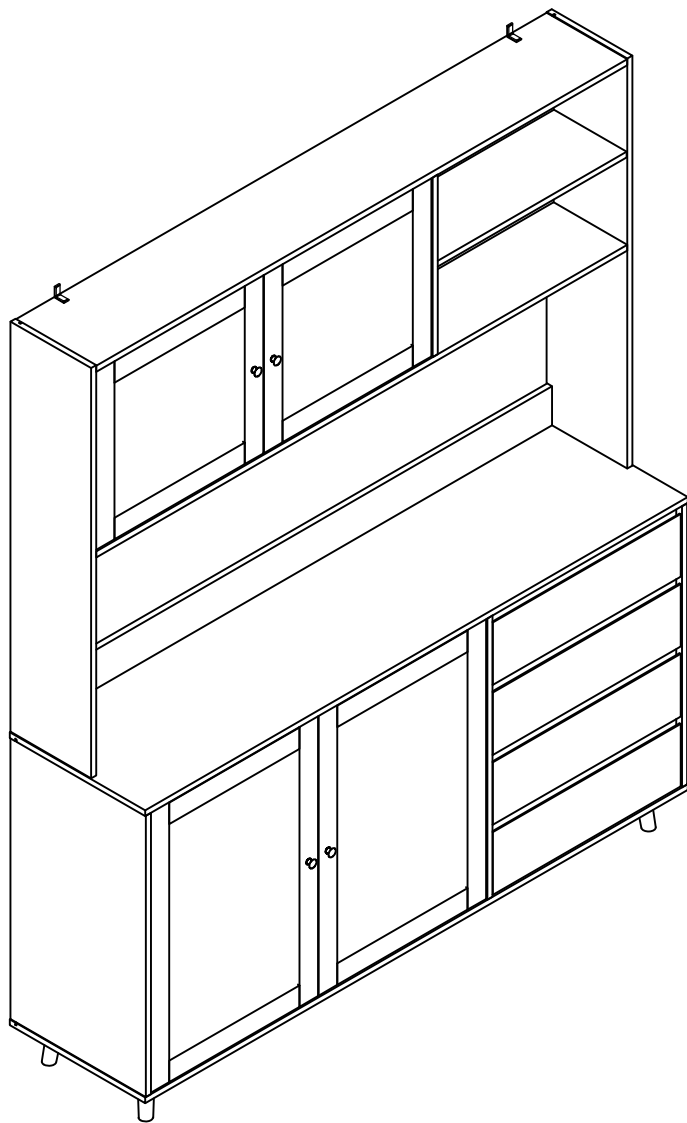

V*2

Please install tip-proof fitting.