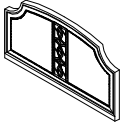

















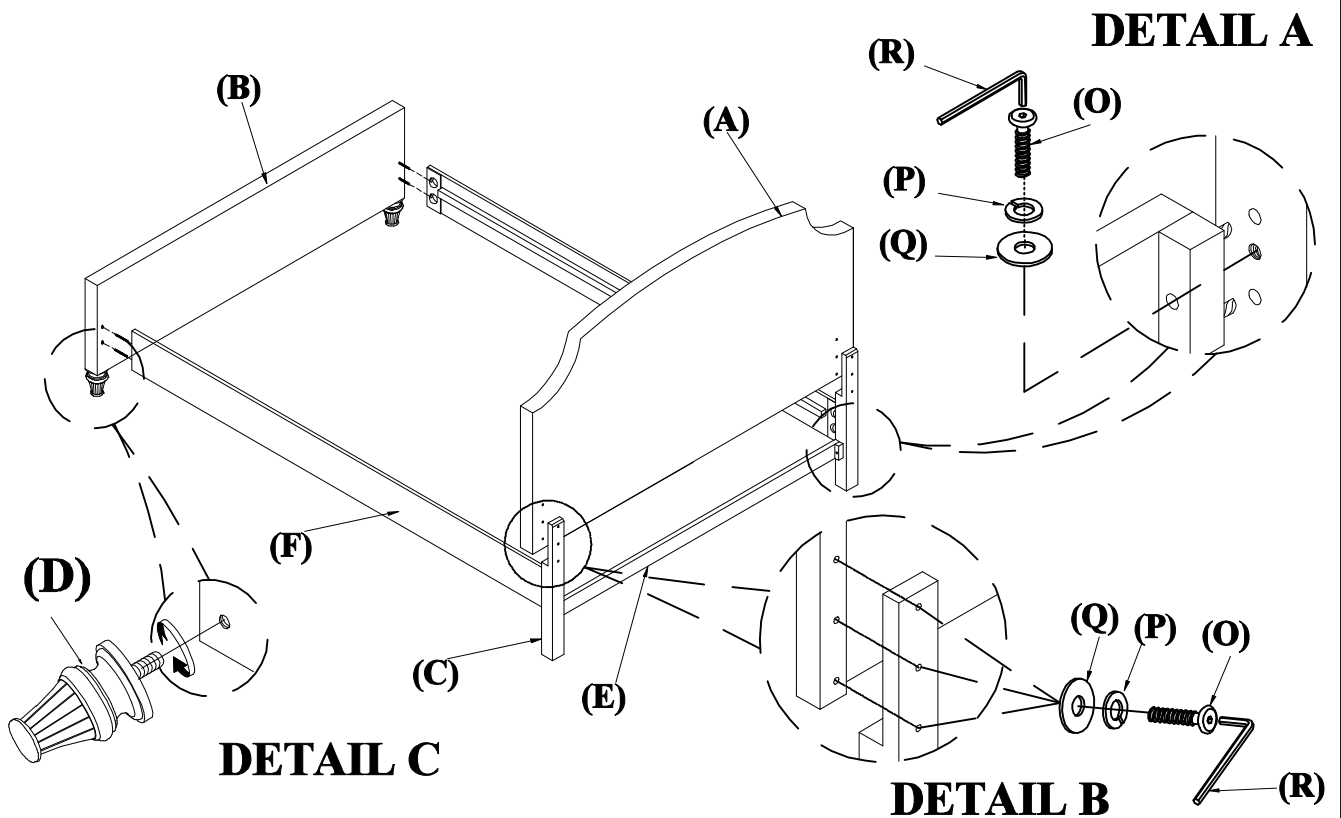


Assembly Instructions

Full Bed HB+FB+SLATS

Component And Hardware List

HEADBOARD  (A) 1 PC	FOOTBOARD  (B) 1 PC	LEGS 1 LEFT & RIGHT  (C) 2 PCS	LEGS 2  (D) 2 PCS	STRETCHER  (E) 1 PC	SIDE RAIL  (F) 2 PCS
SLAT Roll  (G) 13 PCS	SLAT SUPPORT  (H) 1 PC	SUPPORT LEGS  (I) 3 PCS	BOLT Ø5/16 * 90mm  (J) 8 PCS.	HEX NUT Ø5/16mm *13  (K) 8 PCS	WRENCH 13mm  (L) 1 PC
SCREW Ø4 * 30mm  (M) 26 PCS	BOLTS Ø 5/16" X63mm  (N) 3PCS	BOLTS Ø 5/16" X38mm  (O) 8 PCS	lock WASHER: Ø 5/16"  (P) 11 PCS.	WASHER: Ø 5/16"x19mm  (Q) 11PCS.	ALLEN KEY  (R) 1 PC

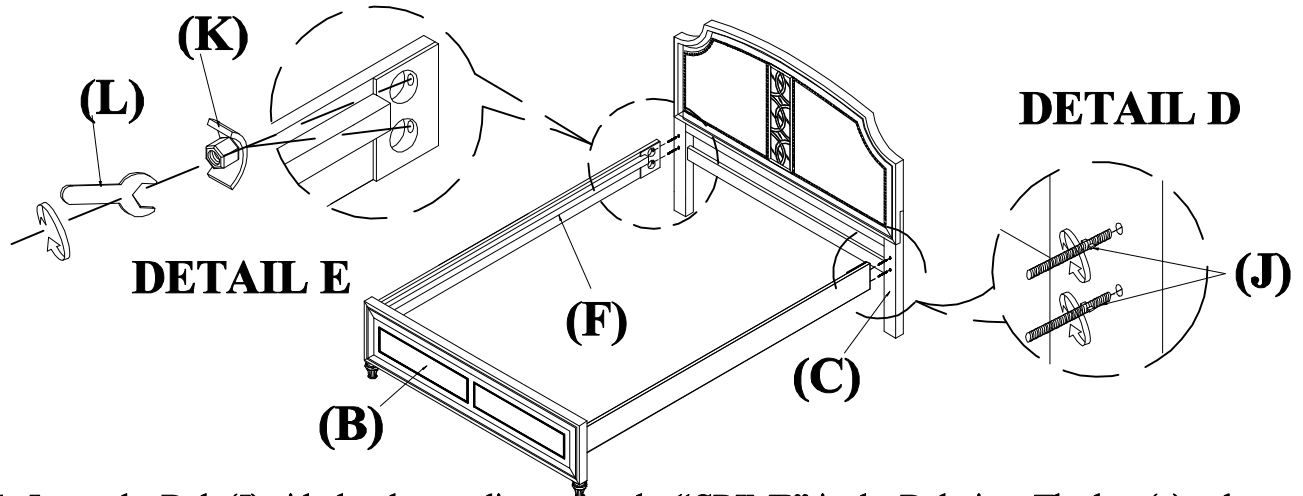


FULL BED ASSEMBLY PROCEDURE:

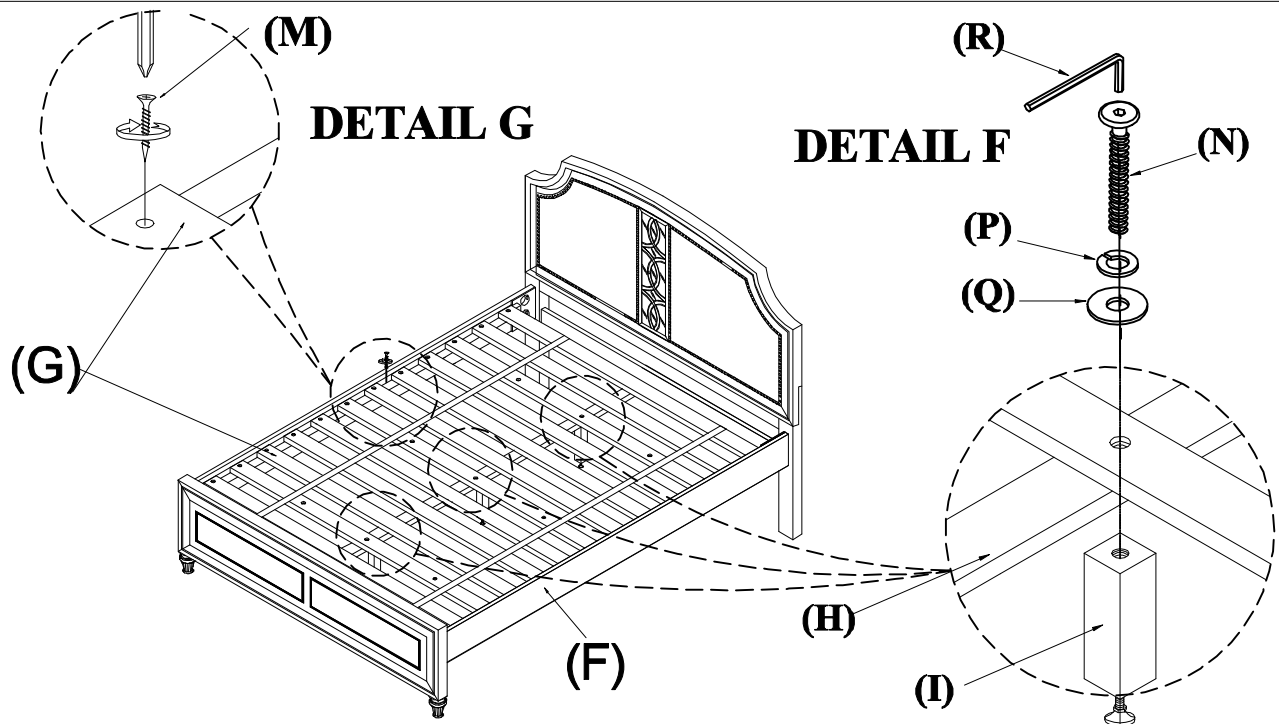
1. Place the Stretcher (E) and Legs(C) on a soft and smooth surface.
2. Assemble Stretcher (E) to the Legs 2 (C) by using Bolt (O) Washer (Q) lock Washer (P) ,as shown in **DETAIL A**.
3. Assemble Headboard (A) to the Legs 2 (C) by using Bolt (O) Washer (Q) lock Washer (P) as shown in **DETAIL B**.
4. Screw the Legs 2(D) to the Footboard (B) as shown in **DETAIL C**.

Assembly Instructions

Full Bed HB+FB+SLATS



5. Insert the Bolt (J) with the shorter distance to the "CRIMP" in the Bolt, into The legs (C) and footboard (B) as shown in **DETAIL D**.
6. Assemble Side Rail (F) to the Legs 2 (C) and Footboard (B) by using Hex nut (K) as shown in **DETAIL E**.



7. Assemble the Slat Roll (G) & Slat Support (H) to the Support Legs (I) by using Bolt (N) Washer (Q) lock Washer (P). As shown in **DETAIL F**.
8. Assemble the Slat Roll (G) to the Side Rail (F) by using Screw (M). shown in **DETAIL G**.

IMPORTANT:

The Center Support Rail is used to support the Full Slat Roll from underneath. The Slat Support Rail has 3 positions / locations for attachment. If a Trundle Bed is to be used under the Full Bed, the Support Rail attachment position MUST BE the furthest to the opposite side of the Bed from the front of the Trundle.

THANK YOU FOR YOUR PURCHASE.

Page 2 of 2