




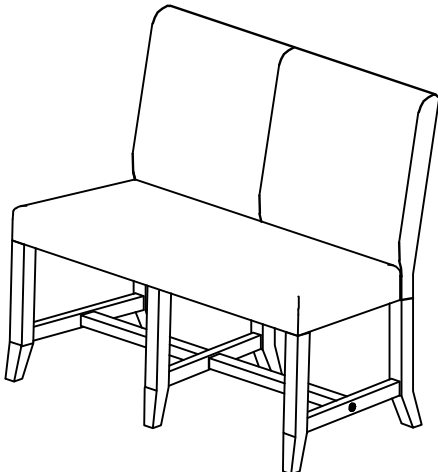



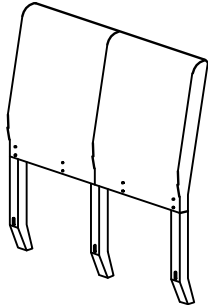








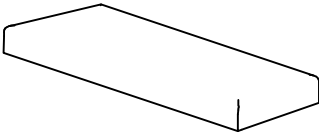





BENCH ASSEMBLY INSTRUCTIONS

A. BACK FRAME 1 PC 	G. LEFT STRETCHER 1 PC 	H. RIGHT STRETCHER 1 PC 
B. CHAIR FRAME 1 PC 	I. MIDDLE STRETCHER 1 PC 	
	BENCH ASSEMBLED 	
C. LONG STRETCHER 1 PC 	D. MIDDLE LEG 1 PC 	
E. LEFT LEG 1 PC 	F. RIGHT LEG 1 PC 	


HARDWARE ARE PACKED IN BOX

1 THREAD BOLT M8 x 30 MM 02 PCS	2 ALLEN BOLT M6 x 30 MM 10 PCS	3 ALLEN BOLT M6 x 70 MM 04 PCS	4 SPRING WASHER M9 14 PCS	5 WASHER M6 14 PCS
				
6 ALLEN KEY (4MM) 01 PC	7 SCREW M4 x 40 MM 04 PCS	8 HEXAGON NUTS M8 02 PCS	9 WASHER M8 02 PCS	10 HEXAGON NUTS M8 01 PC
				
11 SCREW M4 x 25 MM 01 PC	<div style="text-align: center;"> TOOL REQUIRED PHILLS HEAD SCREW DRIVER NOT PROVIDED </div>			
				




STEP 1:

Attach frame (B) to back frame (A) by bolts (2), (3), spring washers (4) and washers (5).

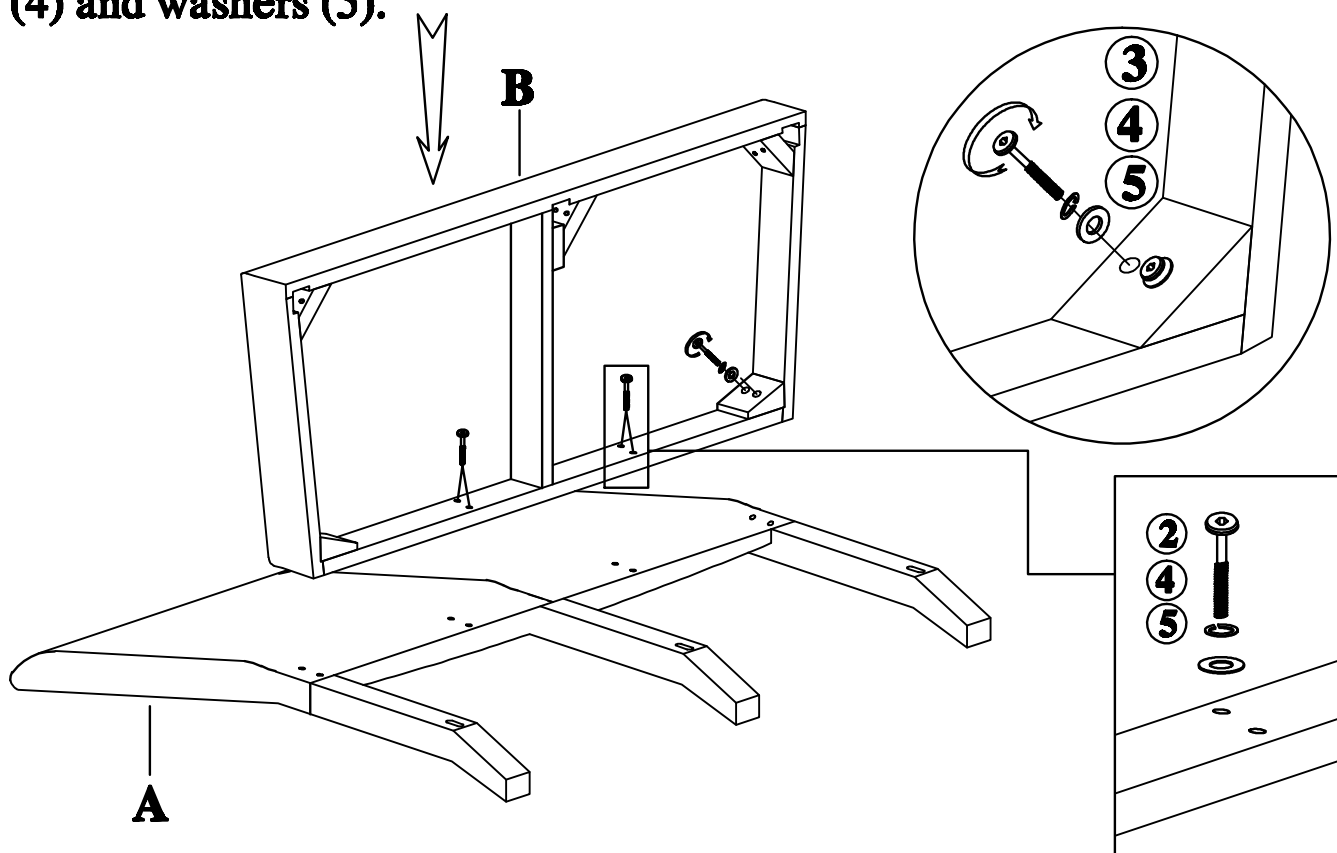

STEP 2:

Insert thread bolt (1) to long stretcher (C)

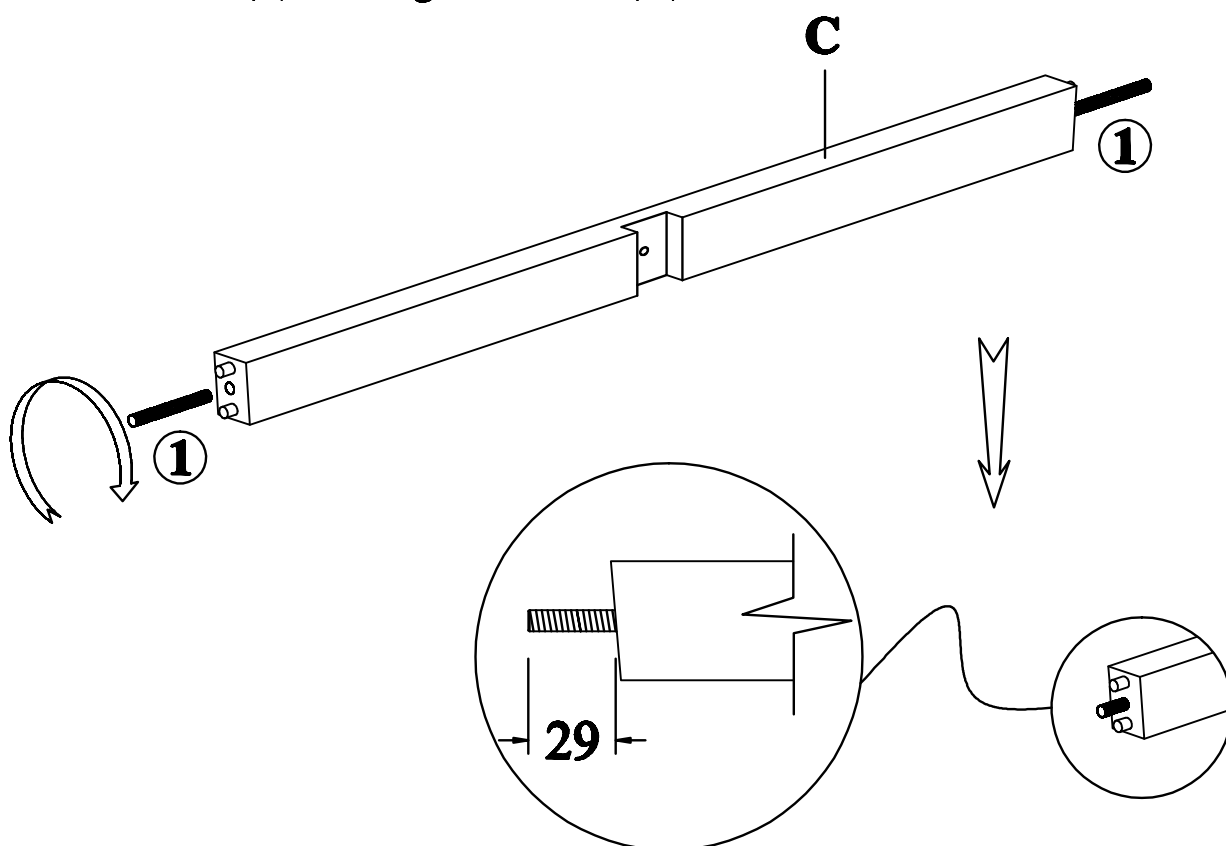


Attach stretcher (G), (H), (I) to long stretcher (C) by hexagon nuts (8), washer (9) and screw (11).



Diagram 7 illustrates the step of attaching the backrest to the chair frame. The backrest is shown being lowered into place, guided by two large downward-pointing arrows. The backrest is a long, rectangular piece with a central cutout. It is being positioned behind the seat and the front legs. The front legs are labeled with a circled '7', indicating they are part of the assembly shown in this step. The backrest is being attached to the rear legs, which are also labeled with a circled '7'. The backrest has a small rectangular piece attached to its top edge, which is being aligned with a slot in the rear legs.

STEP 5:

Insert 3 legs (D,E,F) to the unit. They are fixed by bolt (2) washer (4) and spring washer (5)

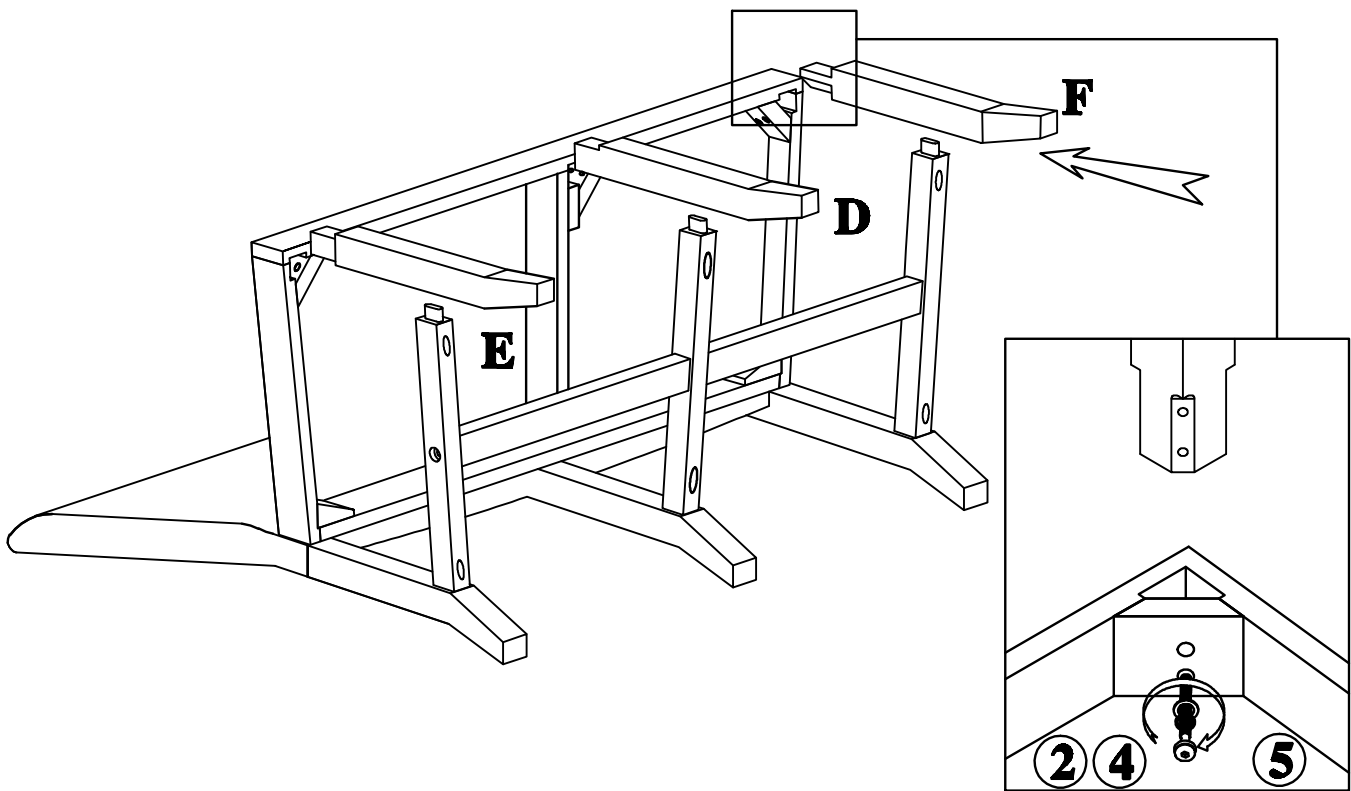

STEP 6:

**Fix stretcher (G,H,I) again by screw (7).
Assembly complete**

