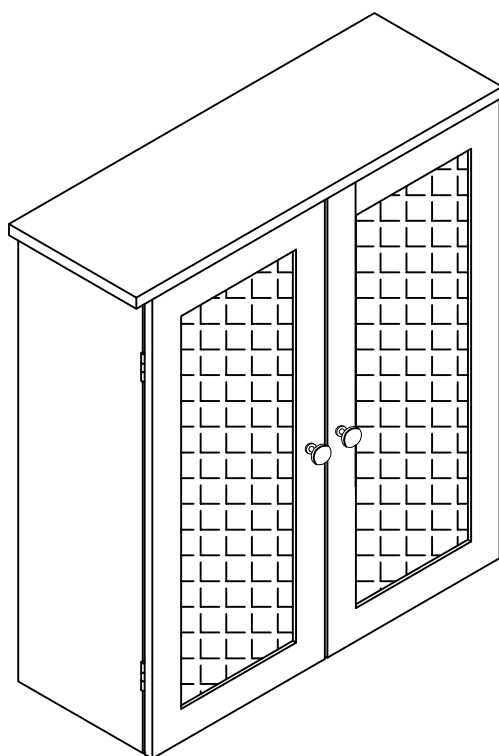


ASSEMBLY INSTRUCTIONS



NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.

To insert a cam lock: (Please read below instructions before assembling)


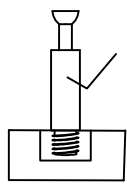


Diagram A

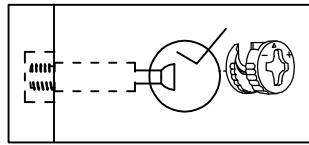

1. Insert cam screw into hole as shown in diagram A .


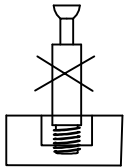


Diagram B

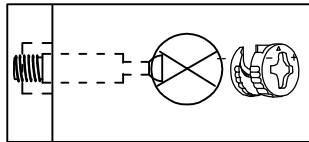

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



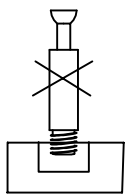



Diagram C

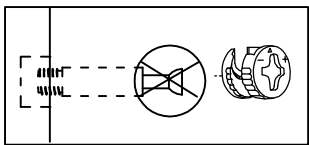

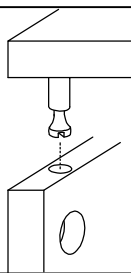Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



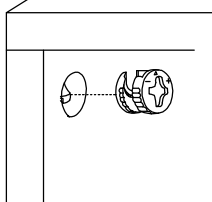
2. Connect the panels together.



ARROW SIGN



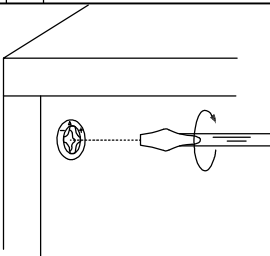3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.












4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**




Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

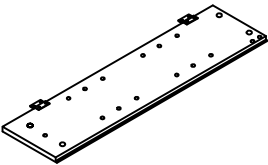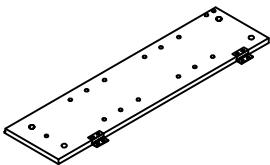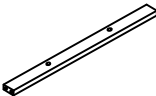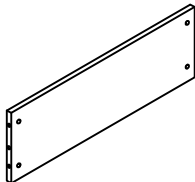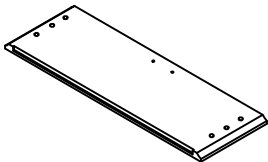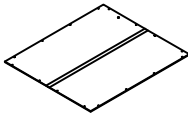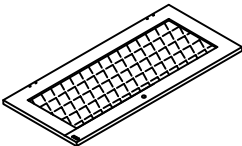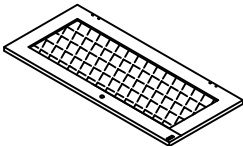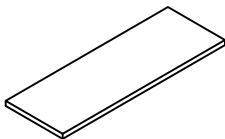Part List

A1 Quantity of 1  Left Side Panel	A2 Quantity of 1  Right Side Panel	A3 Quantity of 1  Back Rail	A4 Quantity of 1  Bottom Panel
A5 Quantity of 1  Top Panel	A6 Quantity of 1  Back Panel	A7 Quantity of 1  Left Door	A8 Quantity of 1  Right Door
A9 Quantity of 2  Adjustable Shelf			

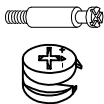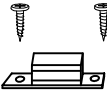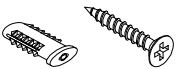
Hardware List

B1 Quantity of 8  Cambolt & Camlock	B2 Quantity of 1  Magnet with screw	B3 Quantity of 8  Wood Dowel	B4 Quantity of 16  Screw	B5 Quantity of 8  Screw
B6 Quantity of 8  Shelf Support	B7 Quantity of 2  Knob with bolt	B8 Quantity of 2  Anchor with Screw		

Step 1

B1 :  8pcs

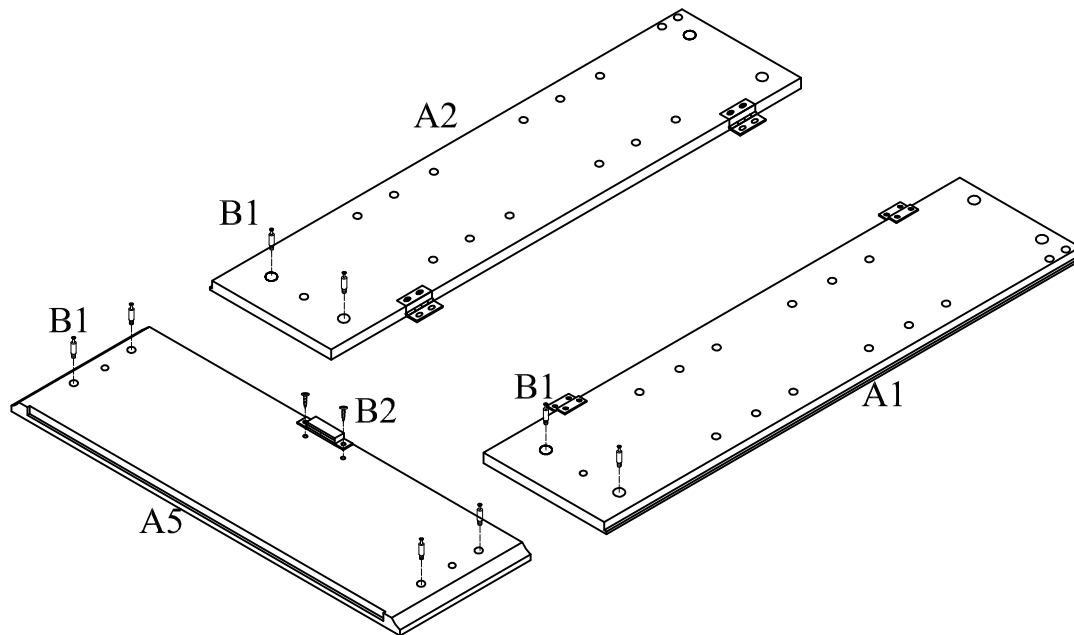B2 :  1set




- 1). Attach and tighten Cambolts B1 to Side Panels A1 & A2 and Top Panel A5 as shown above.
- 2). Attach Magnet B2 to Top Panel A5 using included screws. (Holes are pre-drilled.)

Step 2

B1 :  2pcs

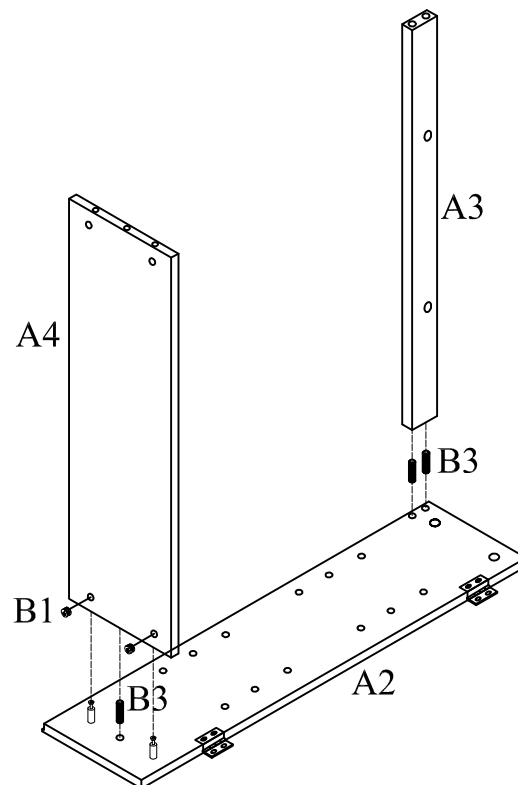
B3 :  3pcs



Assemble Bottom Panel A4 and Back Rail A3 to Right Side Panel A2 using Camlocks B1 and Wood Dowels B3 as shown above.

Step 3


B1 :		2pcs
B3 :		3pcs

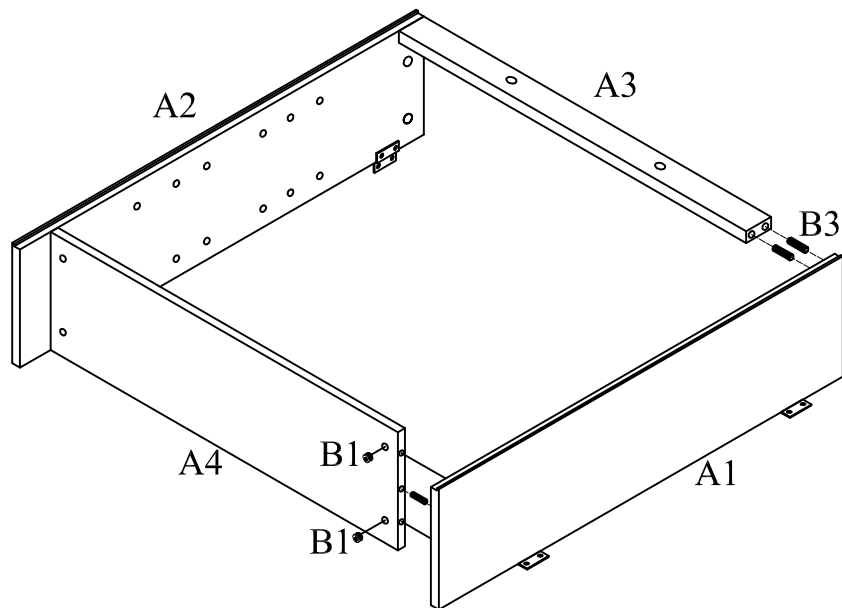

Assemble Left Side Panel A1 to Bottom Panel A4 and Back Rail A3 using Camlocks B1 and Wood Dowels B3 as shown above.

Step 4


B1 :		4pcs
B3 :		2pcs

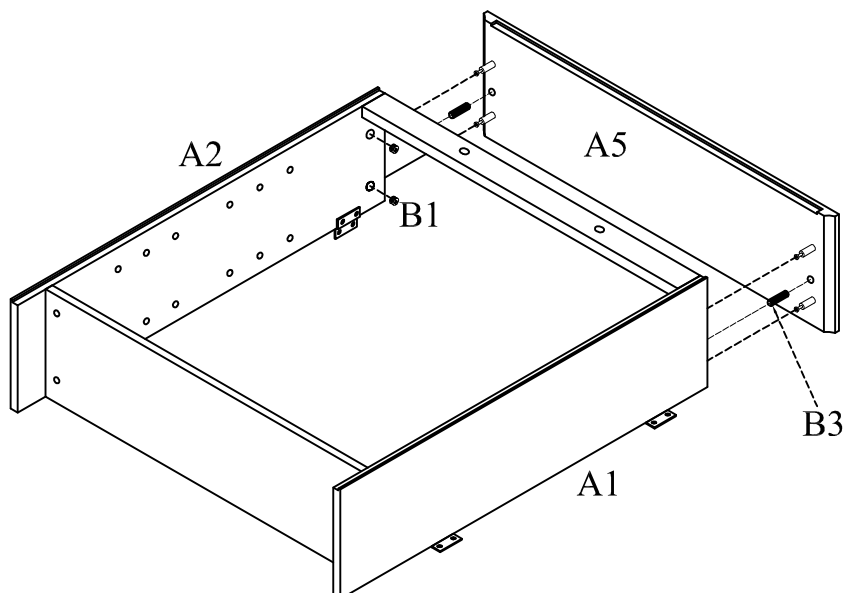

Assemble Top Panel A5 to Side Panels A1&A2 using Camlocks B1 and Wood Dowels B3 as shown above.

Step 5

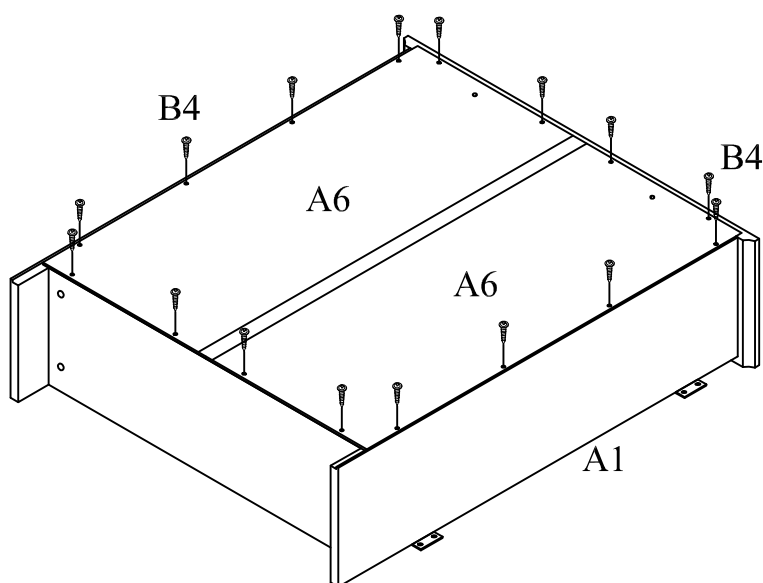B4 :  16pcs




Assemble Back Panel A6 to Side Panels A1&A2, Top Panel A5 and Bottom Panel A4 using Screws B4 as shown above. (Holes are pre-drilled.)

Step 6

B5 :  8pcs

B6 :  8pcs

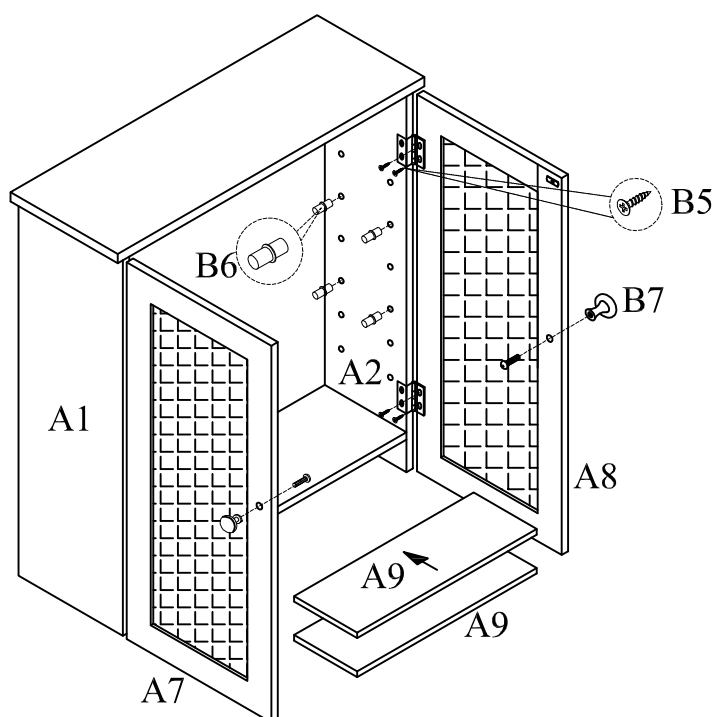
B7 :  2sets



- 1). Assemble Doors A7&A8 to Side Panels A1&A2 using Screws B5.
- 2). Attach Knobs B7 to Doors A7&A8 using included bolts.
- 3). Insert Shelf Supports B6 into holes on Side Panels A1&A2. Then put Adjustable Shelves A9 onto Shelf Supports B6.







Step 7

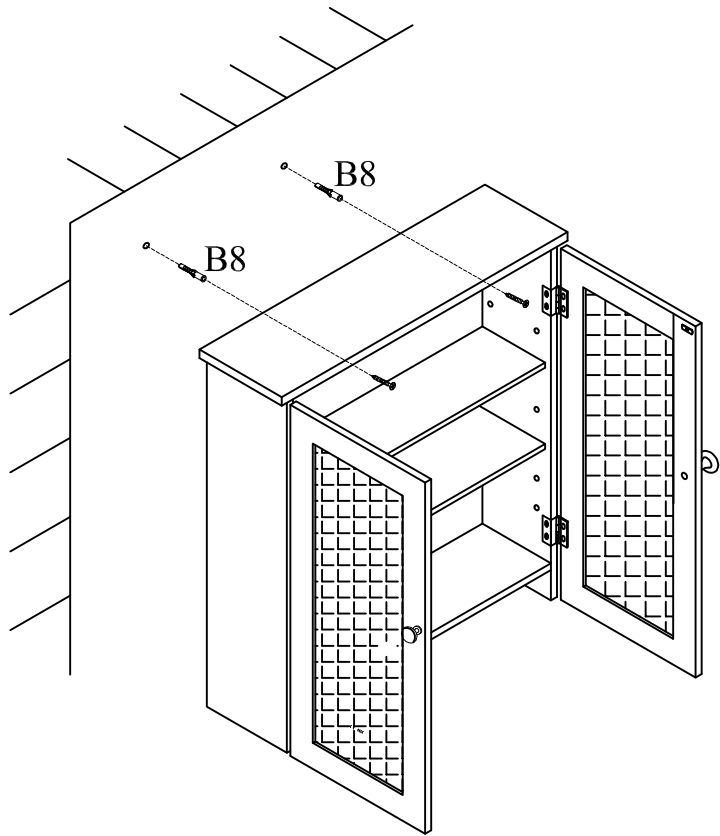B8 :  2 sets



For your safety, please Screw the cabinet to the wall using Anchor with screws B8.

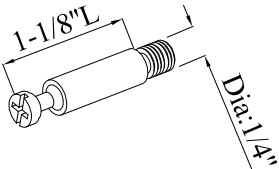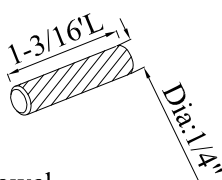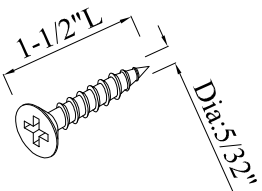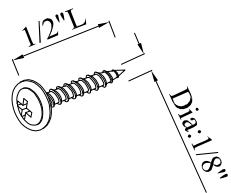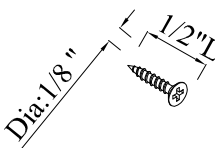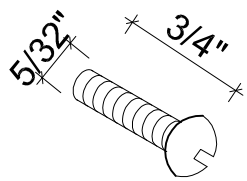APPENDIX: Dimension of Hardwares in this AI.

B1.  Cambolt & Camlock	B3.  Wood Dowel	B8.  Screw
B4&B2.  Screw	B5.  Screw	B7.  Bolt