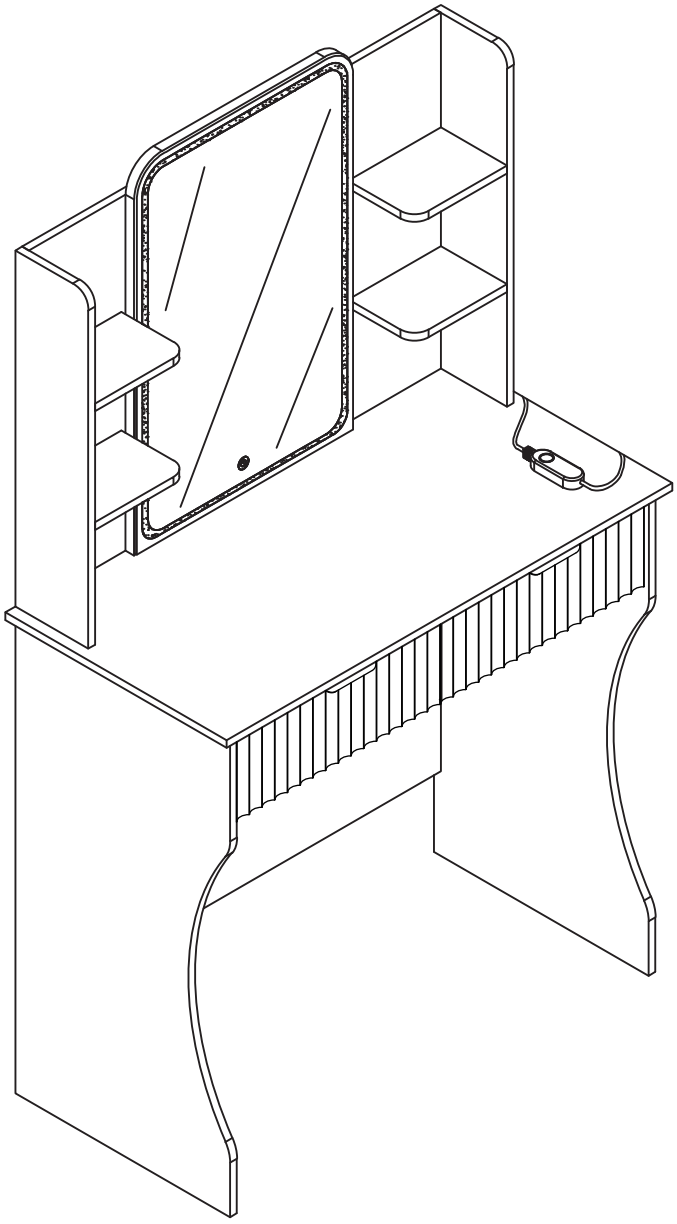
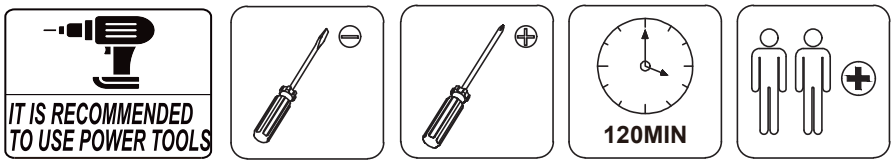
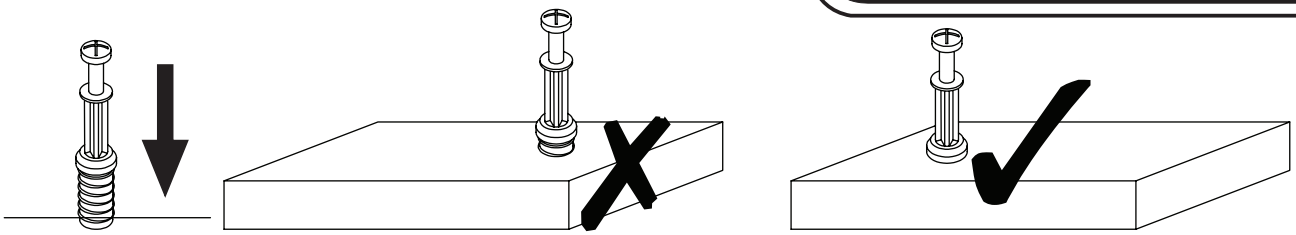
⚠ Please note: Items cannot be returned once assembled

Installation & Assembly

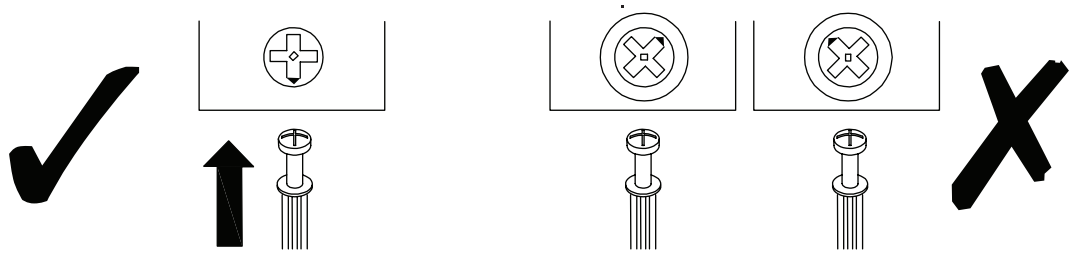




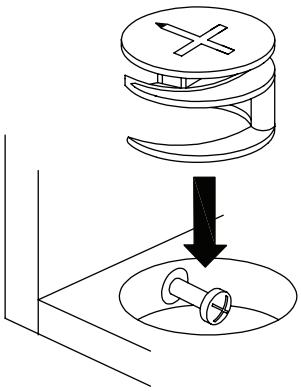
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



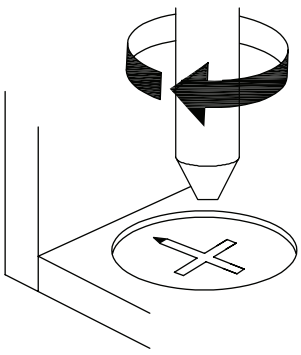
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






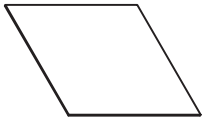



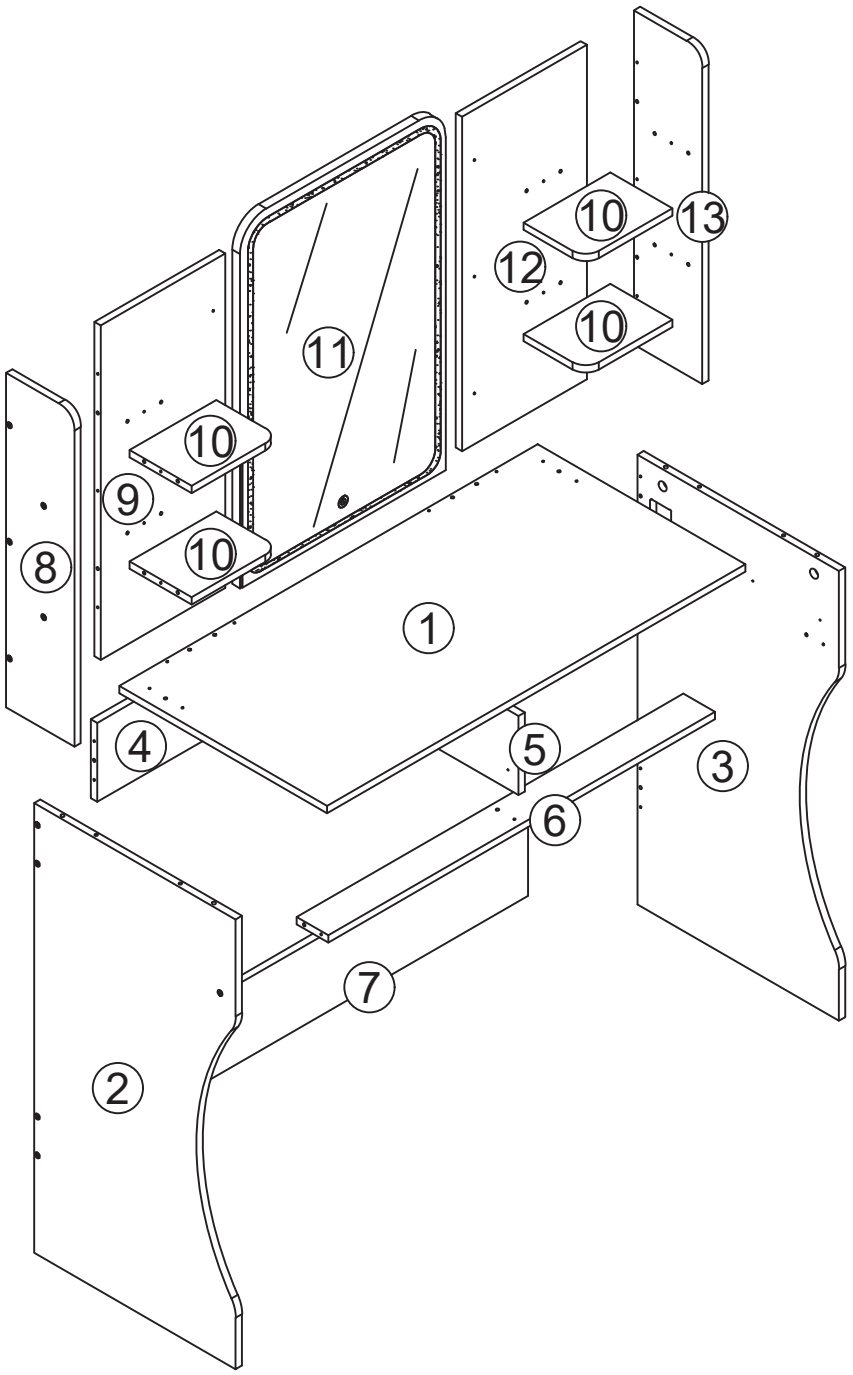
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

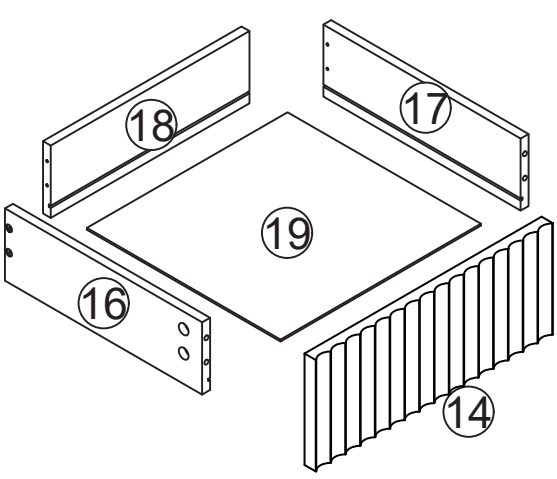


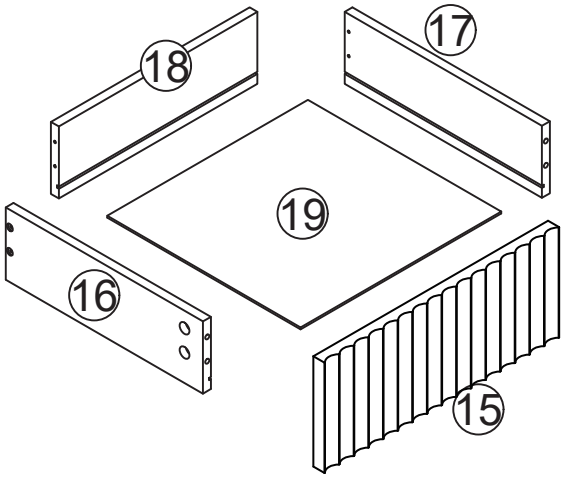
EN_ Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x4	

NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x2	
	 Hardware Kit	x1	

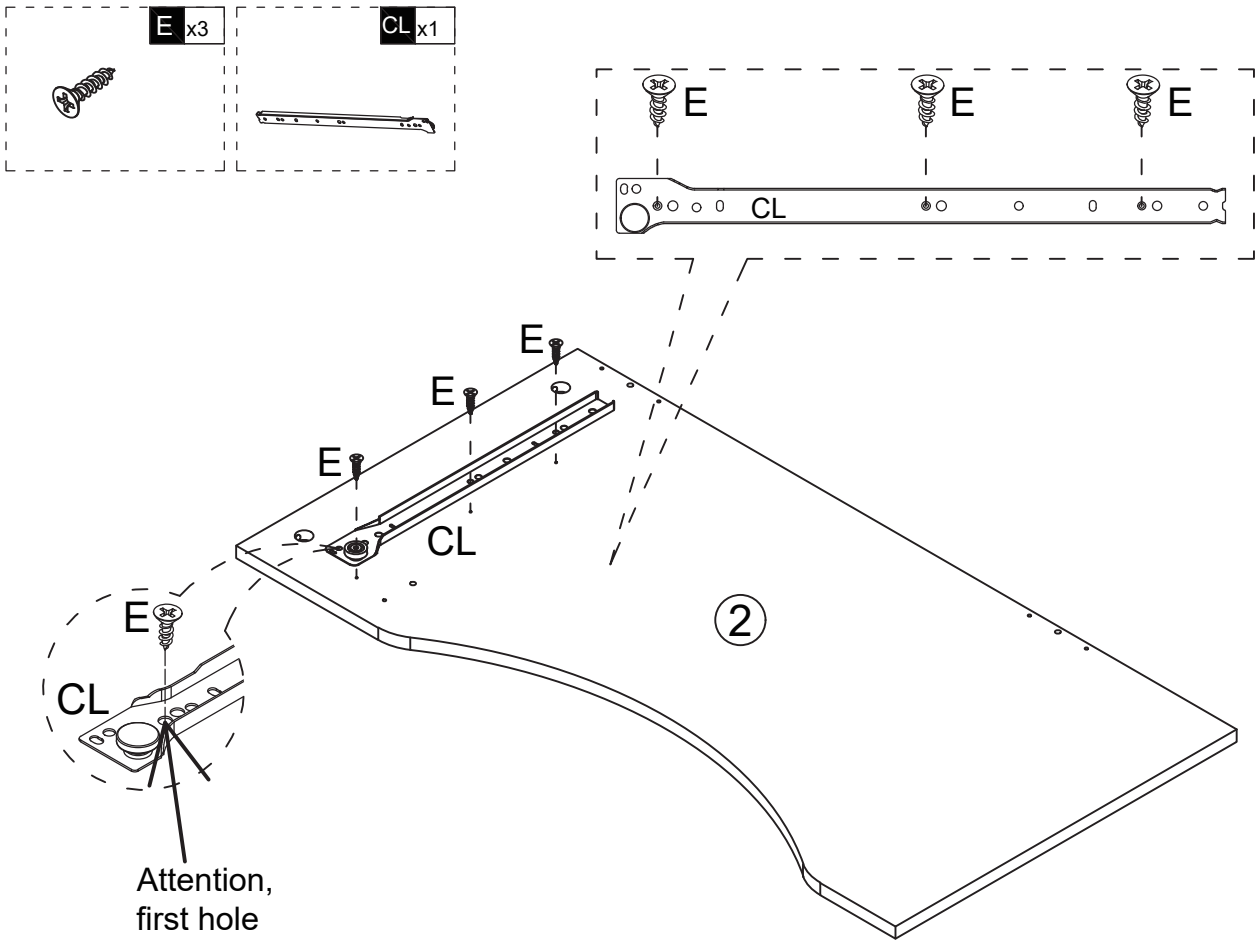

10
13
12
10
11
10
9
10
8
1
4
5
3
6
7
2

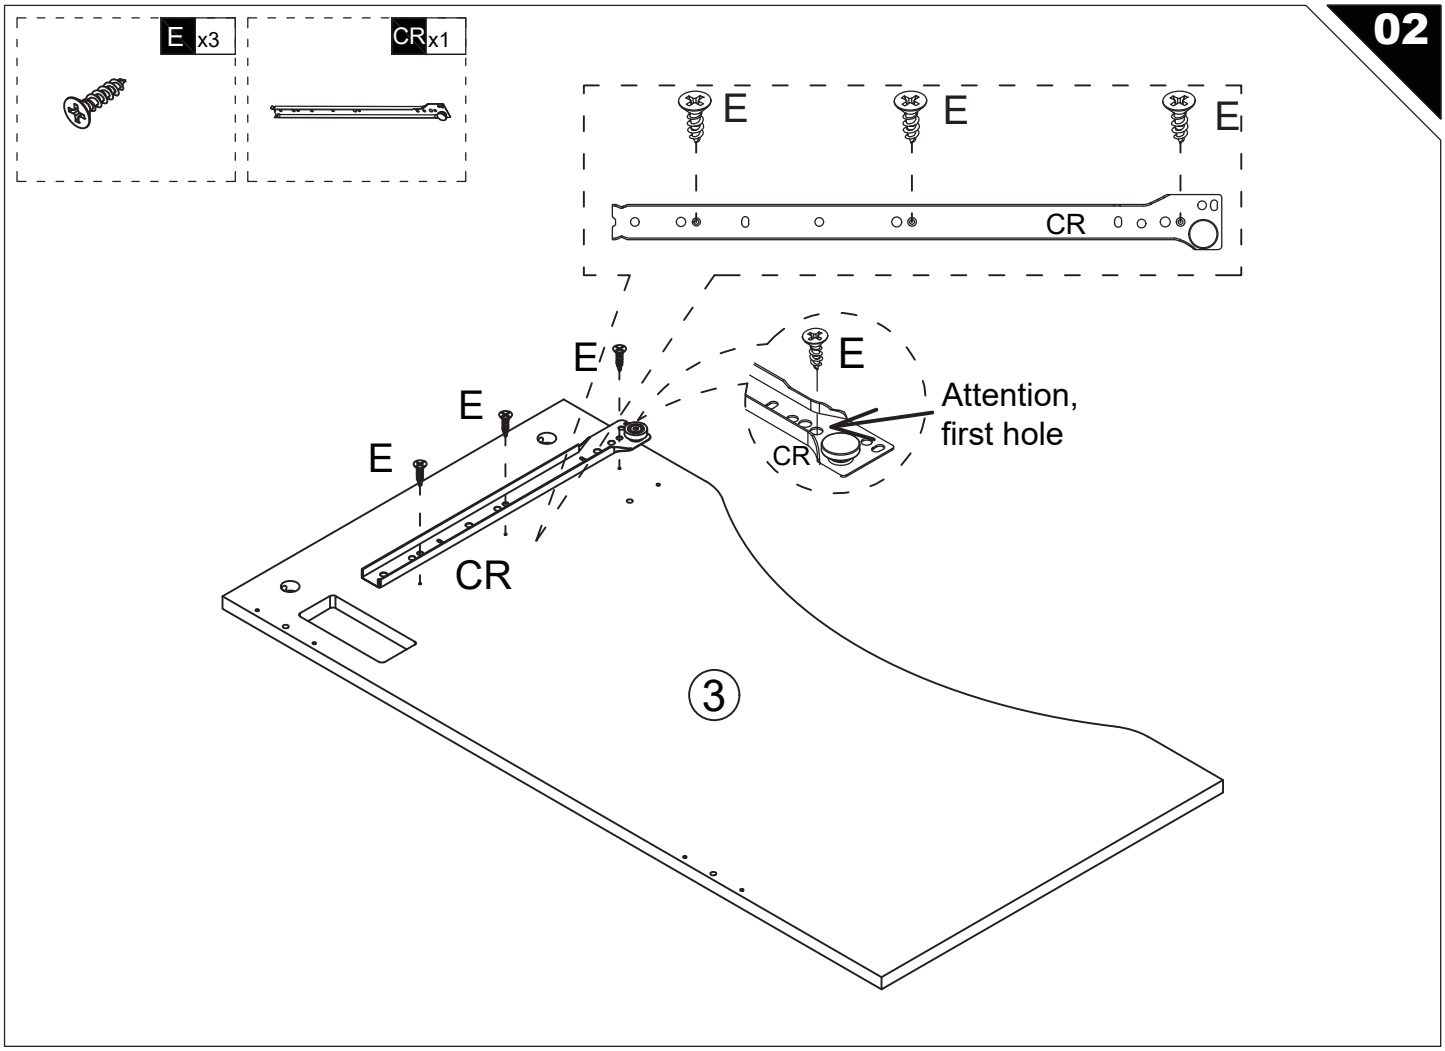

18
17
19
16
14

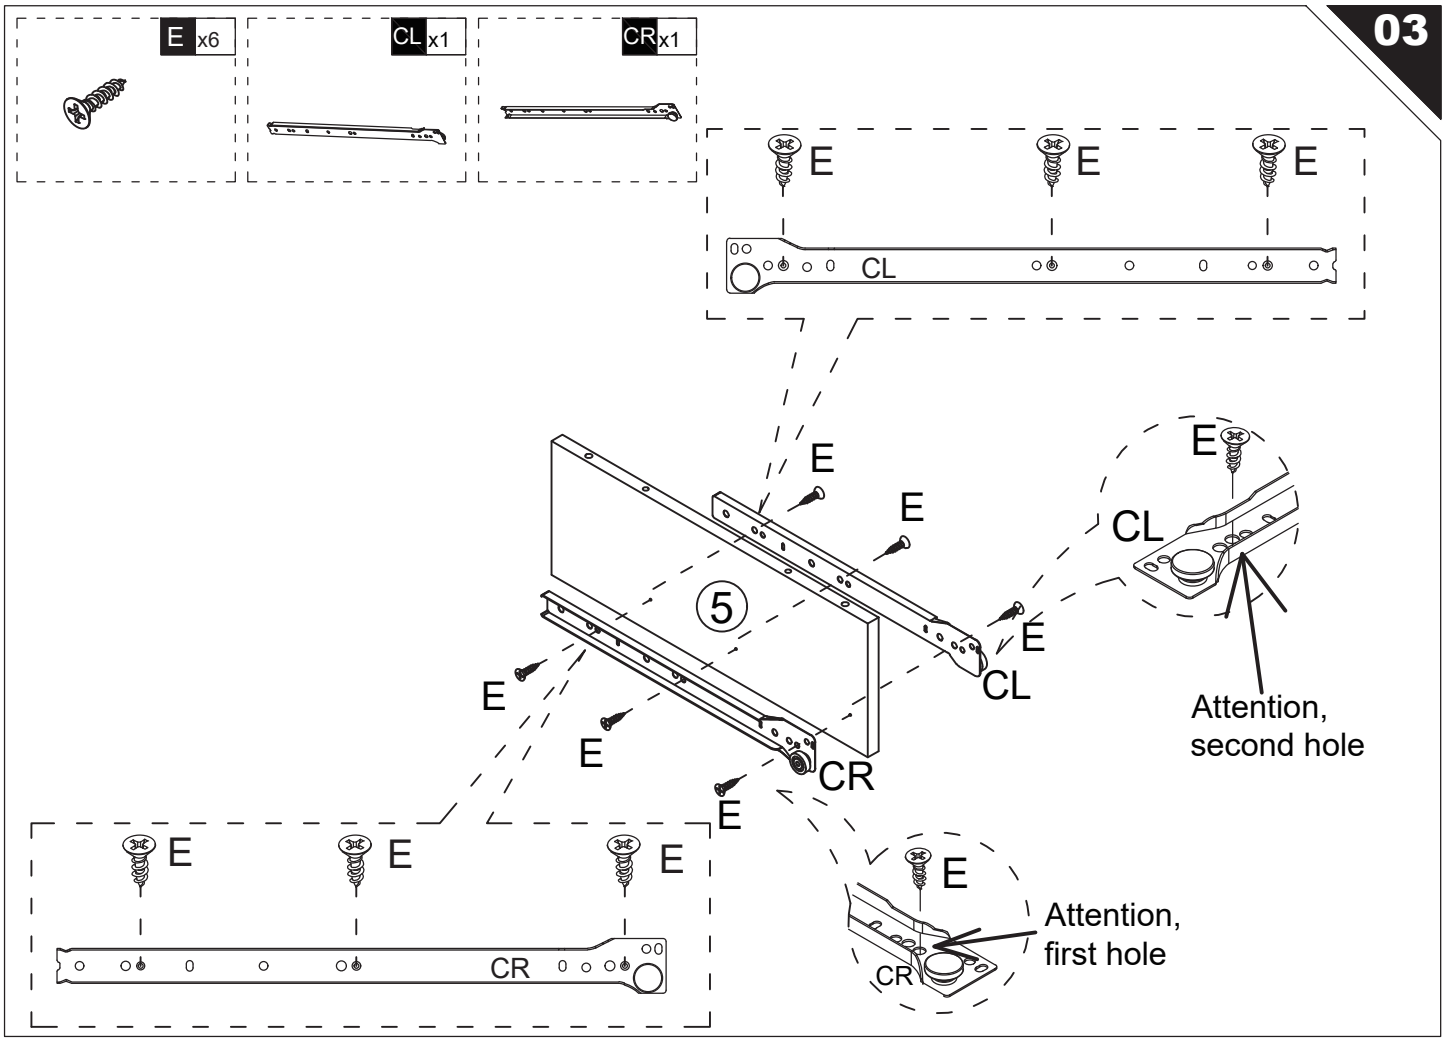

18
17
19
16
15

A x16 Ø6x35mm +1(spare)	B x16 Ø15x10mm +1(spare)	C x43 Ø6x30mm +2(spare)	D x44 Ø4x35mm +2(spare)	E x24 Ø3.5x12mm +2(spare)	F x2
G x1	H x2	I x6	J x1	K x2 Ø3.5x12mm	L x1
M x2 Ø6x30mm	N x2 Ø4x14mm	O x2	P x20 +2(spare)	Q x1	R x1
CL x2 L300mm	CR x2 L300mm	DL x2 L300mm	DR x2 L300mm		

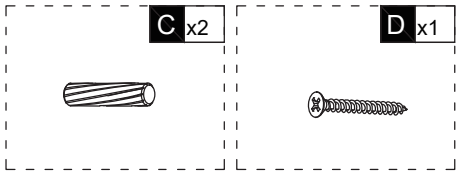
01

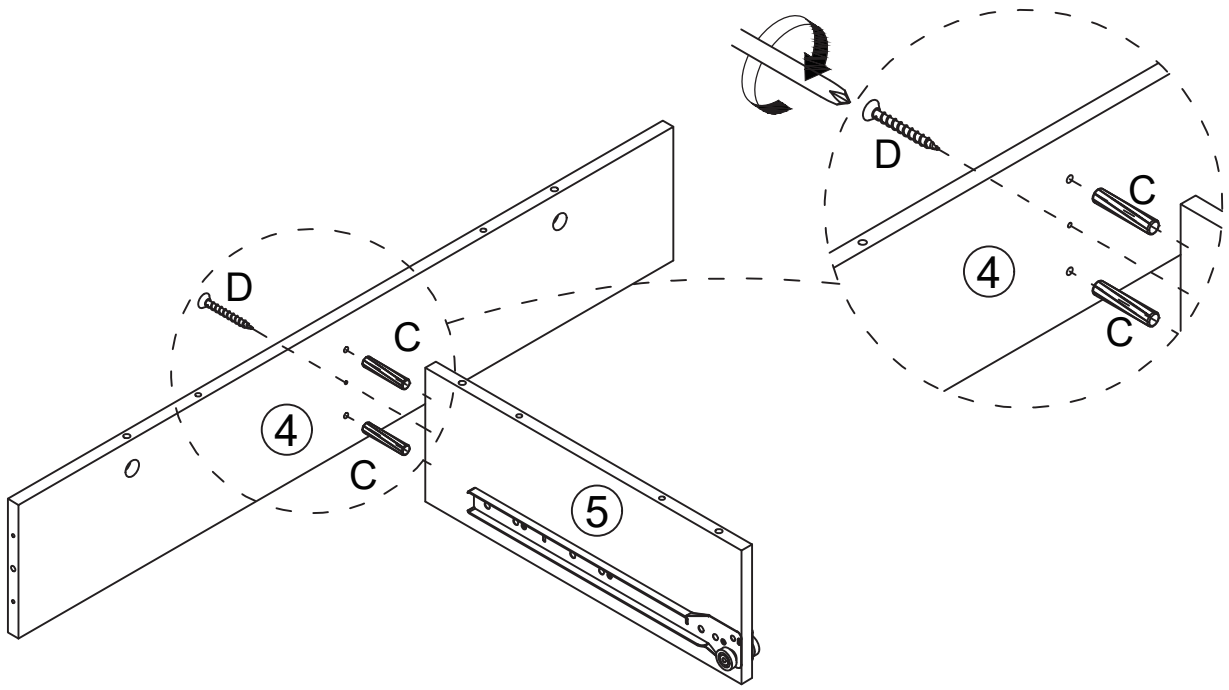



02
E x3
CR x1
E
E
E
CR
E
E
E
E
CR
Attention,
first hole
CR
3

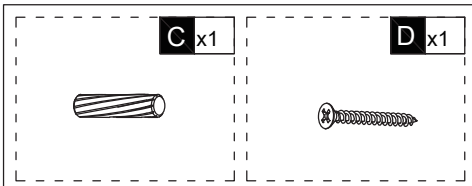

03
E x6
CL x1
CR x1
E
E
E
CL
E
E
5
E
E
CL
E
CL
Attention,
second hole
E
E
CR
E
E
E
E
CR
E
Attention,
first hole
CR

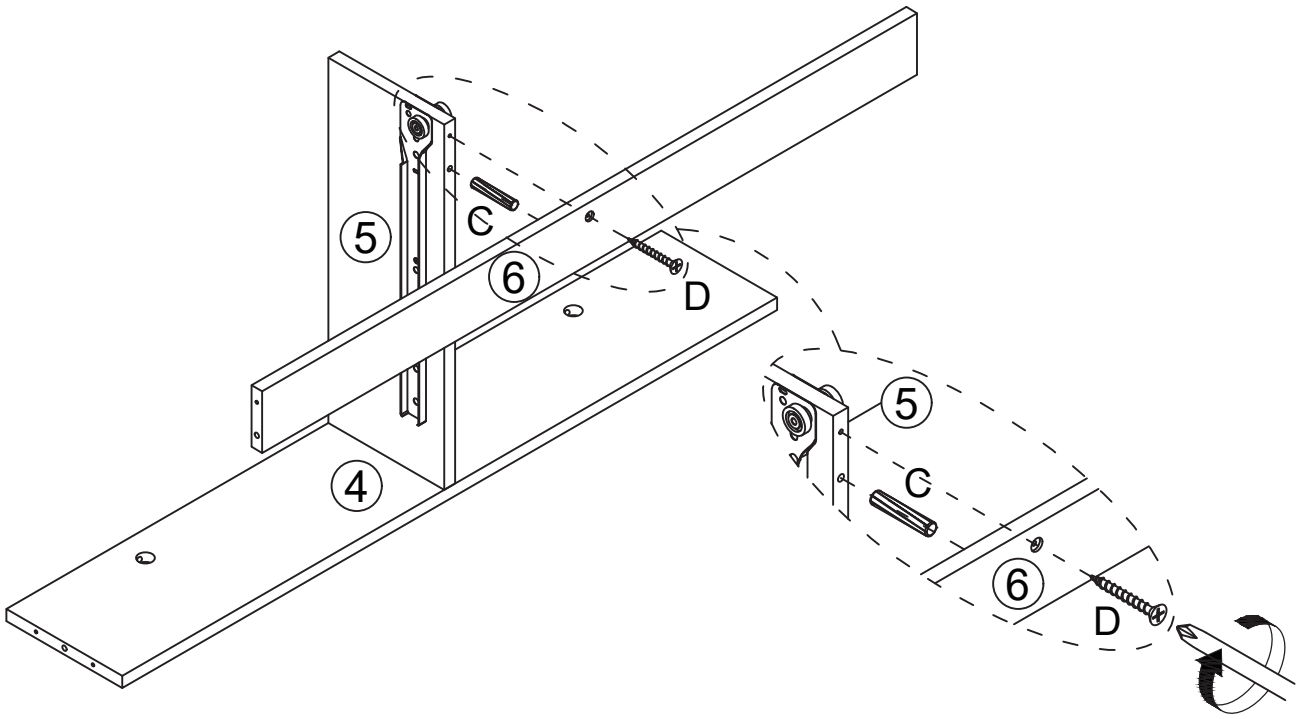
04

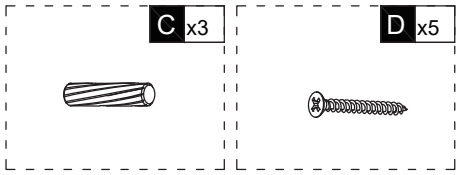


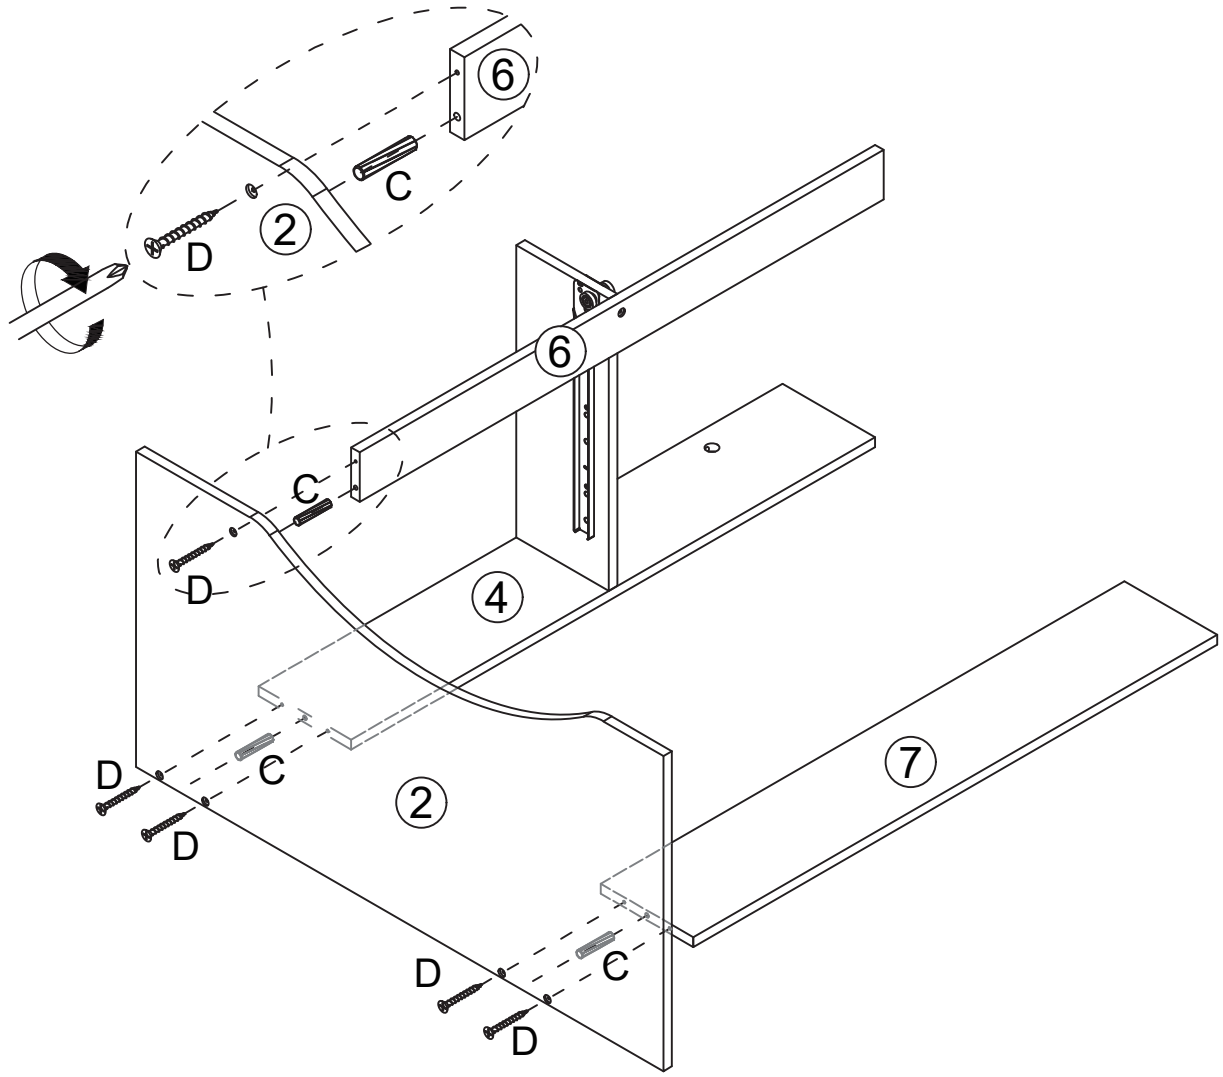


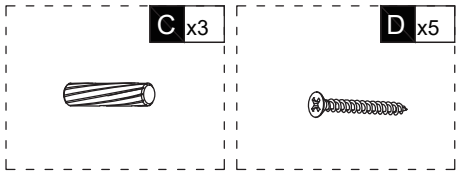
05

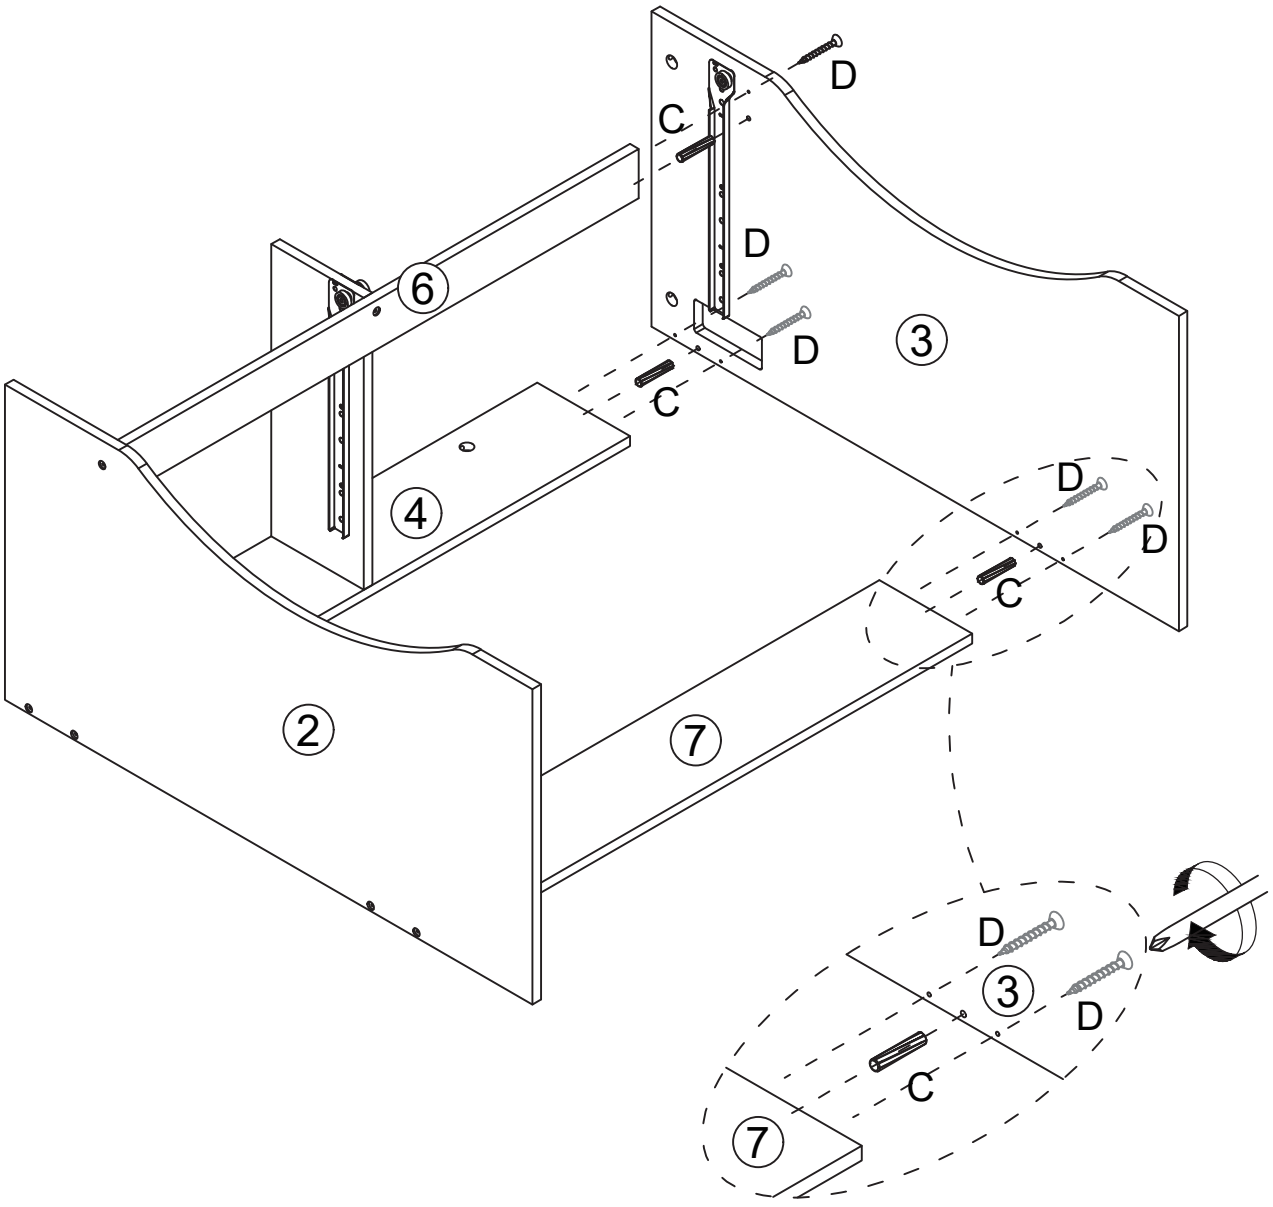


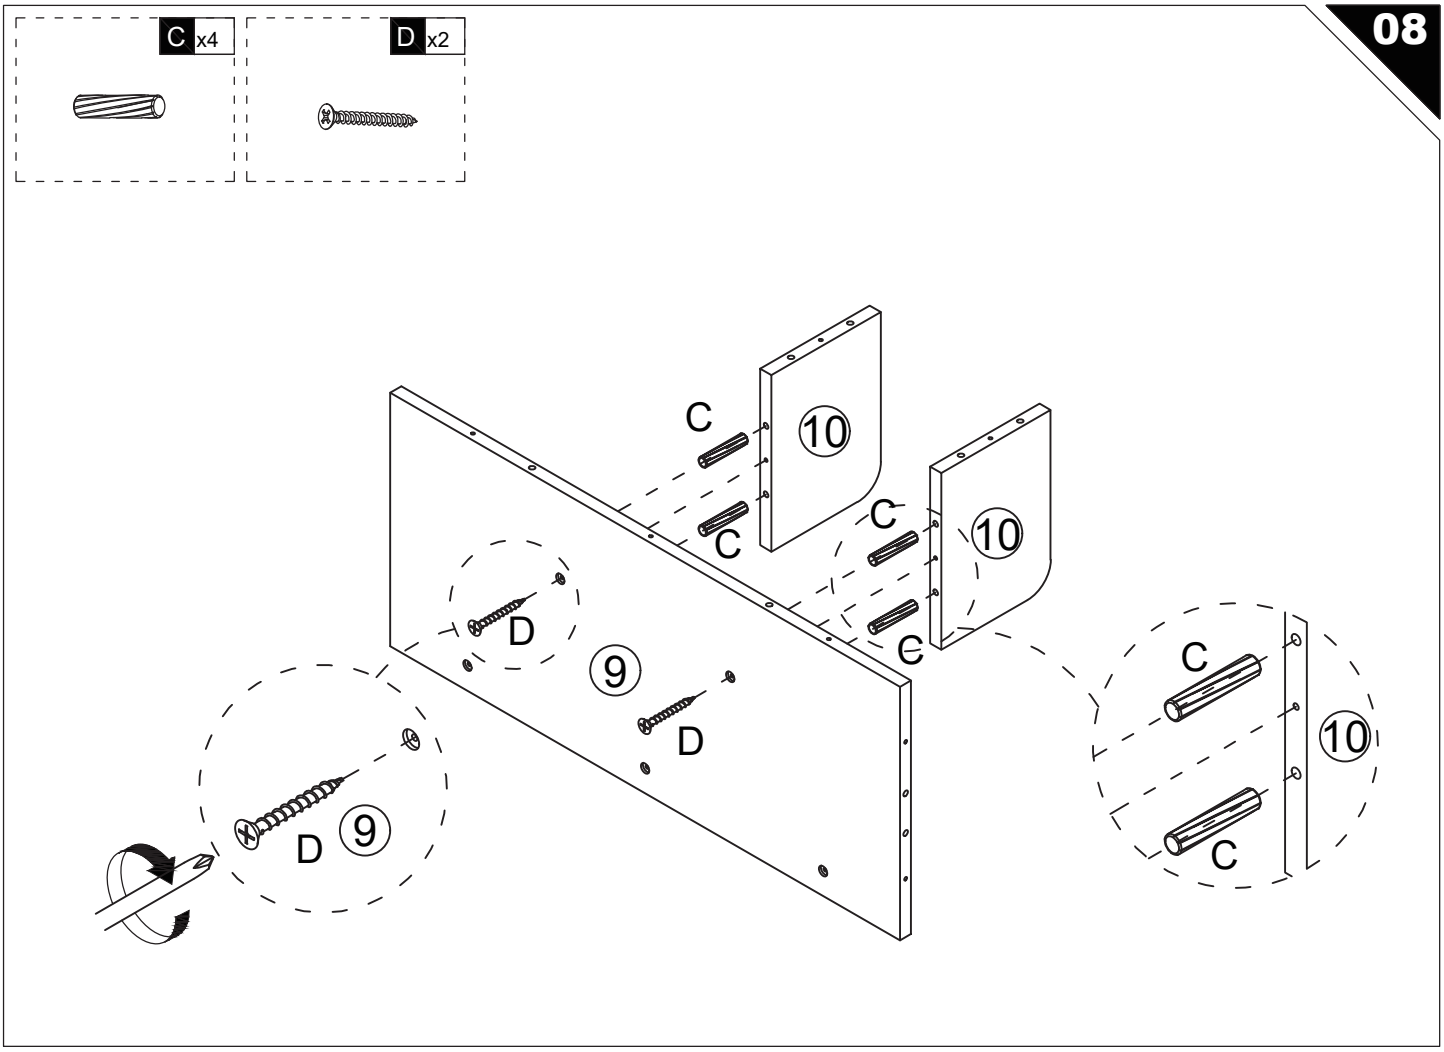


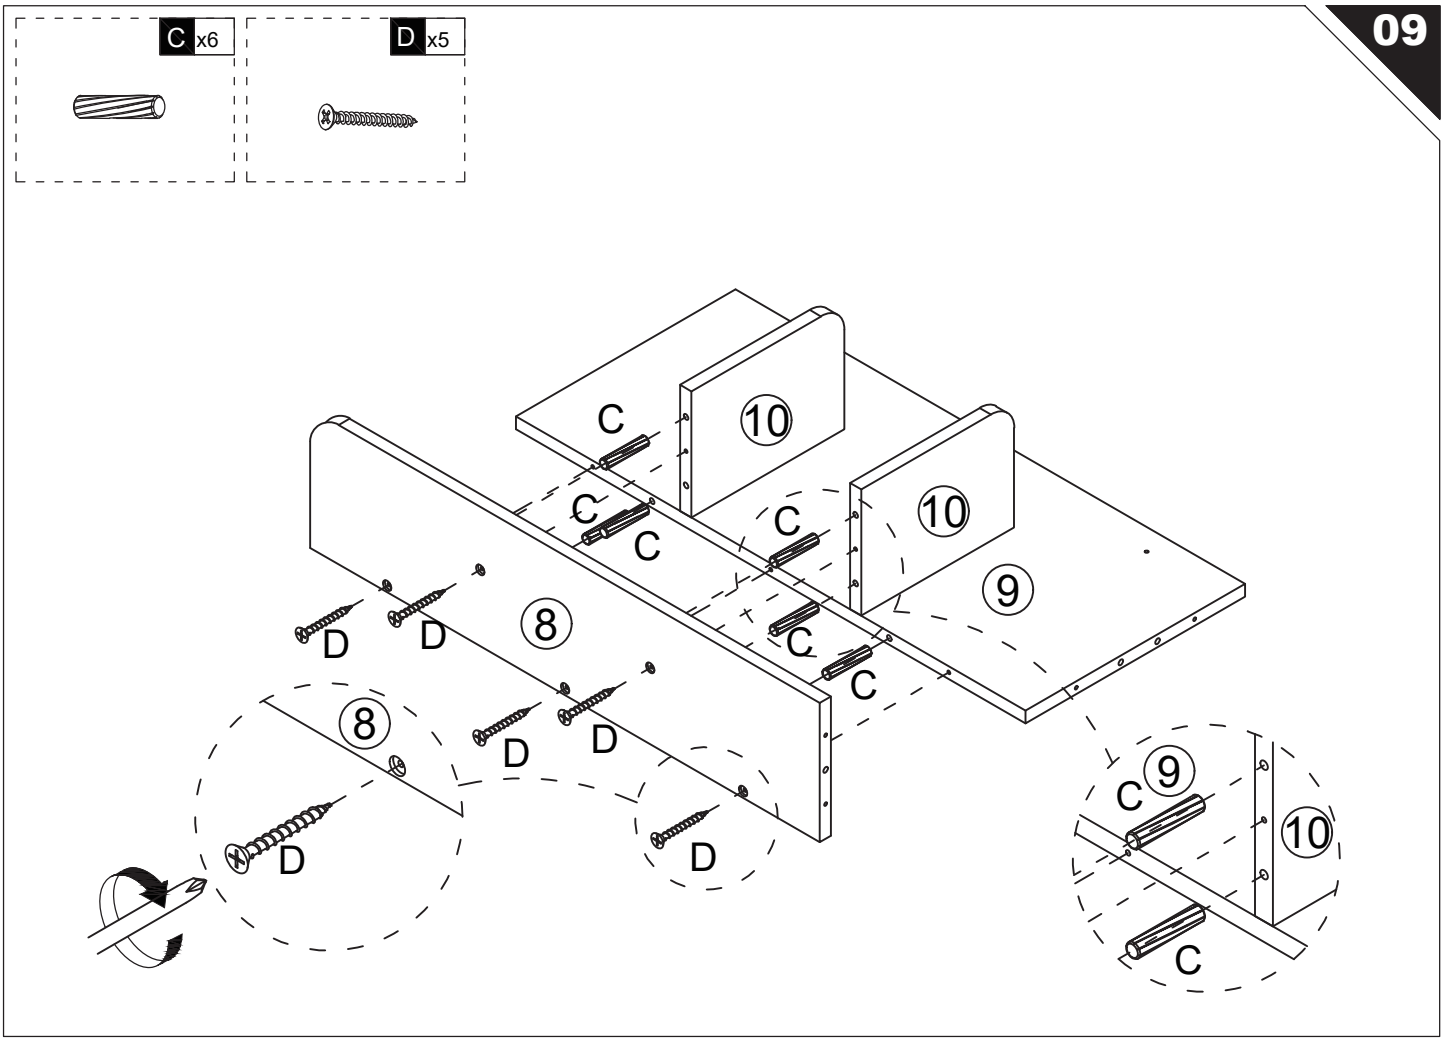

C x3
D x5


6
C
2
D
6
C
D
4
D
C
2
D
7
D
C
D


C x3
D x5


D
C
D
D
6
3
C
4
D
D
C
2
7
D
3
D
C
7

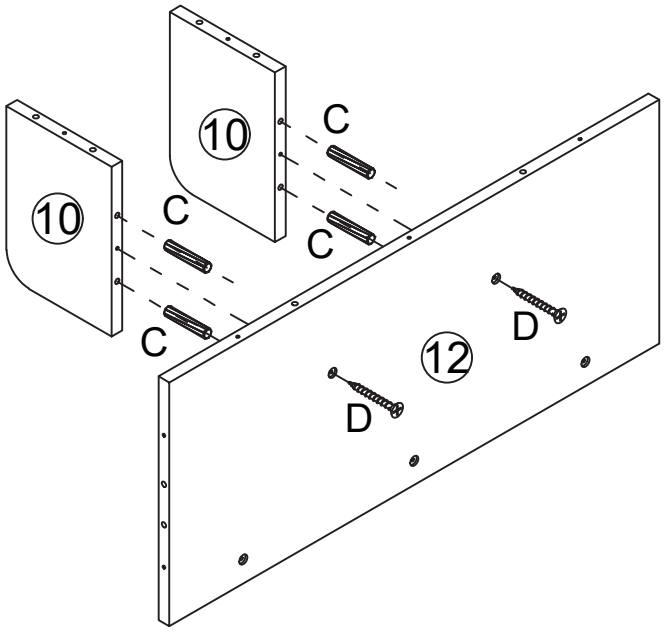

08
C x4
D x2
C
10
C
C
10
C
D
9
D
C
10
C
D
9
C


09
C x6
D x5
C
10
C
C
C
10
9
D
D
8
C
C
8
D
D
D
D
C
9
10
C

10

C x4

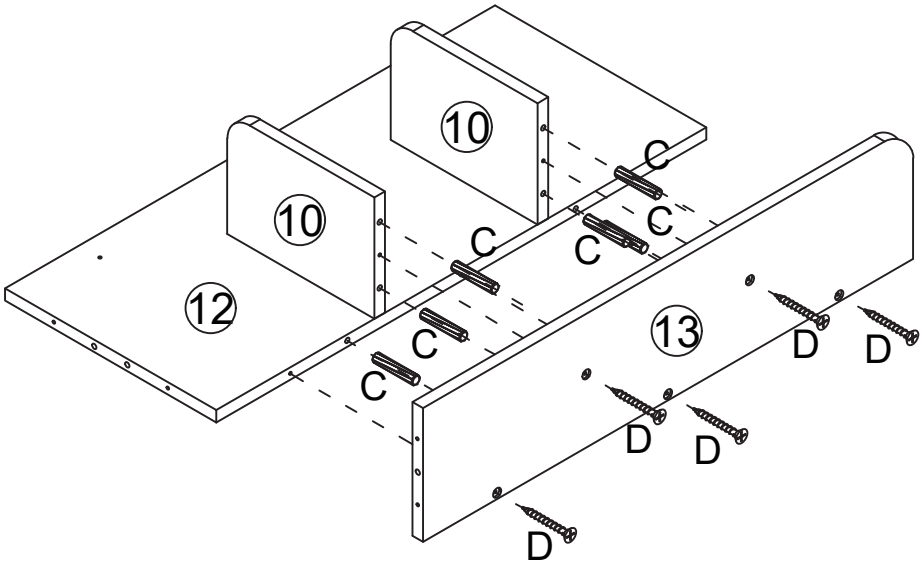
D x2

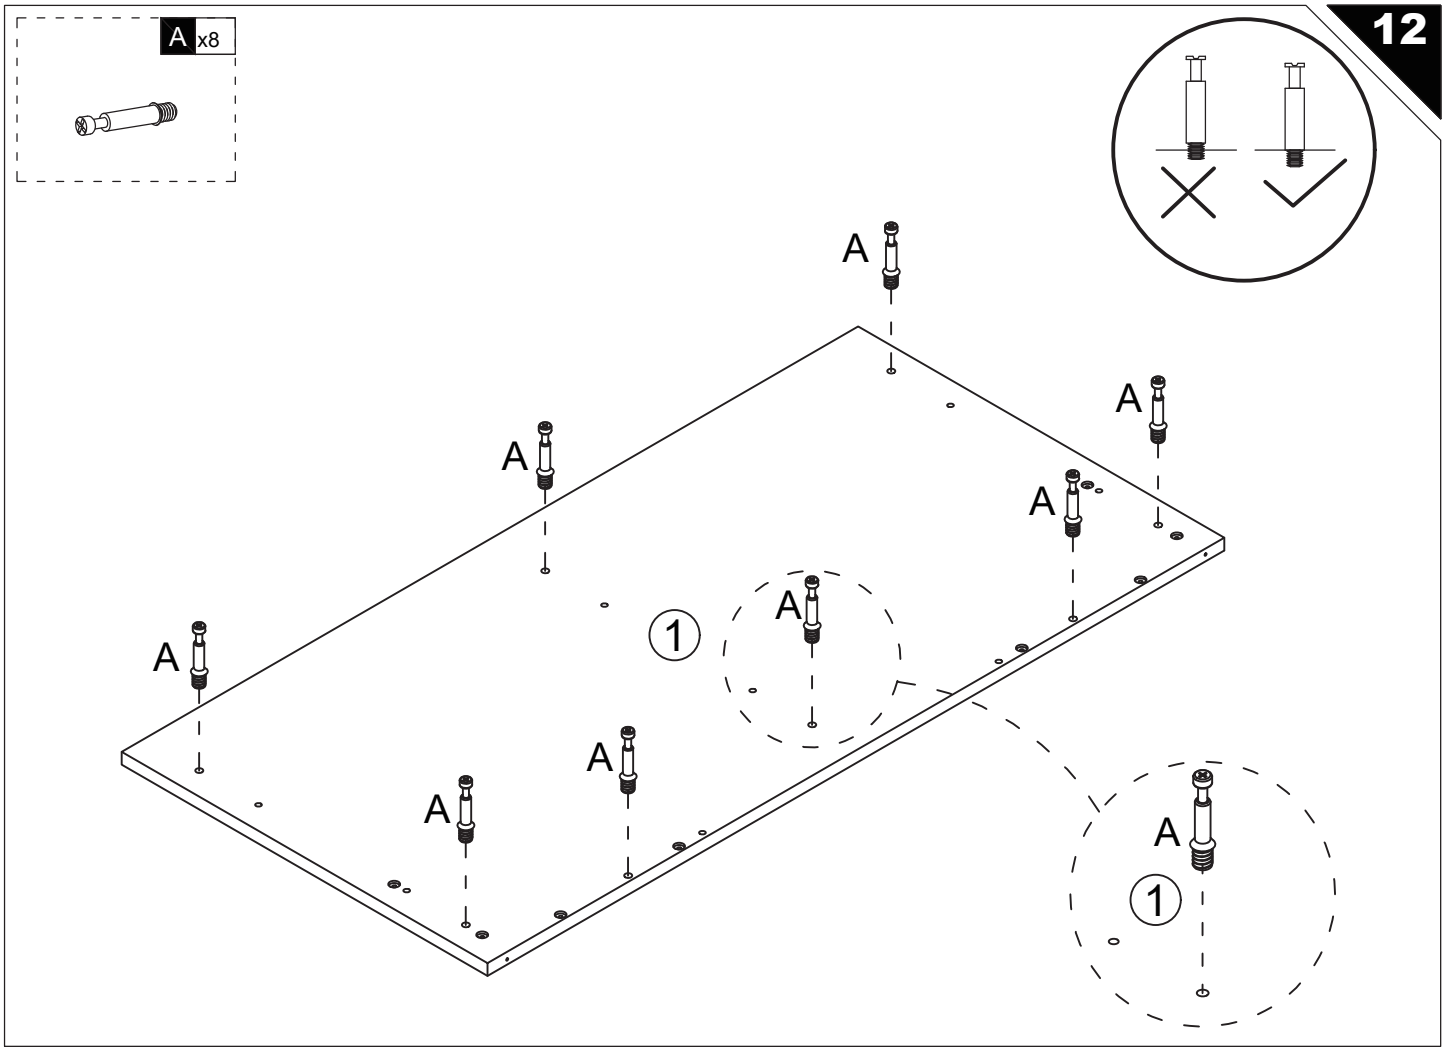


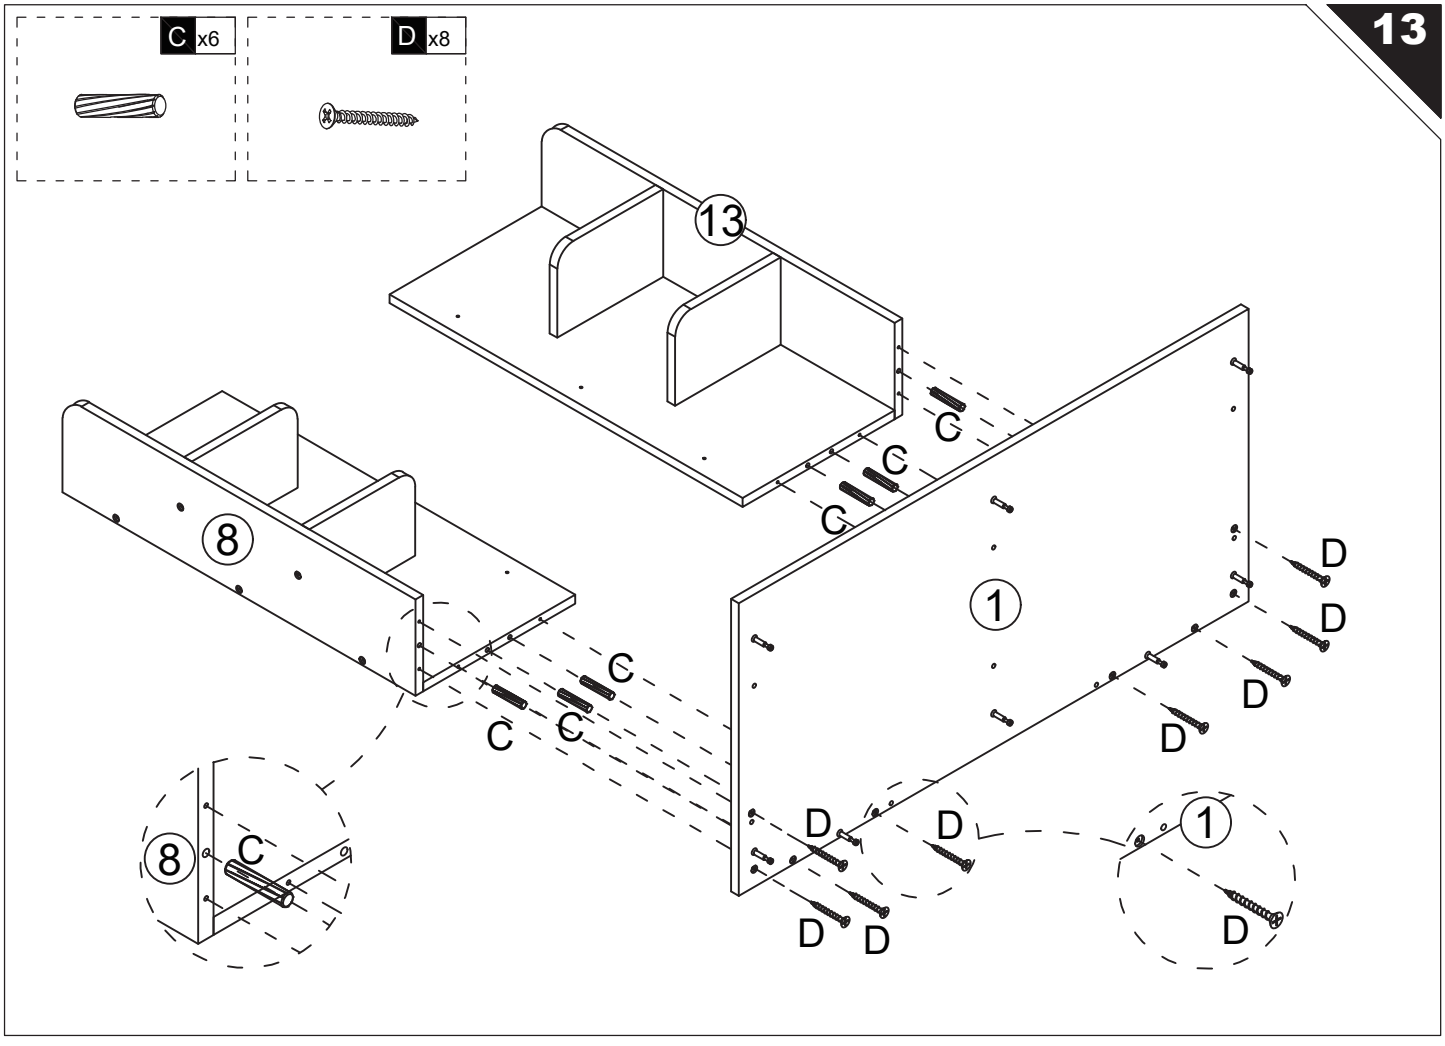
11

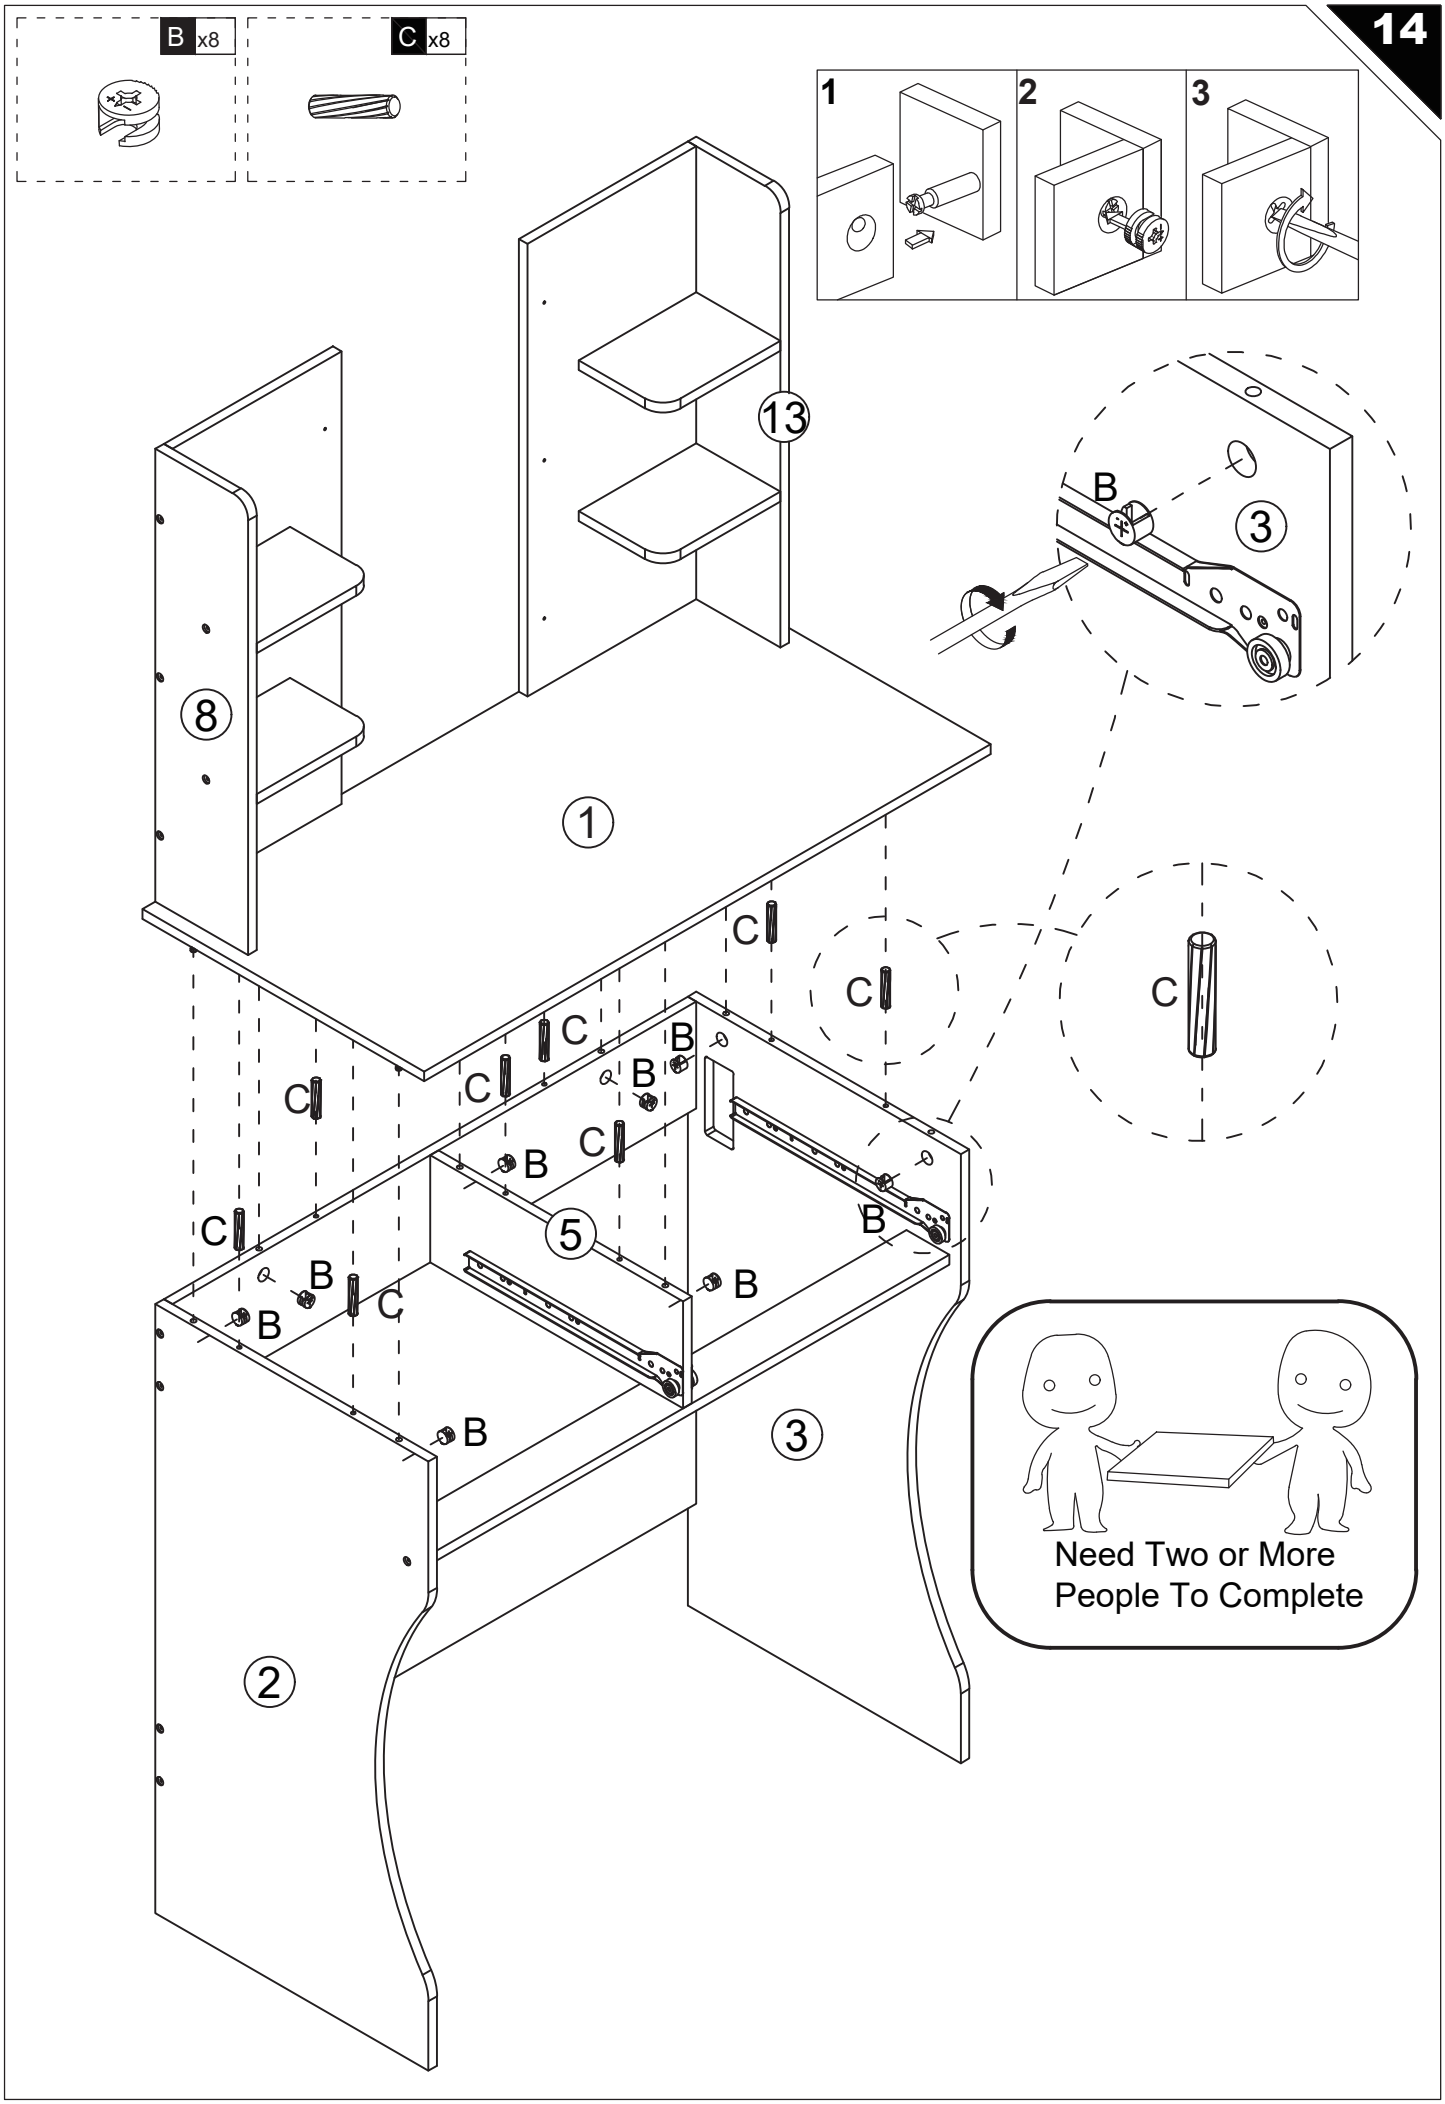
C x6

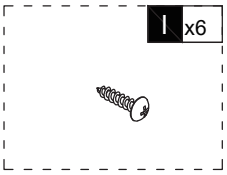
D x5

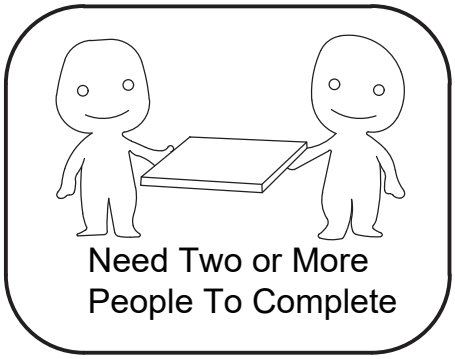


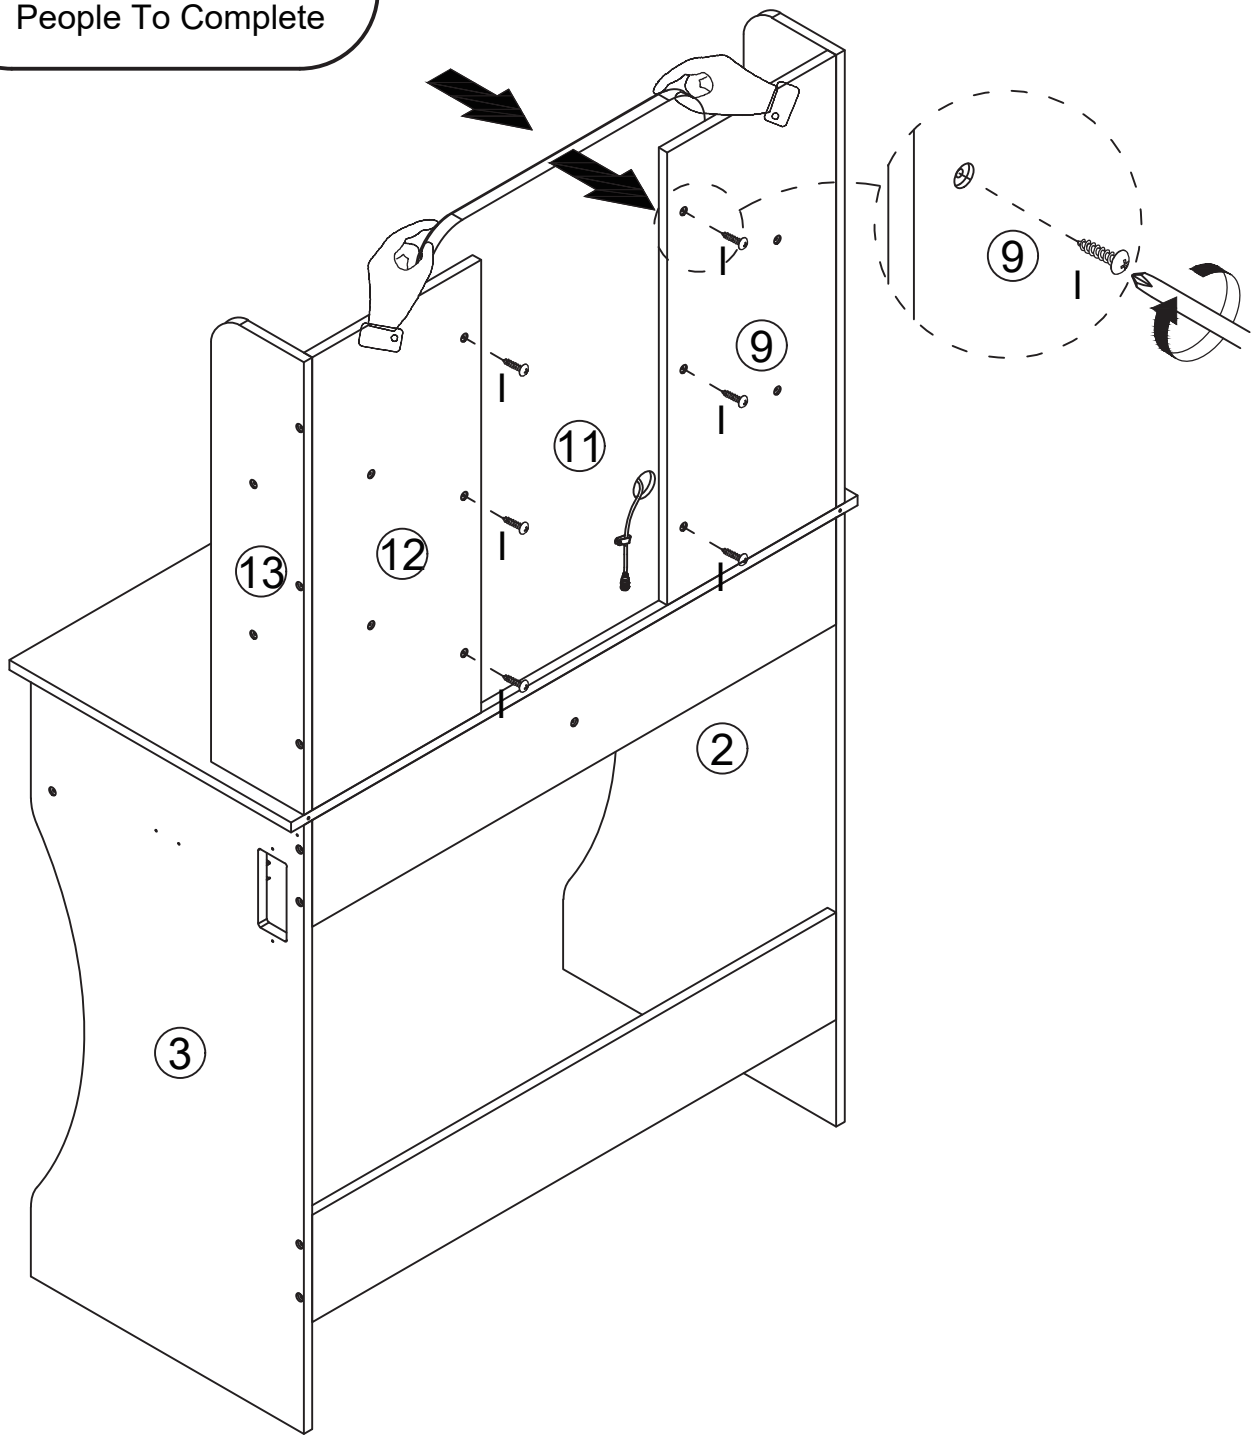

12
A x8
A
A
A
A
A
A
A
1
A
1

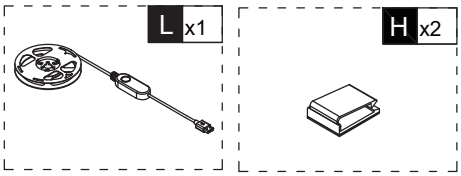

13
C x6
D x8
13
8
C
C
C
C
C
C
1
D
D
D
D
D
D
D
D
8
C
1
1
D


14
B x8
C x8
1
2
3
13
8
1
3
5
2
B
C
Need Two or More
People To Complete

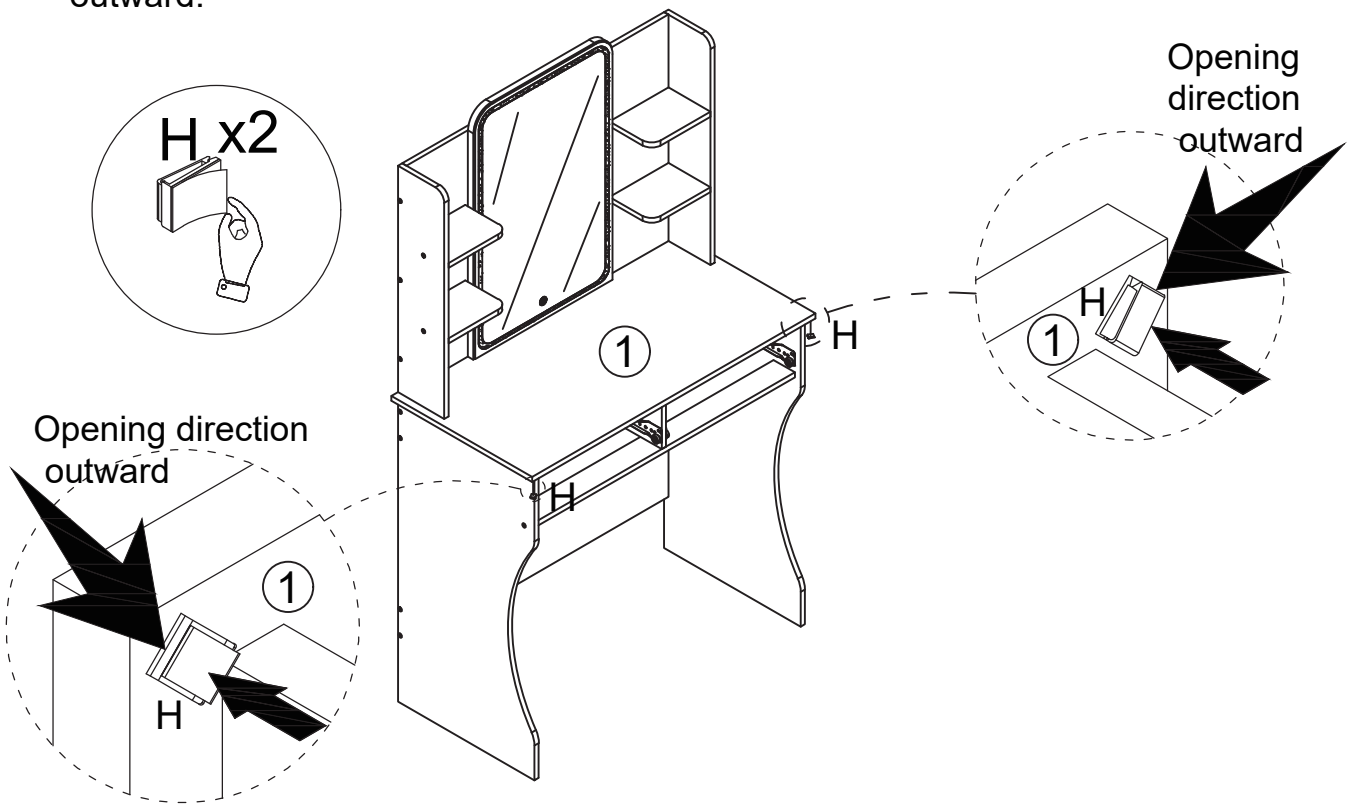

I x6


Need Two or More
People To Complete

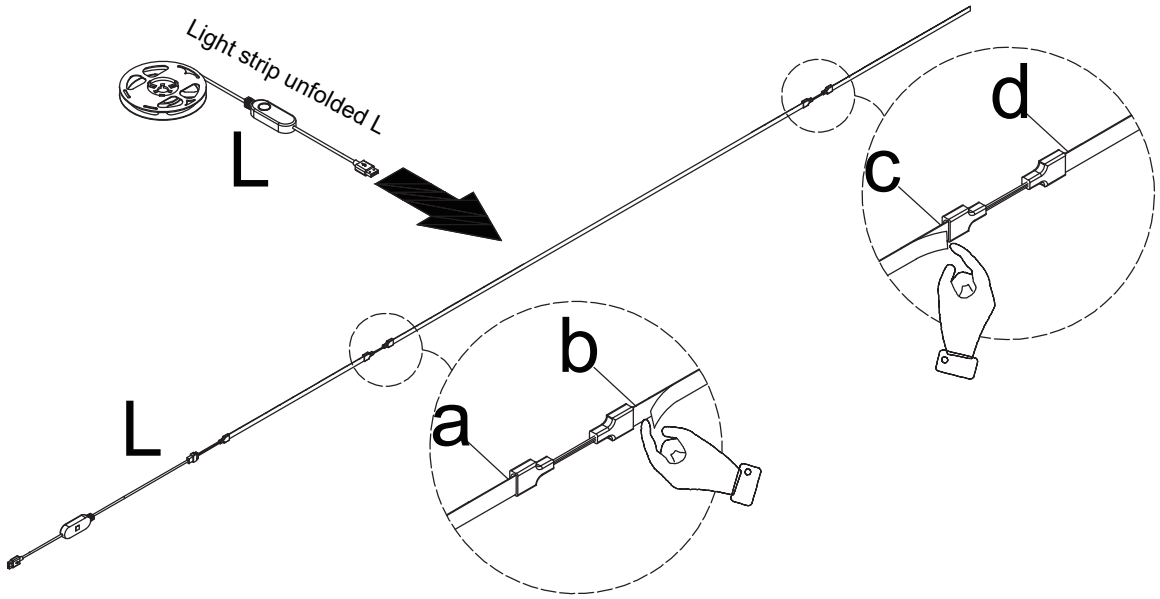

9
I
9
I
I
11
I
12
13
I
I
2
3



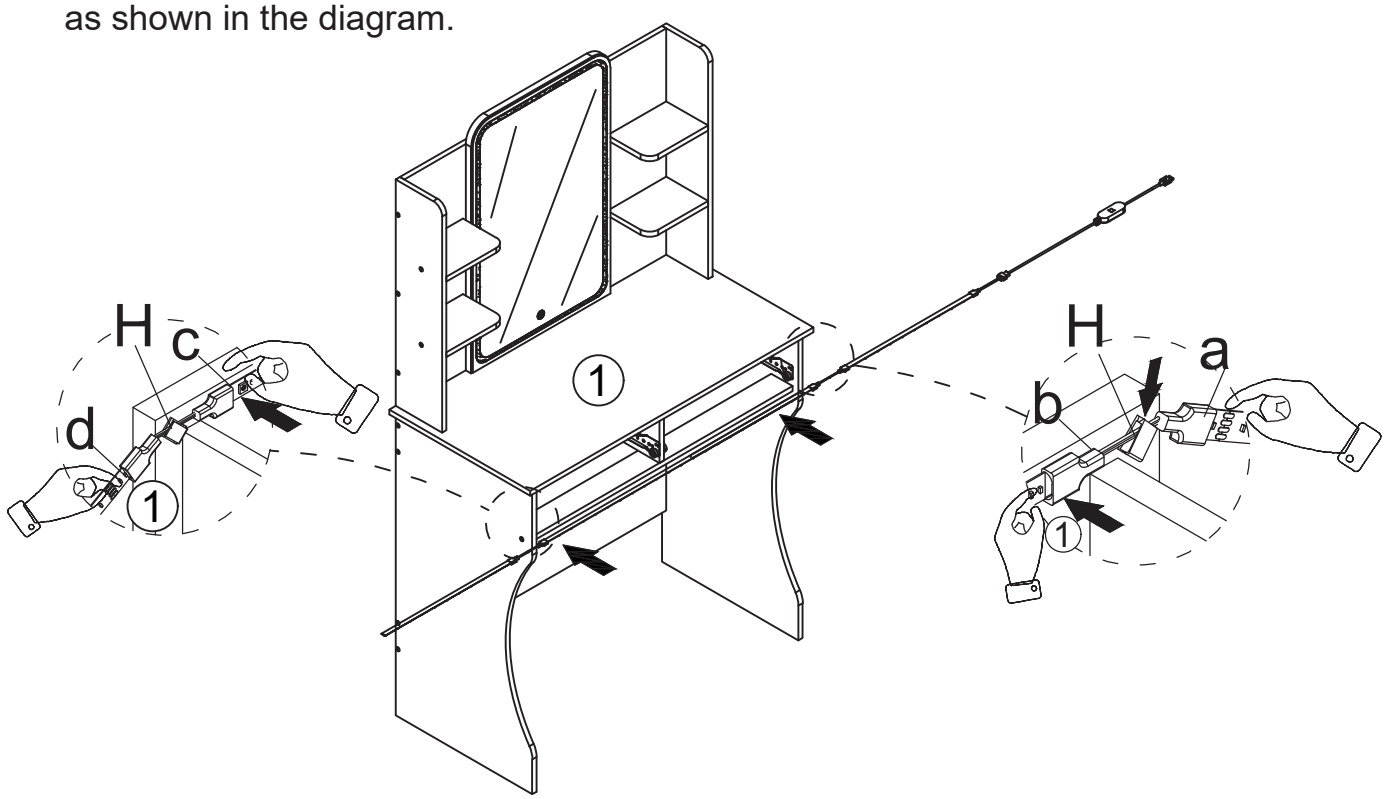
(1) Firstly, move the cabinet to the designated location as shown in the picture, tear off the adhesive on the back of the accessory (H), and then stick the accessory (H) to the front left and right ends of the tabletop of board 1 as shown in the picture, with the opening direction facing outward.



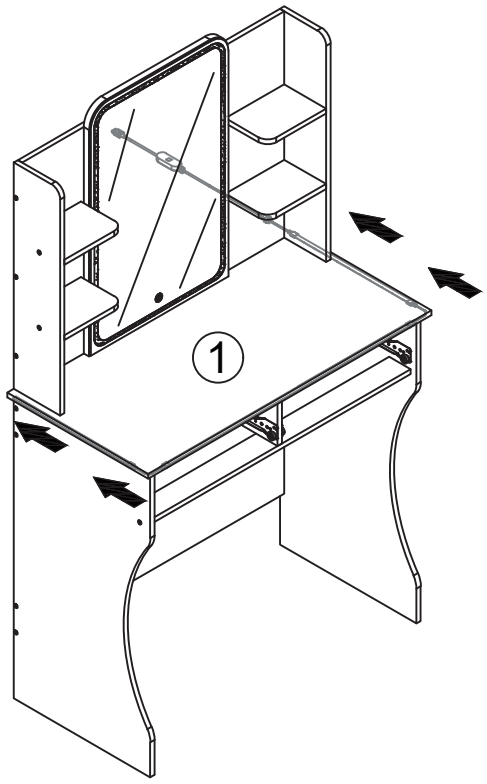
(2) Please unfold the light strip (L), and then peel off a small piece of adhesive from the back of the "b" and "c" ends in the middle of the light strip.

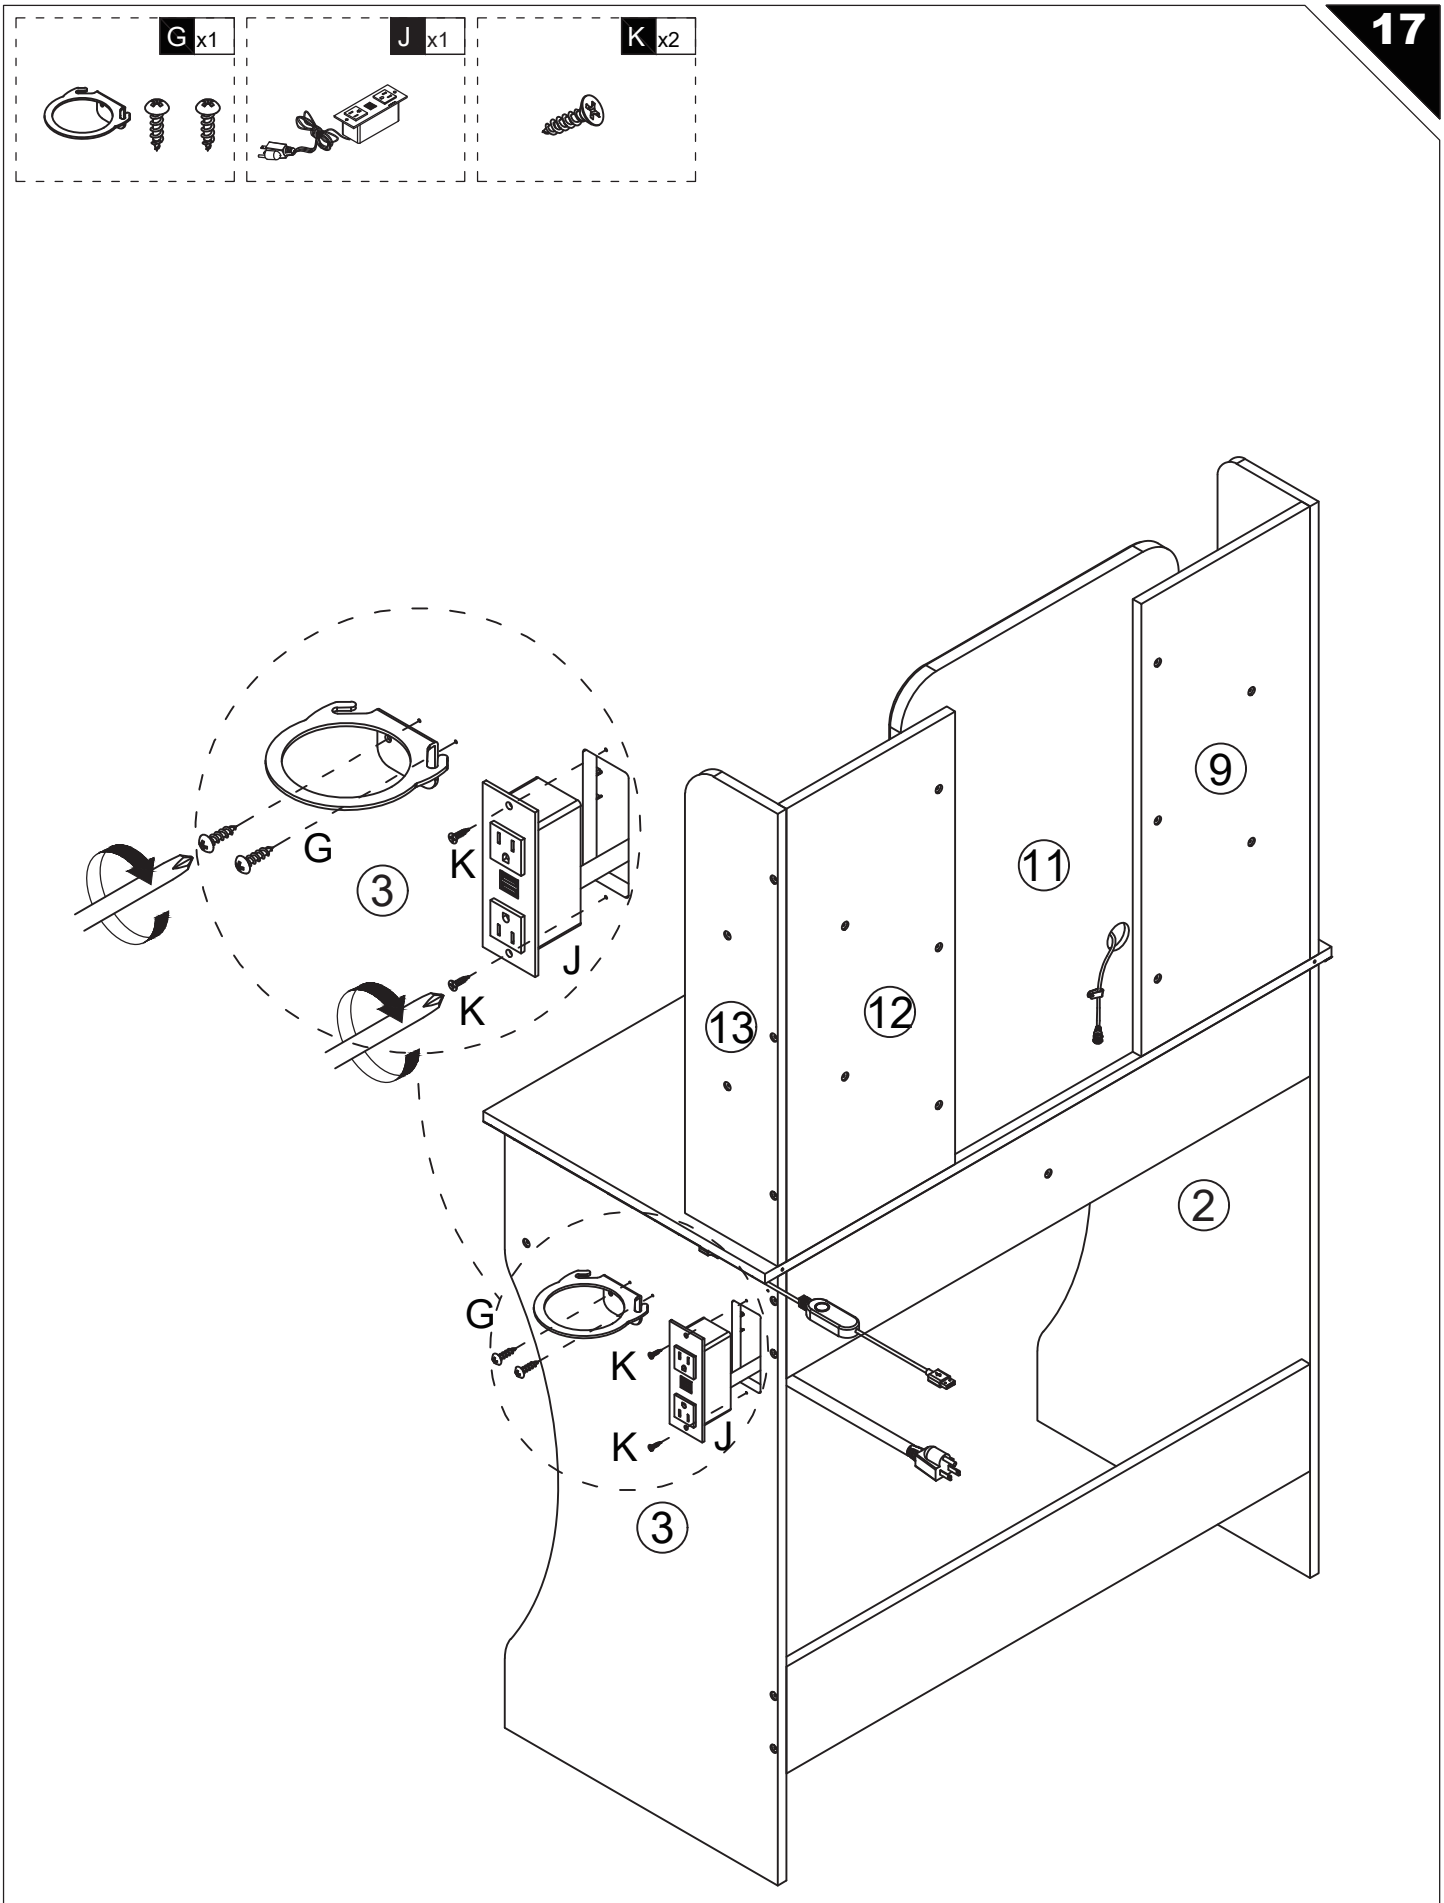


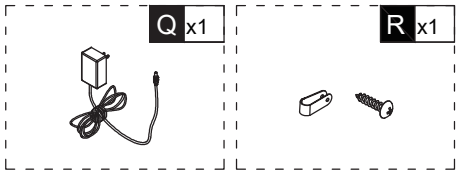
(3) Please place the light wire between the "a" and "b" ends on the right side as shown in the diagram into accessory (H), and then peel off the adhesive on the light strip (L) to the left and stick it to accessory (H). When it reaches the left accessory (H), place the light wire between the "c" and "d" ends into accessory (H) as shown in the diagram.

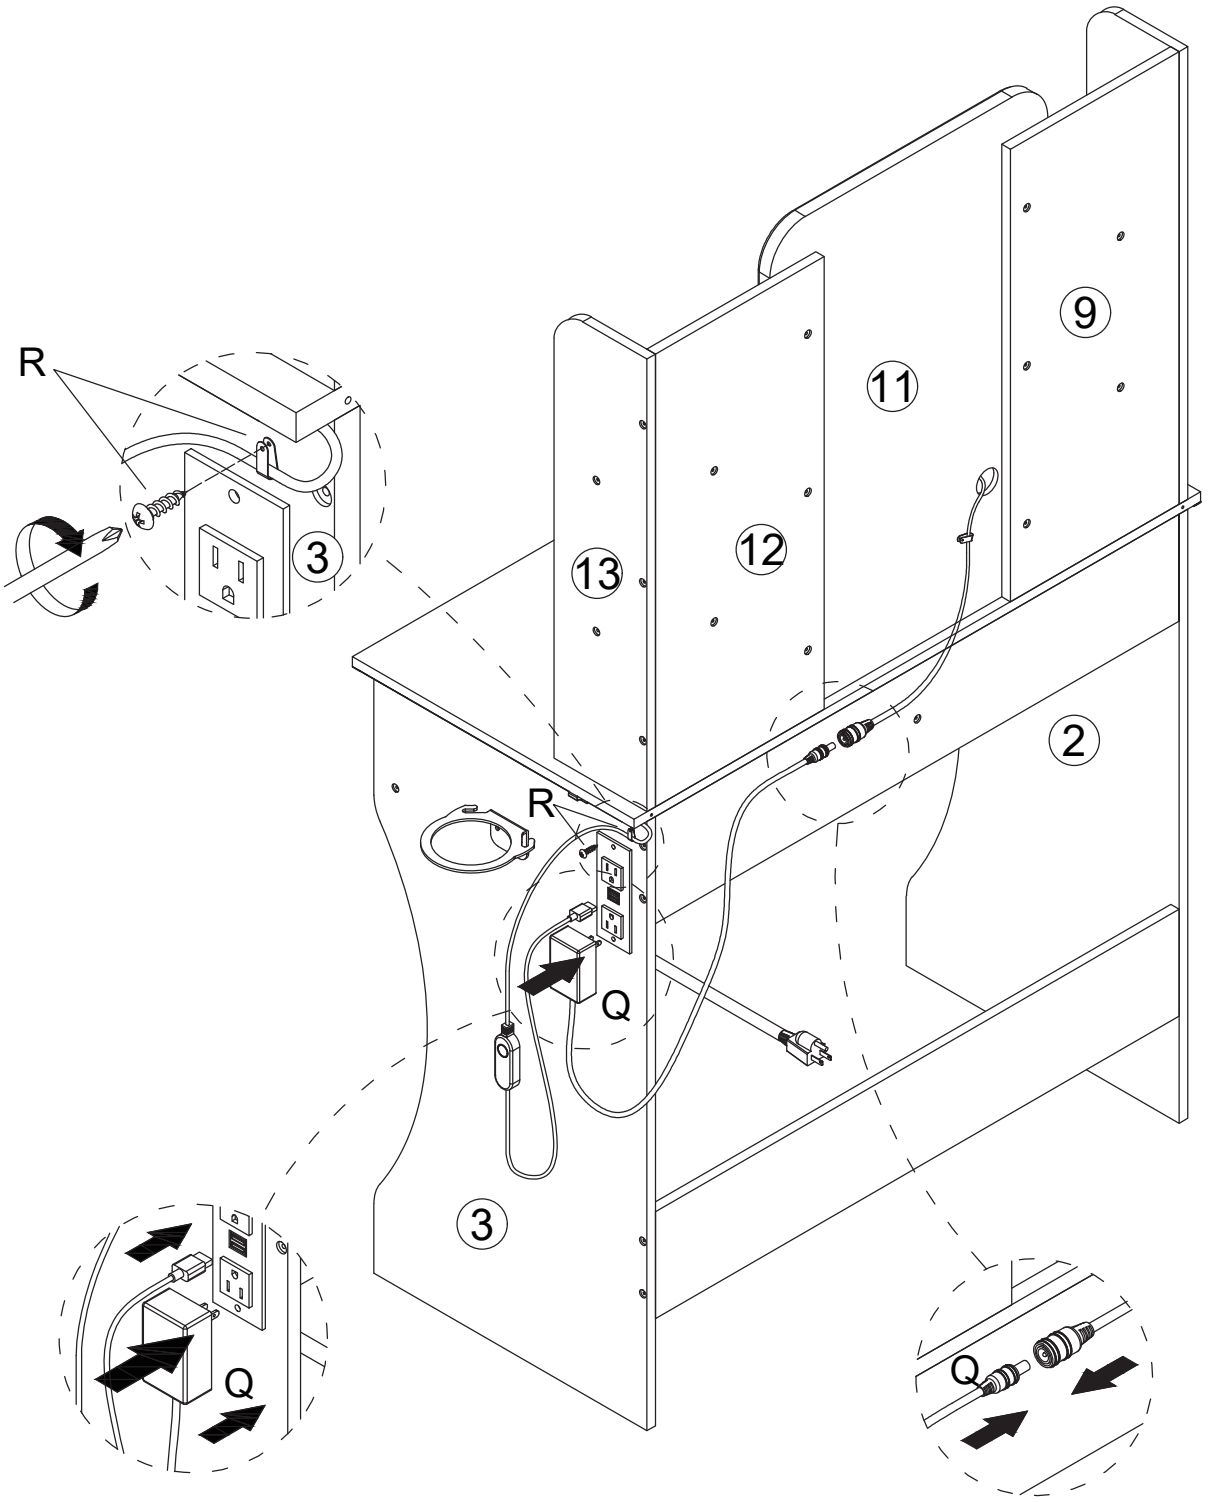


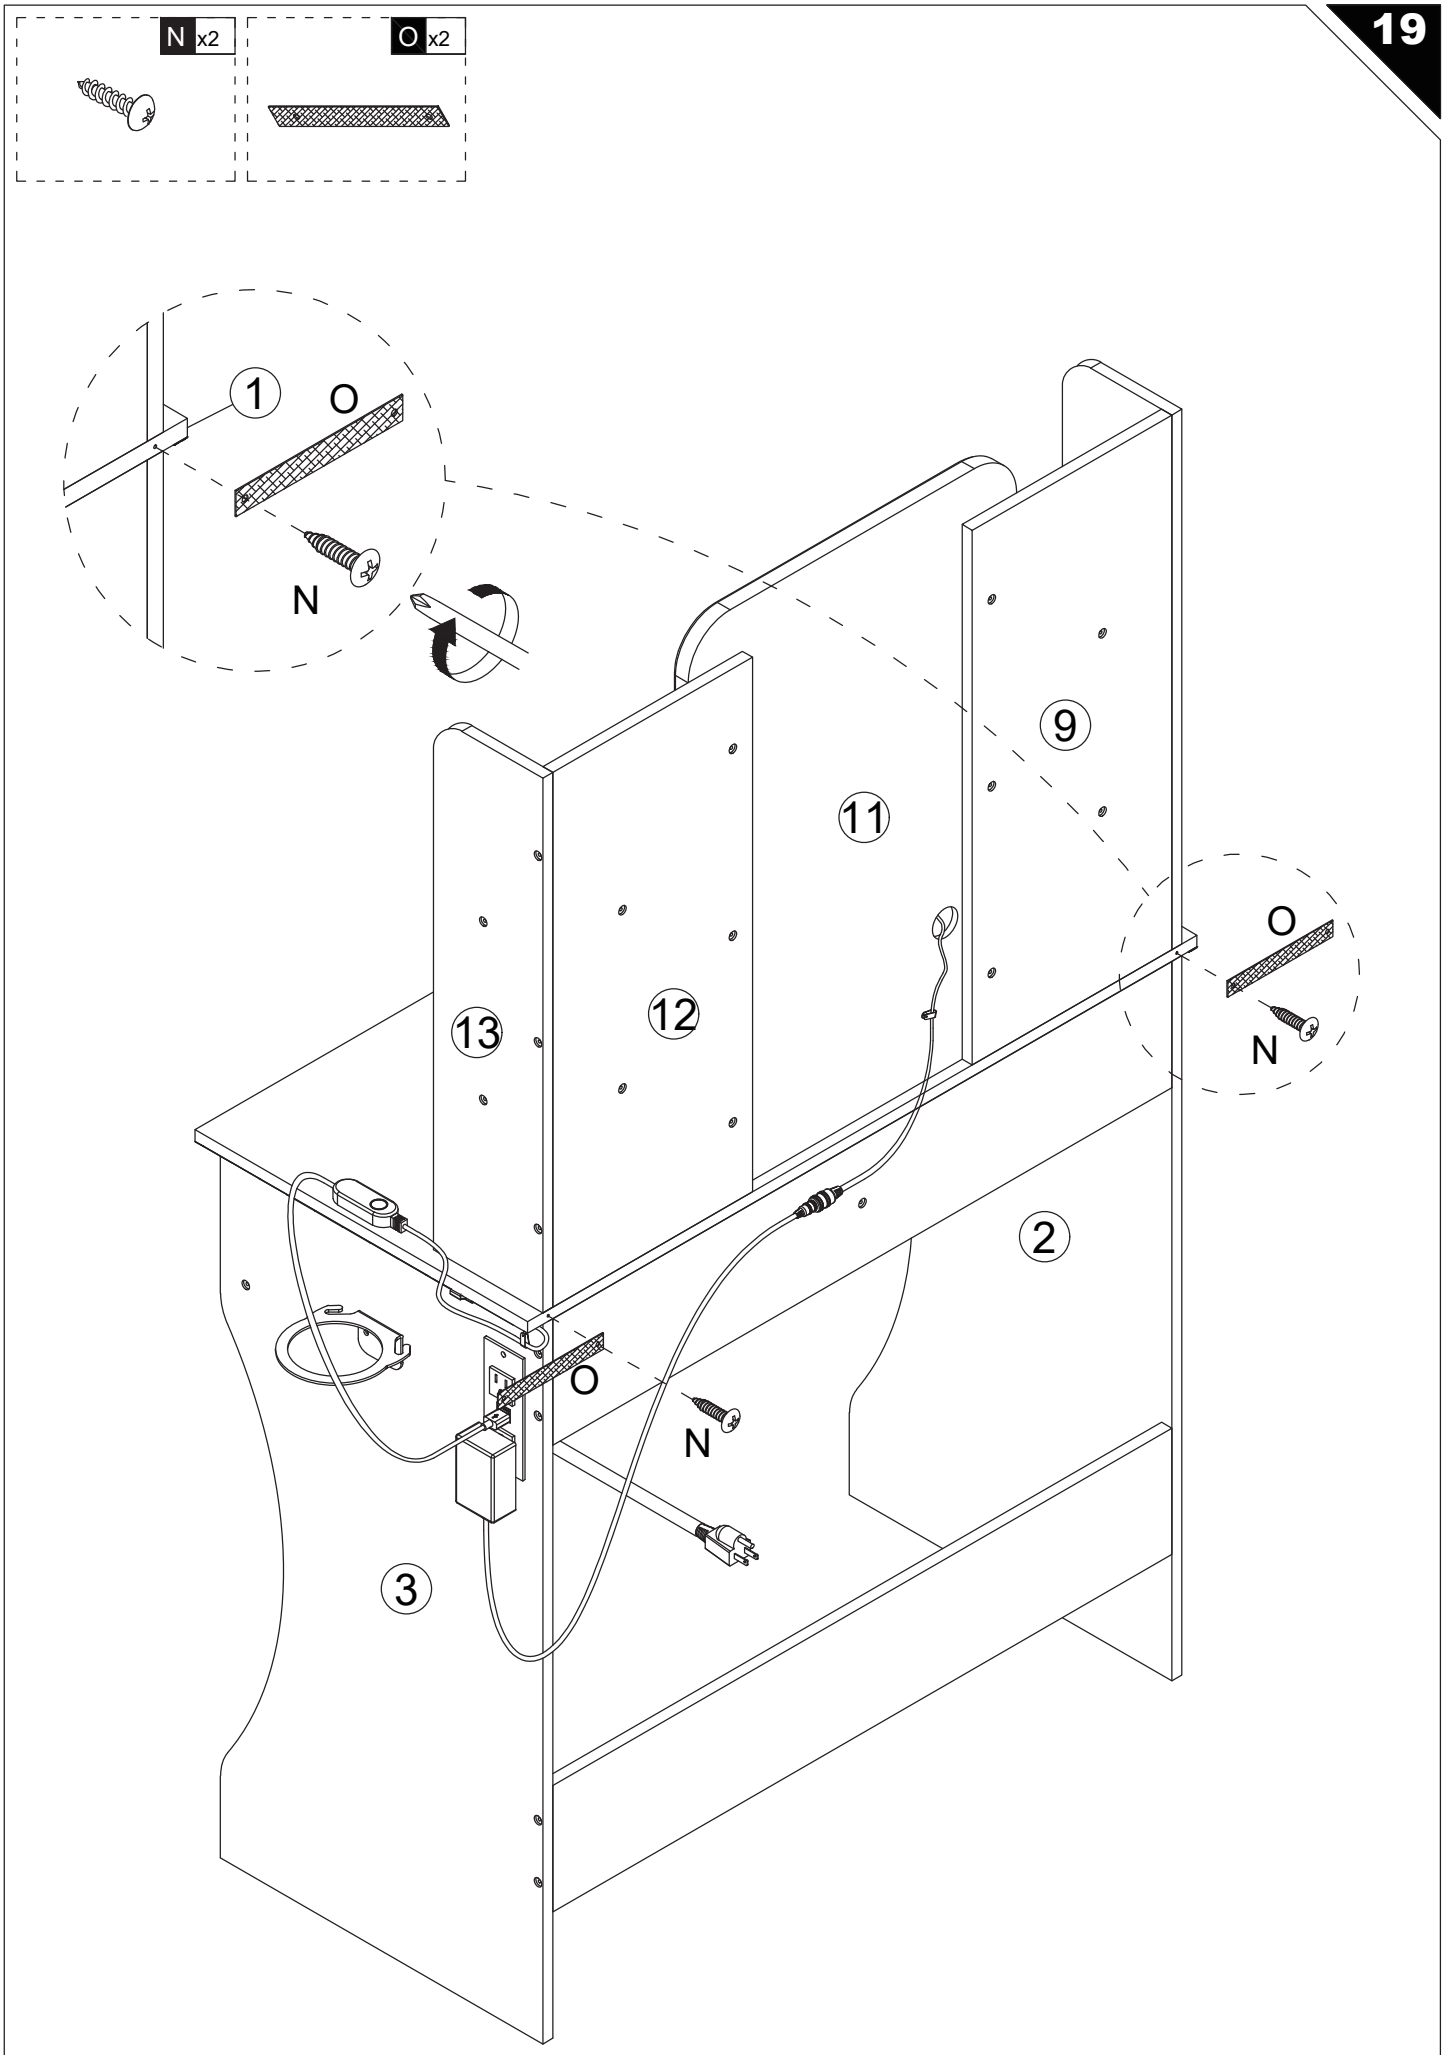
(4) Finally, tear off the adhesive backing of the left and right light strips and paste the light strip "L" onto the left and right ends of desktop 1

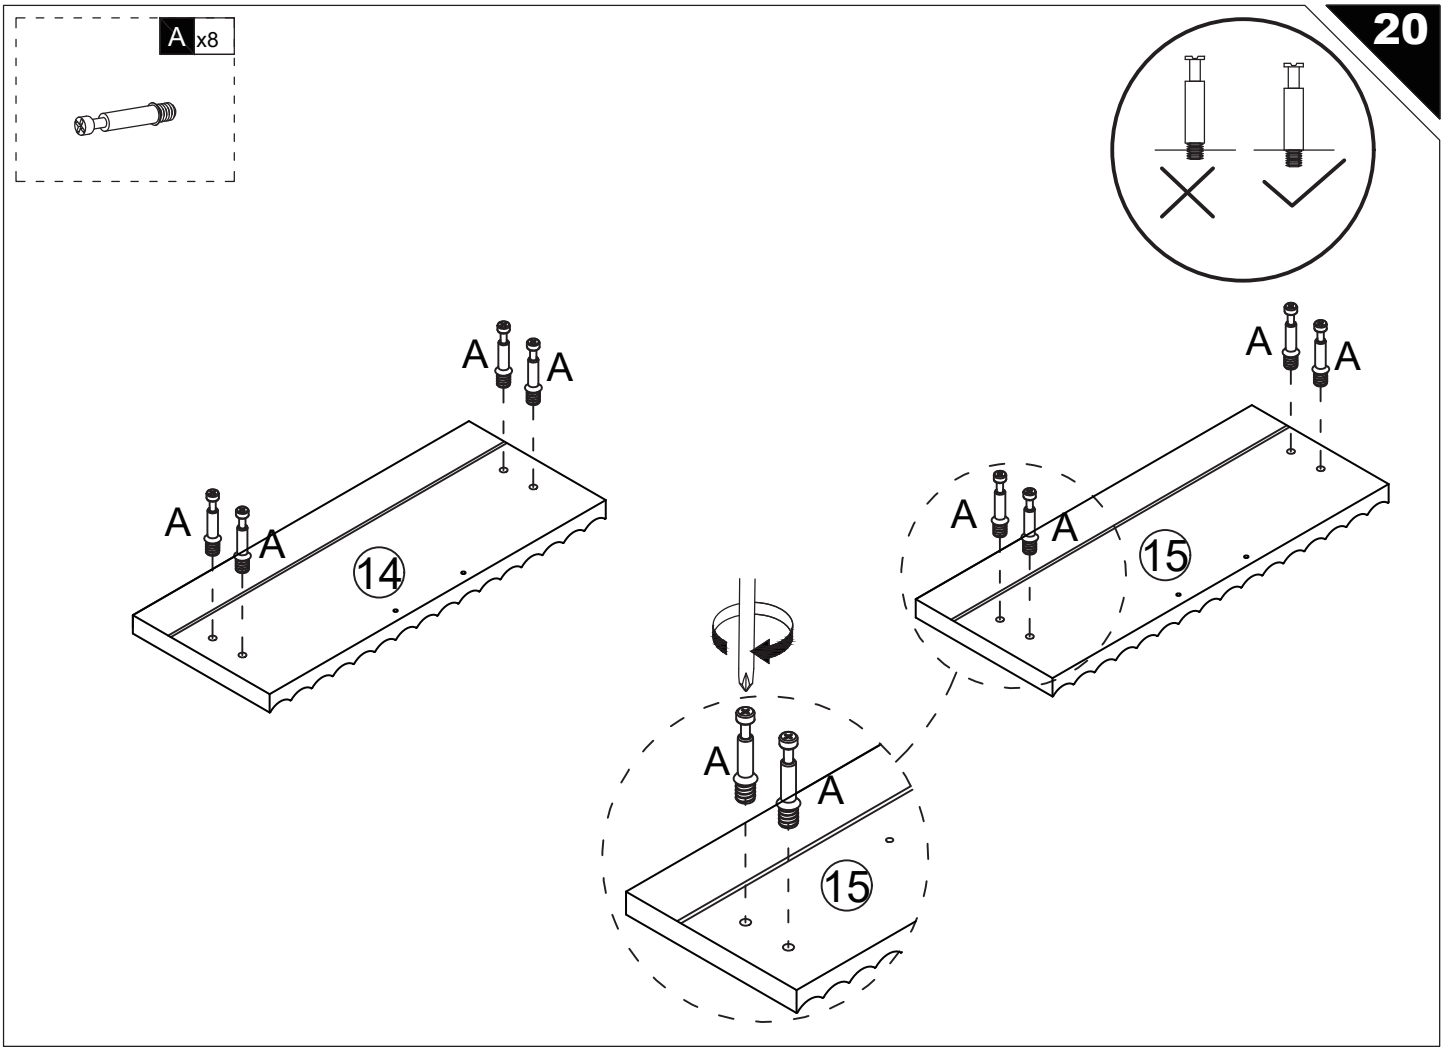


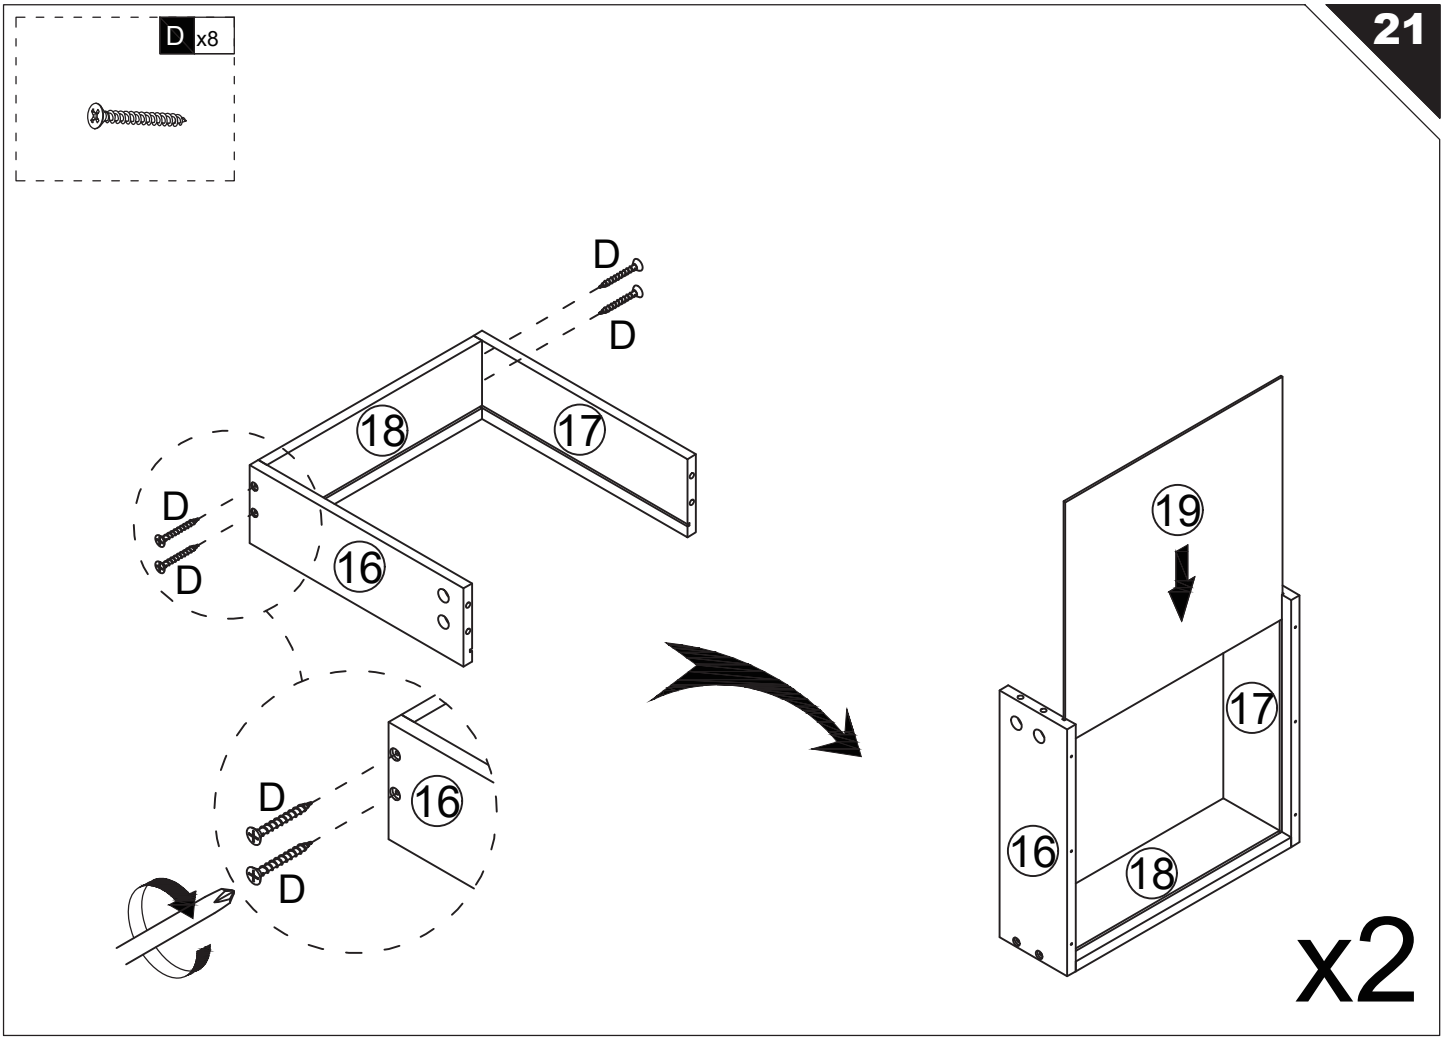

G x1
J x1
K x2
G
K
3
J
K
9
11
13
12
2
G
K
K
J
3

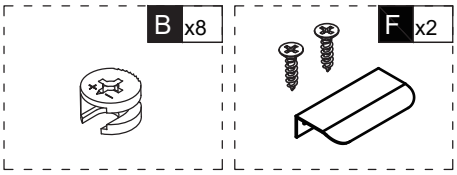

Q x1
R x1

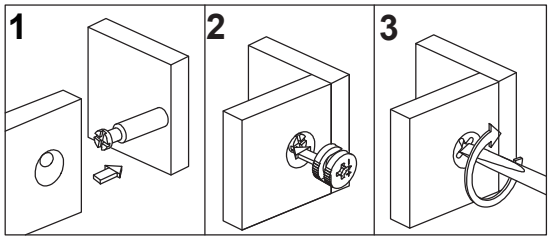

R
3
9
11
13
12
2
R
Q
3
Q
Q

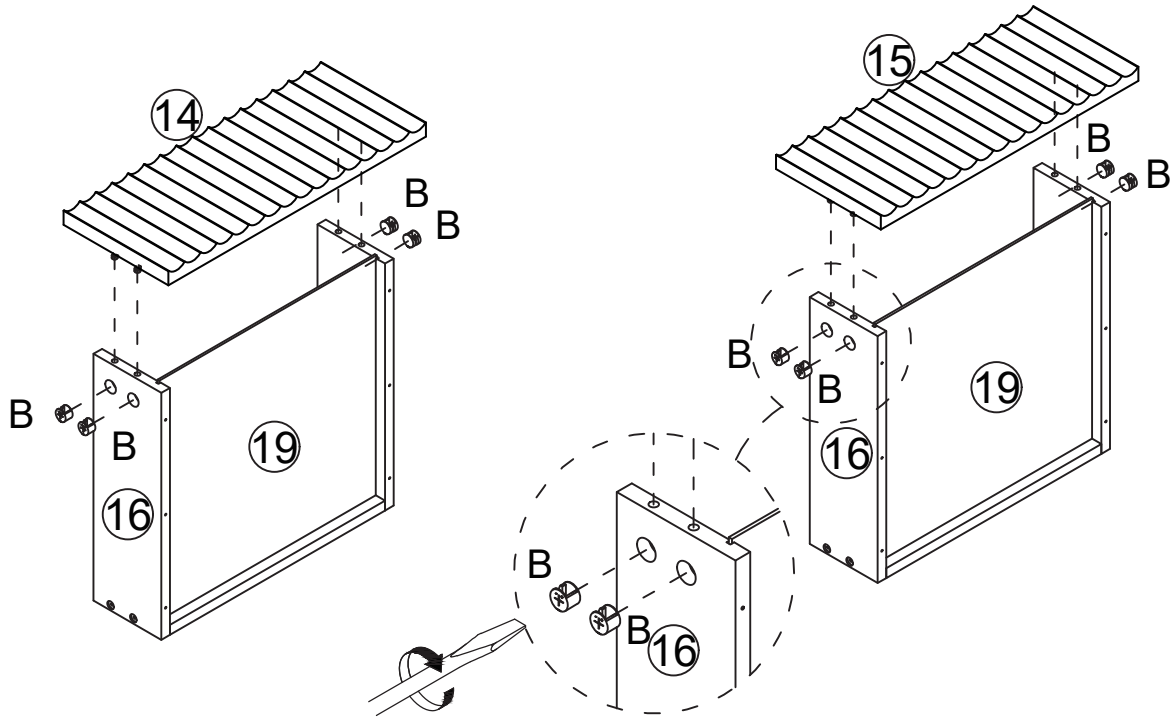

N x2
O x2
1
O
N
9
11
13
12
O
N
2
O
N
3

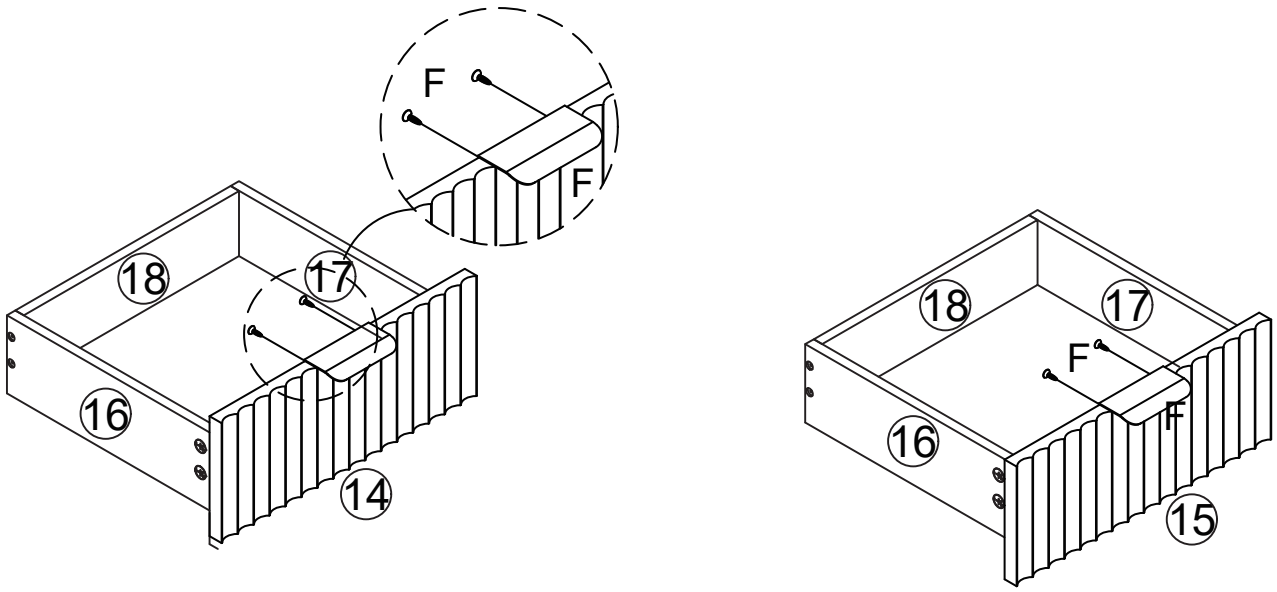

A x8
20
A
A
A
A
14
A
A
15
A
A
15

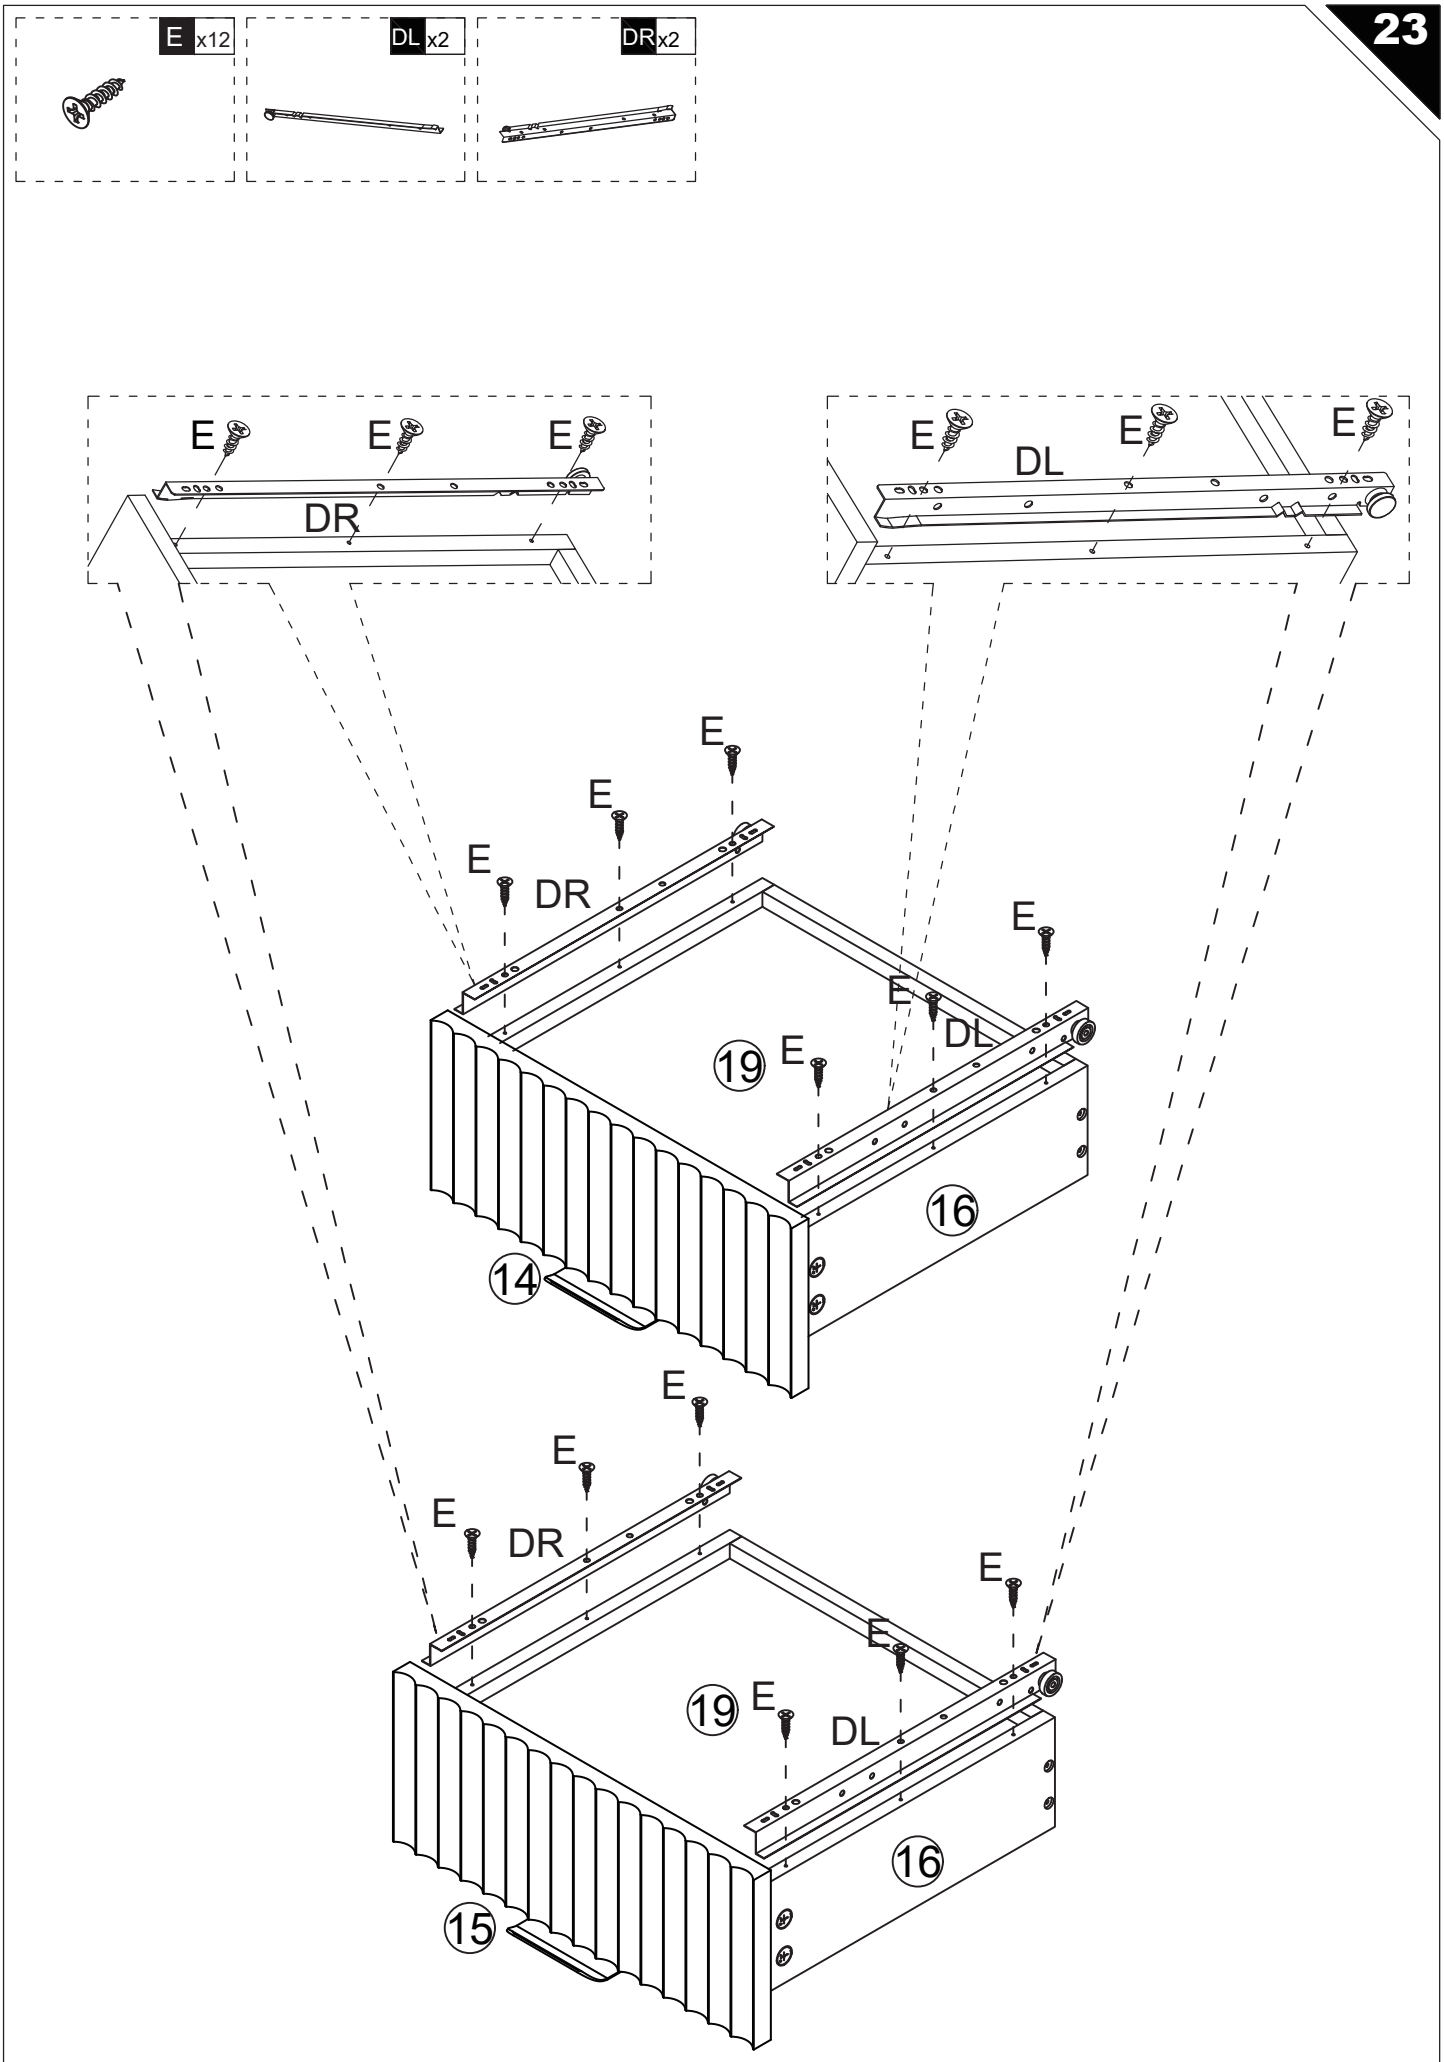

D x8
21
D
D
18
17
D
D
16
D
D
16
19
17
16
18
x2

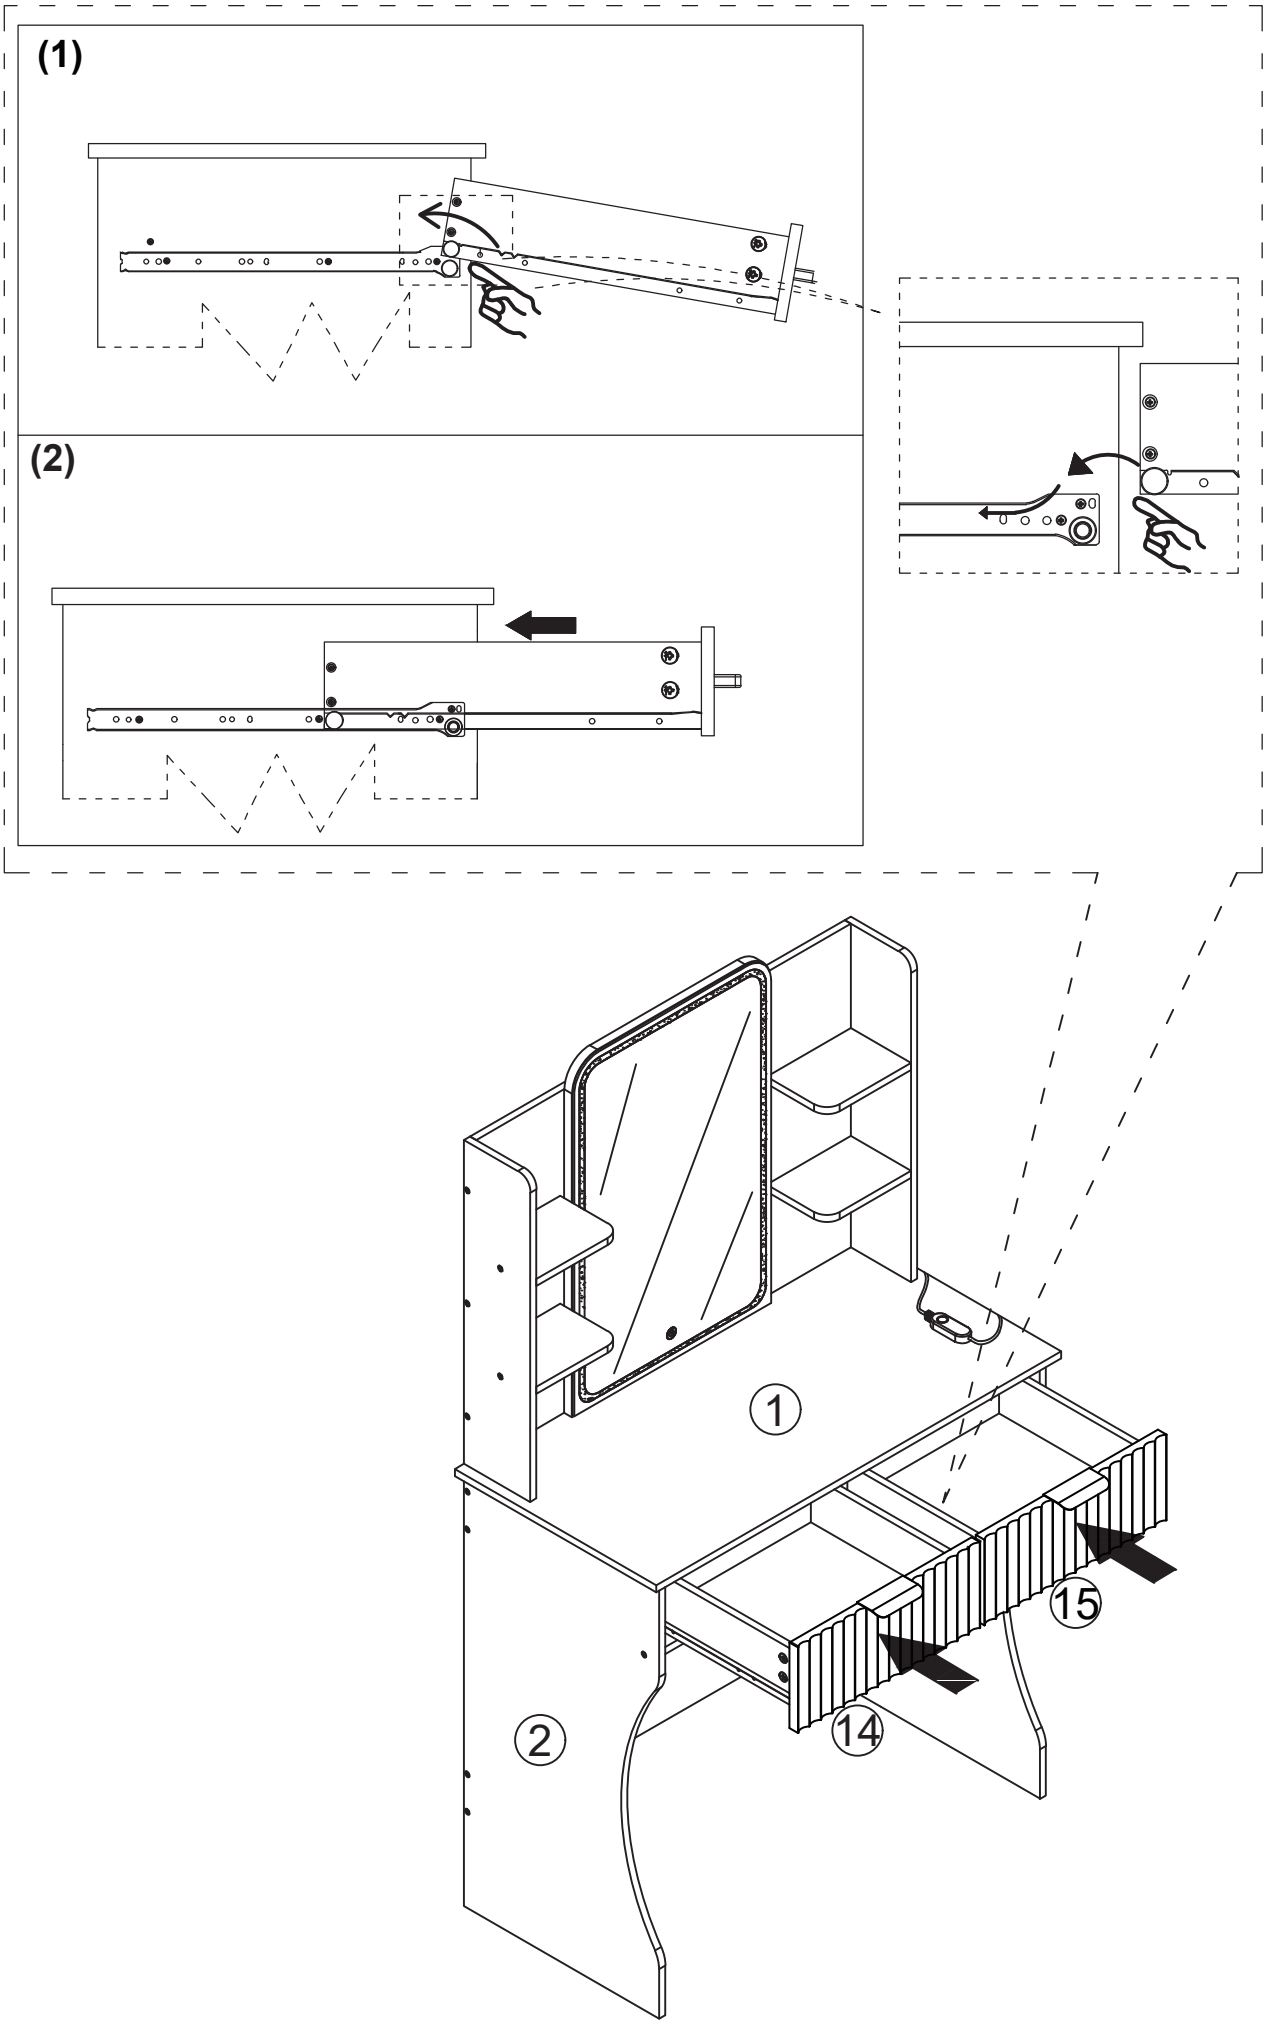

B x8
F x2

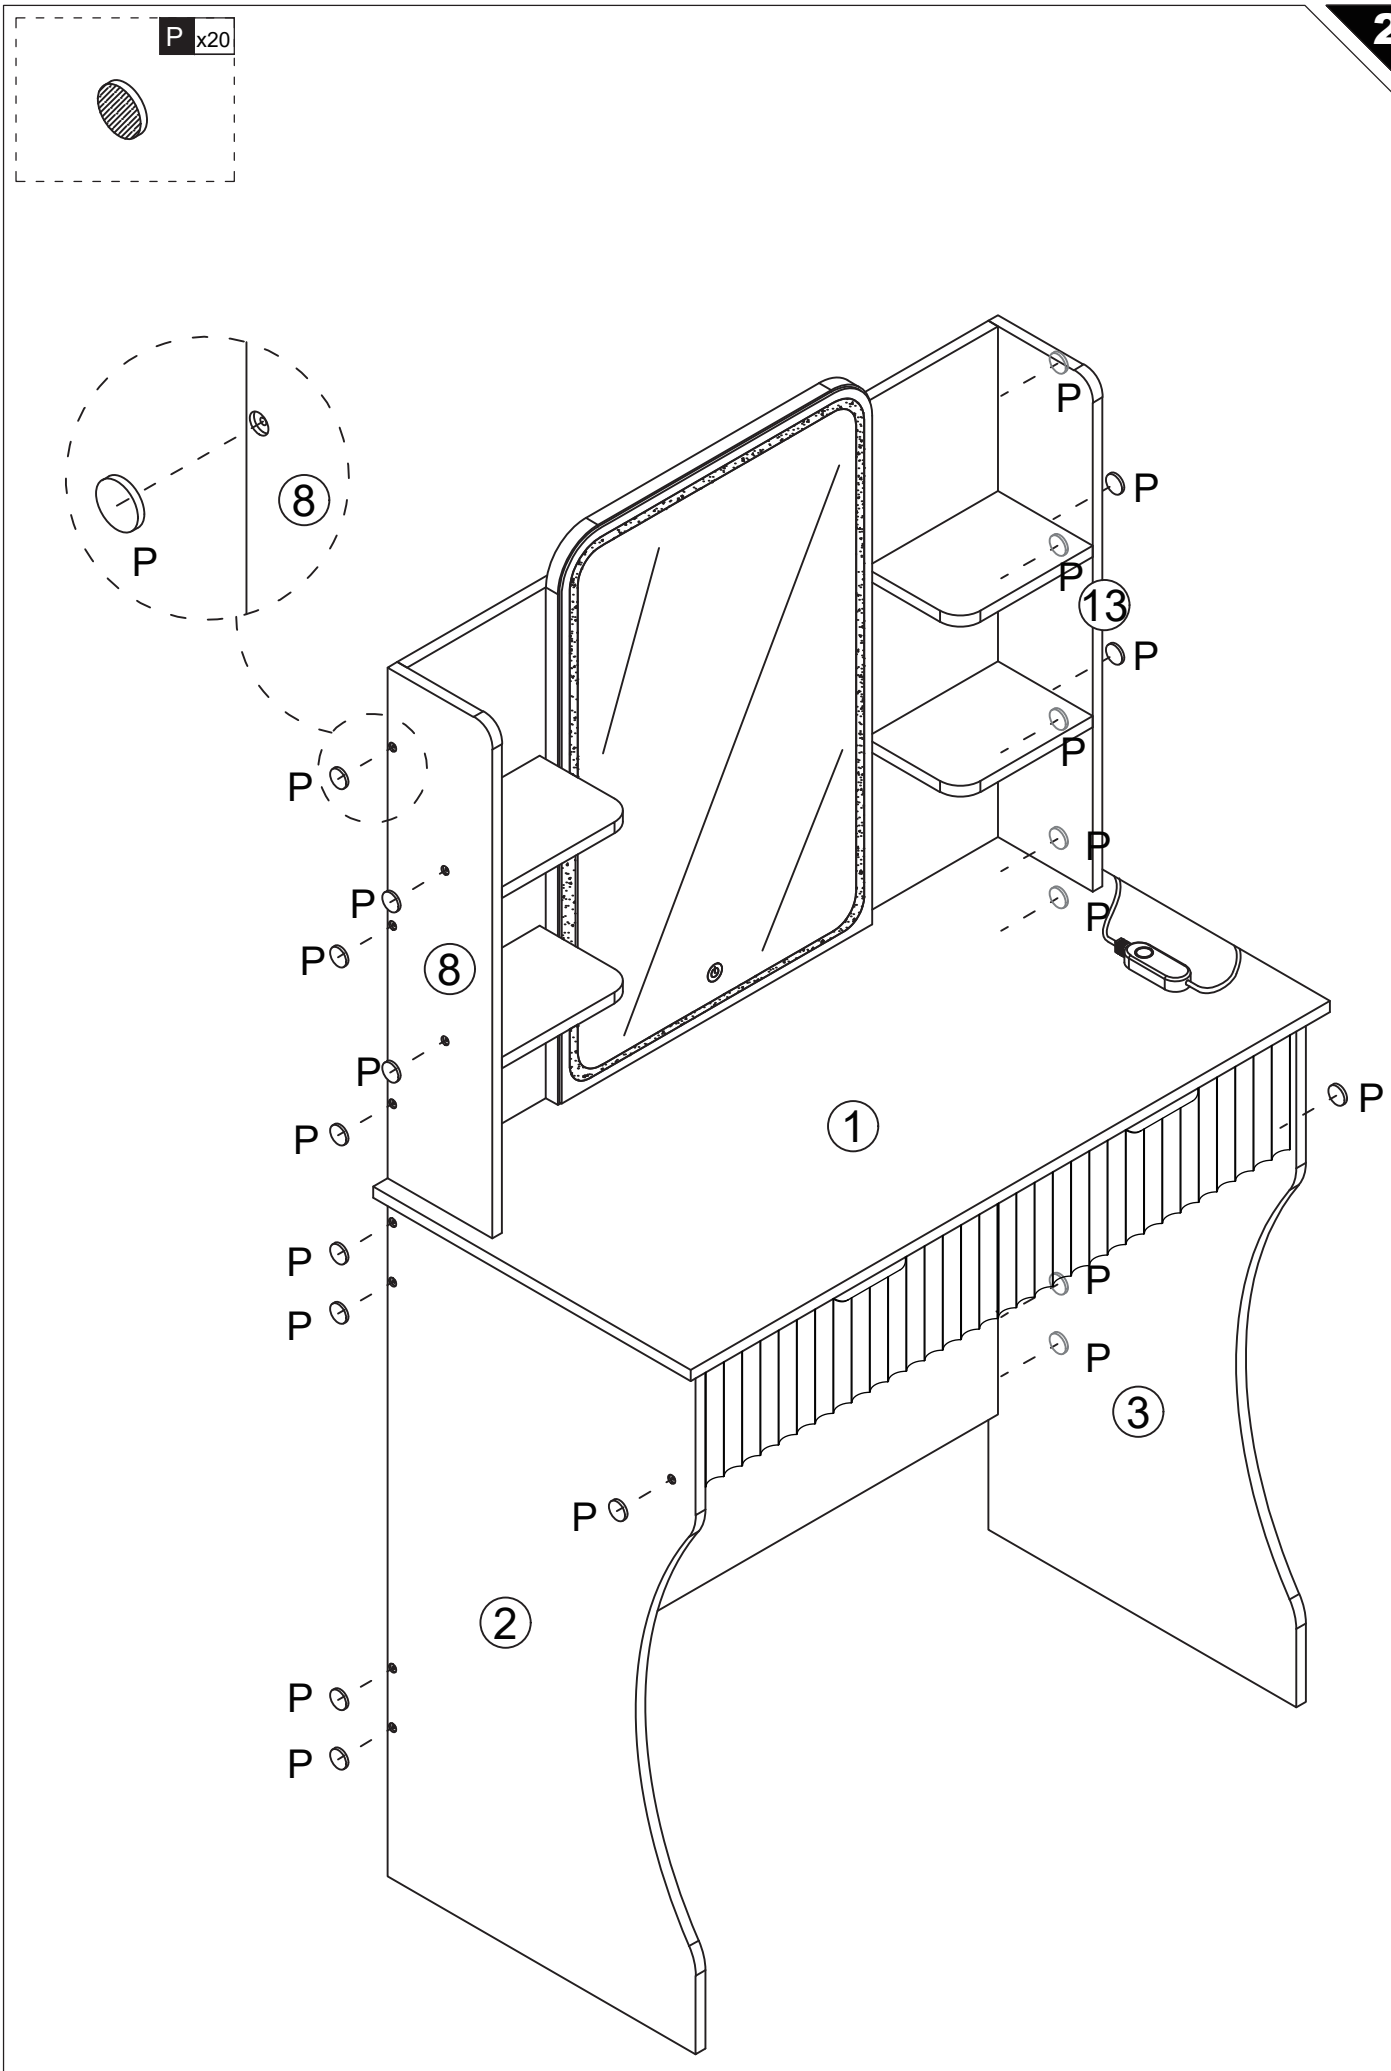

1
2
3

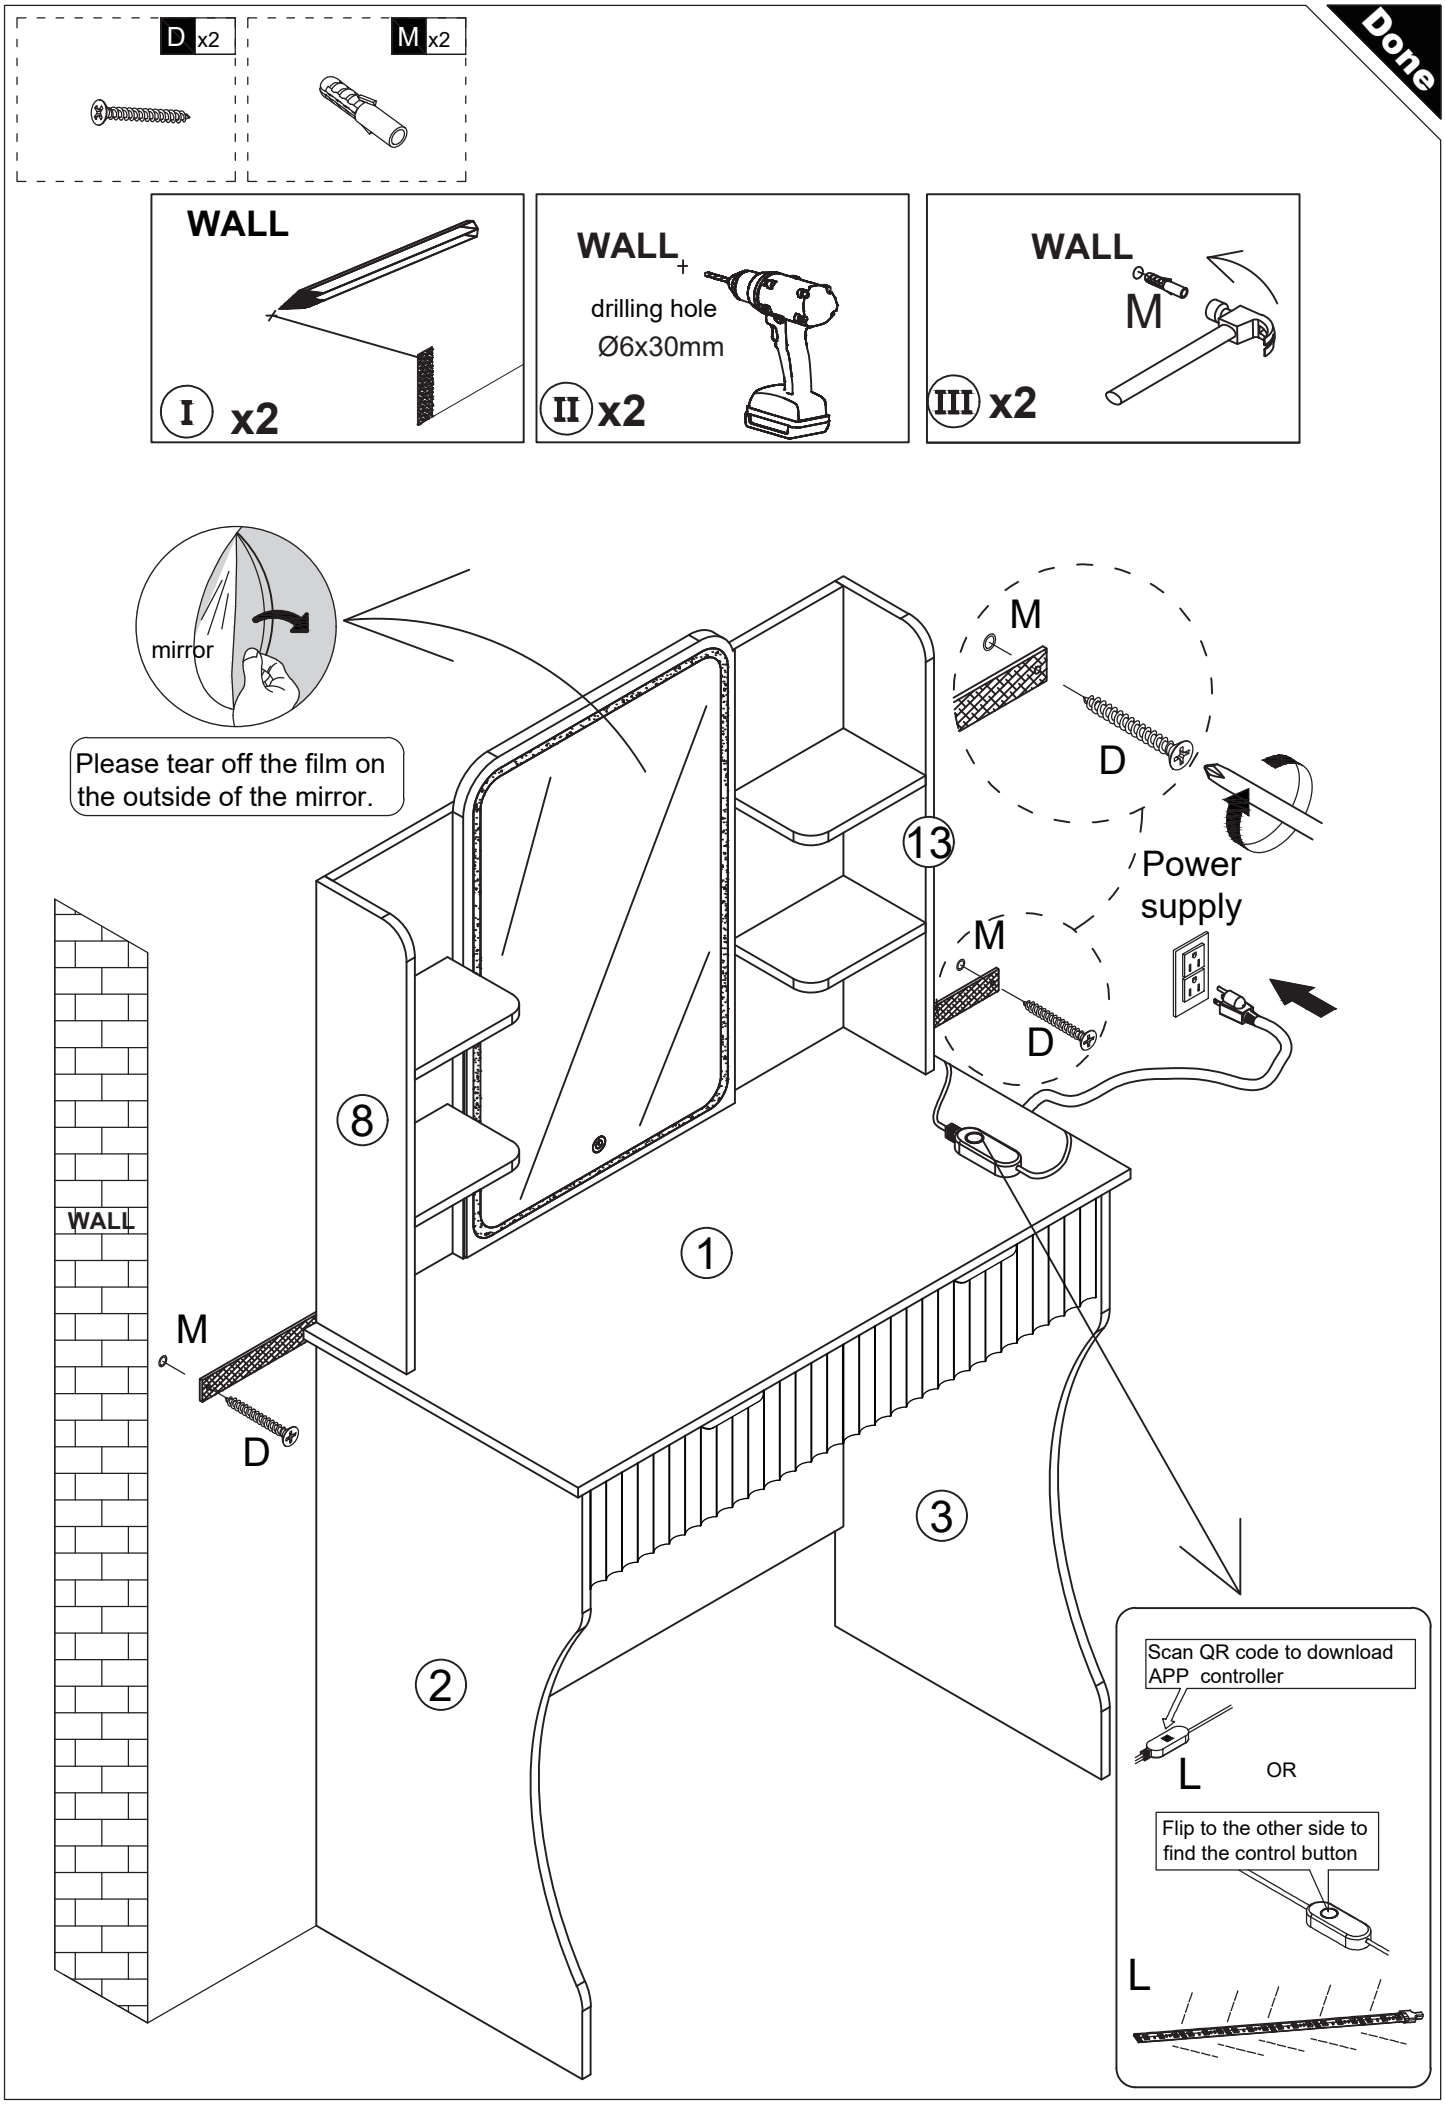

14
B
B
B
B
16
19
15
B
B
B
B
16
19
B
B
16


F
F
18
17
16
14
18
17
F
F
16
15


E x12
DL x2
DR x2
E
E
E
DR
E
E
DL
E
E
E
DR
E
E
DL
19
E
16
14
E
E
E
DR
E
E
DL
19
E
16
15


(1)
(2)
1
2
14
15


P x20
8
P
P
P


D x2
M x2
Done
WALL
I x2
WALL
drilling hole
Ø6x30mm
II x2
WALL
M
III x2
mirror
Please tear off the film on the outside of the mirror.
M
D
13
Power supply
M
D
8
WALL
1
M
D
3
2
Scan QR code to download APP controller
L
OR
Flip to the other side to find the control button
L