


Wardrobe

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

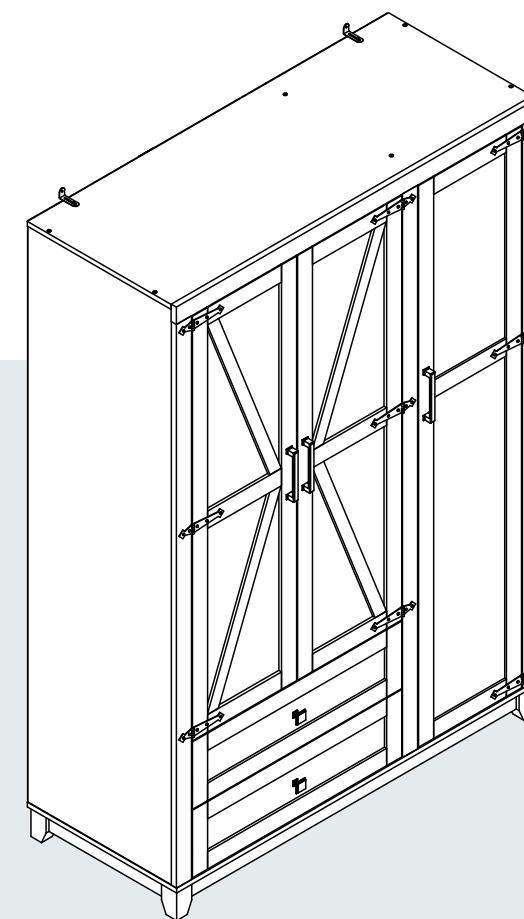

CONTACT US

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps. Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

1. Multi-Box Shipping Notice

This product is packaged in 2 separate boxes for shipping and may arrive in batches at different times. To ensure a smooth assembly process, please make sure all boxes are received before unpacking and starting the installation.

2. Box and Packaging Verification

Each box is labeled with a corresponding number. Please refer to the packing list on the next page of this manual to verify that all boxes have been received.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice




Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

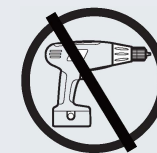

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to. Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team .
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Helpful Tips

To process your issue efficiently, please prepare the following information:

- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
















Thank you for your trust and support!
We hope you enjoy using our product!

Parts List


















Please check you have all the panels listed below.

BOX 1

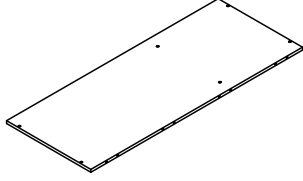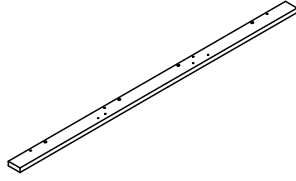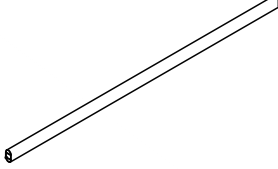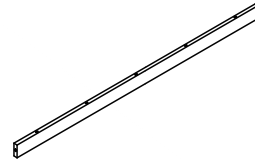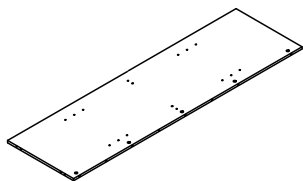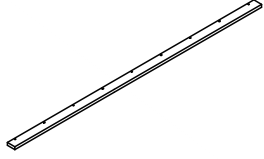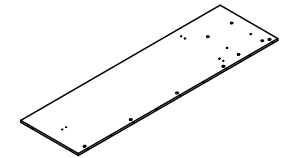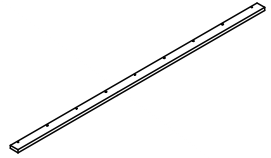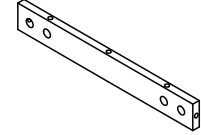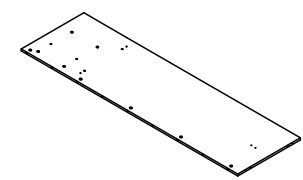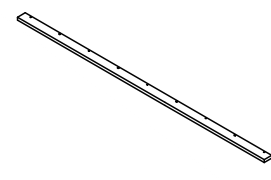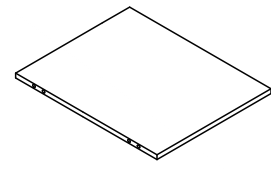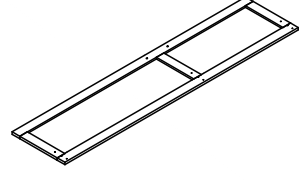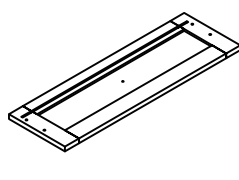		
1 1200x478x14mm x1	2 1200x50x17mm x1	3 Hanging rod 761mm x1
		
4 1088x50x14mm x2	5 1656x478x14mm x1	6 1621x50x17mm x1
		
7 1656x478x14mm x1	8 1621x50x17mm x1	9 384x50x14mm x2
		
10 1656x478x14mm x1	11 1621x50x17mm x1	12 476x384x14mm x1
		
13 1615x342x17mm x1	14 695x194x17mm x2	15 337x40x12mm x2

BOX 2

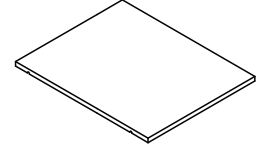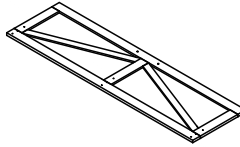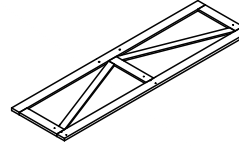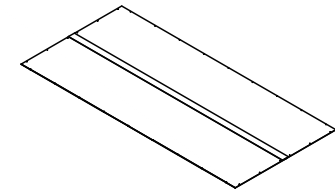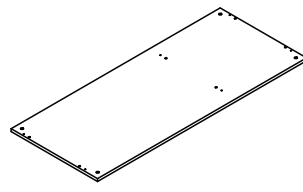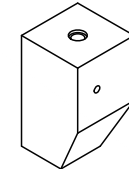


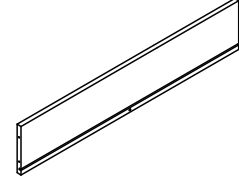
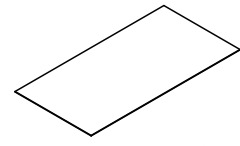
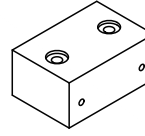
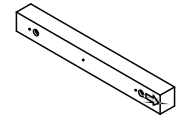
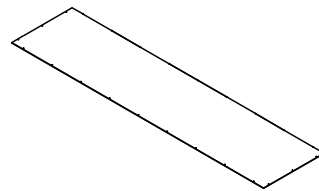
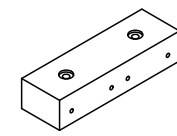
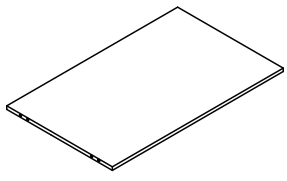
		
16 474x382x12mm x2	17 1221x346x17mm x1	18 1221x346x17mm x1
		
19 1682x790x2.5mm x1	20 1200x496x14mm x1	21 85x50x50mm x4
		
22 350x128x12mm x2	23 350x128x12mm x2	24 663x128x12mm x2
		
25 671x345x2.5mm x2	26 52x35x24mm x1	27 350x40x35mm x4
		
28 1682x404x2.5mm x1	29 111x35x24mm x1	30 771x476x14mm x1

Parts List - Fittings








Please check you have all the fittings listed below. (in Box 1)

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

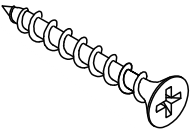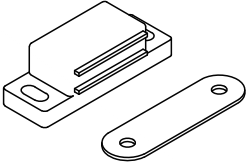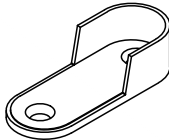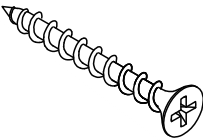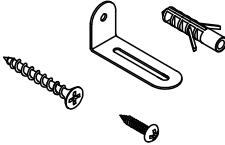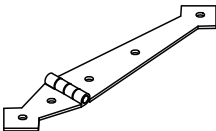		
A M6x34mm x55	B Ø15x9mm x55	C Ø8x30mm x50
		
D M4x35mm x14	E M3x15mm x6	F Magnet x3
		
G M6x35mm x12	H M3x12mm x10	I 47x18x12mm x2
		
J M4x50mm x12	K M3x12mm x45	L Wall Fixing Pack x2
		
M Arrow Hinge x9	N M3.5x12mm x61	O Shelf Support Pin x8

Hardware continues (in Box 1)

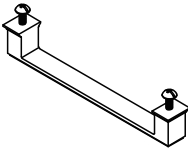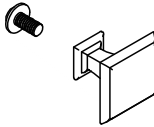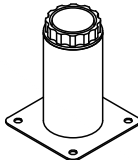		
P Handle & Fixings x3	Q Handle & Fixings x2	R M4x12mm x4
		
S Adjustable Foot x1	Y Drawer slide x4	X Protective Foot x4

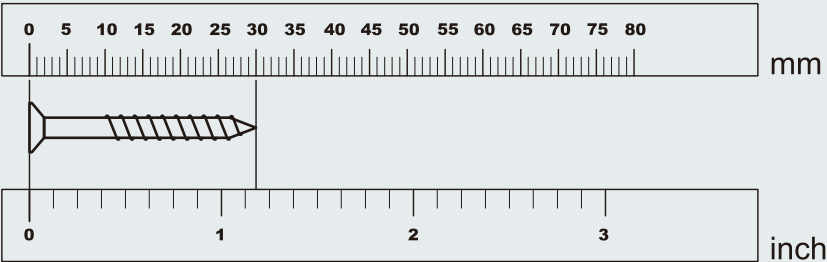Tools required	 Phillips screwdriver (medium & large)
Ruler Use this ruler to help correctly identify the screws	 The screws length is measured from the head to the point (30mm screw shown).


Using Camlocks



Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.

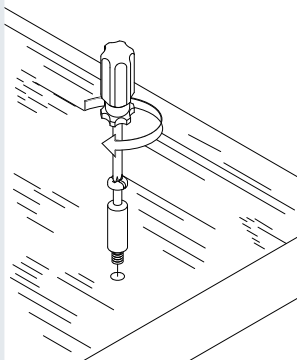

Step 2


Push the male camlock into the entry hole.

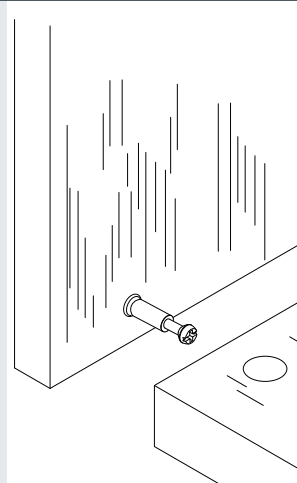

Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

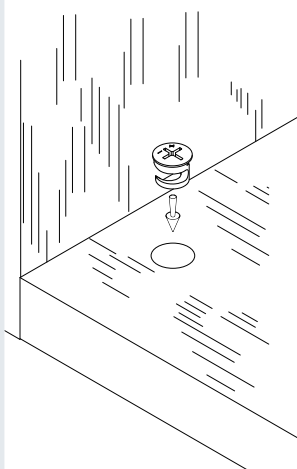


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

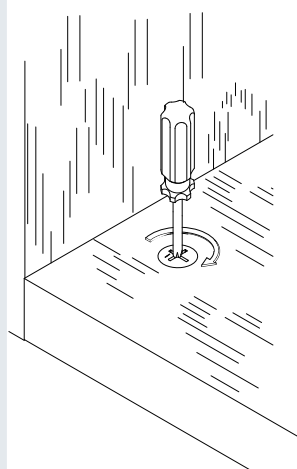

Assembly Instructions


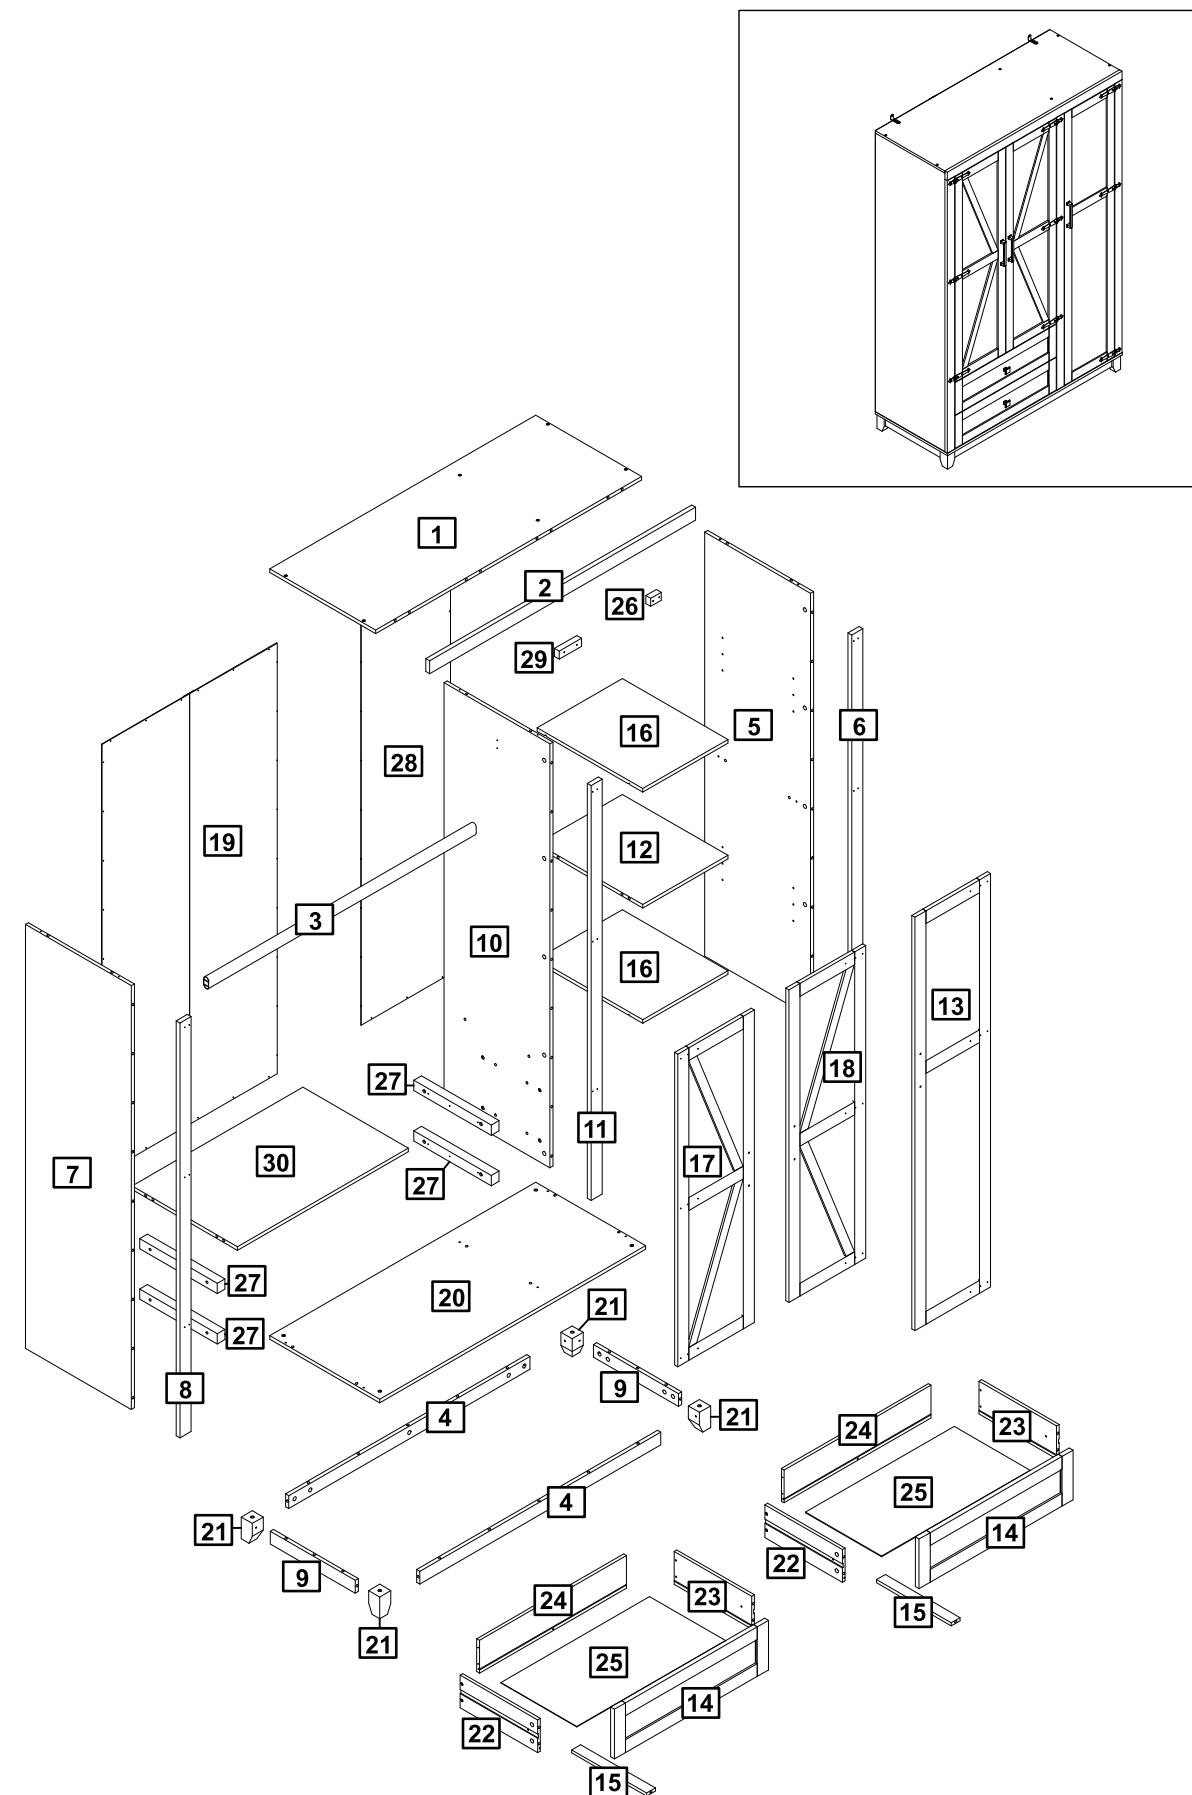


Step 1

A M6x34mm **x4**

CAM-LOCK


Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

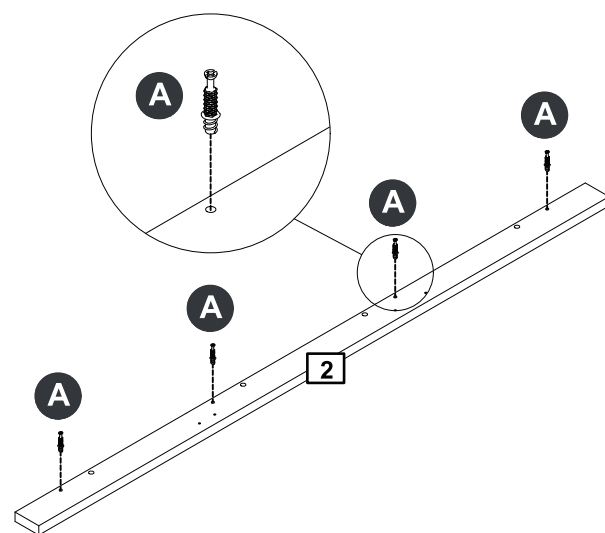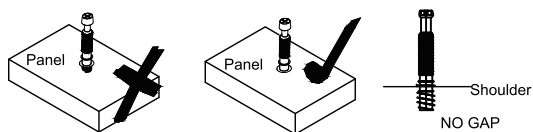

- Attach Male Cam Lock (A) to Part (2) with a screwdriver.

Step 2

D M4x35mm **x4**

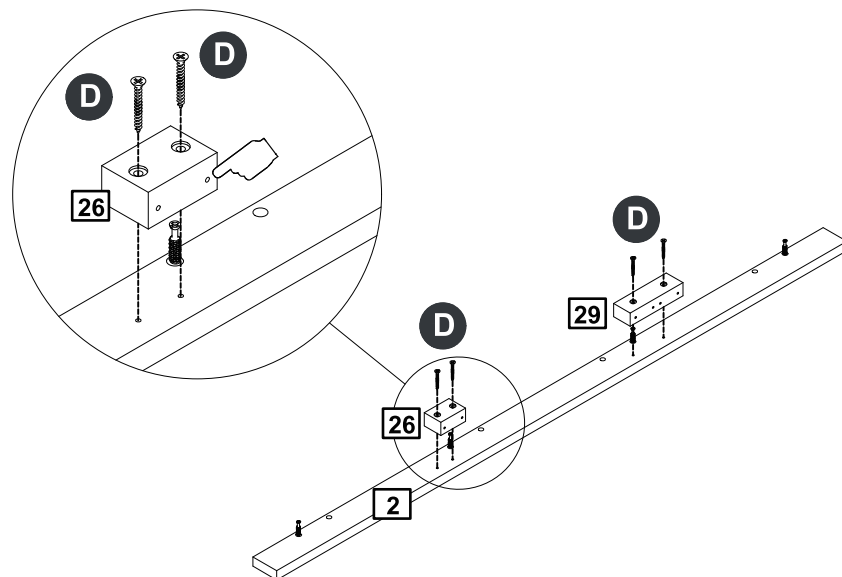


- Attach Parts (26,29) to Part (2), then tighten the screws (D) with a screwdriver.

Note:

- Pay attention to the direction of the pre-drilled holes on the sides of Parts (26,29) .

Step 3


C Ø8x30mm **x4**

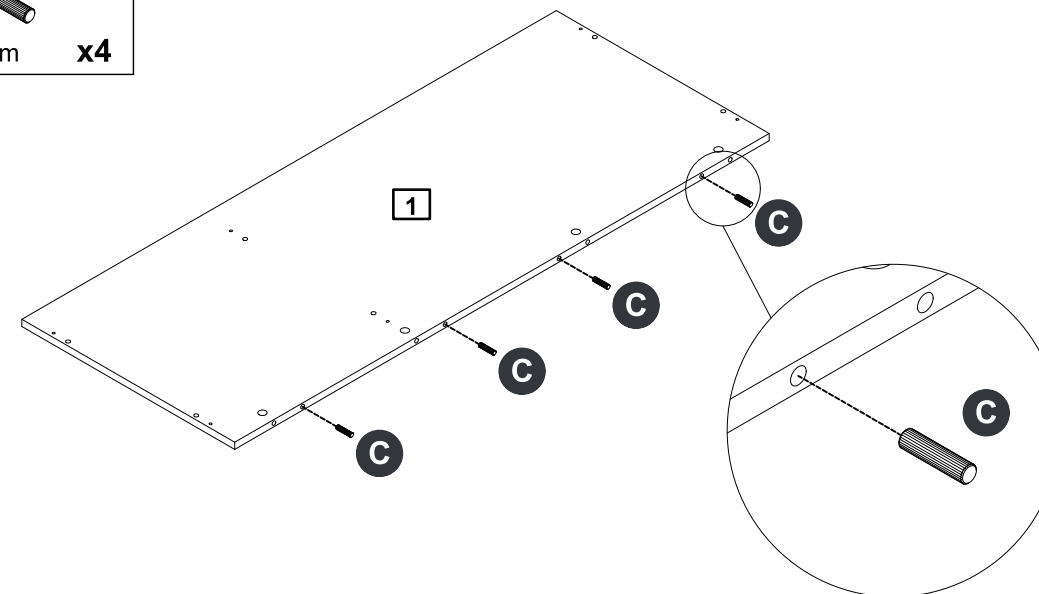

- Insert Wooden Dowel (C) into Part (1).

Step 4


B Ø15x9mm **x4**

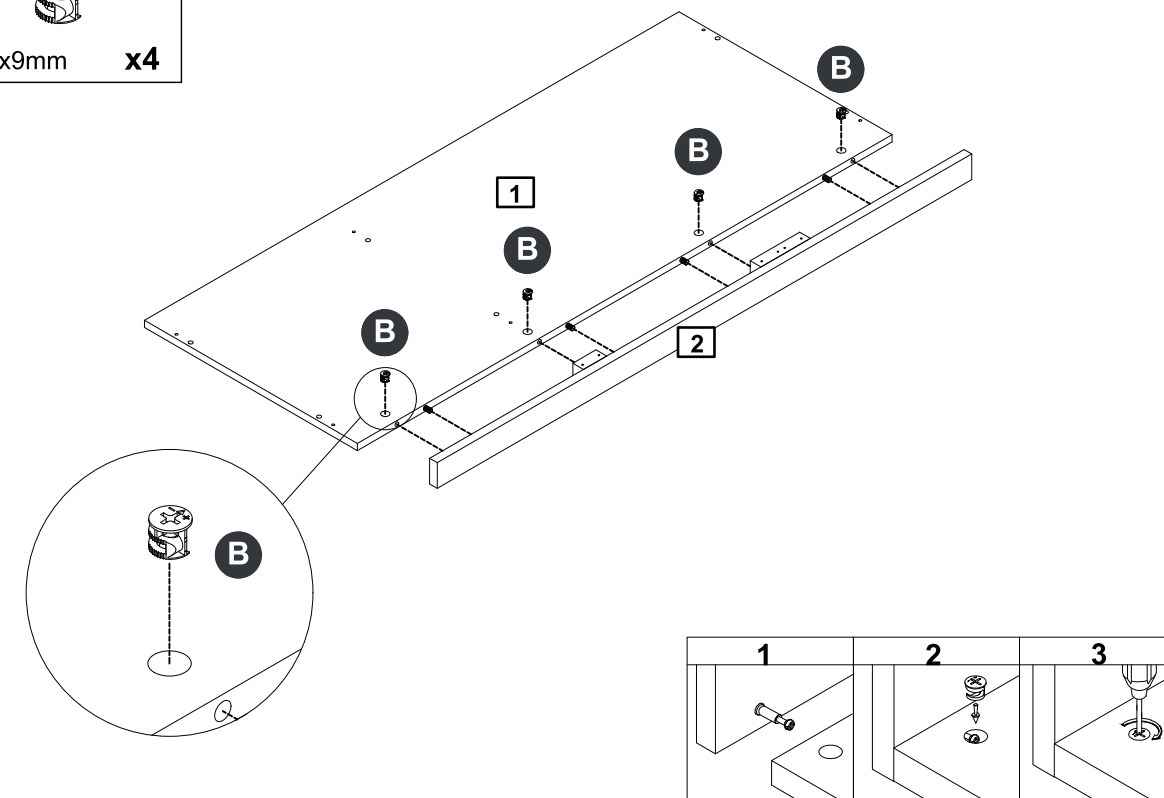

- Attach Part (2) to Part (1), then insert Female Cam Lock (B) to Part (1) and twist to secure.

Step 5

- E**  M3x15mm **x6**
- F**  Magnet **x3**

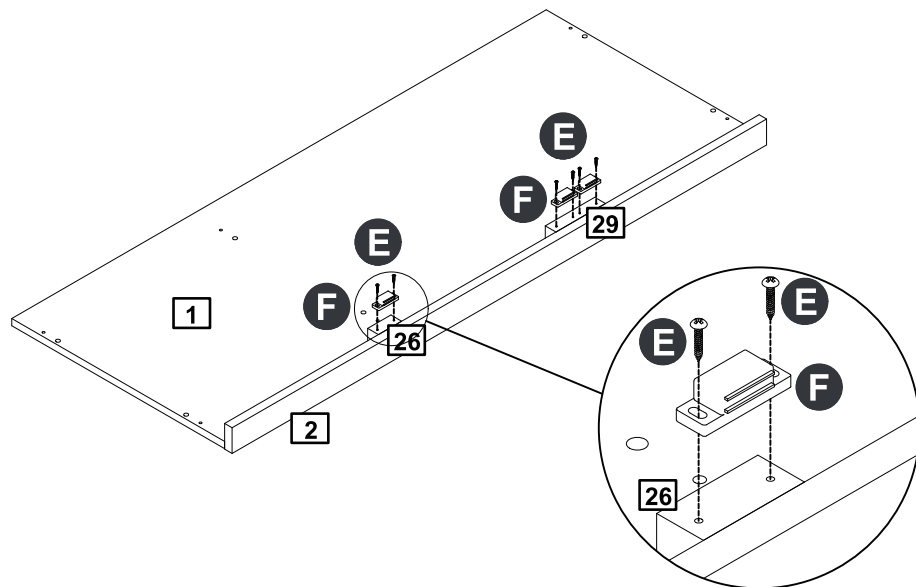


- Attach Parts (F) to Parts (26,29), then tighten the screws (E) with a screwdriver.

Note:

- Pay attention to the direction of the Parts (F) .


Step 6

- A**  M6x34mm **x7**
- C**  Ø8x30mm **x4**

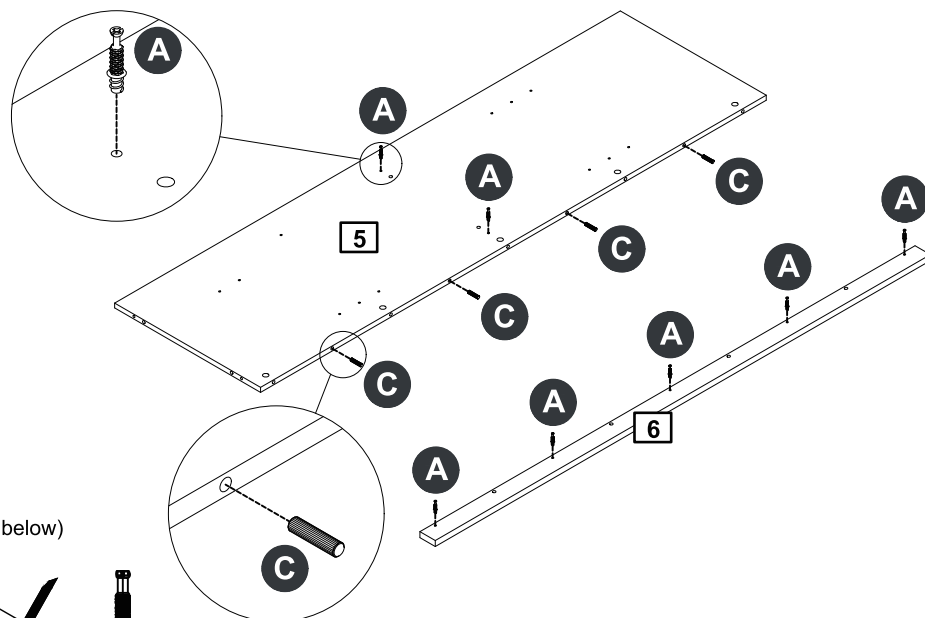

CAM-LOCK


Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

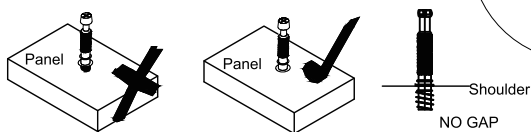

- Attach Male Cam Lock (A) to Parts (5,6) with a screwdriver.
- Insert Wooden Dowel (C) into Part (5).

Step 7


- B**  Ø15x9mm **x5**

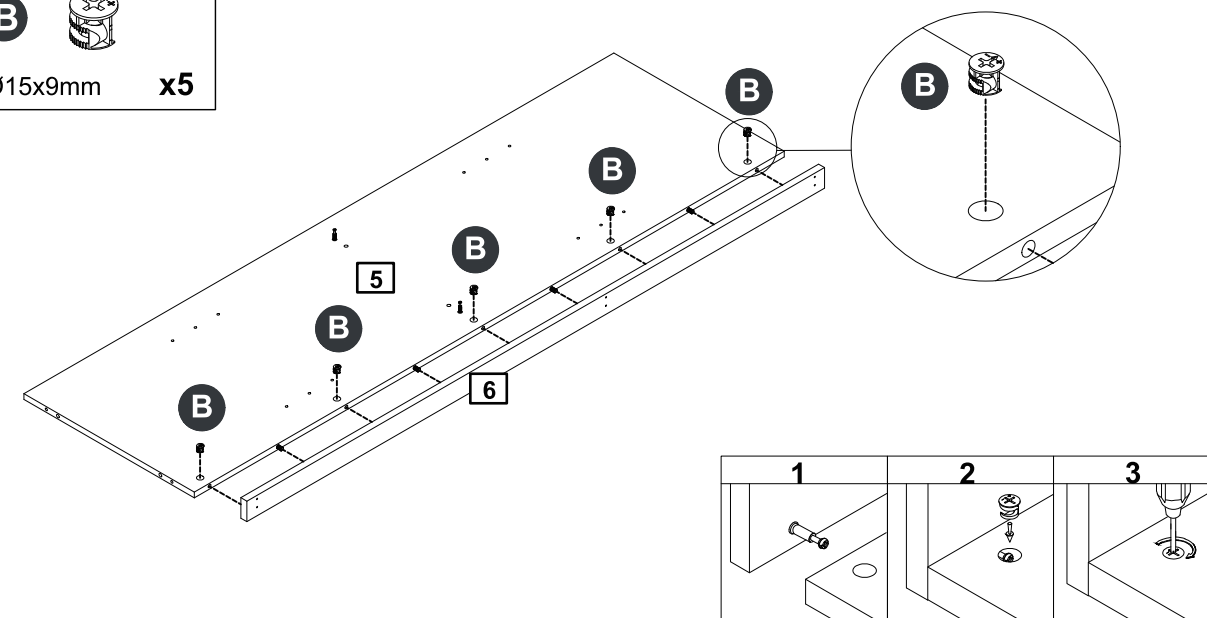

- Attach Part (6) to Part (5), then insert Female Cam Lock (B) to Part (5) and twist to secure.


Step 8

- A**  M6x34mm **x7**
- C**  Ø8x30mm **x8**

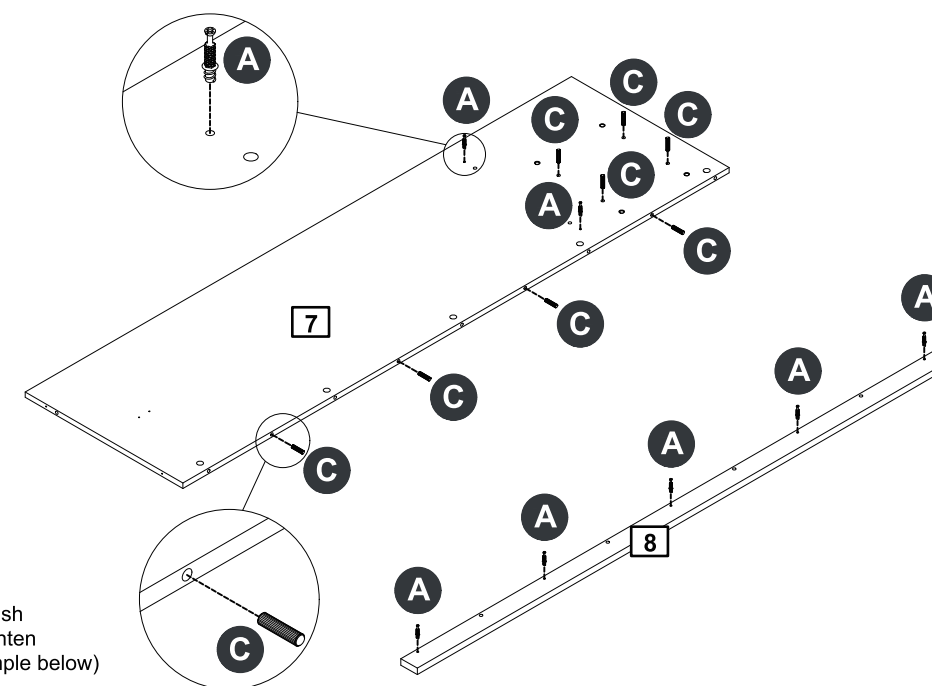

CAM-LOCK


Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

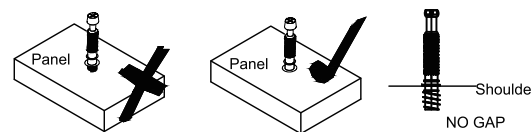

- Attach Male Cam Lock (A) to Parts (7,8) with a screwdriver.
- Insert Wooden Dowel (C) into Part (7).

Step 9

- G**  M6x35mm **x4**
- H**  M3x12mm **x2**
- I**  47x18x12mm **x1**

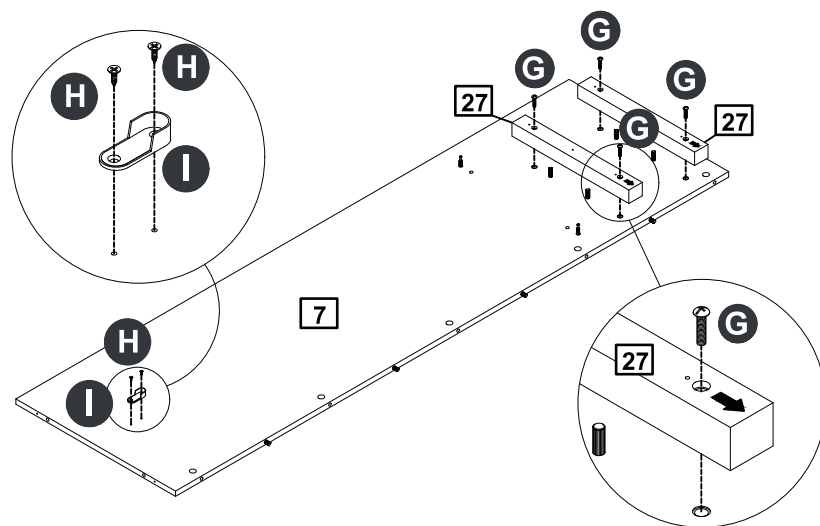


- Attach Part (I) to Part (7), then tighten the screws (H) with a screwdriver.
- Attach Parts (27) to Part (7), then tighten the screws (G) with a screwdriver.

Note:

- Pay attention to the direction of the arrow on the Parts (27) .

Step 10


- B**  Ø15x9mm **x5**

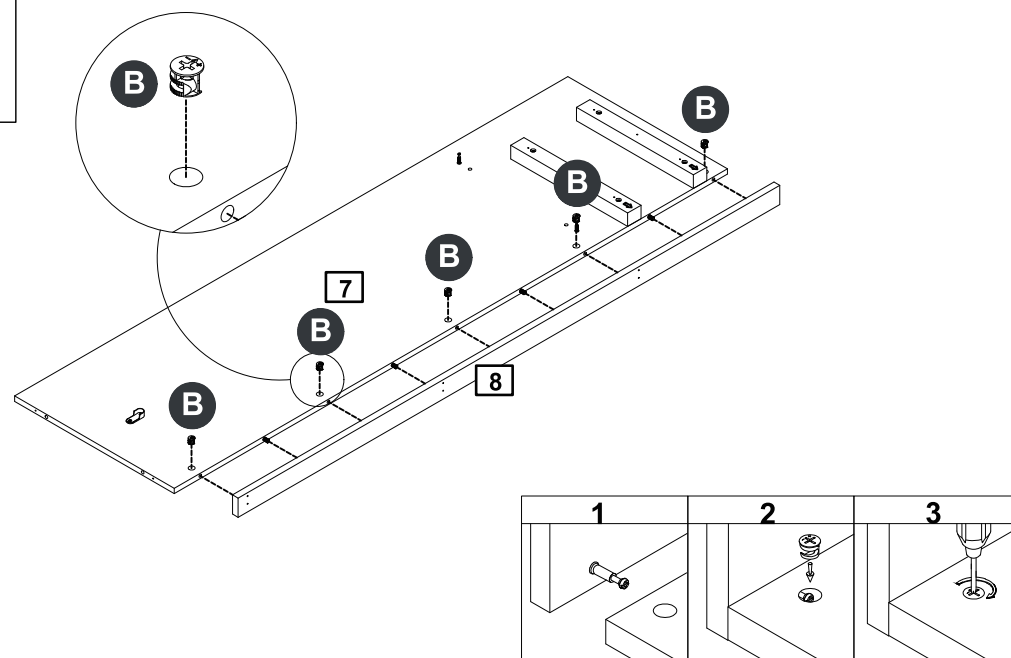

- Attach Part (8) to Part (7), then insert Female Cam Lock (B) to Part (7) and twist to secure.

Step 11


- Y**  Drawer slide **x2**
- N**  M3.5x12mm **x6**

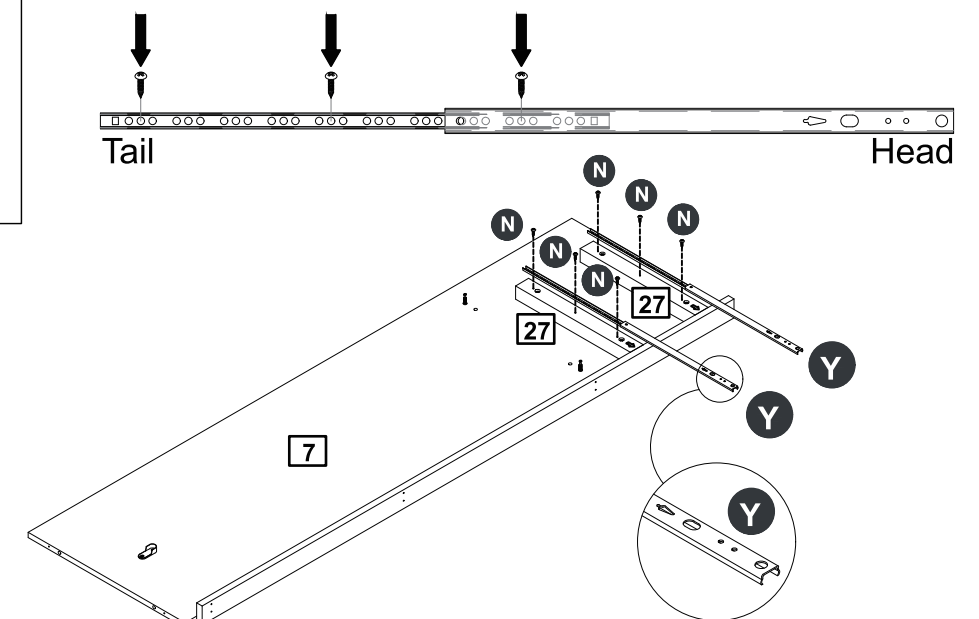


- Attach Drawer Slide (Y) to Parts (27), then tighten the screws (N) with a screwdriver.

Step 12

- A**  M6x34mm **x7**
- C**  Ø8x30mm **x8**

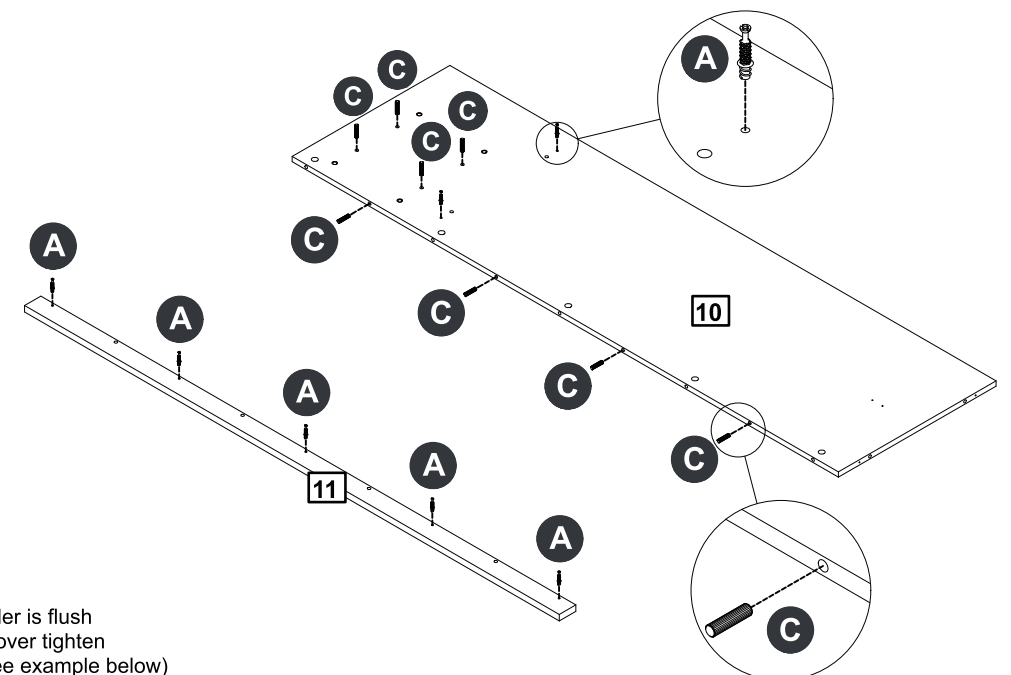


CAM-LOCK
Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

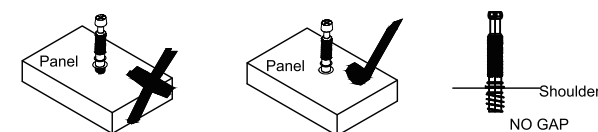

- Attach Male Cam Lock (A) to Parts (10,11) with a screwdriver.
- Insert Wooden Dowel (C) into Part (10).

Step 13

- G**  M6x35mm **x4**
- H**  M3x12mm **x2**
- I**  47x18x12mm **x1**

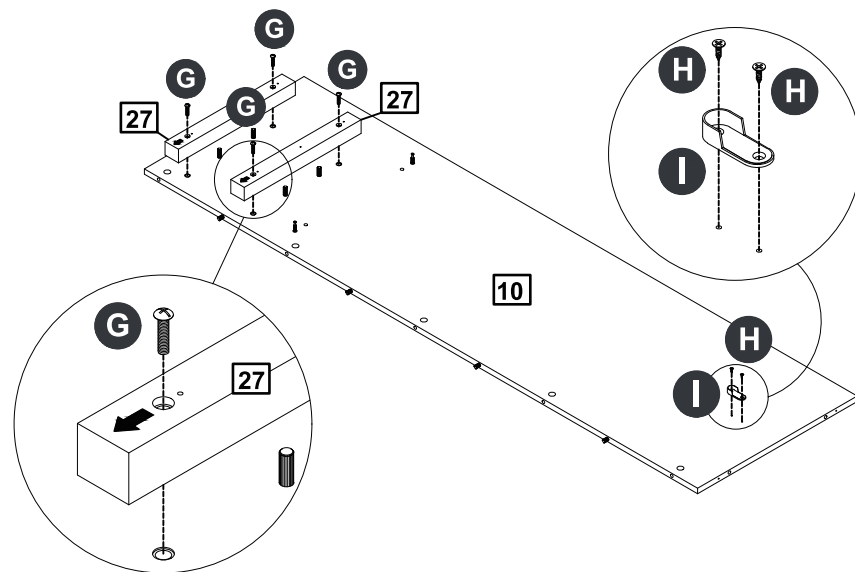


- Attach Part (I) to Part (10), then tighten the screws (H) with a screwdriver.
- Attach Parts (27) to Part (10), then tighten the screws (G) with a screwdriver.

Note:

- Pay attention to the direction of the arrow on the Parts (27) .

Step 14


- B**  Ø15x9mm **x5**

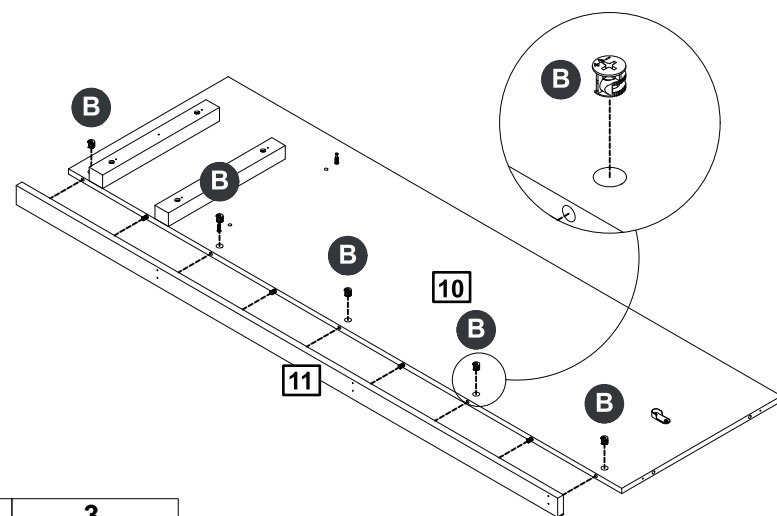

- Attach Part (11) to Part (10), then insert Female Cam Lock (B) to Part (10) and twist to secure.

Step 15


- Y**  Drawer slide **x2**
- N**  M3.5x12mm **x6**

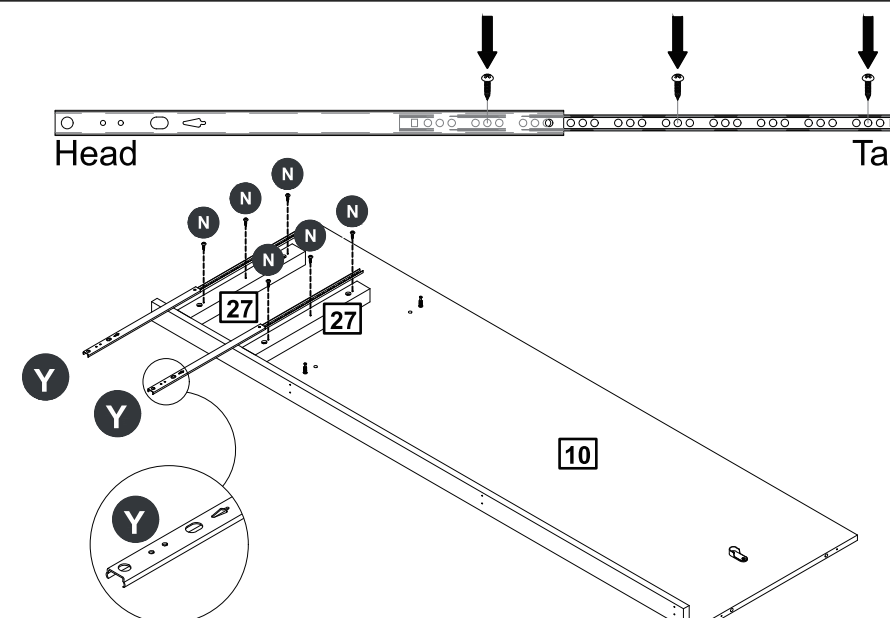


- Attach Drawer Slide (Y) to Parts (27), then tighten the screws (N) with a screwdriver.

Step 16

- A**  M6x34mm **x2**

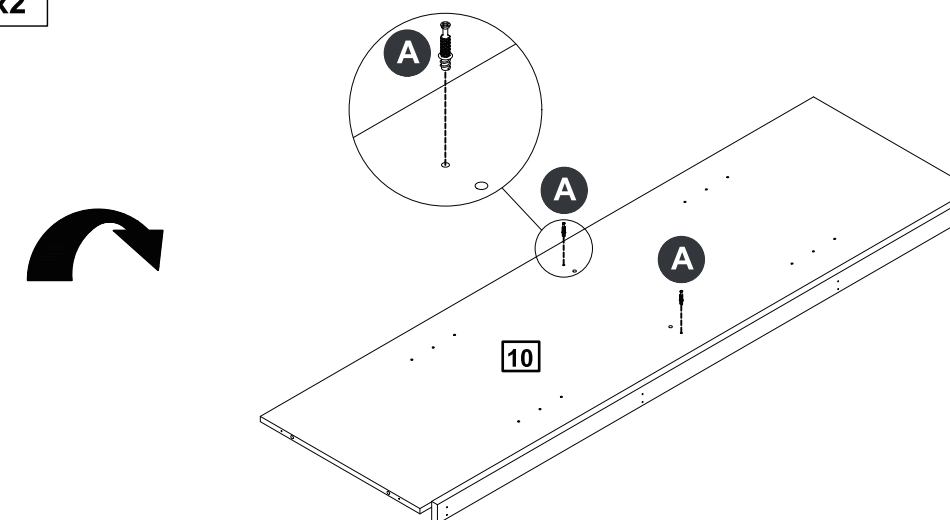


CAM-LOCK
Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

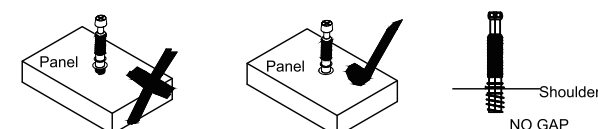

- Flip the Part (10) to the other side, attach Male Cam Lock (A) to Part (10) with a screwdriver.

Step 17

C 
 Ø8x30mm **x8**

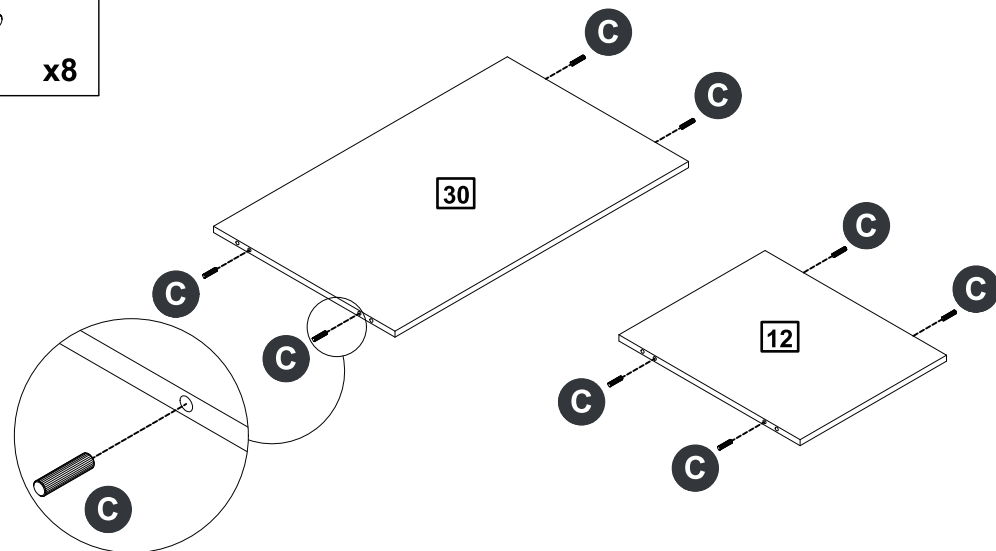


- Insert Wooden Dowel (C) into Parts (12,30).

Step 18

B 
 Ø15x9mm **x4**

C 
 Ø8x30mm **x8**

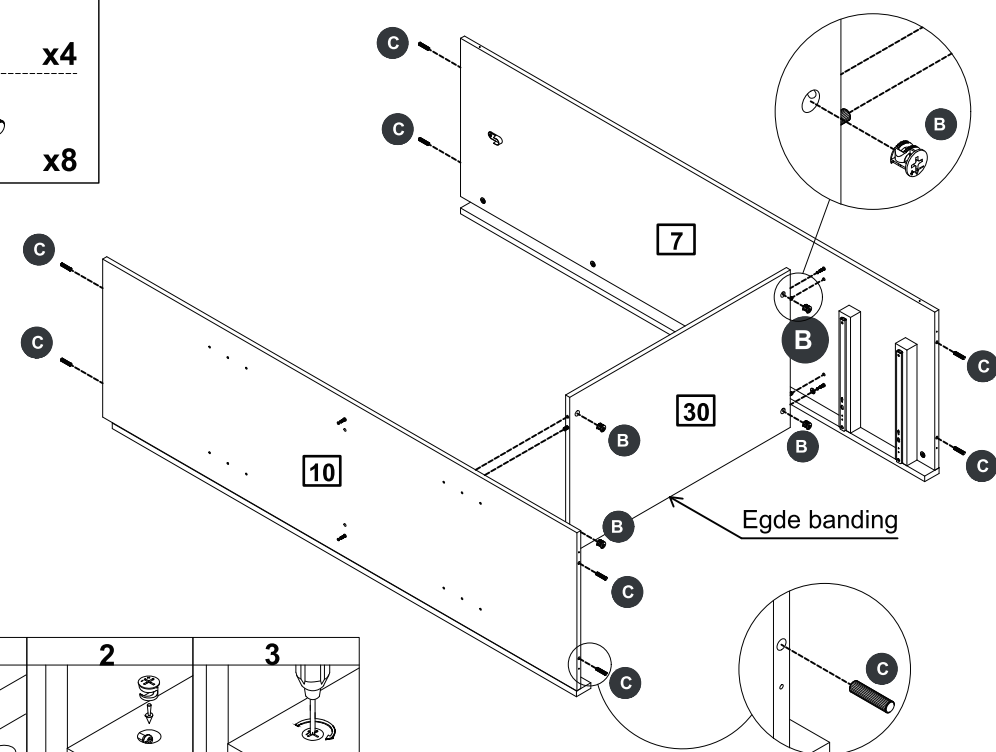


- Attach Parts (7,10) to Part (30), then insert Female Cam Lock (B) to Part (30) and twist to secure.
- Insert Wooden Dowel (C) into Parts (7,10).

Step 19


B 
 Ø15x9mm **x4**

C 
 Ø8x30mm **x4**

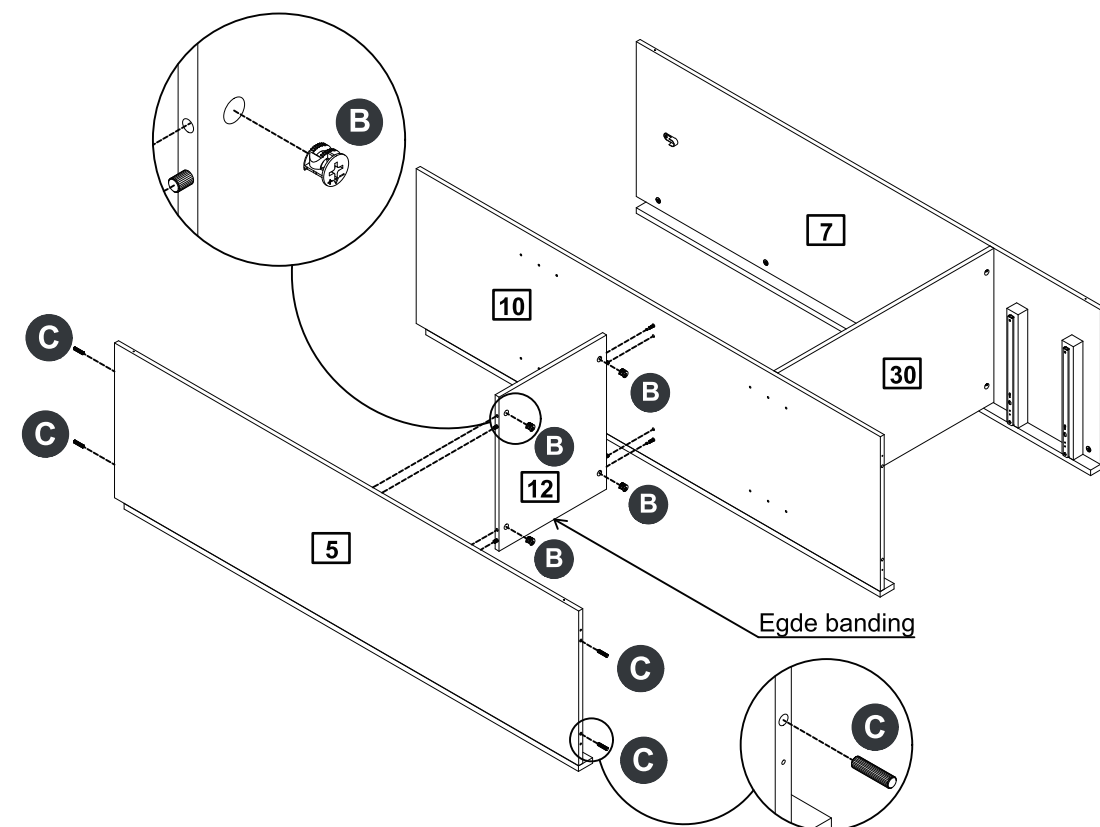

- Attach Parts (12,5) to Part (10), then insert Female Cam Lock (B) to Part (12) and twist to secure.
- Insert Wooden Dowel (C) into Part (5).

Step 20

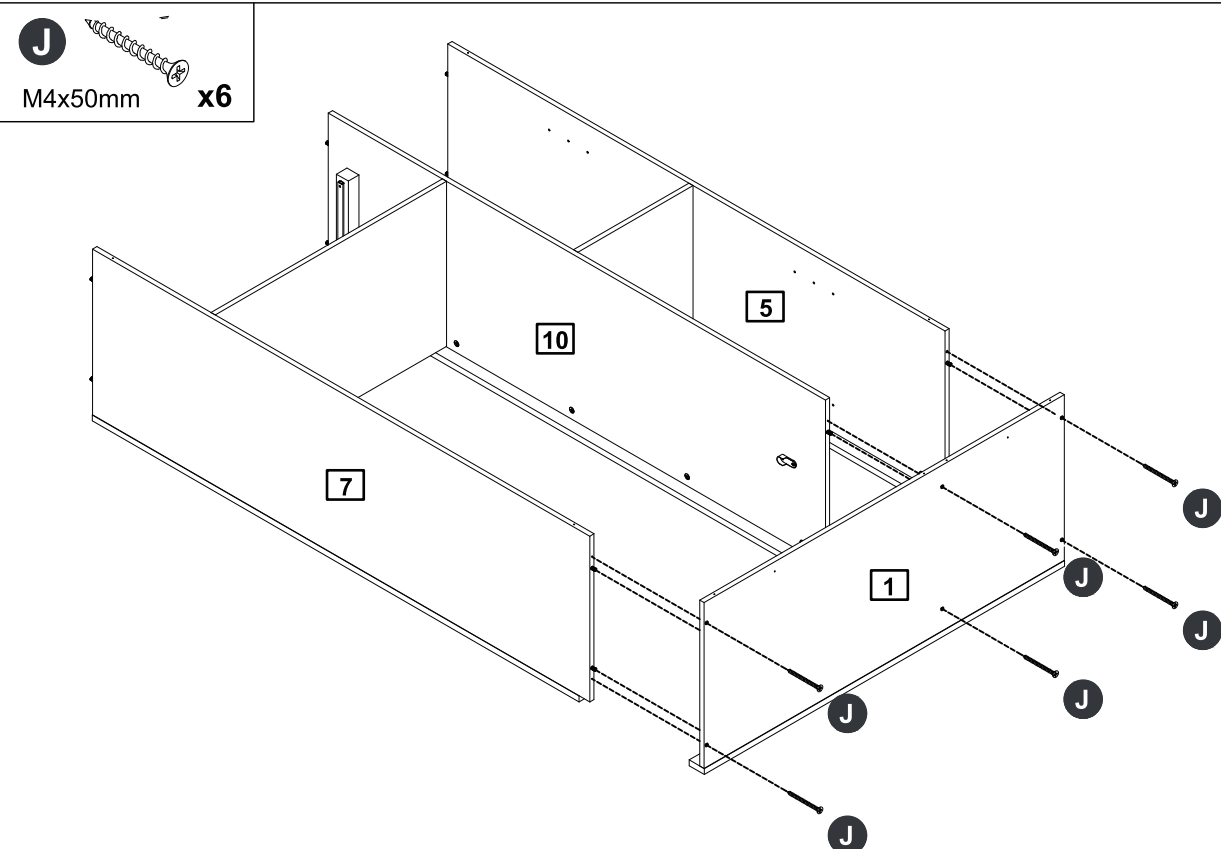


- Attach Part (1) to Parts (5,7,10), align the pre-drilled holes on Part (1) with the Wooden Dowel on Parts (5,7,10), then tighten the screws (J) with a screwdriver.

Note:


- Pay attention to keep the screws vertical and do not over tighten or over-loosen .

Step 21

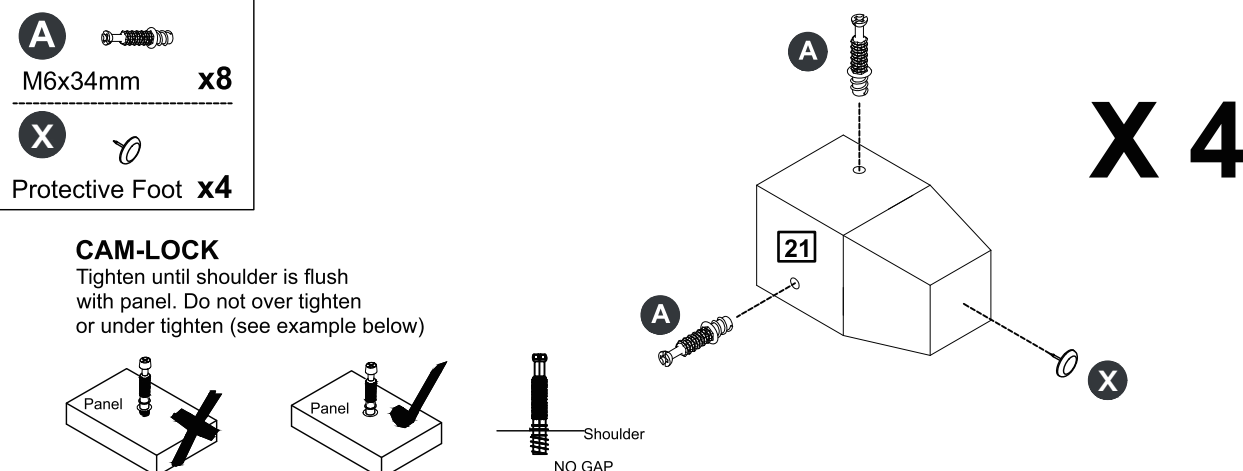


- Attach Male Cam Lock (A) to Part (2) with a screwdriver.
- Insert protective feet (X).

Step 22

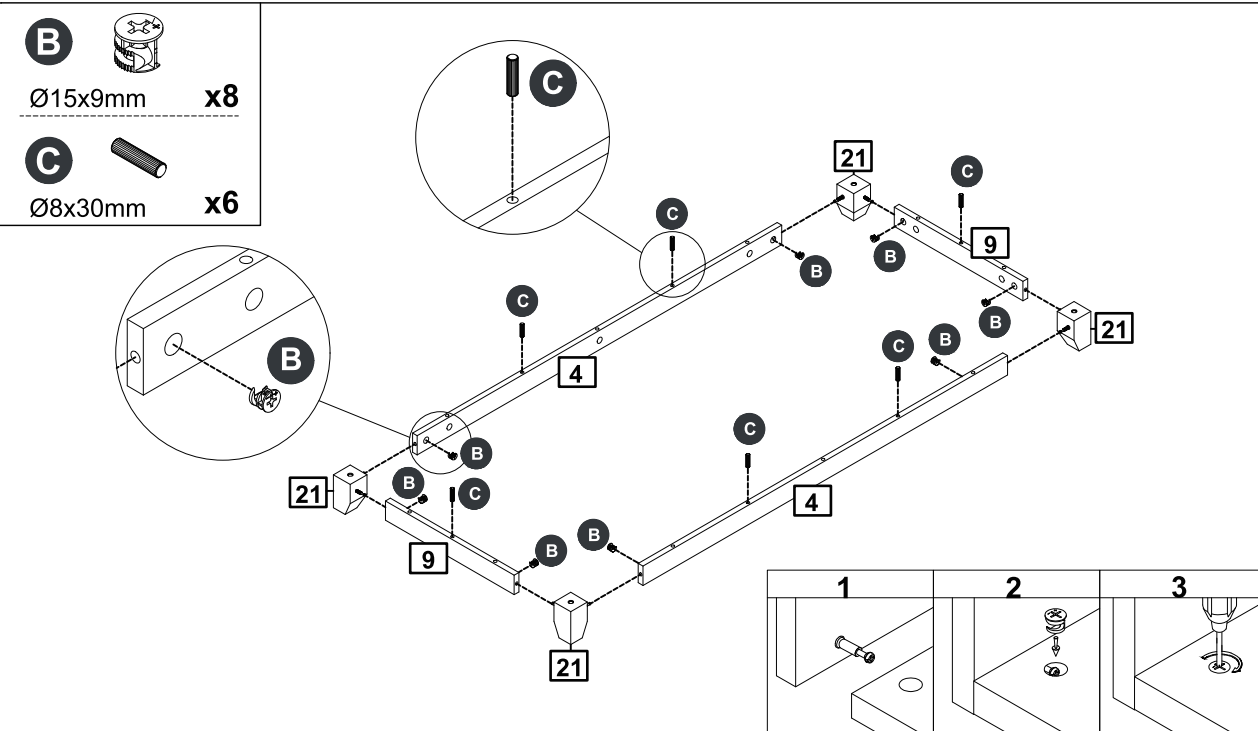


- Attach Parts (4,9) to Parts (21), then insert Female Cam Lock (B) to Part (4,9) and twist to secure.
- Insert Wooden Dowel (C) into Parts (4,9).


Step 23

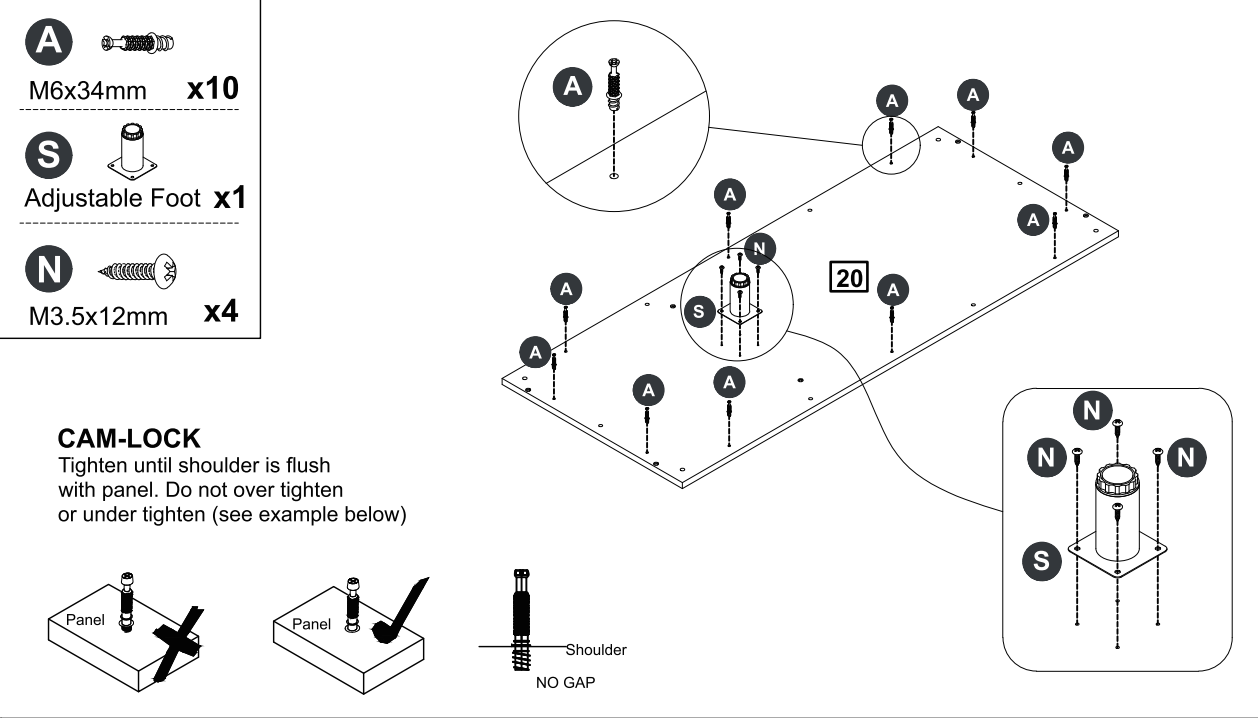

- Attach Male Cam Lock (A) to Part (20) with a screwdriver.
- Attach Part (S) to Part (20), align it with the pre-drilled holes on Part (20), then tighten the screws (N) with a screwdriver.

Step 24

J  M4x50mm **x6**

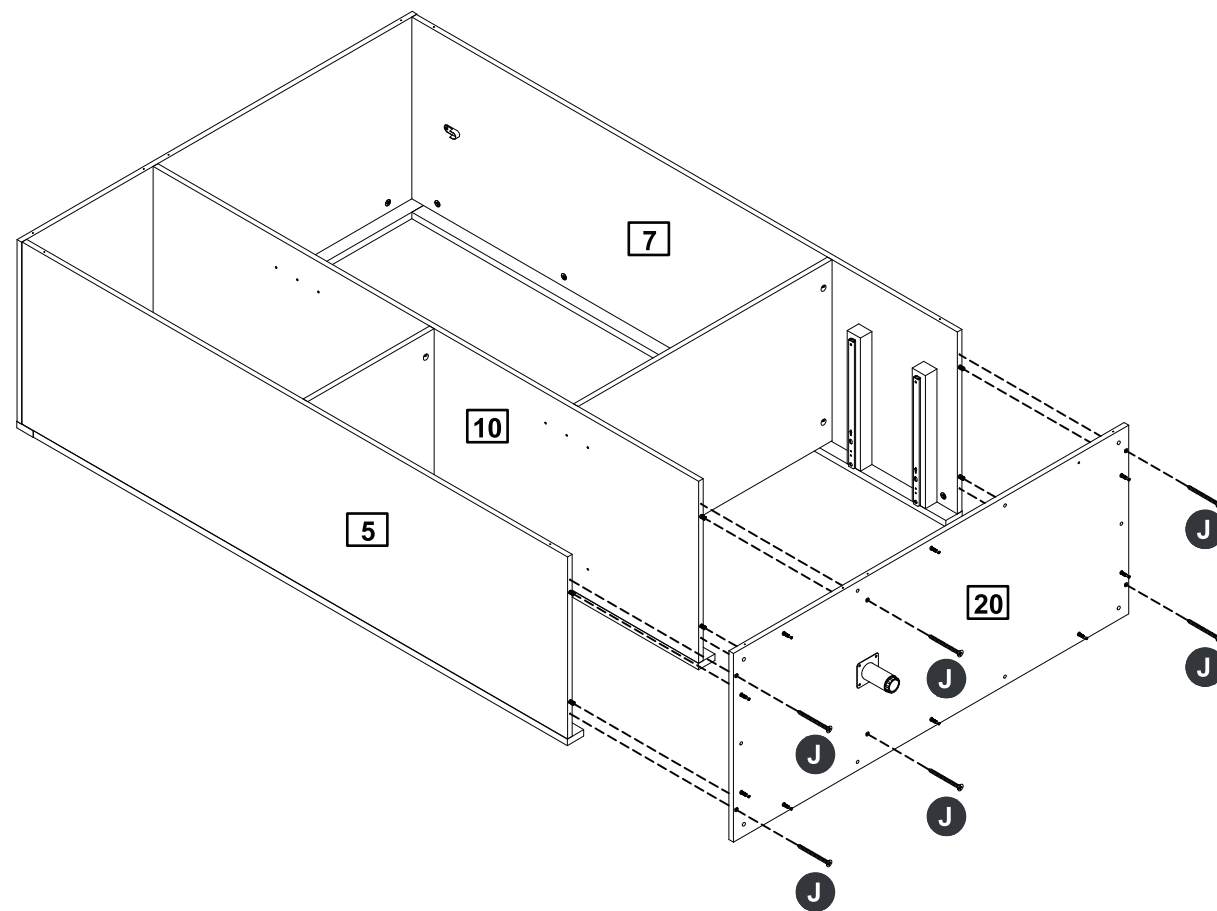


- Attach Part (20) to Parts (5,7,10), align the pre-drilled holes on Part (20) with the Wooden Dowel on Parts (5,7,10), then tighten the screws (J) with a screwdriver.

Note:

- Pay attention to keep the screws vertical and do not over tighten or over-loosen .

Step 25



G  M6x35mm **x4**

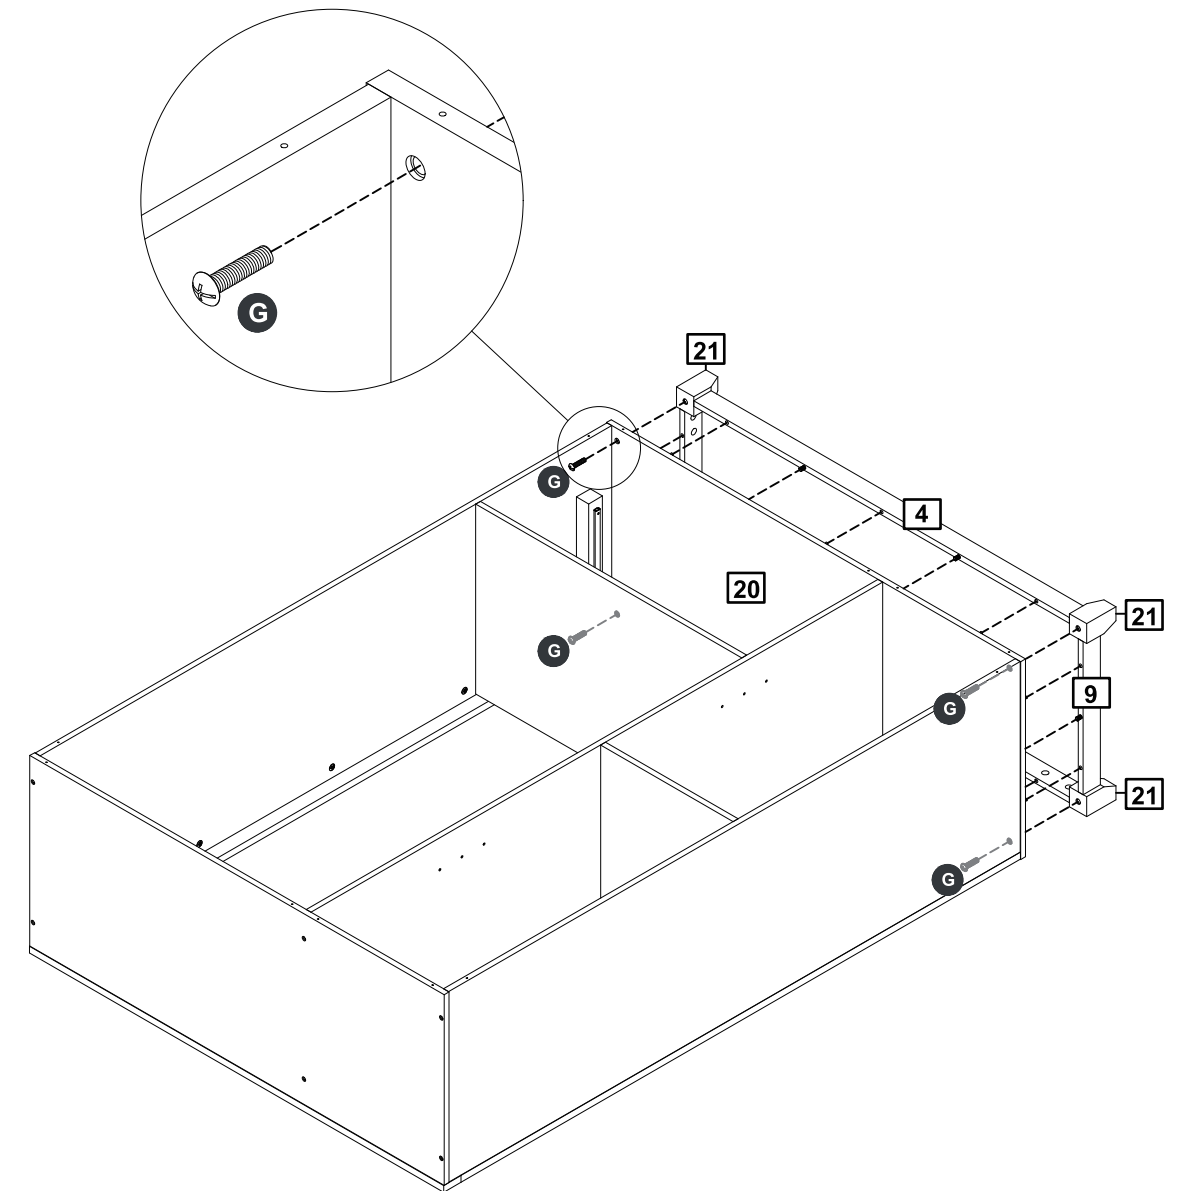

- Attach Bottom Frame (4,9,21) to Part (20), align the pre-drilled holes on Part (20) with the Wooden Dowel on Parts (4,9), then tighten the screws (G) with a screwdriver.

Step 26


B 
 Ø15x9mm **x10**

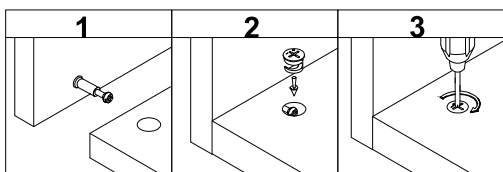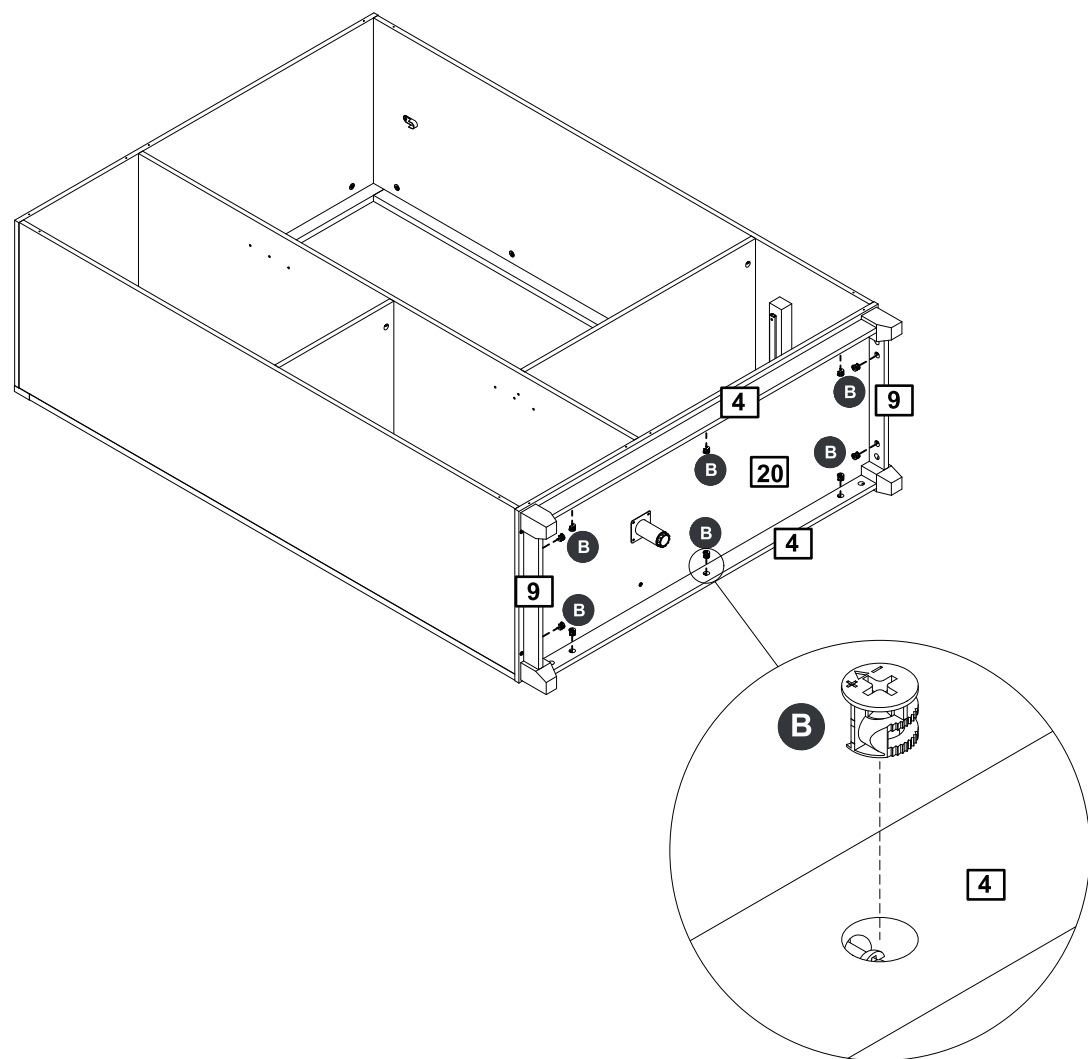

- Insert Female Cam Lock (B) to Parts (4,9) and twist to secure.

Step 27


K 
 M3x12mm **x12**

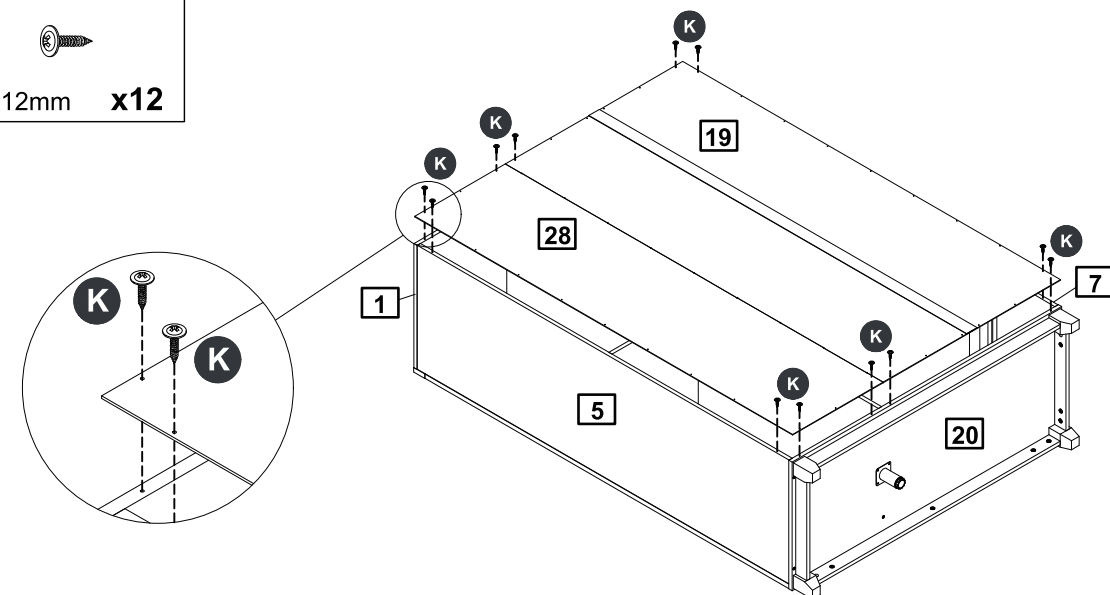

- Attach Parts (19,28) to the pre-assembled Armoire , align the pre-drilled holes on Part (19,28) with the pre-drilled holes on Parts (1,5,7,20), then tighten the screws (K) with a screwdriver.

Step 28


K 
 M3x12mm **x33**

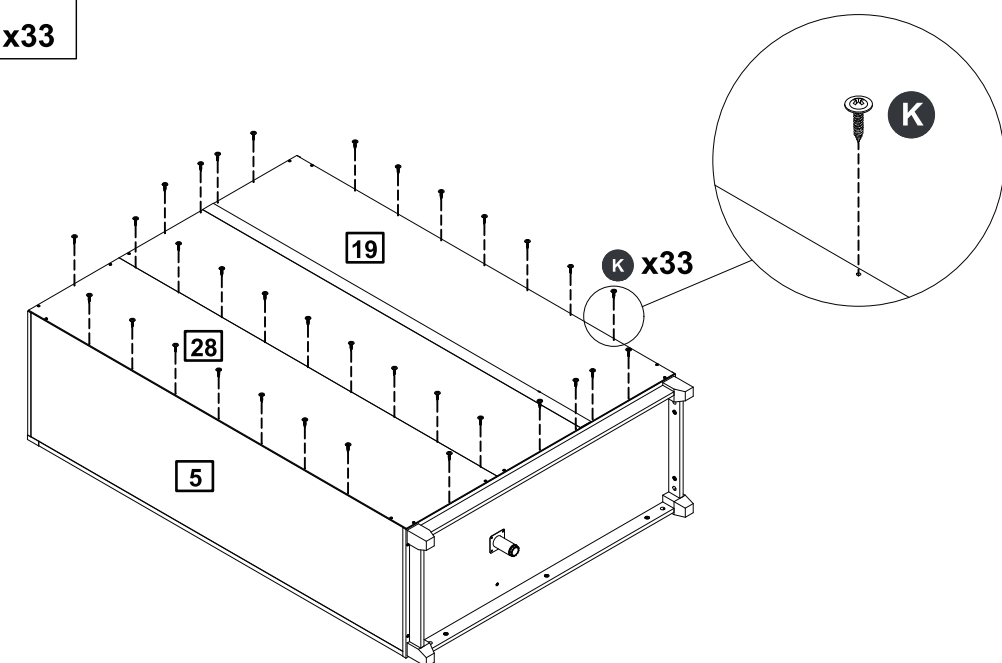


- Use Screws(K) to secure all holes in the back panels (19,28) .

Step 29

L 
Wall Fixing Pack **x2**

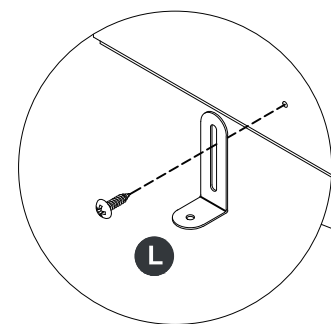


Tightening bolt to 70% for easier alignment during subsequent steps.

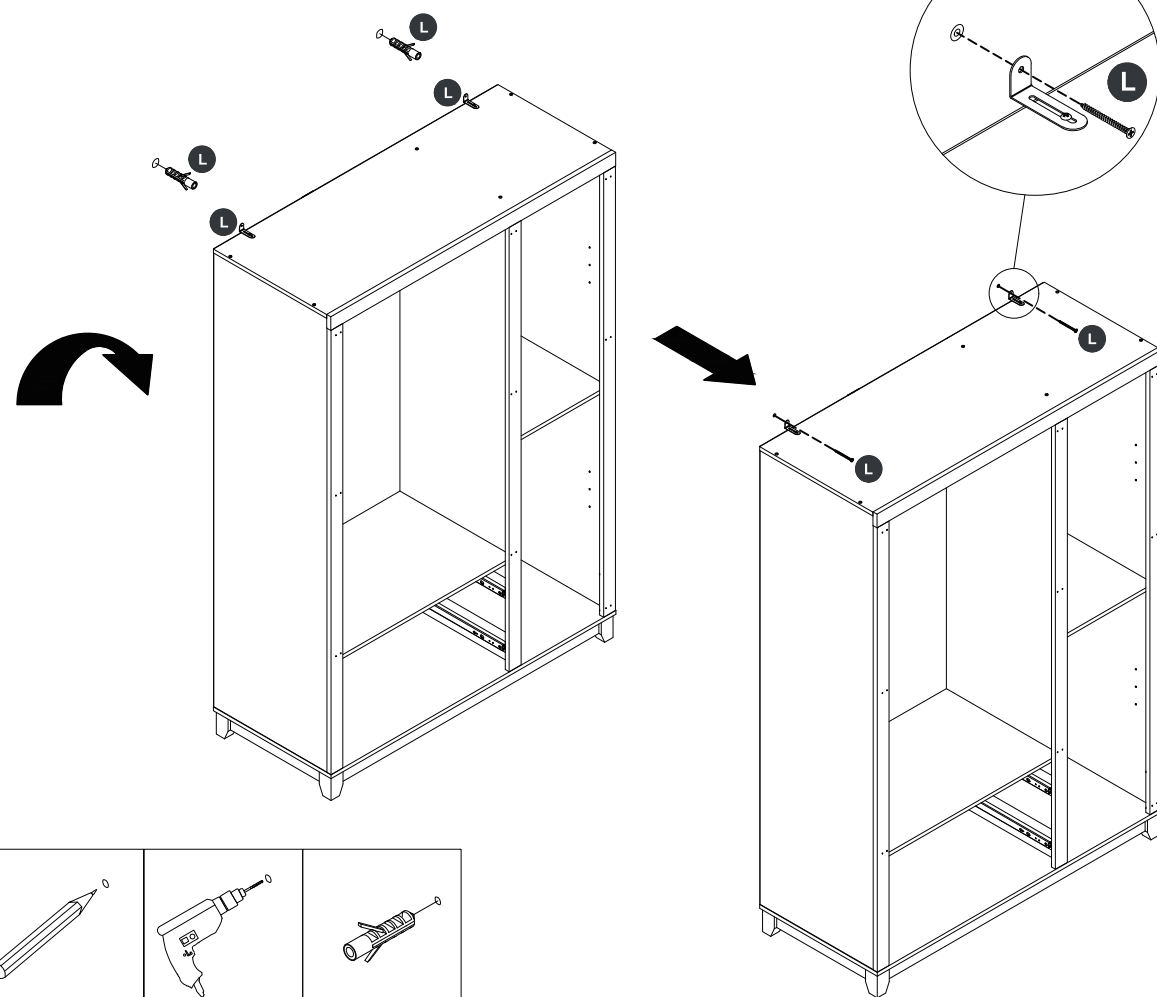

- Attach L-shaped brackets (L) to Part (1) , align it with the pre-drilled holes on Part (1), then use the short screws (L) with a screwdriver.
- Overturn the armoire, move the unit into desired position. mark the wall with a suitable scribe the position of the fixing holes.
- Use the long screws (L) to fix the armoire to the wall, tighten the short screws (L) last.

Step 30


O 
Shelf Support Pin **x8**

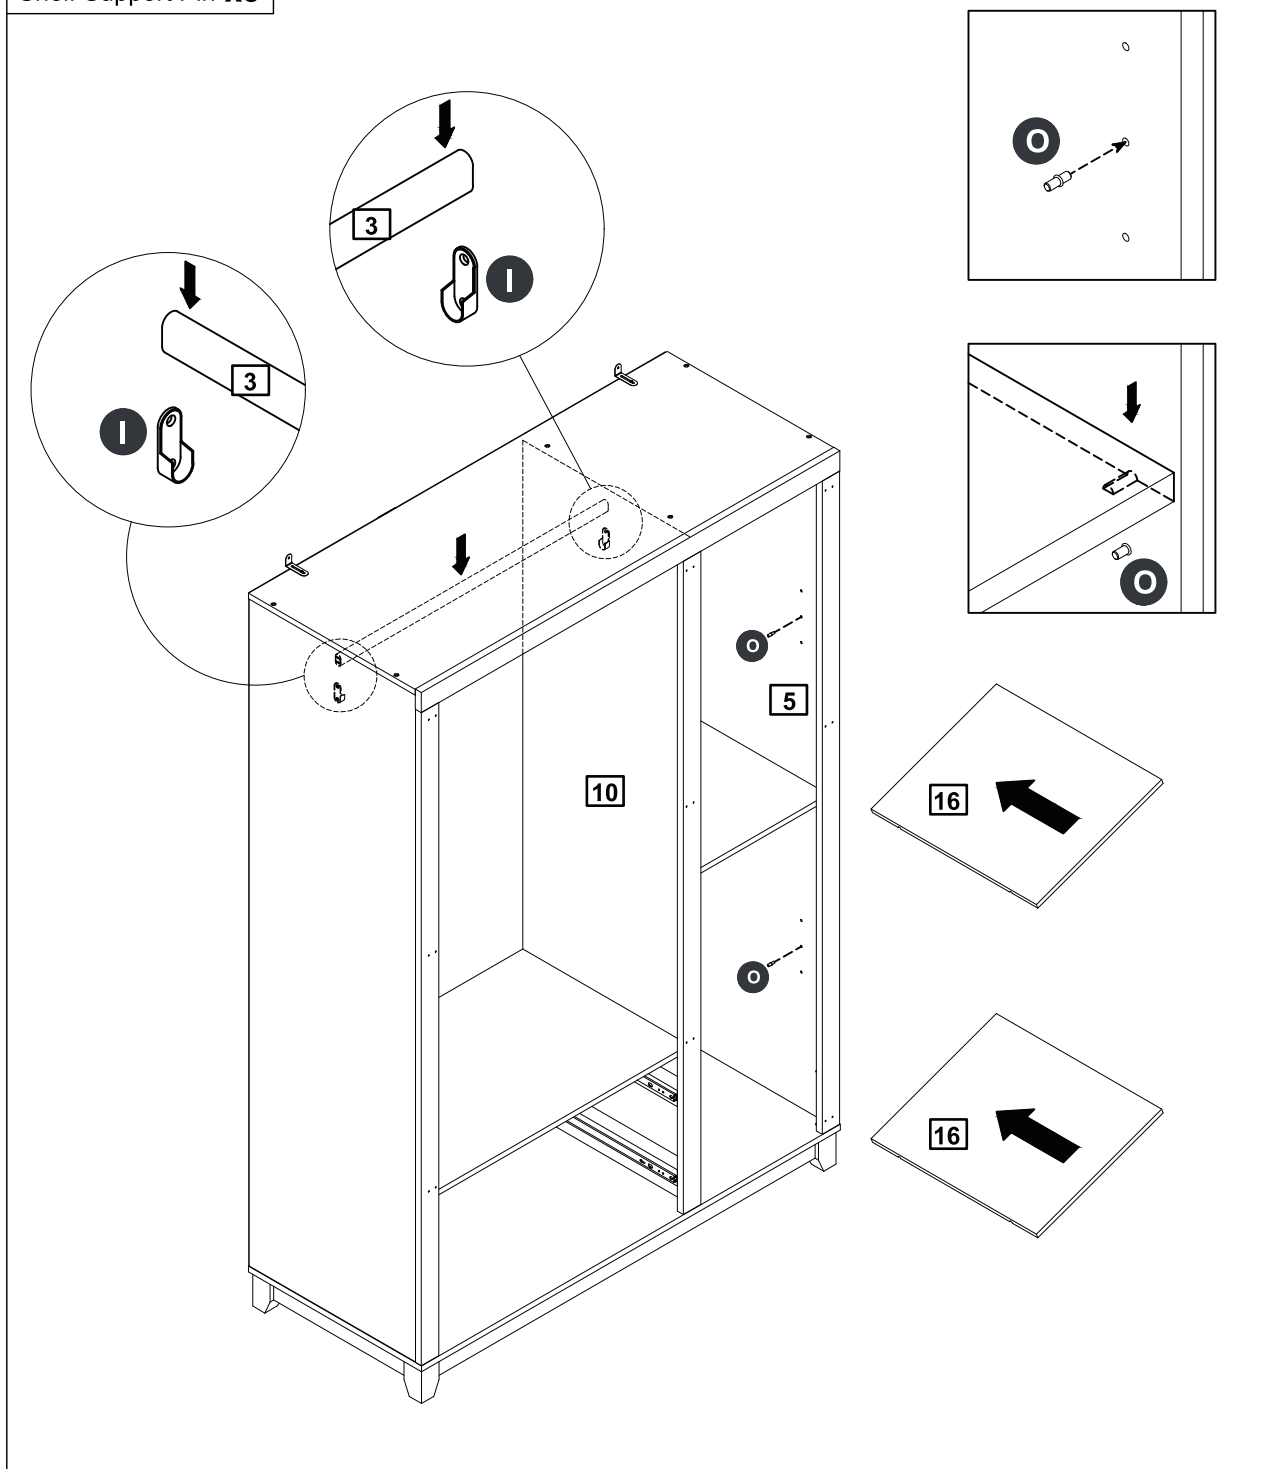

- Insert the Hanging rod (3) into Parts (I) .
- Insert Shelf Support Pin (O) into Part (5,10), there are 3 level of positions and you can choose one.
- Place Parts (16) on the top of Shelf Support Pin (O), there are four grooves on each panel to fix .

Step 31


- P**  **x3**
F  **x3**
H  **x6**

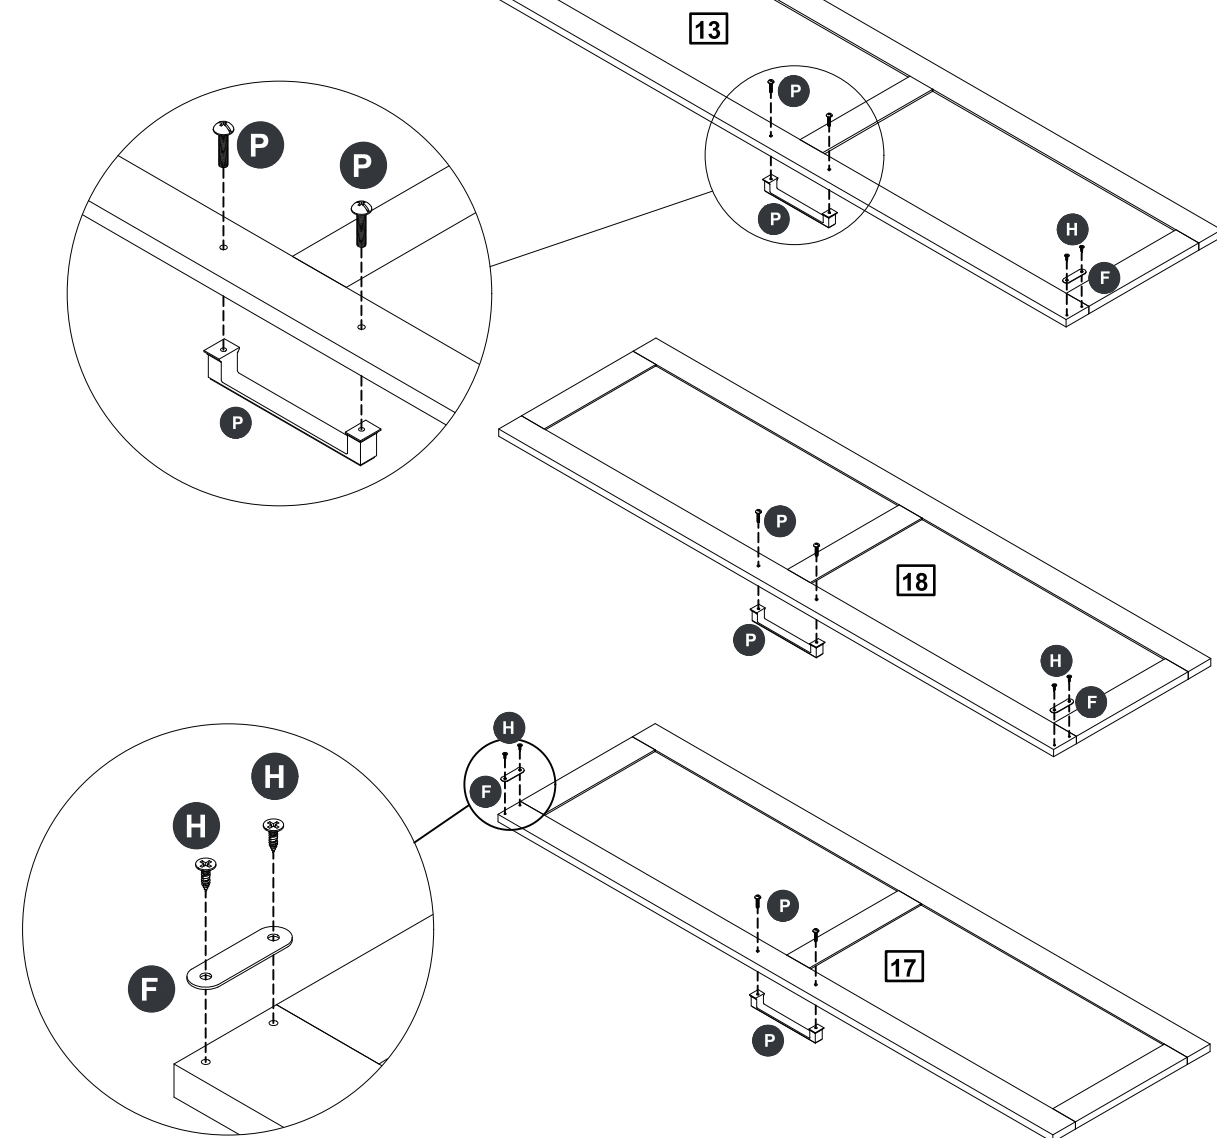

- Attach Parts (F) to Parts (13,17,18), align it with the pre-drilled holes on Parts (13,17,18), then tighten the screws (H) with a screwdriver.
- Attach Handles (P) to Parts (13,17,18), then tighten the Screws (P) with a screwdriver.

Step 32


- M**  **x9**
N  **x27**

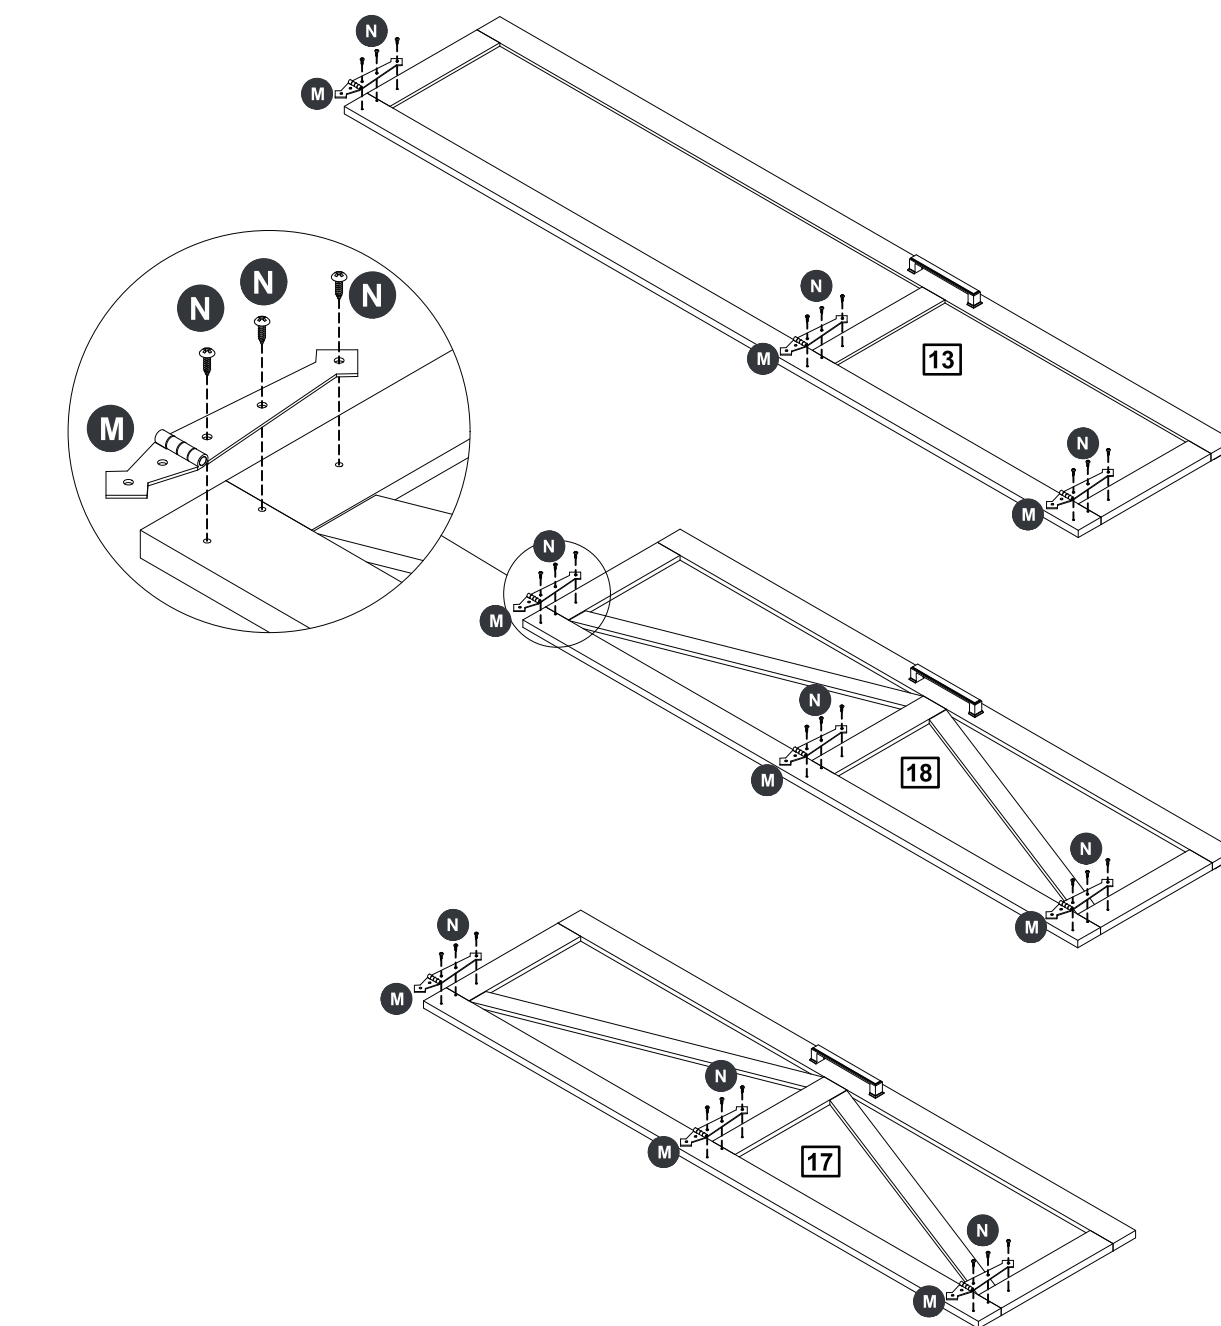

- Attach Parts (M) to Parts (13,17,18), align it with the pre-drilled holes on Parts (13,17,18), then tighten the screws (N) with a screwdriver.

Step 33

N 
M3.5x12mm **x18**

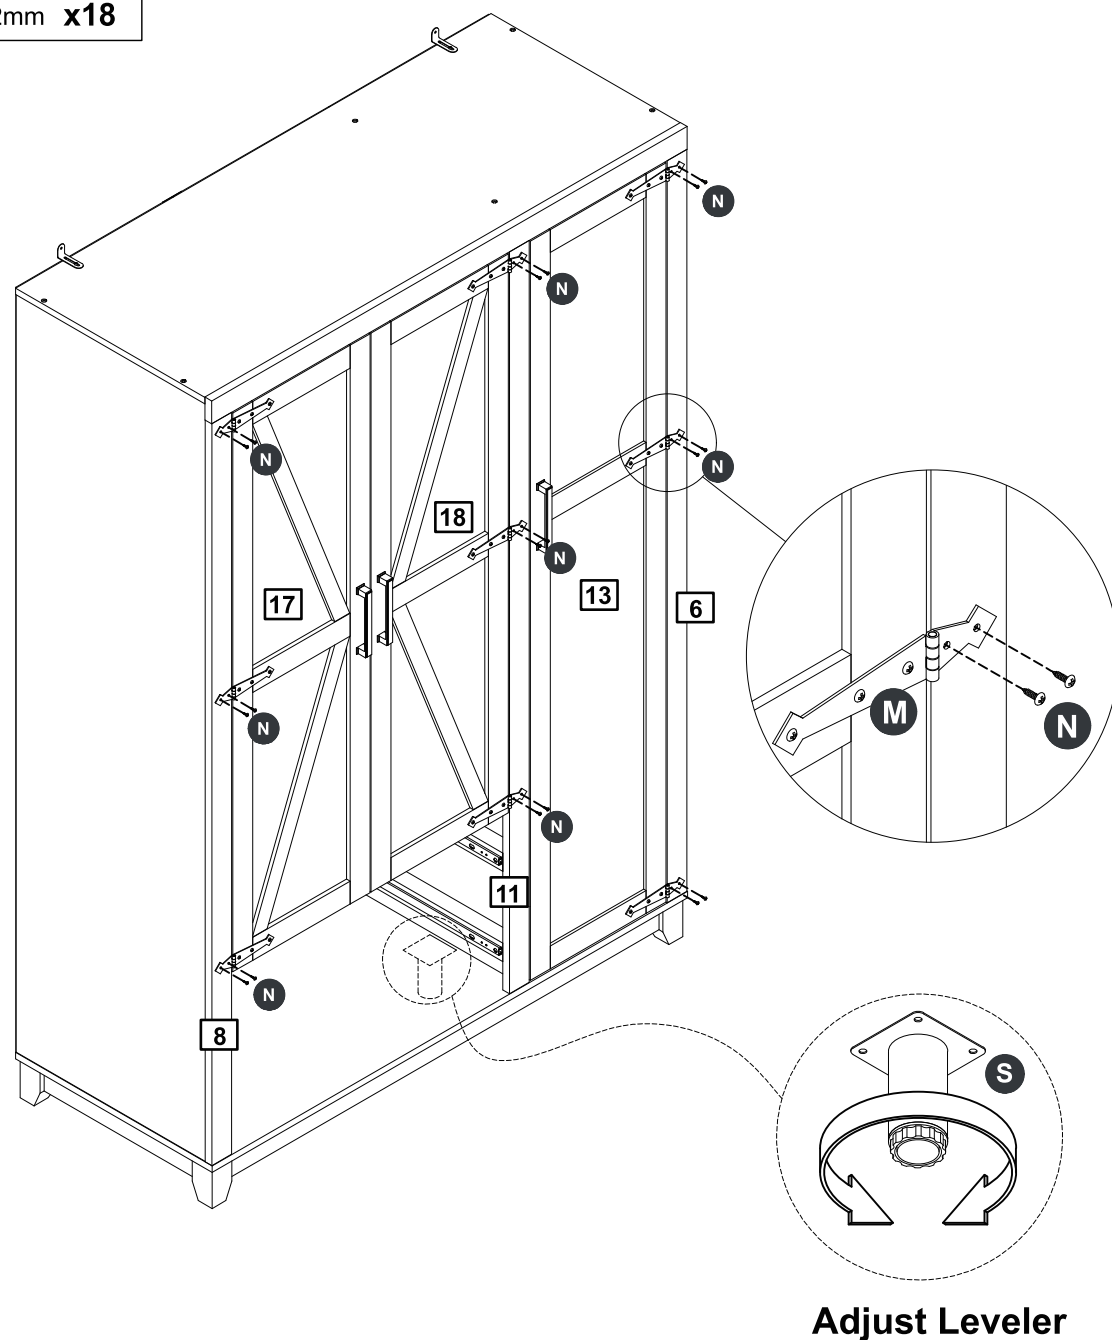



- Attach Part (17) to Part (8), align the holes on hinges (M) with the pre-drilled holes on Part (8), then tighten the screws (N) with a screwdriver.
- Attach Part (18) to Part (11), align the holes on hinges (M) with the pre-drilled holes on Part (11), then tighten the screws (N) with a screwdriver.
- Attach Part (13) to Part (6), align the holes on hinges (M) with the pre-drilled holes on Part (6), then tighten the screws (N) with a screwdriver.
- The Center Support Leg (S) should be adjusted manually until all door top edges are flush.

Step 34

A 
M6x34mm **x10**

Q 
Handle & Fixings **x2**



CAM-LOCK
Tighten until shoulder is flush with panel. Do not over tighten or under tighten (see example below)

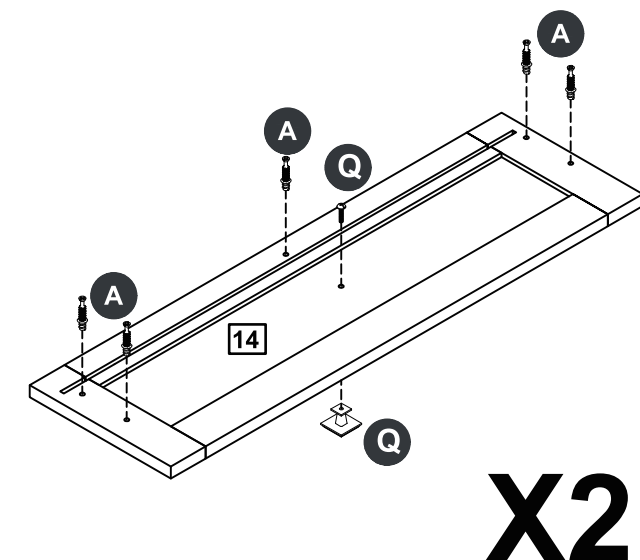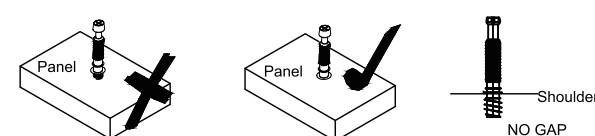

- Attach Male Cam Lock (A) to Parts (14) with a screwdriver.
- Attach Handle (Q) to Part (14), then tighten the screws (Q) with a screwdriver.


Step 35

B 
Ø15x9mm **x10**

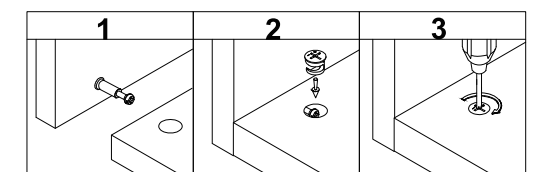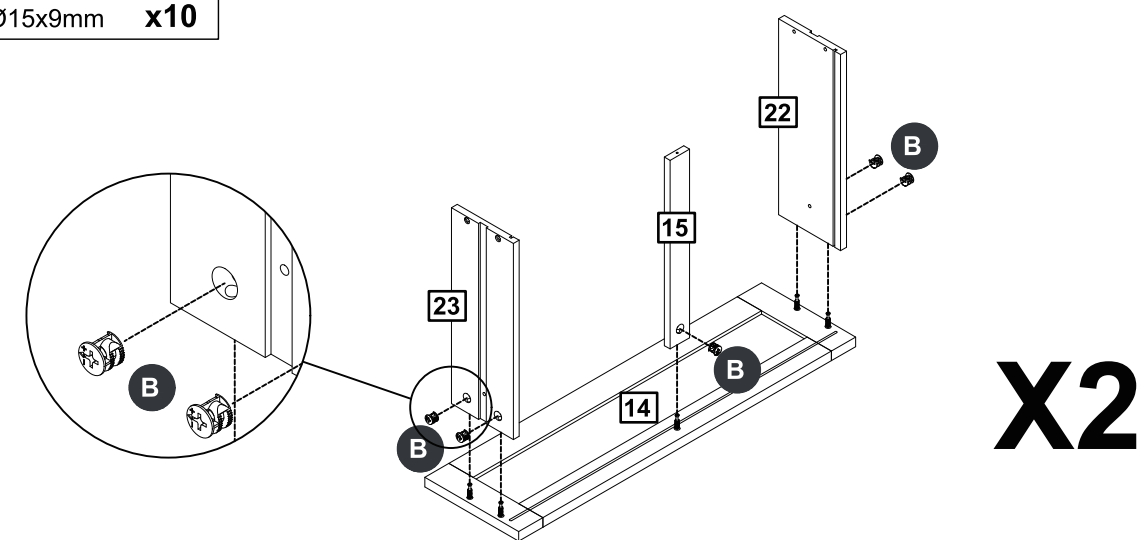

- Attach Parts (15,22,23) to Part (14), then insert Female Cam Lock (B) to Part (15,22,23) and twist to secure.


Step 36

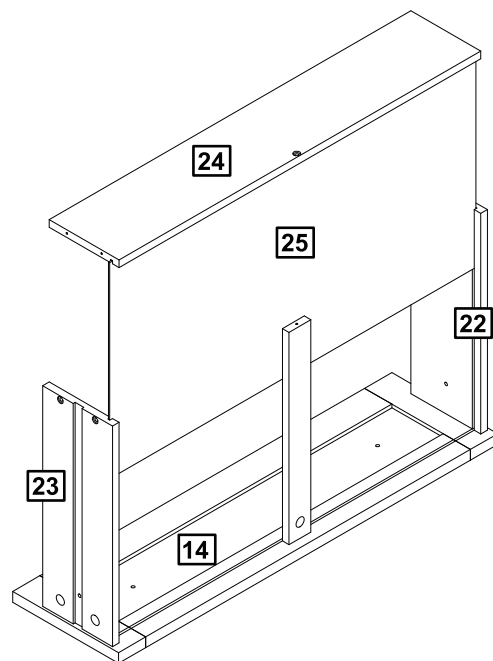


X2

- Slide Part (25) into grooves of Parts (14,22,23) .
- Attach Part (24) to Parts (22,23,25).

Step 37

D 
M4x35mm **x10**

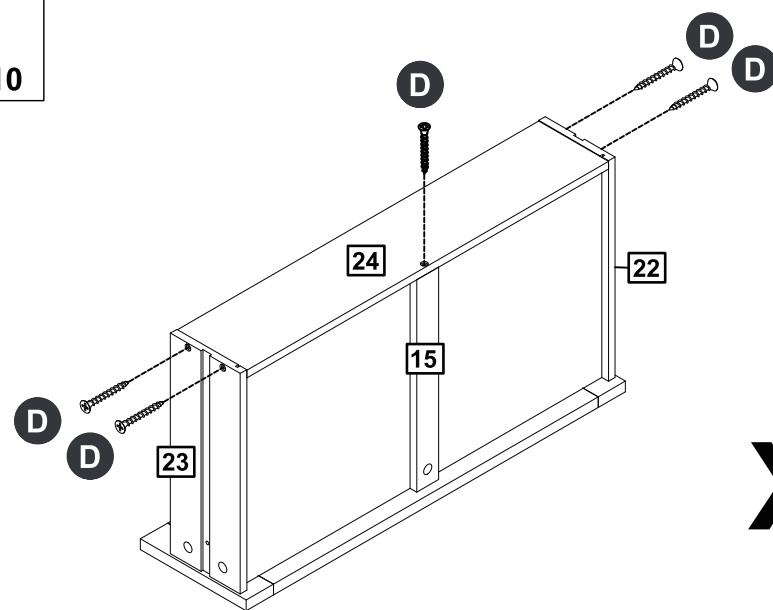


X2

- Align the pre-drilled holes on Parts (15,24), then tighten the screws (D) with a screwdriver.
- Align the pre-drilled holes on Parts (22,23,24), then tighten the screws (D) with a screwdriver.

Step 38

R 
M4x12mm **x4**

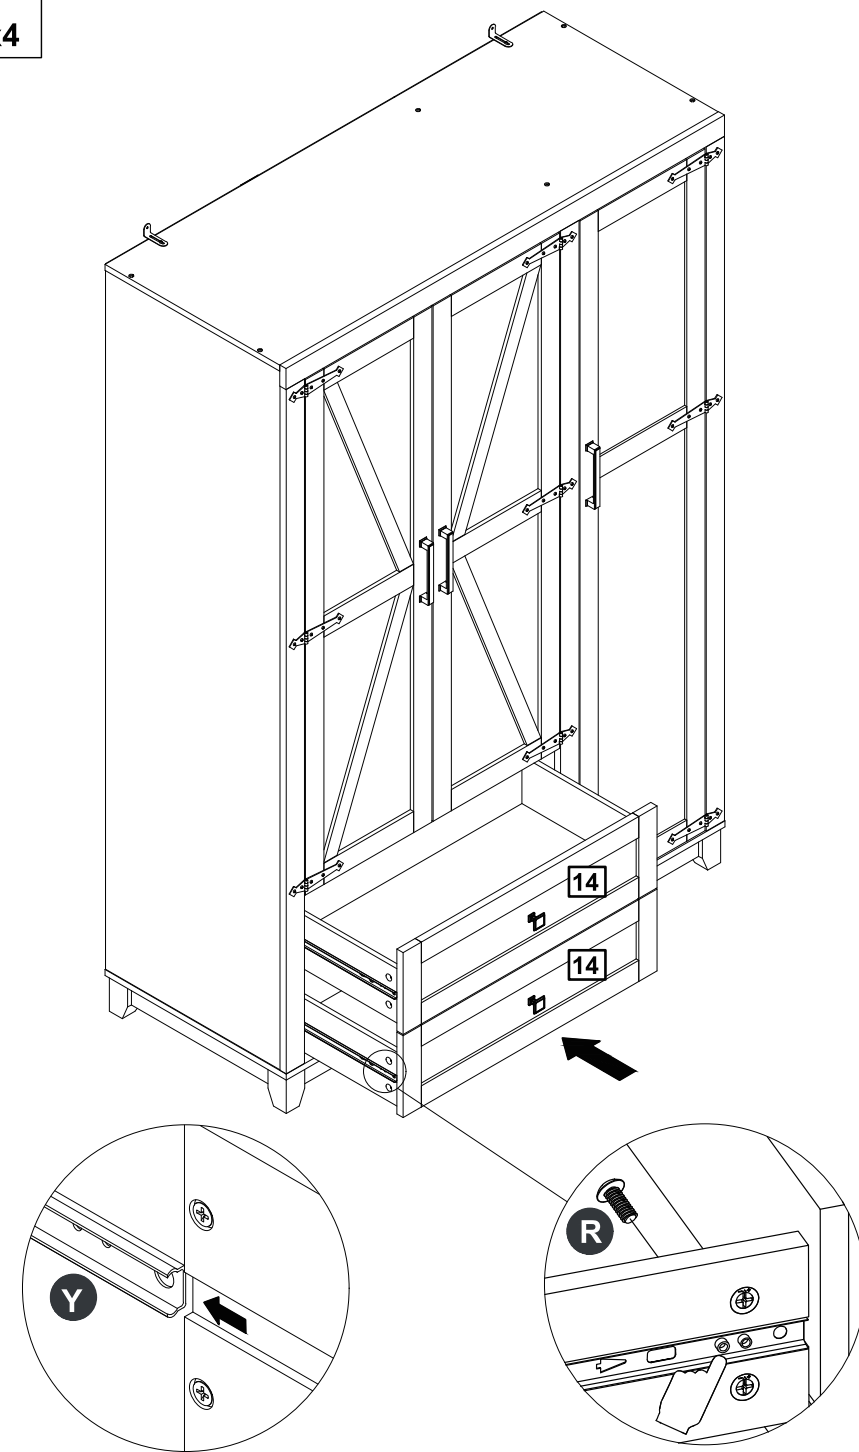

It is highly recommended that the unit is secured to the wall. You can skip to the next step first, then come back to this step once the armoire is secured to the wall.

- 1.Check Before Installing: Ensure the rails are secure and ball bearings are in place.
- 2.Prepare: Slide the ball bearings to the front of the rails before closing.
- 3.Secure the Drawer: Use screw (R) to fasten the Drawer slider (Y) with parts (22, 23).

A Guide to Wall Mounting & Fixings



Important Note:

- If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:
- these are only suitable for use in masonry walls.
- If you are in any doubt about the correct wall plugs for your wall, seek professional advice.
- Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important : When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:


- 1: General rule: always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.


1. "General Purpose" wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

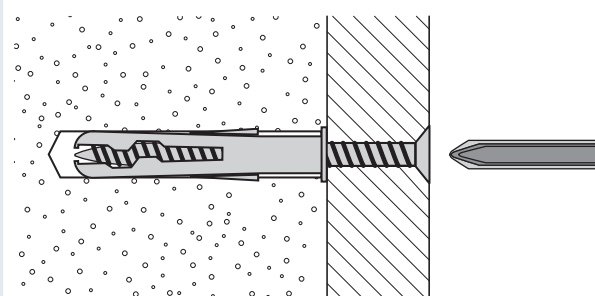


2. "Plasterboard" wall plug

For use when attaching light loads onto plasterboard partitions.

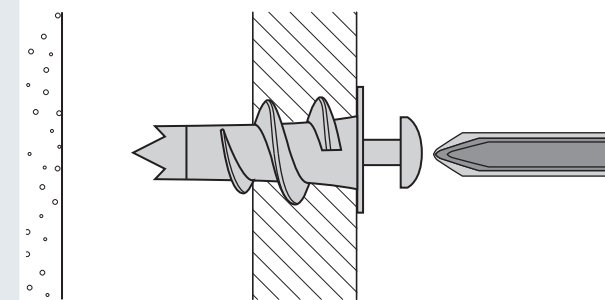


3. "Cavity Fixing" wall plug

For use with plasterboard partitions or hollow wooden doors.

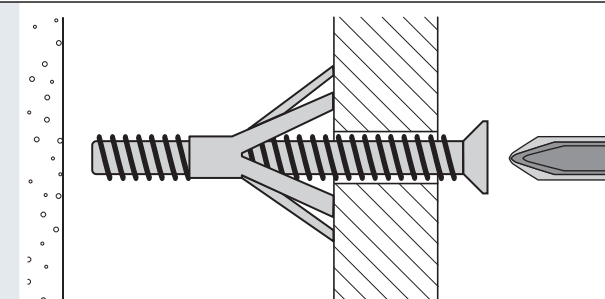


4. "Cavity Fixing – Heavy Duty" wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

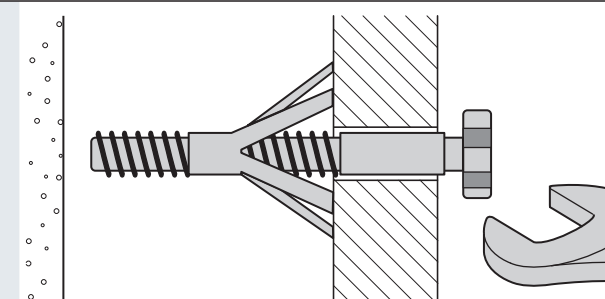


5. "Hammer Fixing" wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

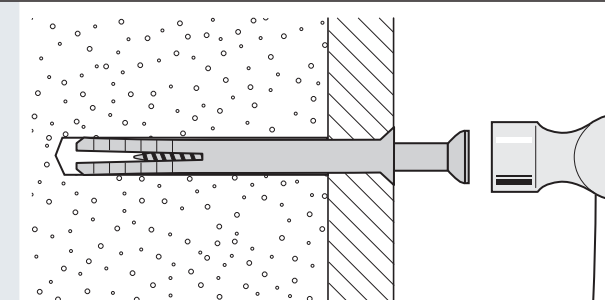

6. "Shield Anchor" wall plug – heavy loads

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

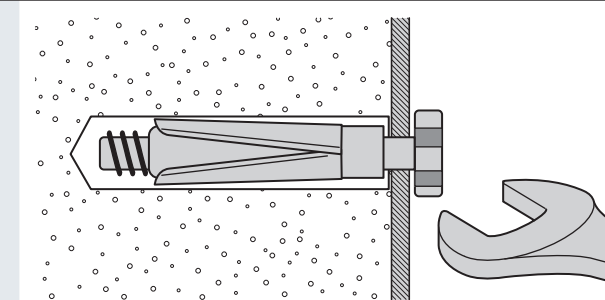

Care & Maintenance



Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.