


# LEXINGTON®

## H O M E B R A N D S

### ASSEMBLY INSTRUCTIONS

#### 543-173C/174C/175C Southampton Poster/Canopy Bed

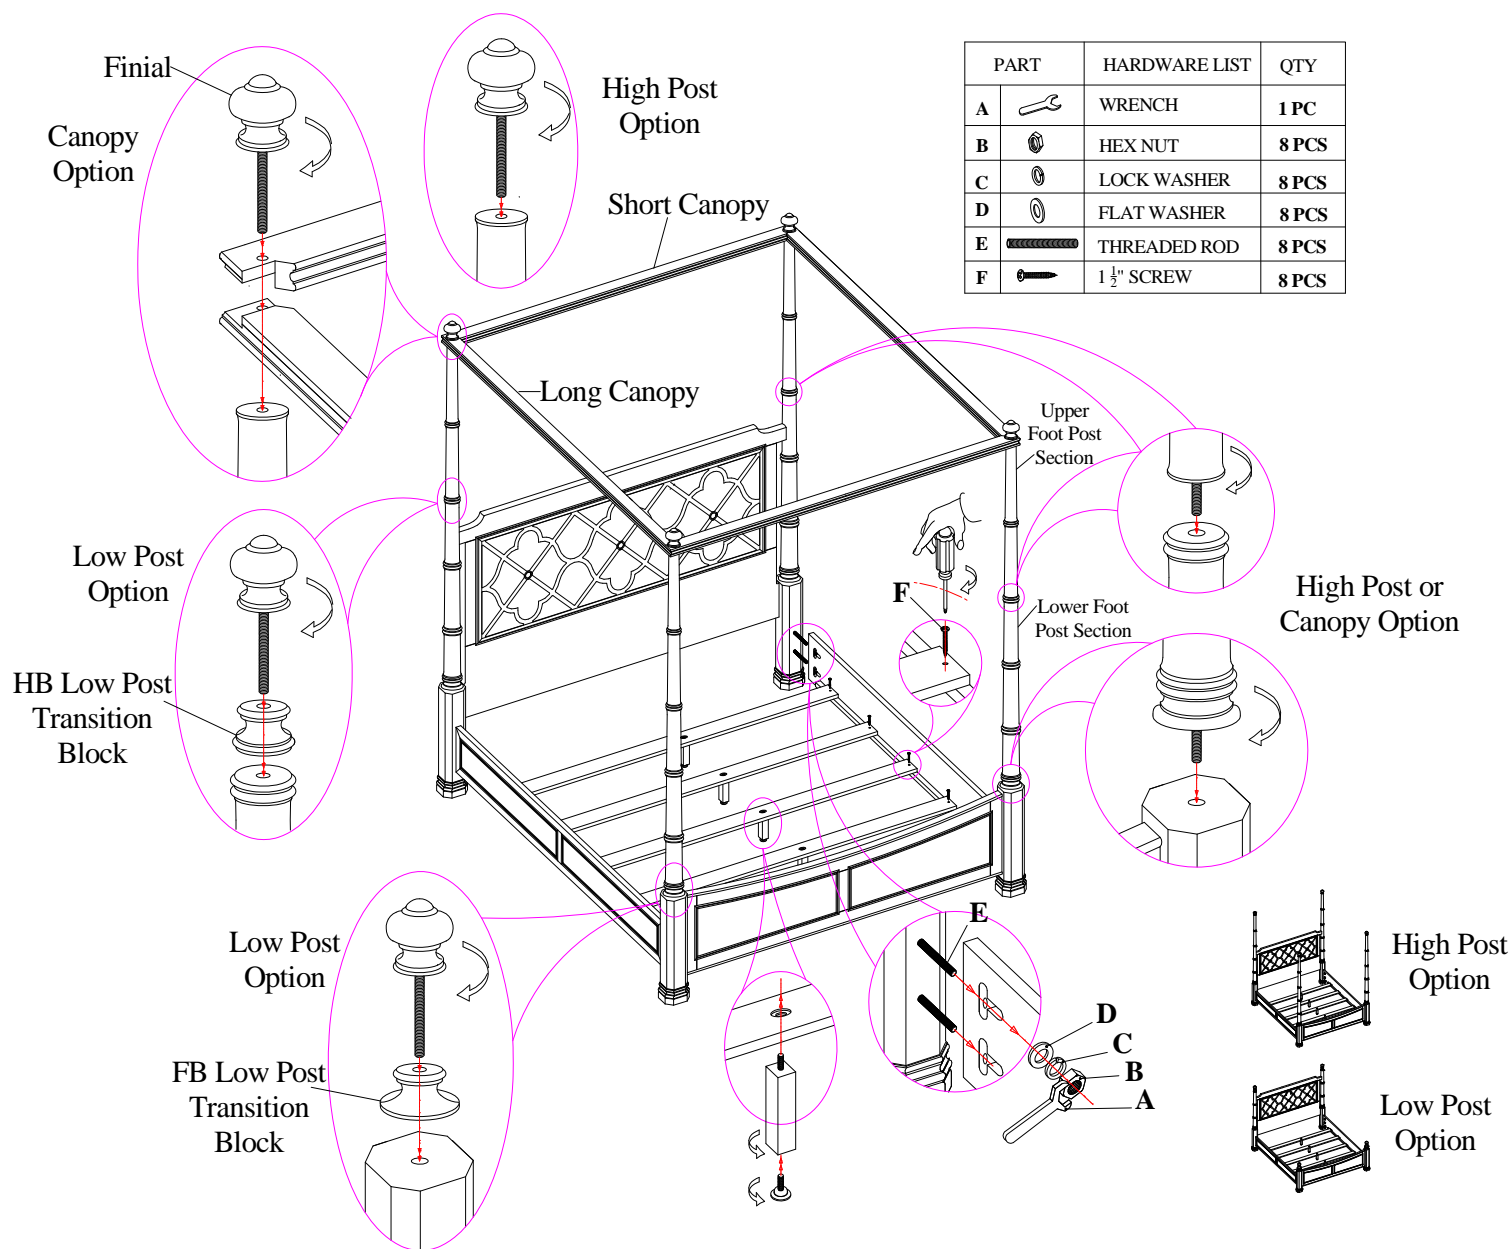

For additional consumer assistance please contact your Lexington dealer or call our Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern

# LEXINGTON®

## H O M E B R A N D S

### *543-173C/174C/175C Poster/Canopy Bed Assembly Instructions Continued...*

#### **How to Attach Side Rails to Headboard/Footboard**

\* All needed hardware is located in a hardware bag which should be taped to inside of side rail.

1. Insert threaded rod (E) into metal dowel in post thru open hole. Twist clockwise until tight.
2. With both threaded rods in place, and side rail positioned with T-slots to inside, slide side rail over threaded rods.
3. Add flat washer (D) and lock washer (C) to threaded rod (E).
4. Add hex nut (B) with barrel end towards washer.
5. Tighten nut with wrench (A) until tight. Repeat process for other three corners.

#### **How to Attach Slats to Side Rails**

1. Insert bolted end of adjustable leveler into bottom of center support leg and twist until tight. Insert bolted end of support leg into bottom of slats. There is a T-nut in the center of the board. Rotate clockwise until tight.
2. Adjust leveler so that support leg and leveler sit ½" above floor.
3. Place a slat 3" to 5" inward from each end of wood cleats. Place two slats between two end slats so that there is an equal amount of space between all four slats.
4. Secure slats with wood screws (F) provided. Note that top side of slat has larger hole.

#### **How to Assemble Posts to Headboard/Footboard**

1. Screw head post into post attached to headboard panel until tight.
2. Insert bolted end of finial into head post and turn until tight (if not assembling with canopy).
3. Repeat for other head post.
4. Screw lower foot post section into top corner of footboard panel until tight.
5. Screw upper foot post section into lower foot post section until tight.
6. Insert bolted end of finial into upper foot post section and turn until tight (if not assembling with canopy).
7. Repeat for other foot post.

#### **For Low-Post Version of Headboard/Footboard**

1. Remove finial from upper foot post section, then remove upper and lower foot post sections.
2. Screw FB low-post transition block into top corner of footboard panel until tight. Screw finial into top of FB low-post transition block until tight.
3. Repeat Steps 1 & 2 for other footboard posts.
4. Remove finial from head post section, then remove head post.
5. Screw HB low-post transition block into post attached to headboard panel until tight. Screw finial into HB low-post transition block until tight.
6. Repeat Steps 4 & 5 for other headboard post.

#### **How to Assemble Canopy**

1. If using canopy, remove all finials.

# LEXINGTON®

## H O M E B R A N D S

2. Lay long canopy rail on top of head and foot posts so that holes on each end of long canopy rail align with holes in top of head and foot posts.
3. Repeat Step 2 for other long canopy rail and other head and foot posts.
4. Lay short canopy rail on top of both head posts so that holes in short canopy rail align with holes in top of head posts.
5. Repeat Step 4 for other short canopy rail and foot posts.
6. Install finials back onto top of posts, through holes in canopy rails, and turn until tight.

For additional consumer assistance please contact your Lexington dealer or call our  
Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern