


ASSEMBLY INSTRUCTIONS


TWIN ECONOMIC BED

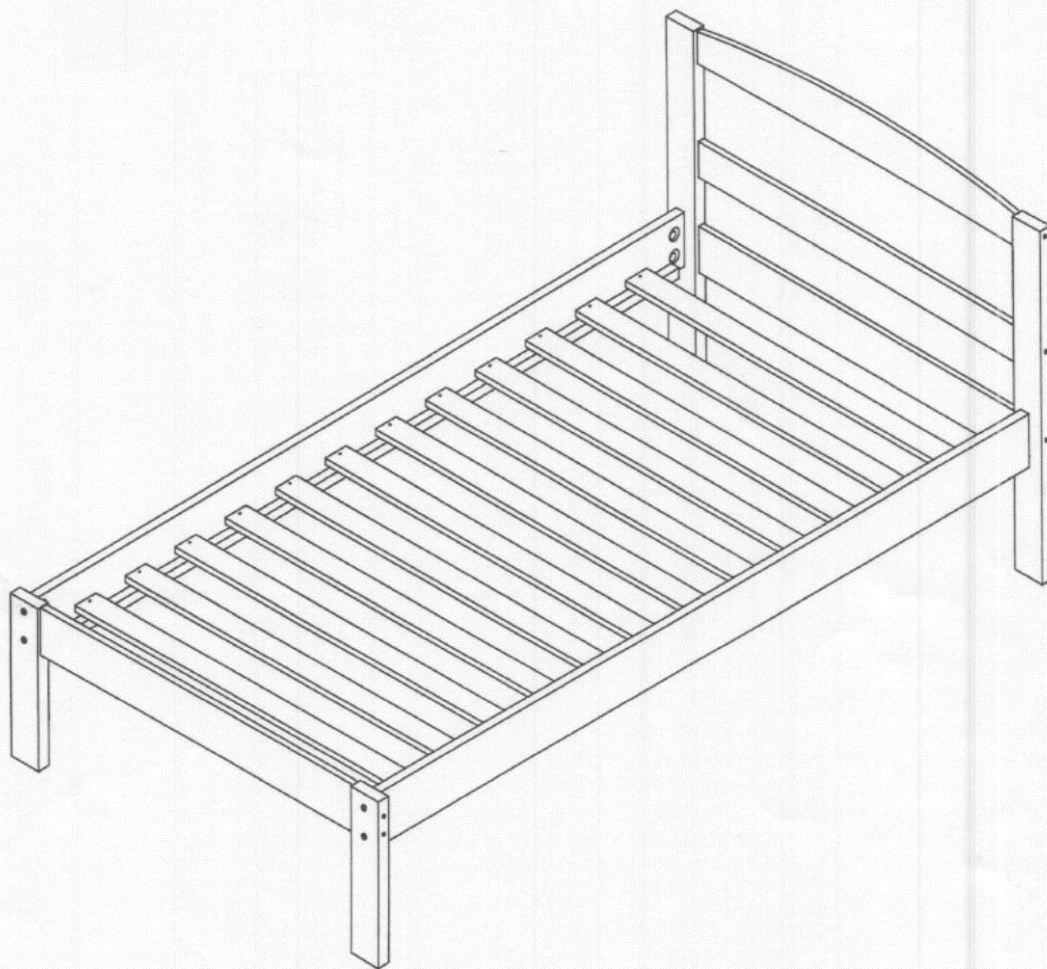


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

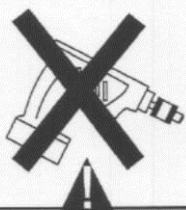


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

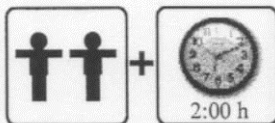

Tools Required




(Not includ)





(Hammer)

IMPORTANT:


Part List: TWIN ECONOMIC BED

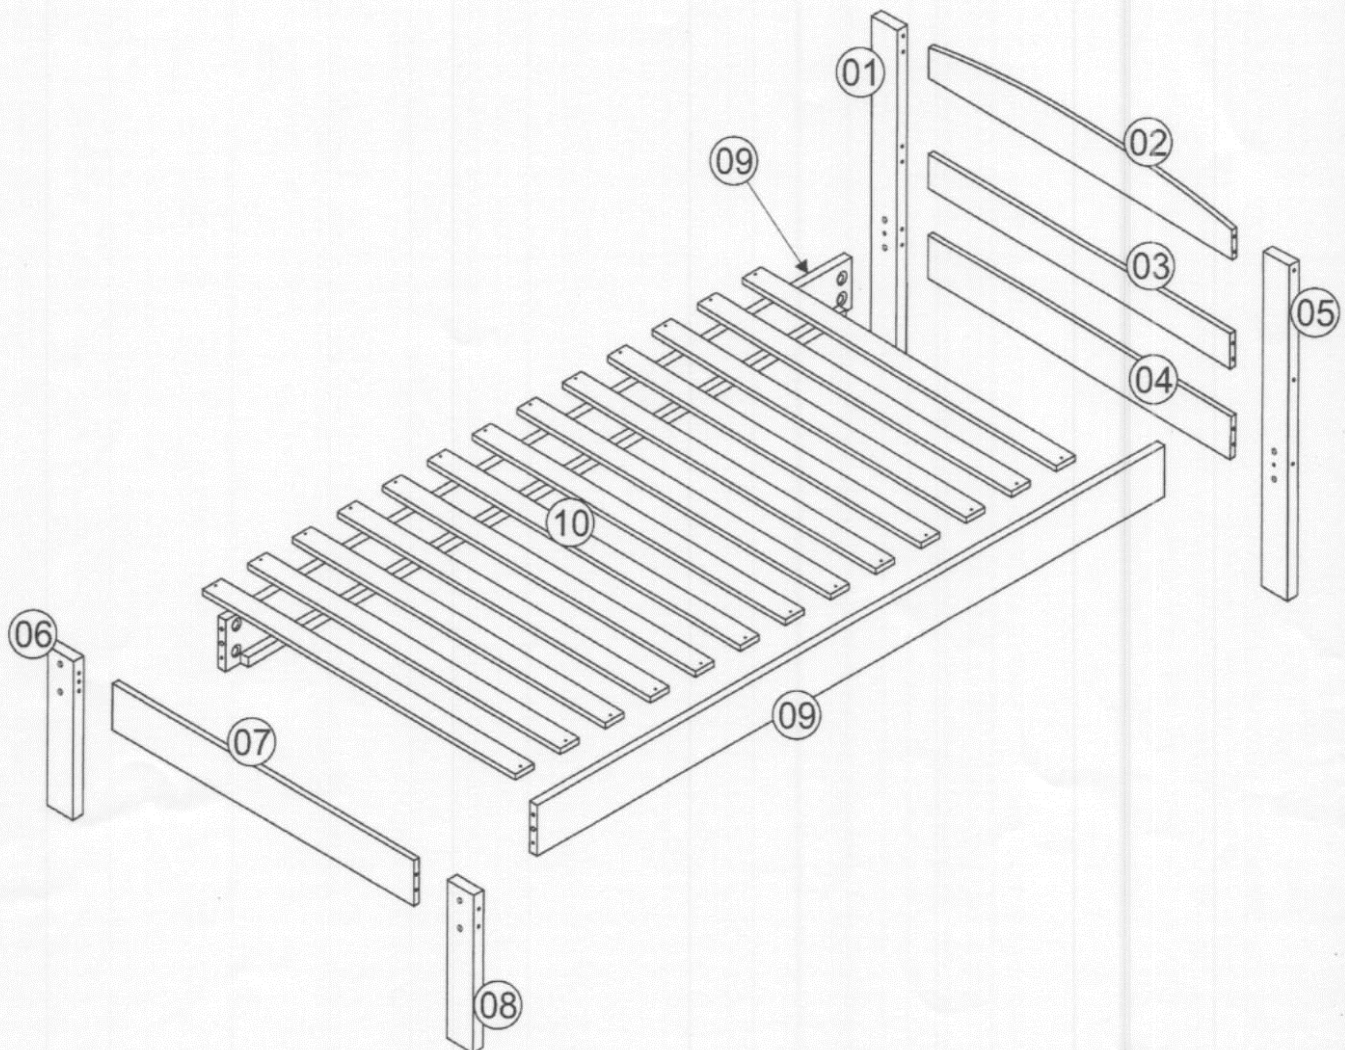


Identifying the Hardware/part list- Identify the hardware using the illustrations below.

A  Qty 08 10 x 70 Wood Dowel	B  Qty 04 10x40 Wood Dowel	C  Qty 10 7,0 x 100 Screw
D  Qty 08 1/4 x 100 Screw	E  Qty 08 1/4" Half Moon	F  Qty 24 3,5x30 Screw
G  Qty 01 SPACE SLATS	H  Qty 01 4mm Hex Screwdriver	I  Qty 01 GLUE


01

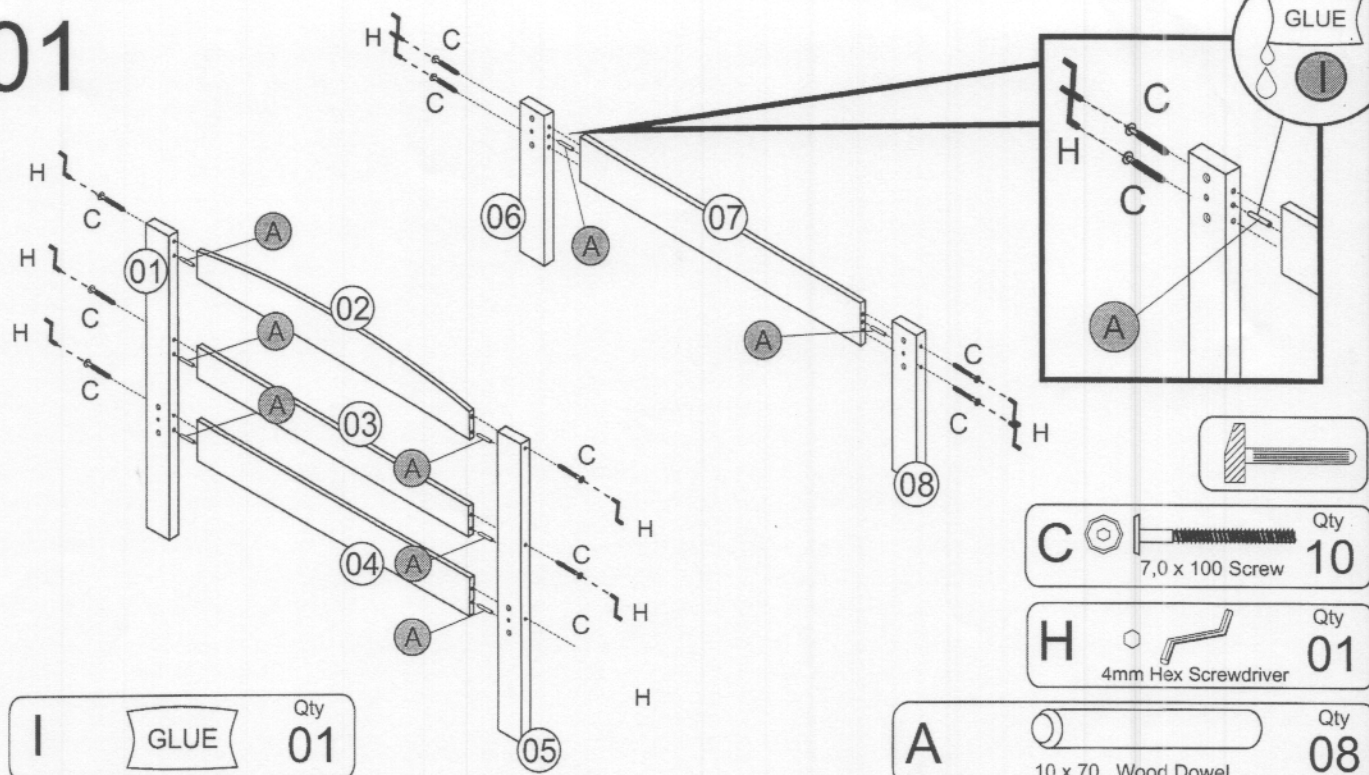



02

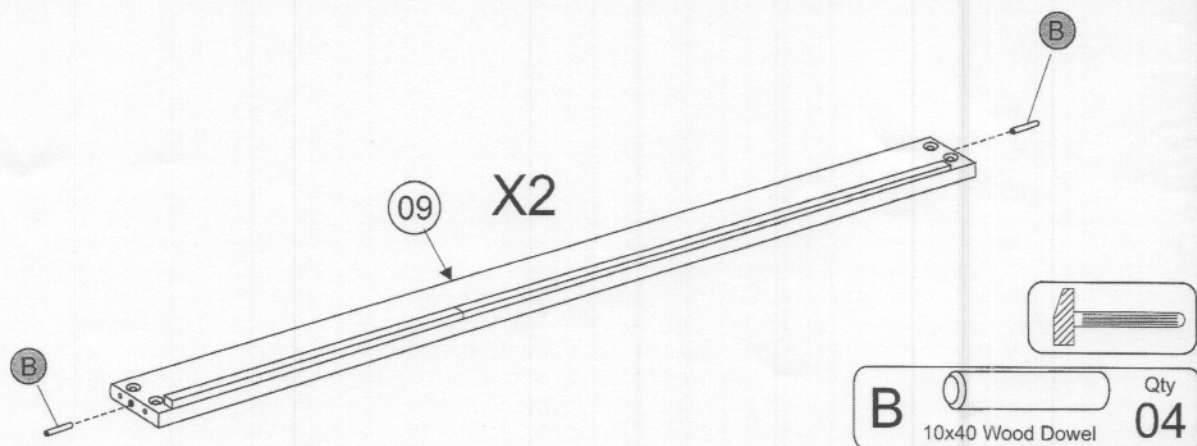




03

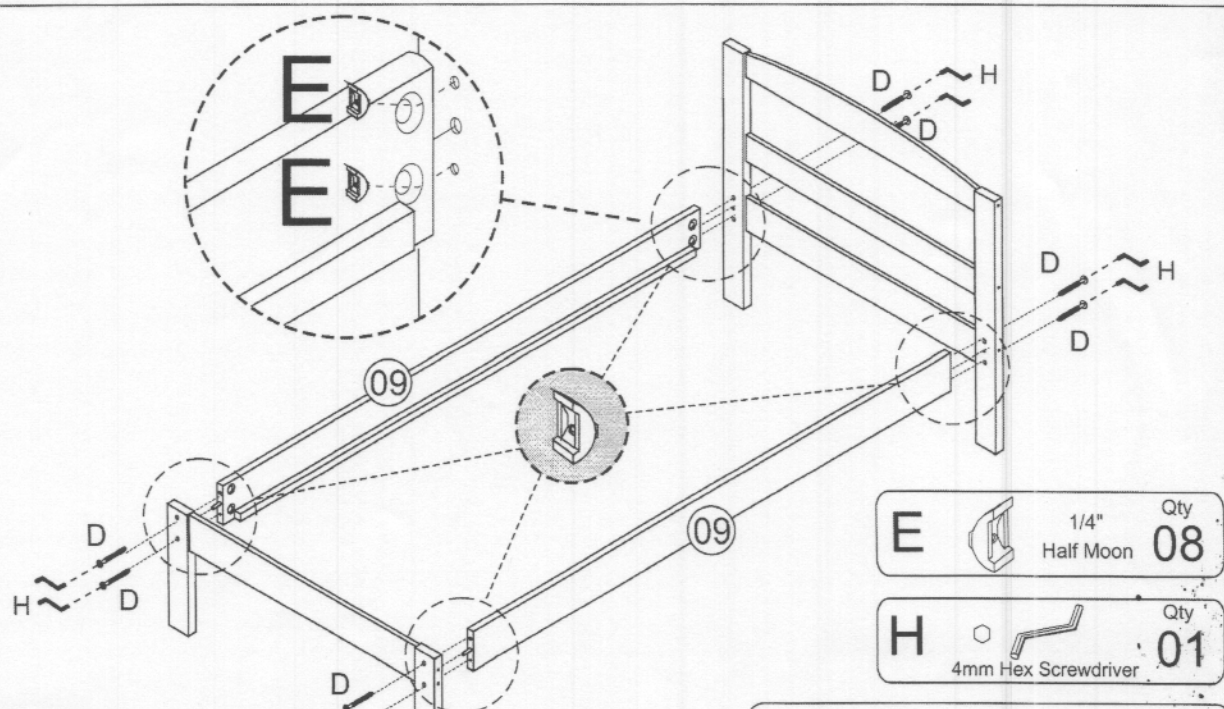


04

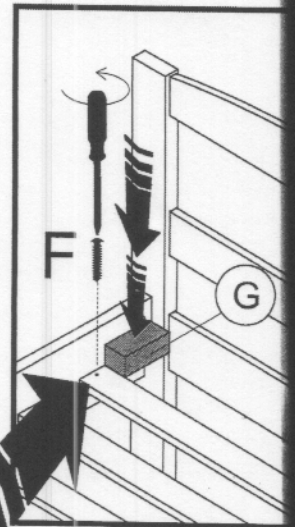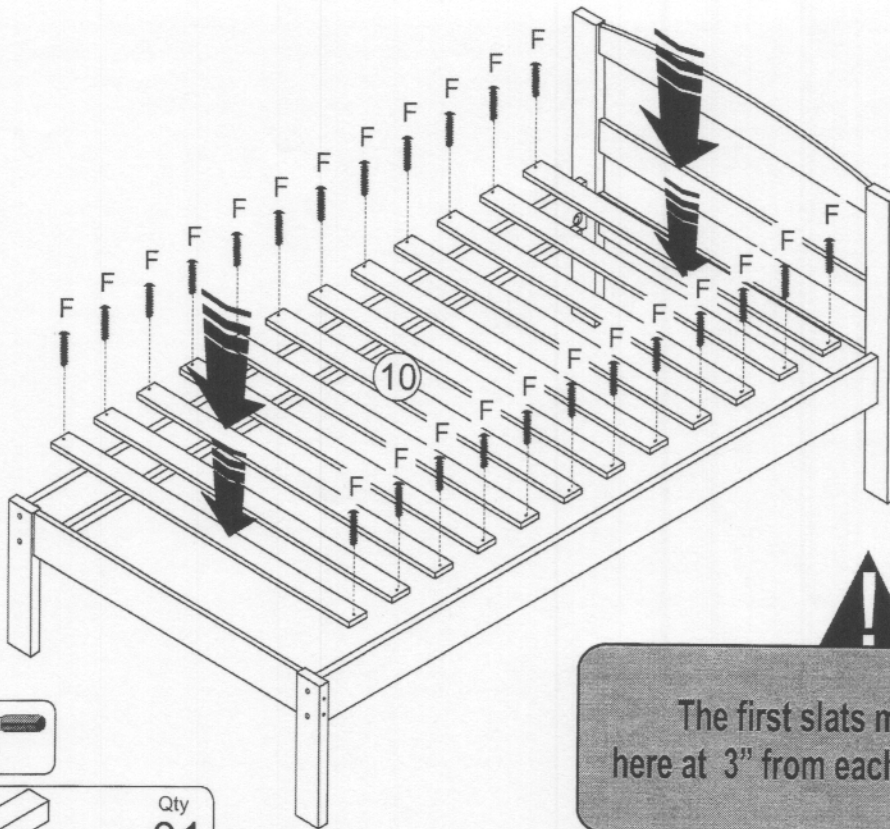


The first slats must be fixed here at 3" from each headboard end.

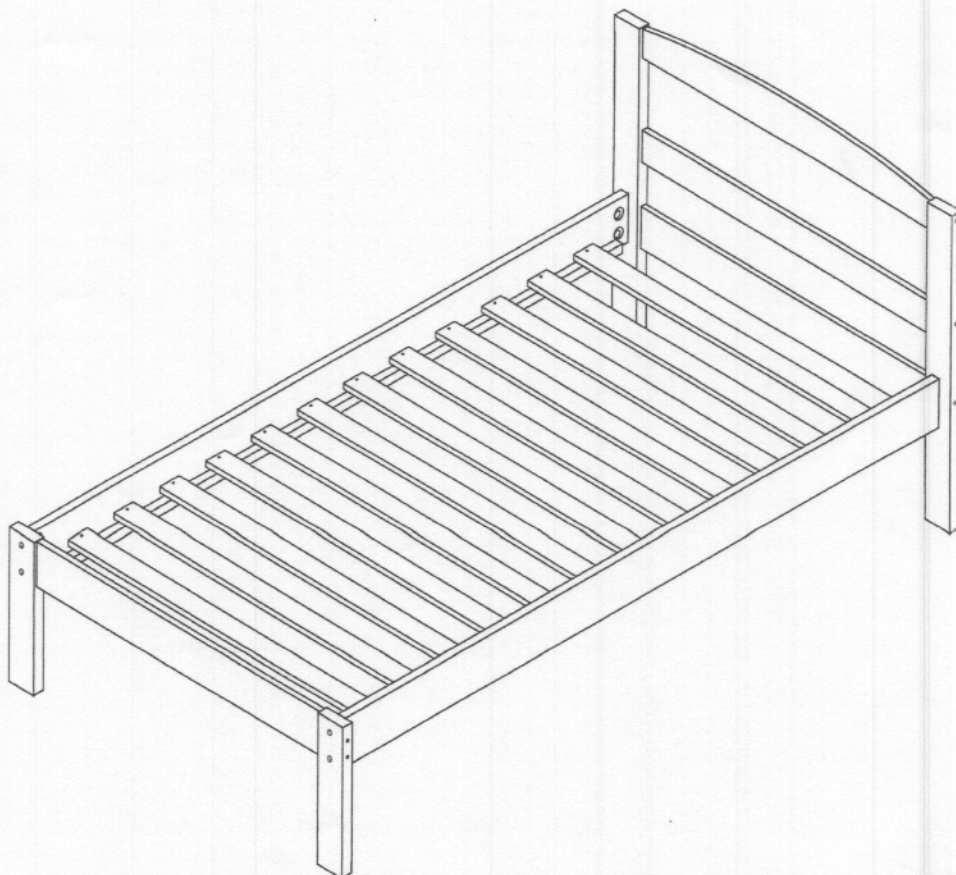

ASSEMBLY INSTRUCTIONS - DUAL UNDERBED DRAWERS

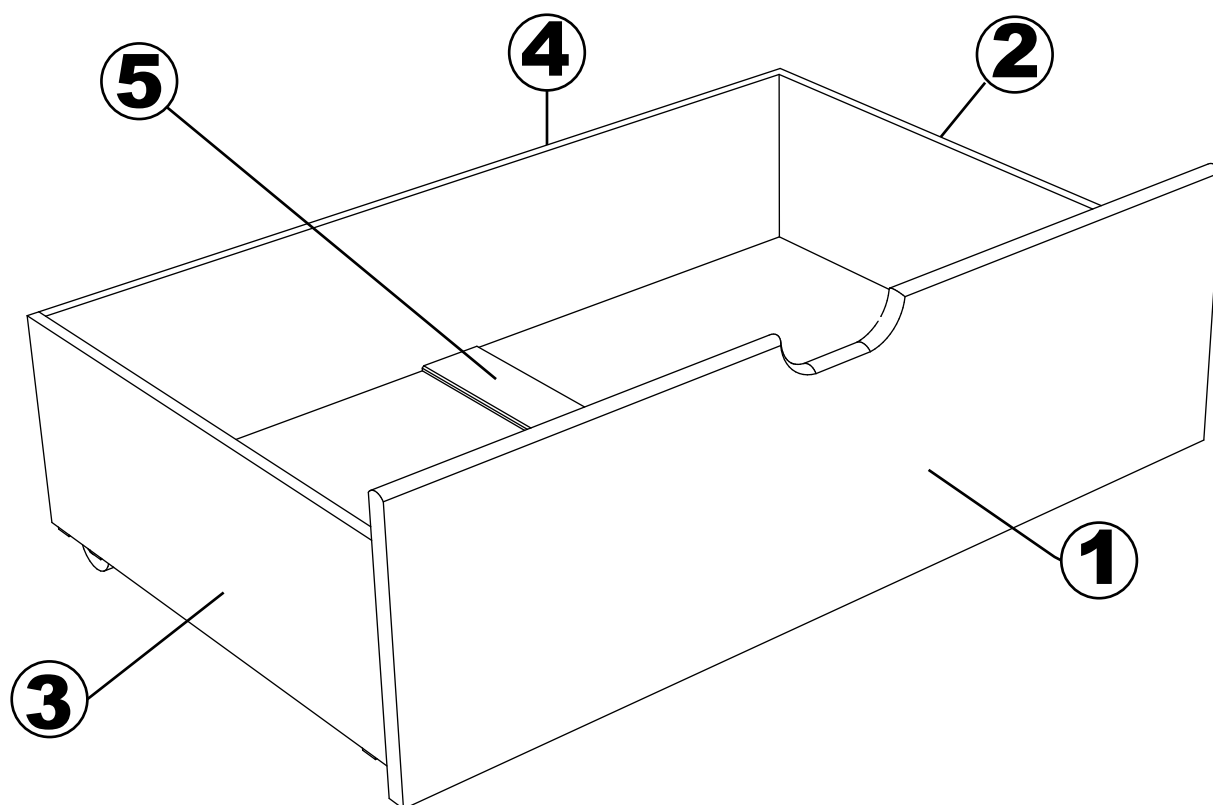


D




Ø8 x 30mm Qty: 12

Step 01

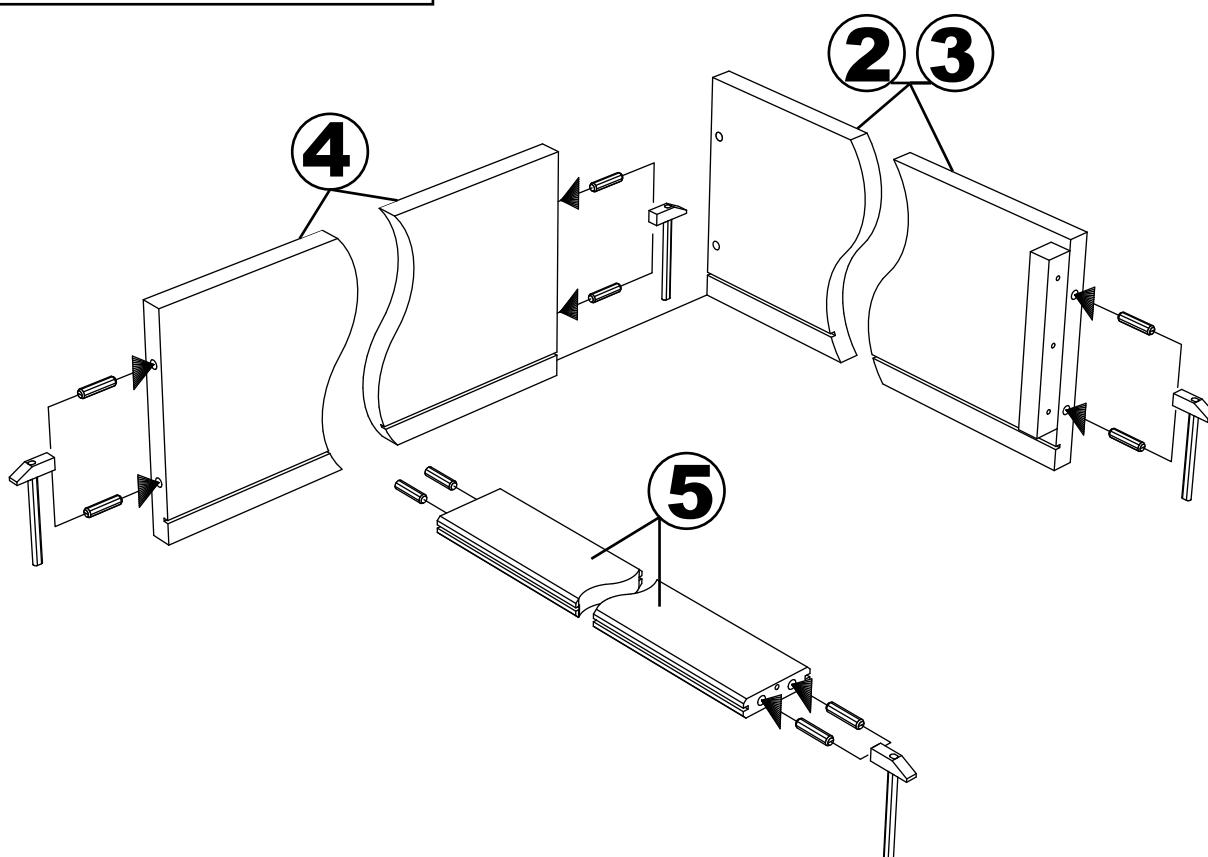

ASSEMBLY INSTRUCTIONS - DUAL UNDERBED DRAWERS


A




Ø4 x 30mm

Qty: 06


Step 02

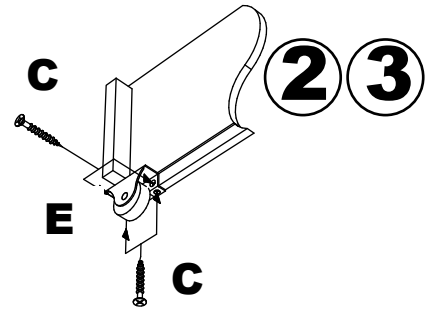

Step 03

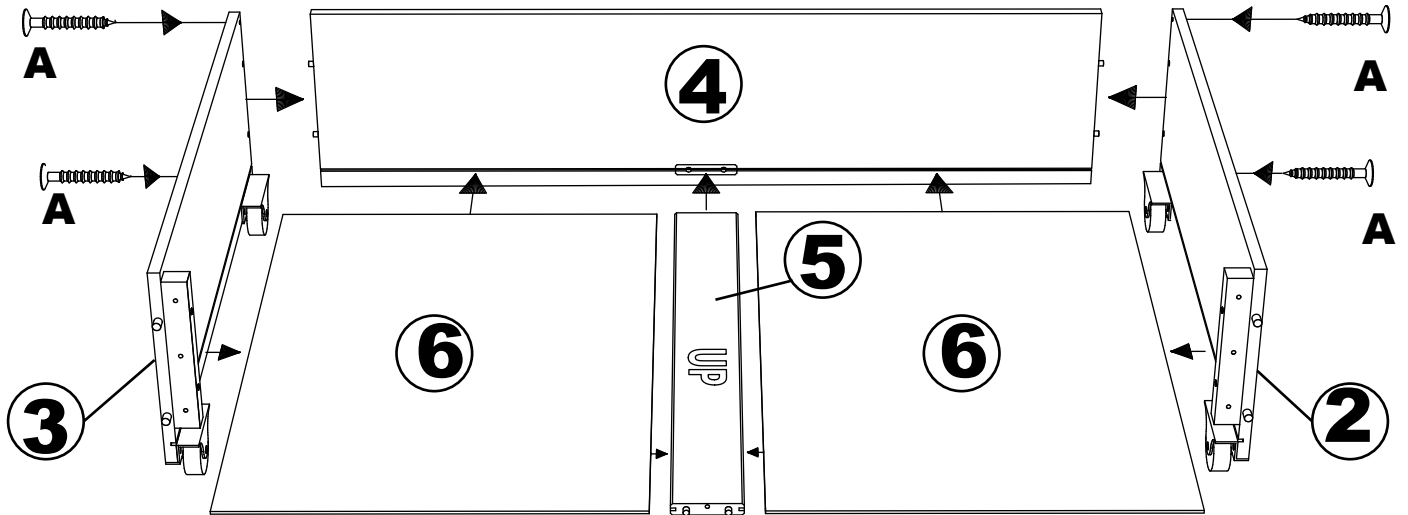


B



Ø4 x 35mm

Qty: 06


C



Ø3 x 15mm

Qty: 16


E



Qty: 04

Step 03

Step 04

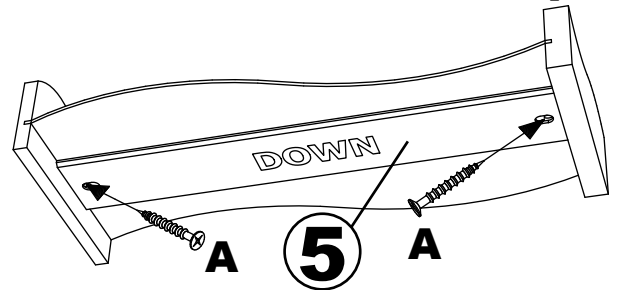

2

B

6

1

6

3

B

4

