


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)



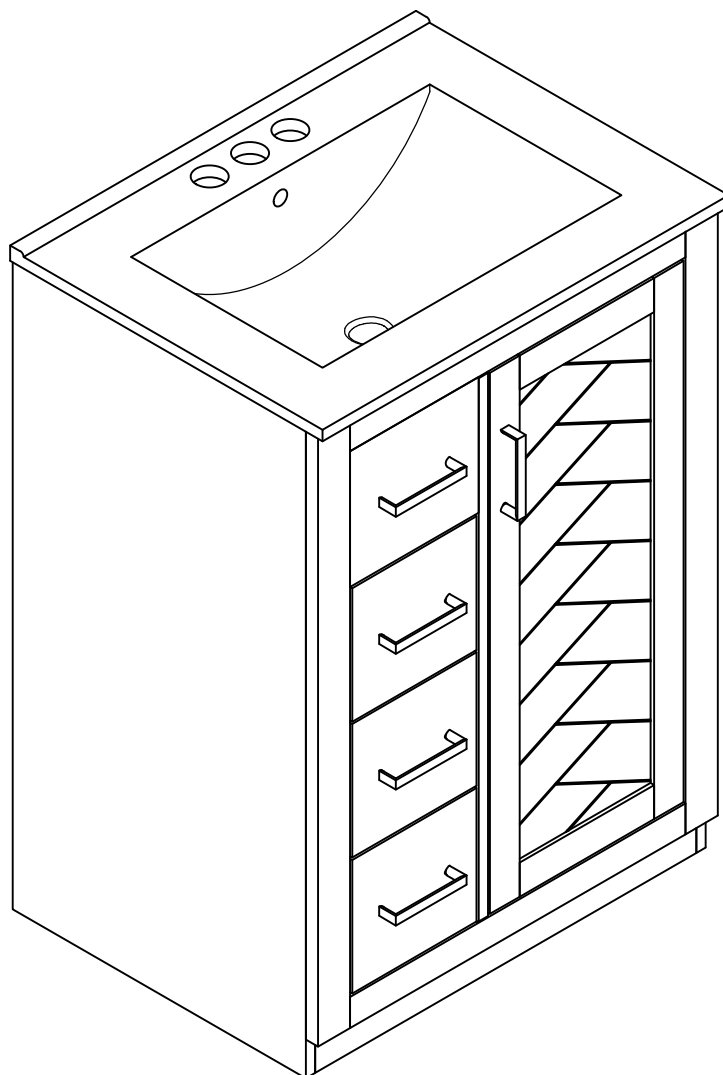


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

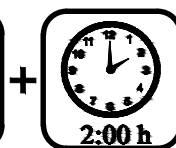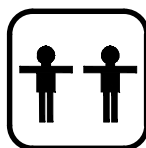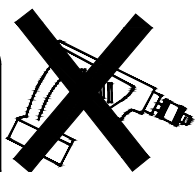

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

Before Installation







Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions







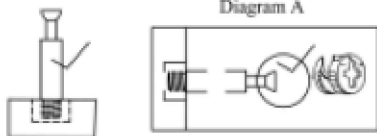
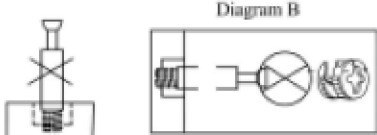
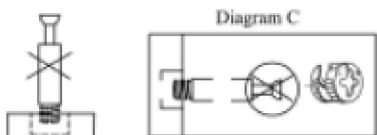
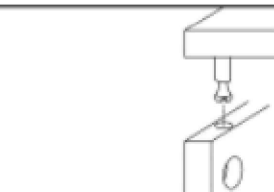
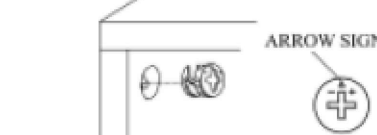
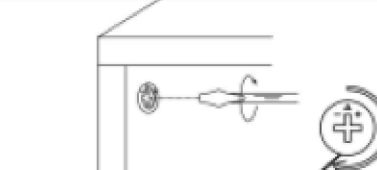
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - VANITY

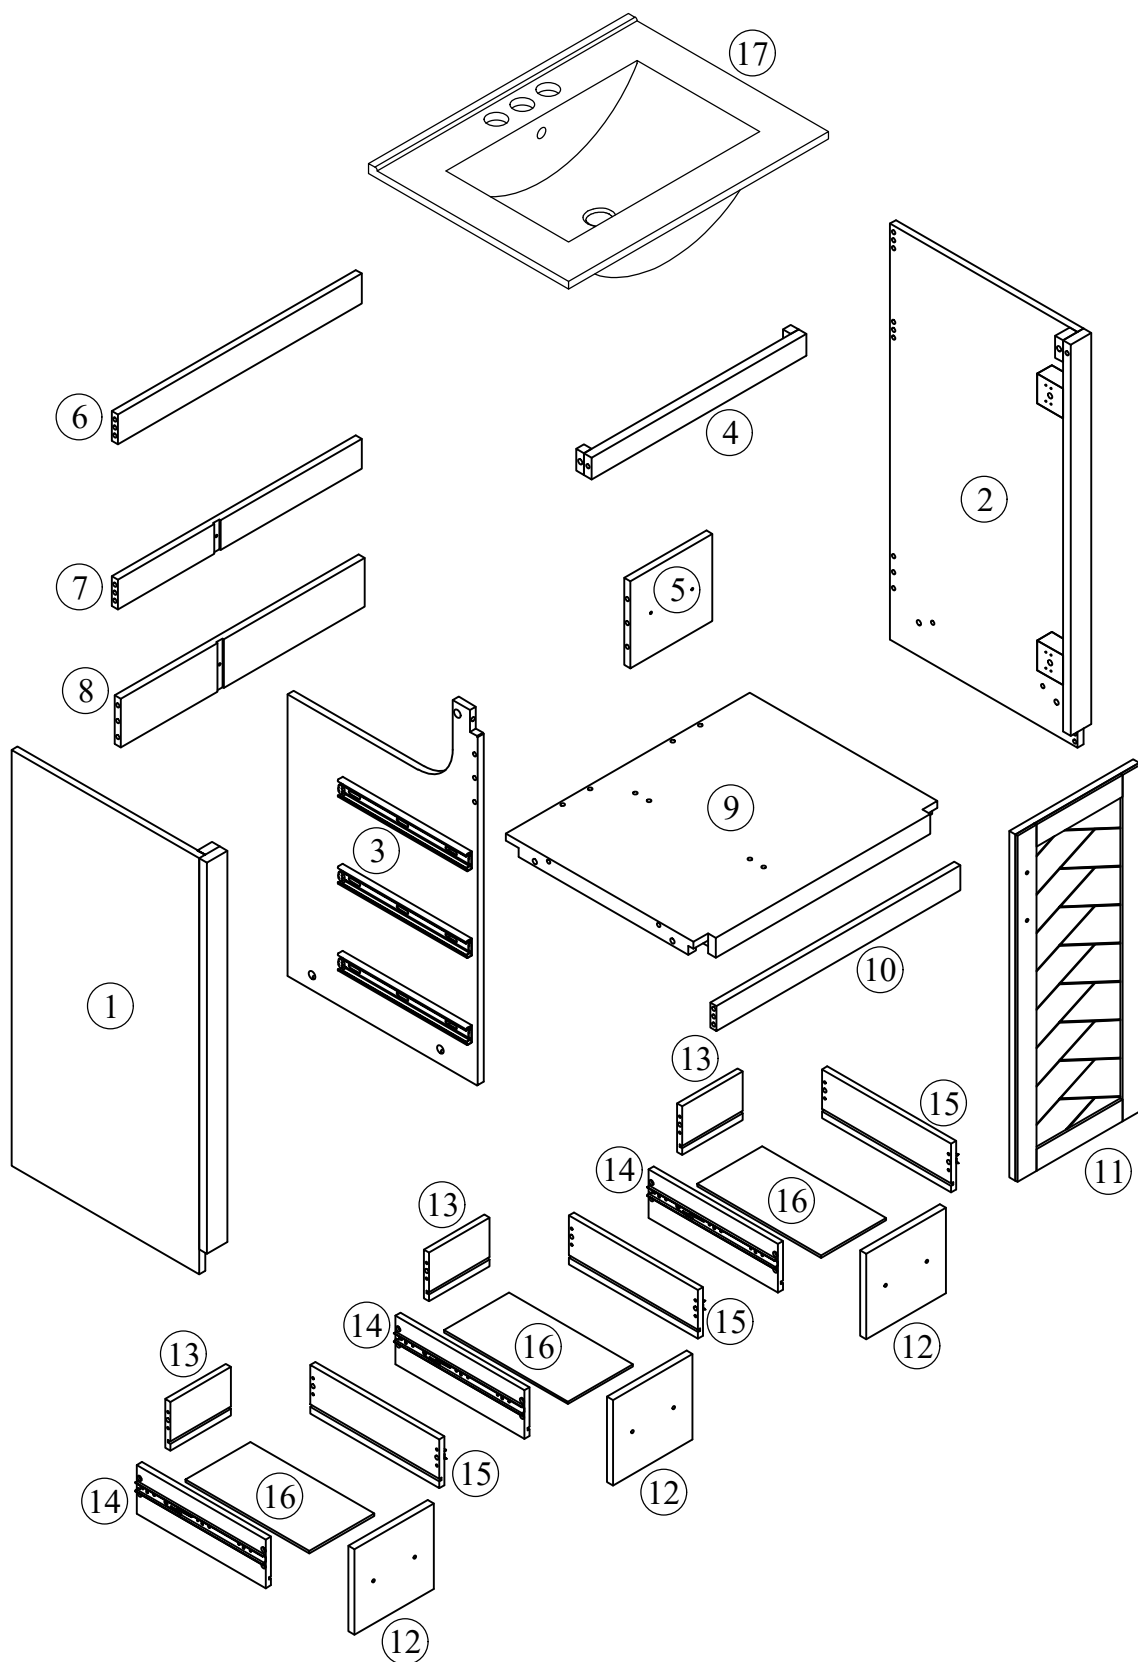


re-Identify the hardware u

Part List - N710P469241

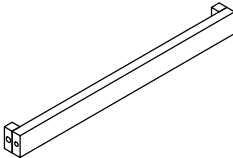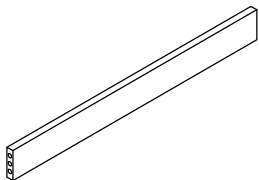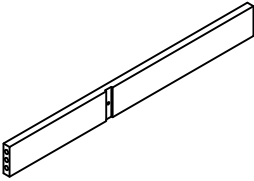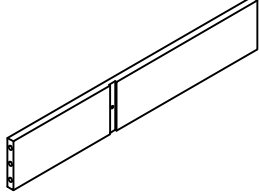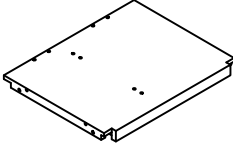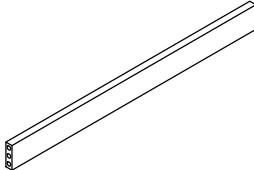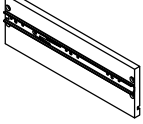1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	


Part List - N710P469241

15

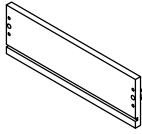


Drawer Side Panel (R) - 3pcs

16

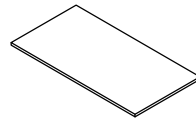









Bottom Drawer Panel - 3pcs

17

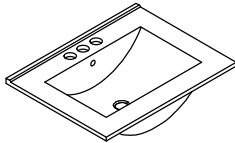


Sink - 1pc

Hardware List - N710P469241








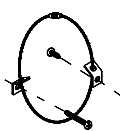
A  ø13x1/4"x28mm	B  ø1/4"x16x1mm	C  ø6x35mm
Hex-Head bolts (6pcs)	Washer (6pcs)	Three in one bolts (21pcs)
D  ø14.5x12mm	E  ø8xø4x25mm	F  ø8xø4x32mm
Three in one lock (21pcs)	Round head screw (2pcs)	Round head screw (24pcs)
G 	H  ø5/32"x25mm	I  ø5/32"x20mm
Handle (5pcs)	Handle screw (2pcs)	Handle screw (2pcs)
J  ø5/32"x32mm	K 	L  ø7xø3.5x15mm
Handle screw (6pcs)	Damping hinge (2pcs)	Flat head screw (12pcs)
M  ø8x30mm	N  4mm	O 
Wood dowel (24pcs)	Allen key (1pc)	Anti fall hardware (2sets)
P  ø6x30mm Wood dowel (12pcs)		

STEP: 1


C




21PCS

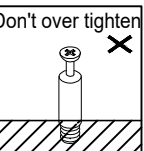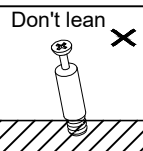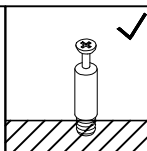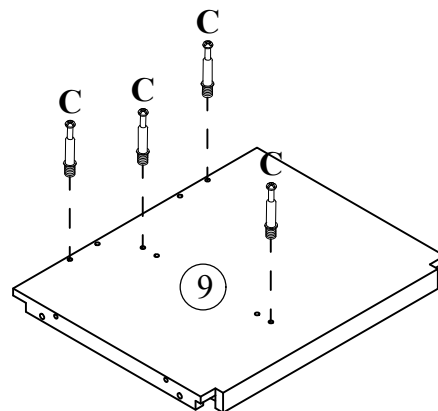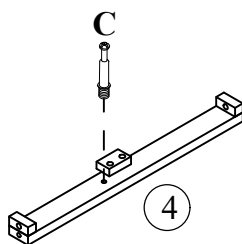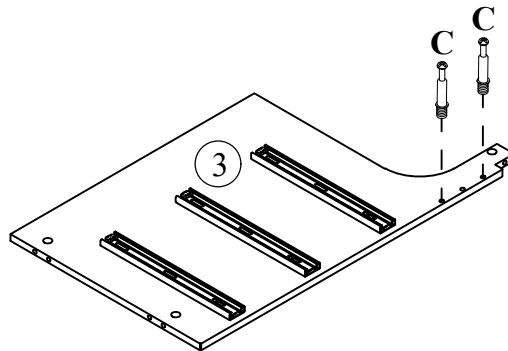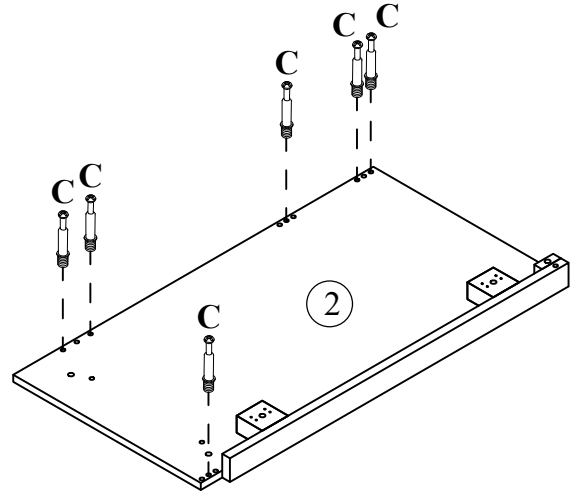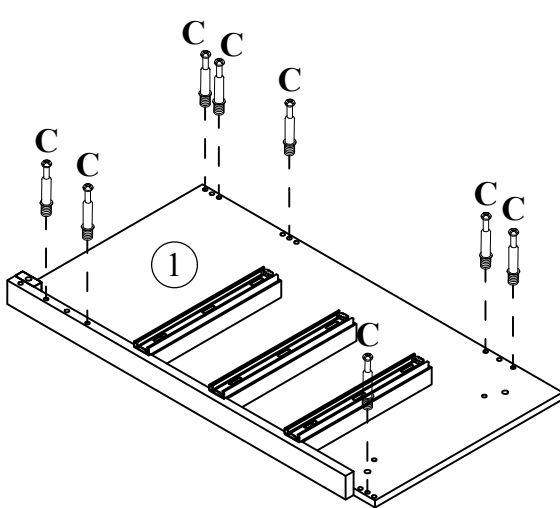


STEP: 2


D	E	M
		
6PCS	1PC	5PCS

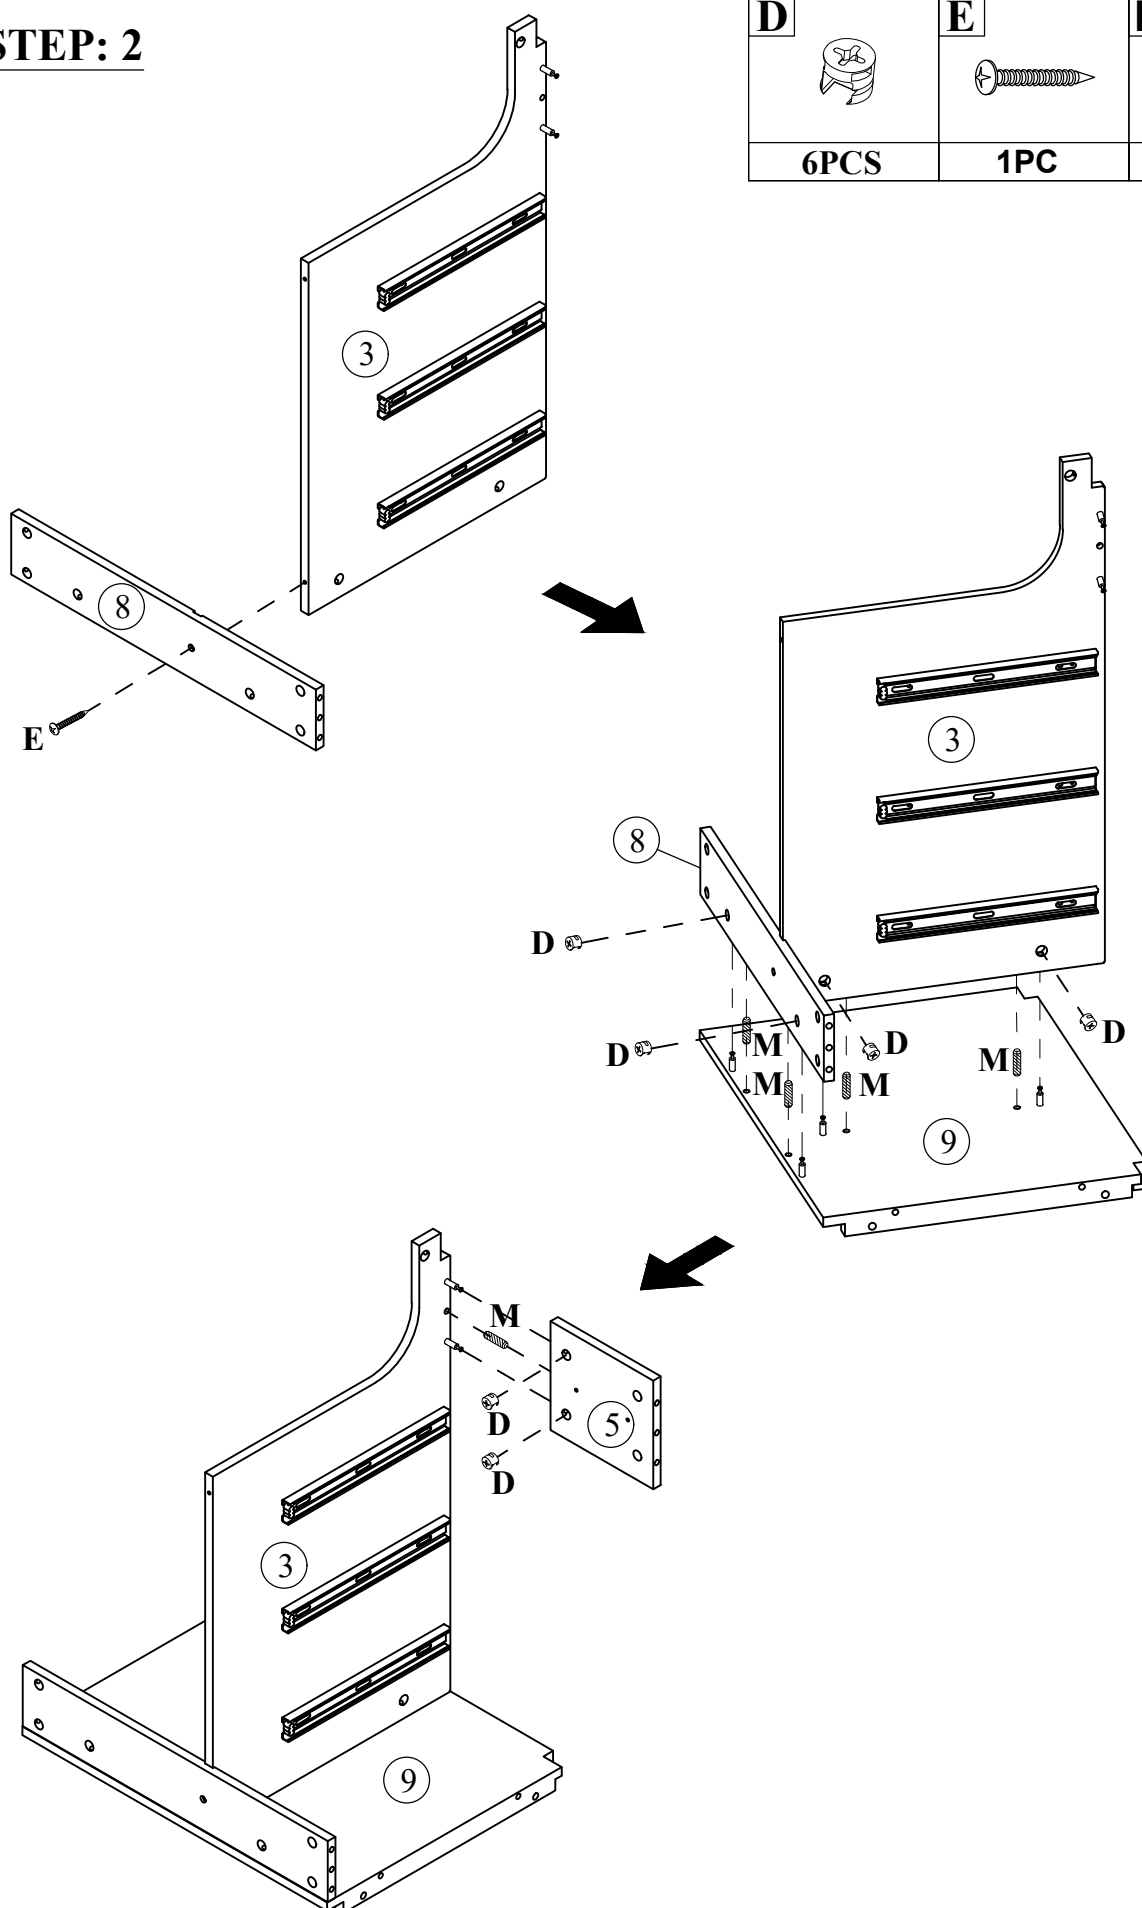

STEP: 3

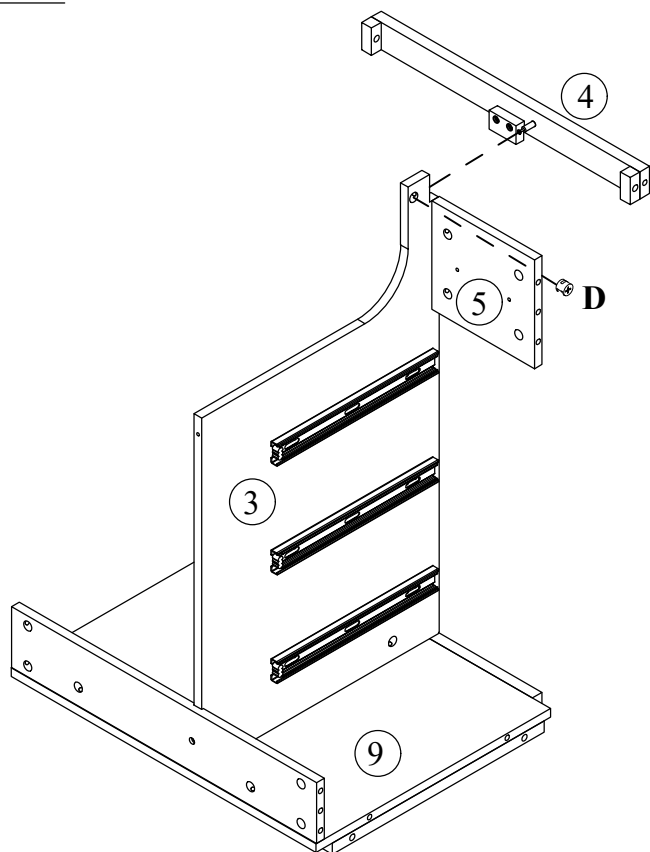


D	E
	
1PC	1PC

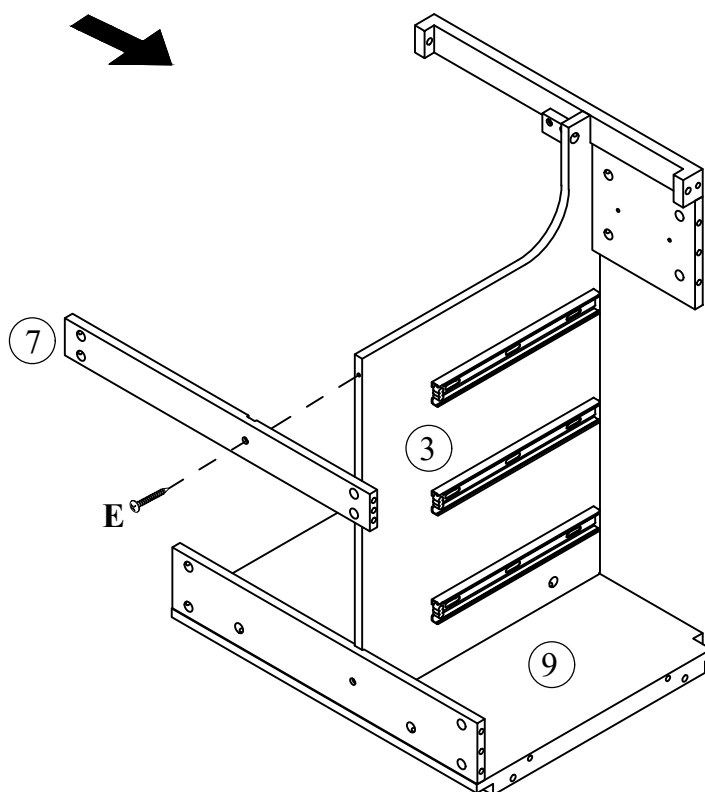



STEP: 4

A	B	D	M	N
				
3PCS	3PCS	8PCS	10PCS	1PC

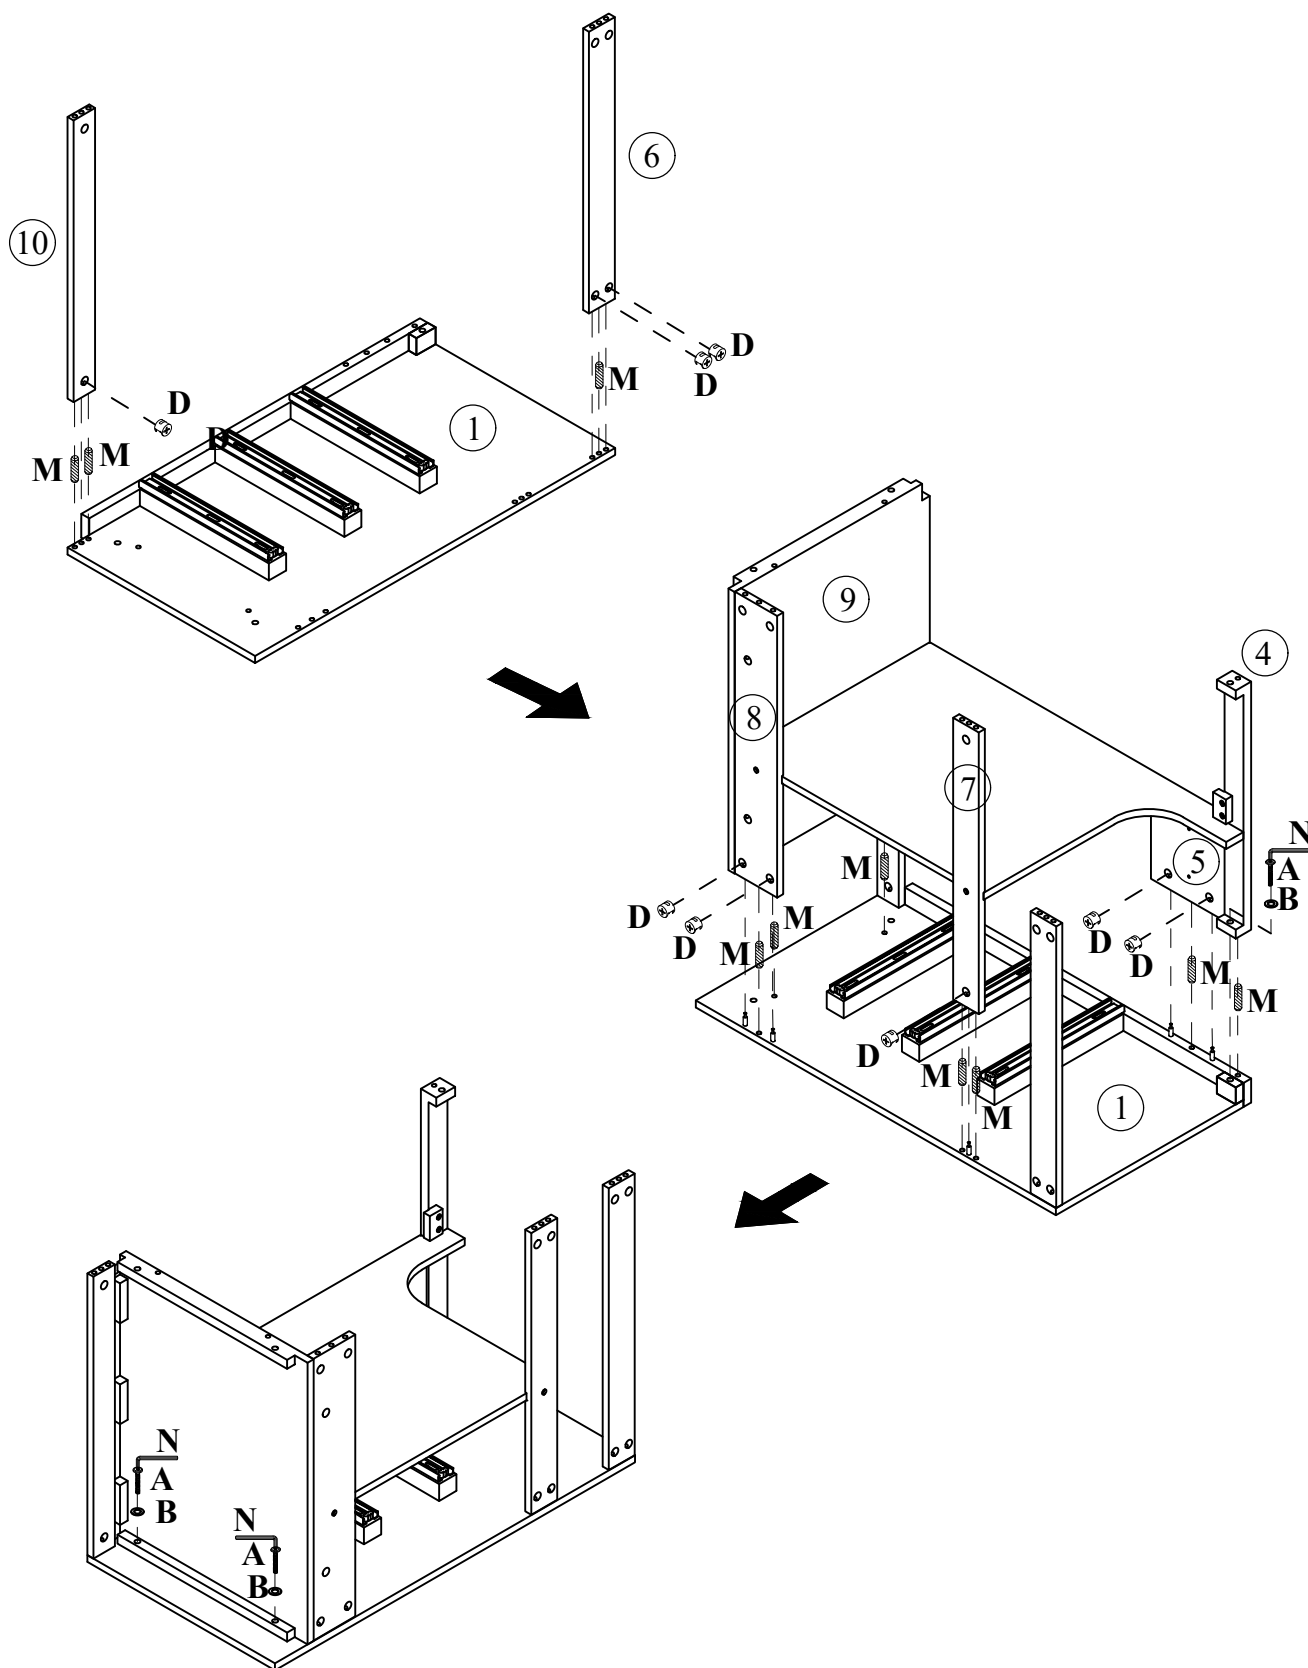




STEP: 5

A	B	D	M	N
				
3PCS	3PCS	6PCS	9PCS	1PC

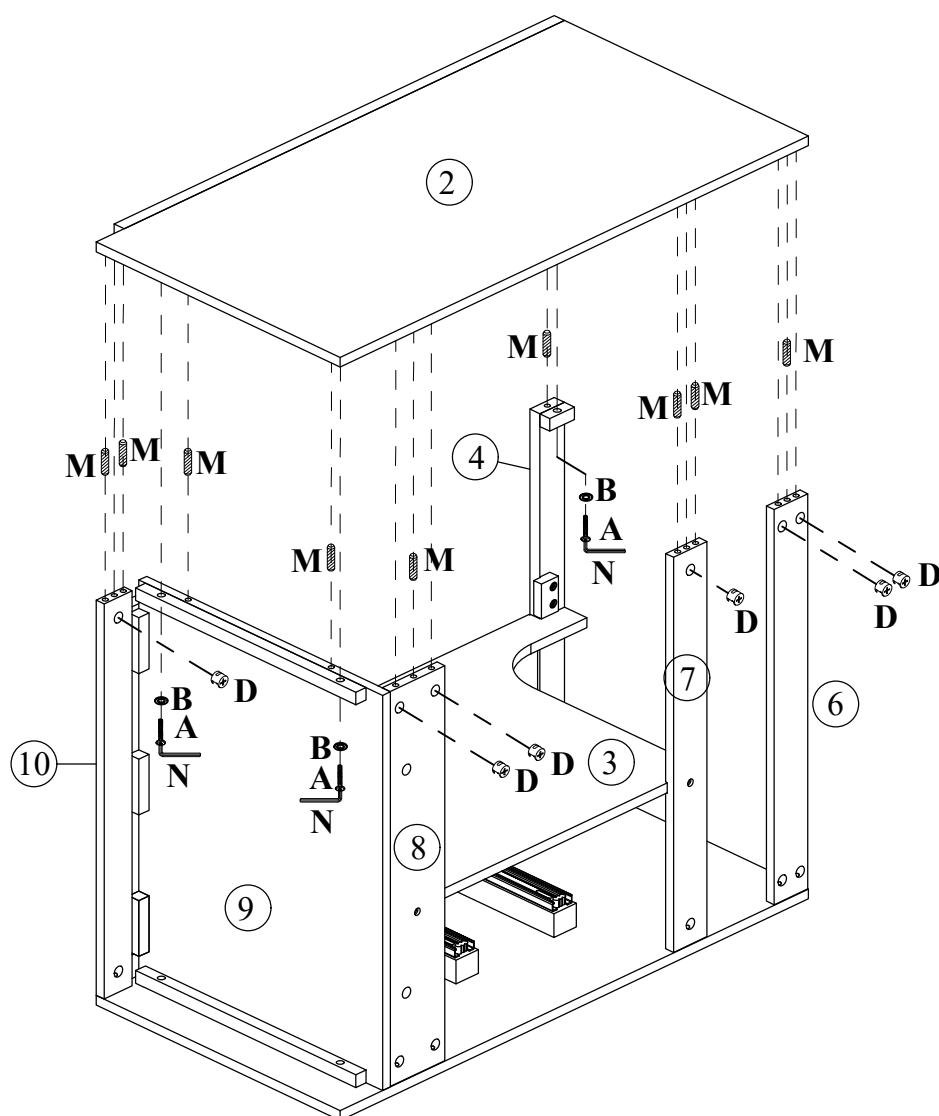


STEP: 6

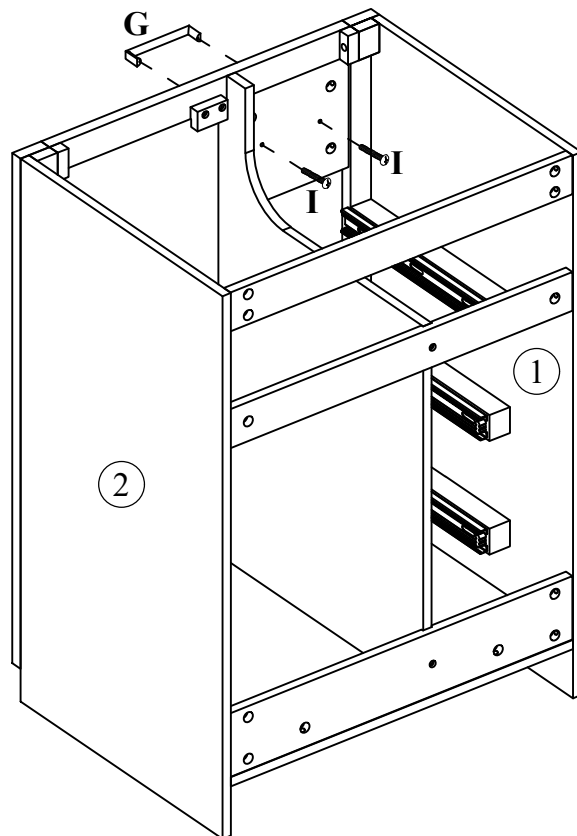


G		I	
	1PC		2PCS

STEP: 7

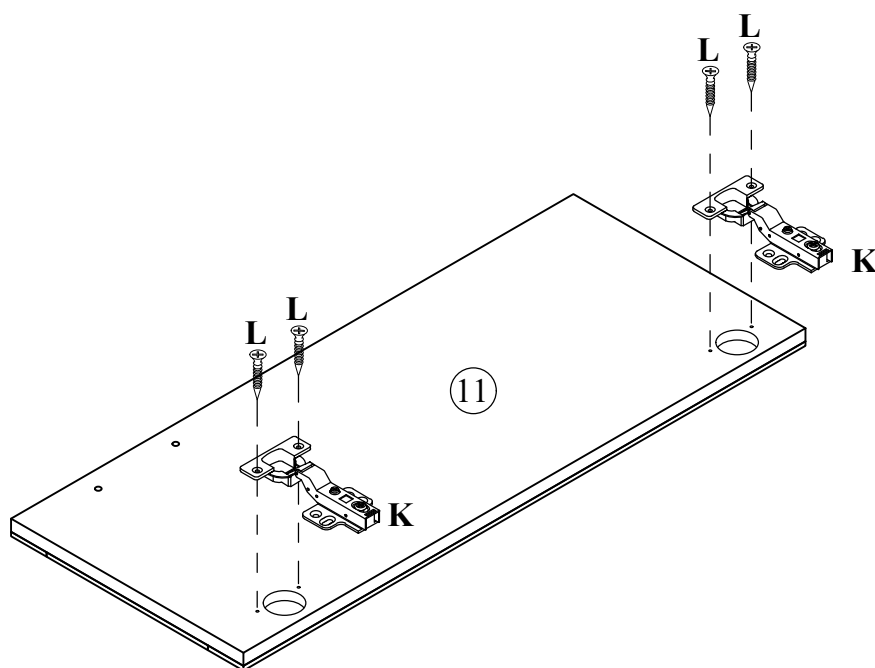


K		L	
	2PCS		4PCS

STEP: 8

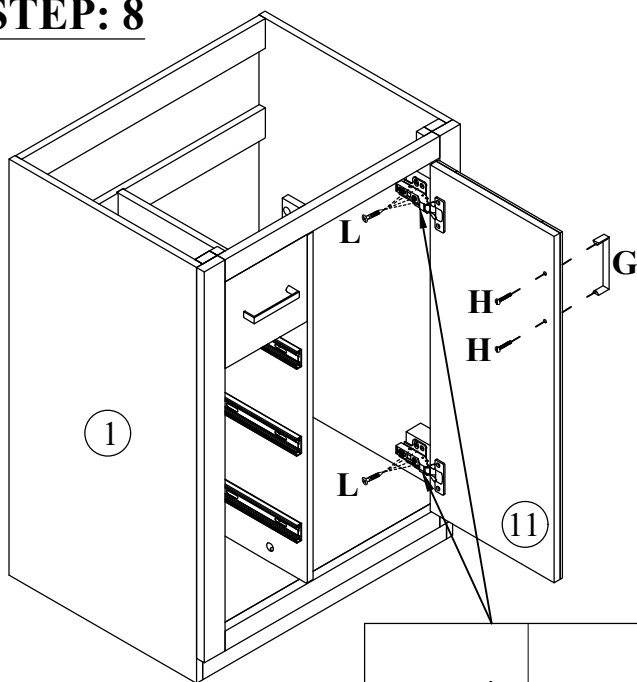


G	H	L
1PC	2PCS	8PCS


Use the screws to adjust up or down

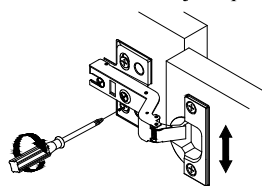


Use the screws to permanent

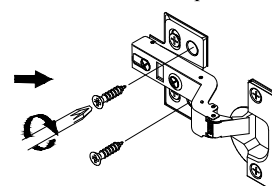


Use the screws to adjust left or right

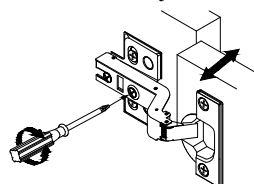


Use the screws to adjust in or out

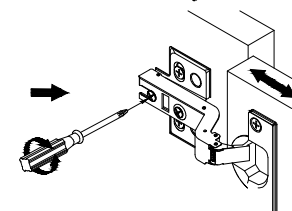

STEP: 9

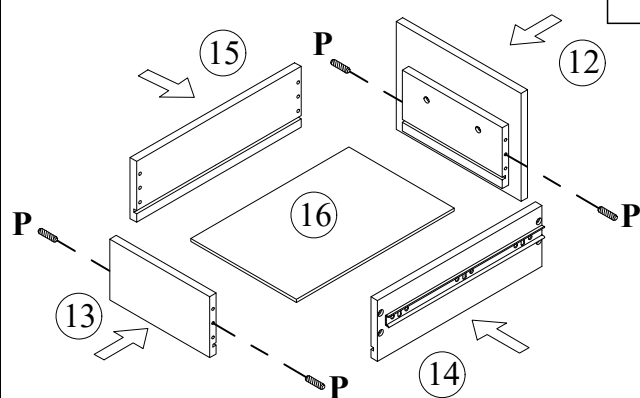


F	G	J	P
24PCS	3PCS	6PCS	12PCS


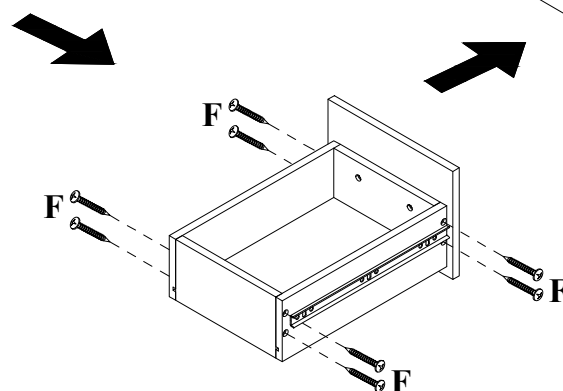


x3

STEP: 10

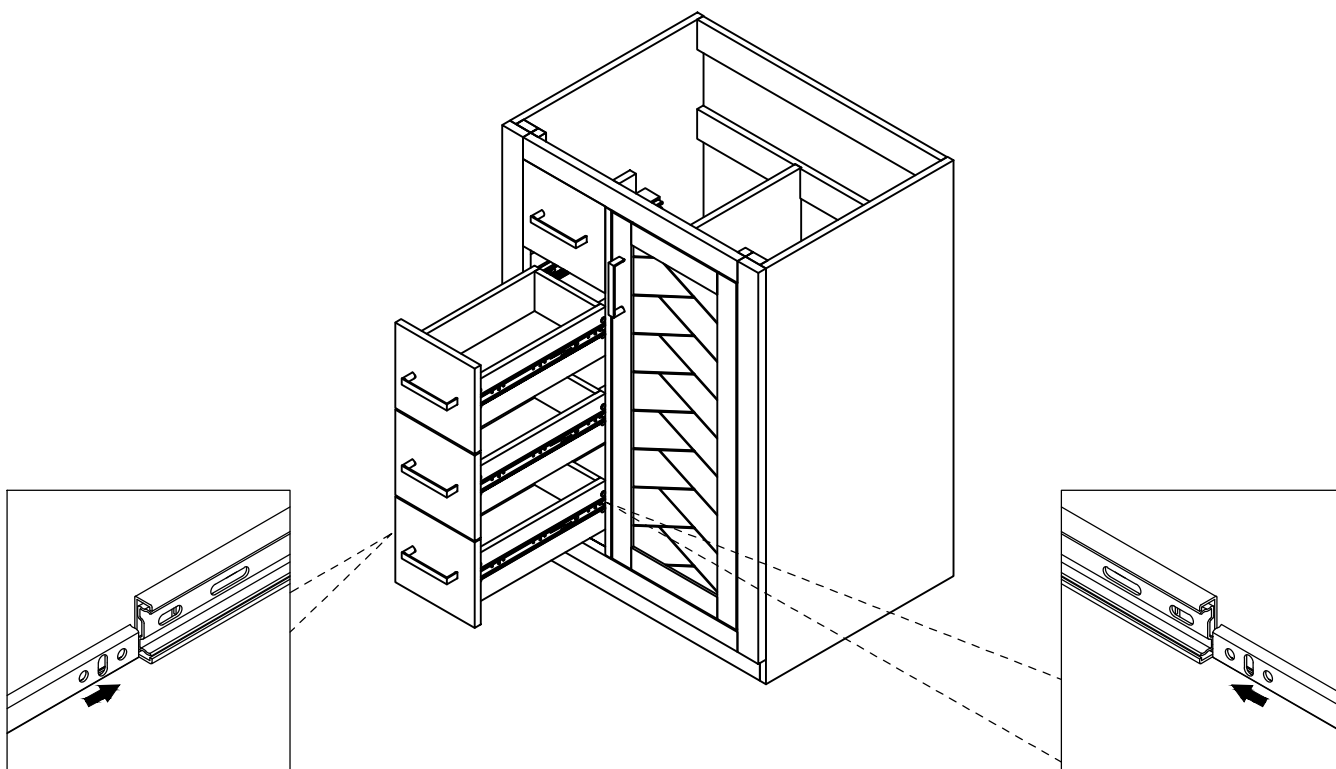


STEP: 11

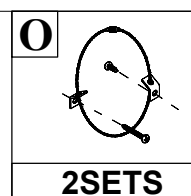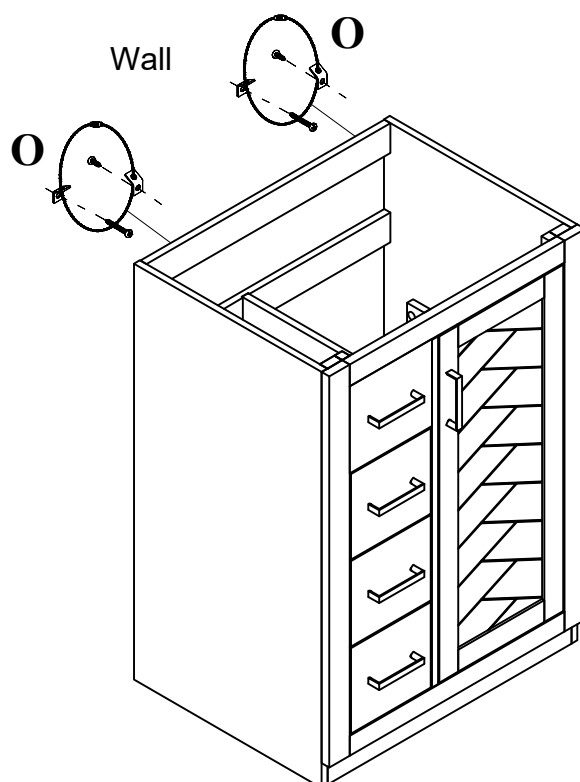

STEP: 12

Install the sink on the cabinet with glue.
Let stand for 24 hours

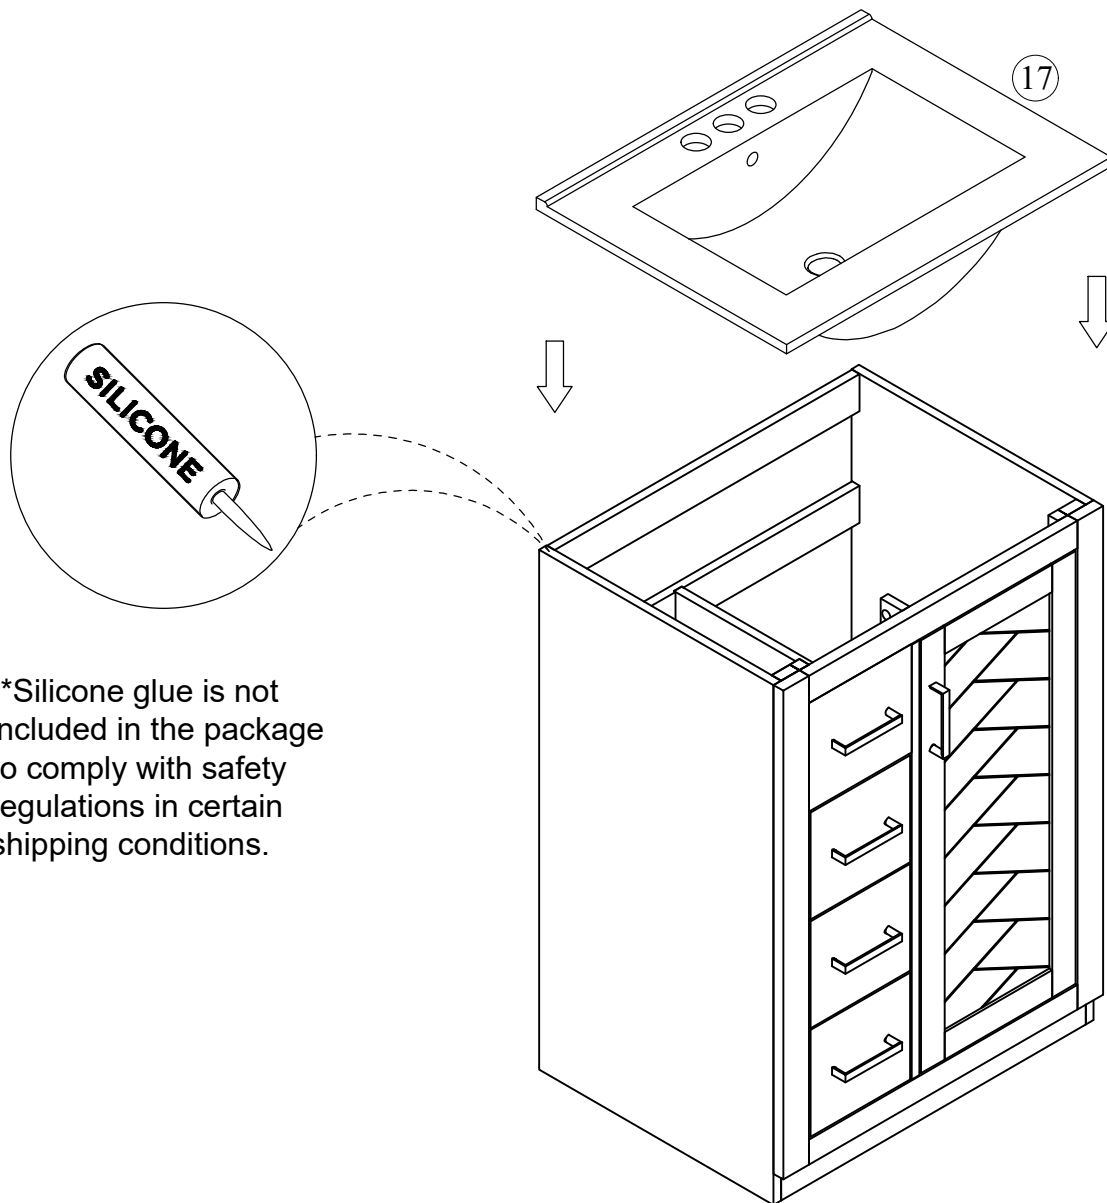

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 13

