


Adirondack Bar Stool

ASSEMBLY MANUAL

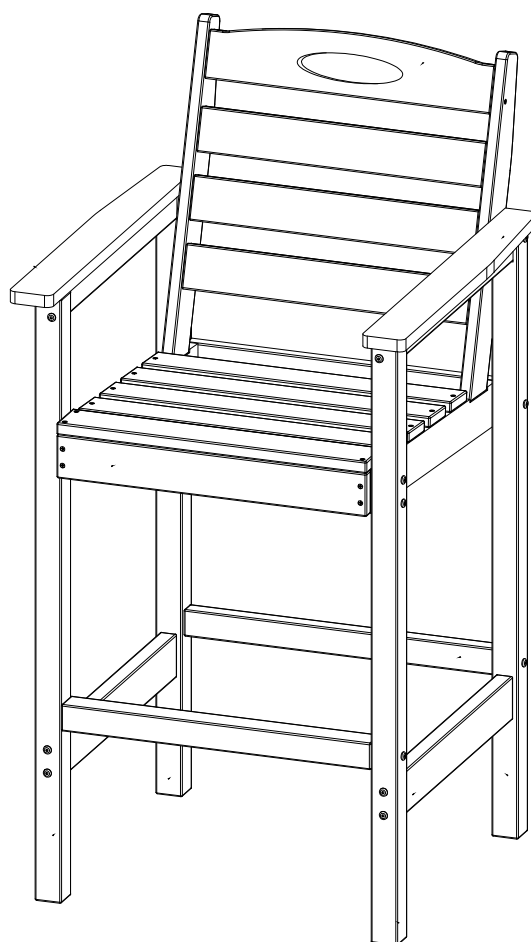

BEFORE STARTING ASSEMBLY

① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.










② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).


③ It would be much easier to assemble the product with two or more people.


④ Some parts have metal edges. Please be careful when handling components.







⑤ Cleaning tips: For a quick clean, simply wipe with soap and water; for a deep clean, use a clean cloth to apply a solution of 1/3 bleach and 2/3 water to the lumber, let it sit for a few minutes (this won't affect the color), then loosen dirt and debris in surface grooves with a soft-bristle brush and rinse with a hose.

IMPORTANT: Please contact Customer Service if you have any problems or discover any missing parts.

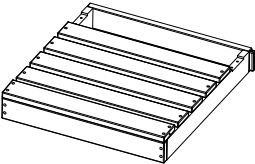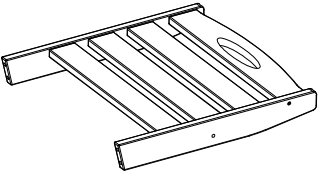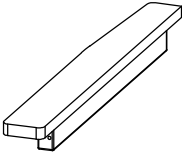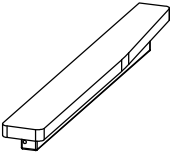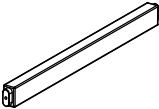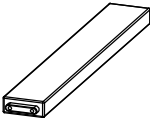A		1
B		1
C		1
D		1
E		1
F		1
G		1
H		1
I		2
J		2


1	 ST6*65	14
2	 M6*70	6
3	 M6	6
4		6
5	 ST6*80	4
6	 ST6*60	4
7		1
8		1




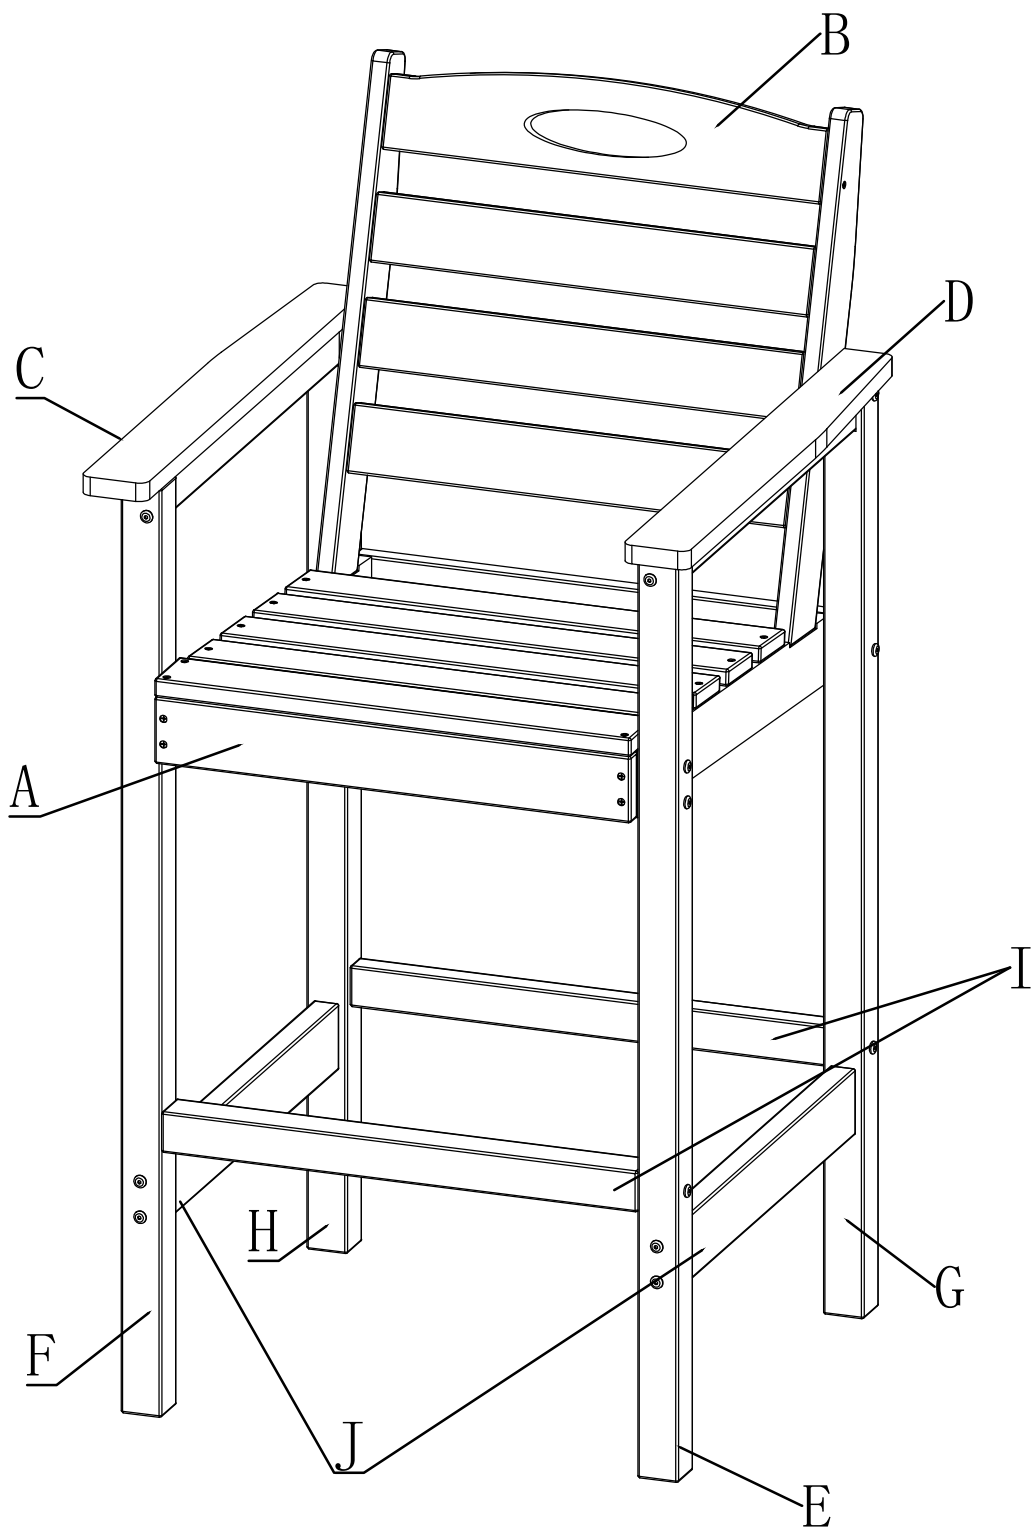


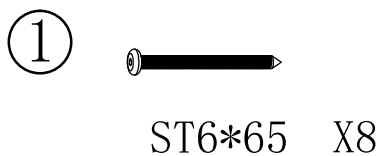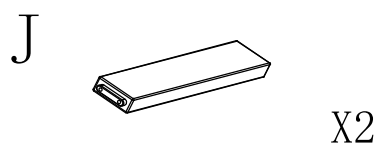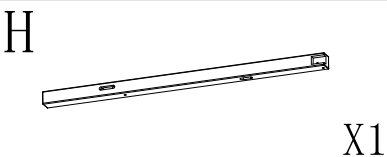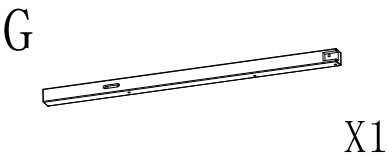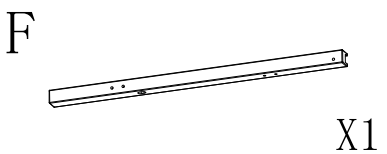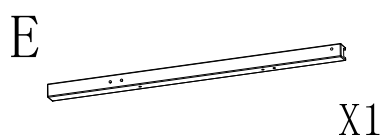


Step1

Attach Braces #J to Leg #F and Leg #H with Screws #1. Repeat the another side.
Pre-drilled holes indicate screw placement only.
Fully thread screws into material for full engagement.

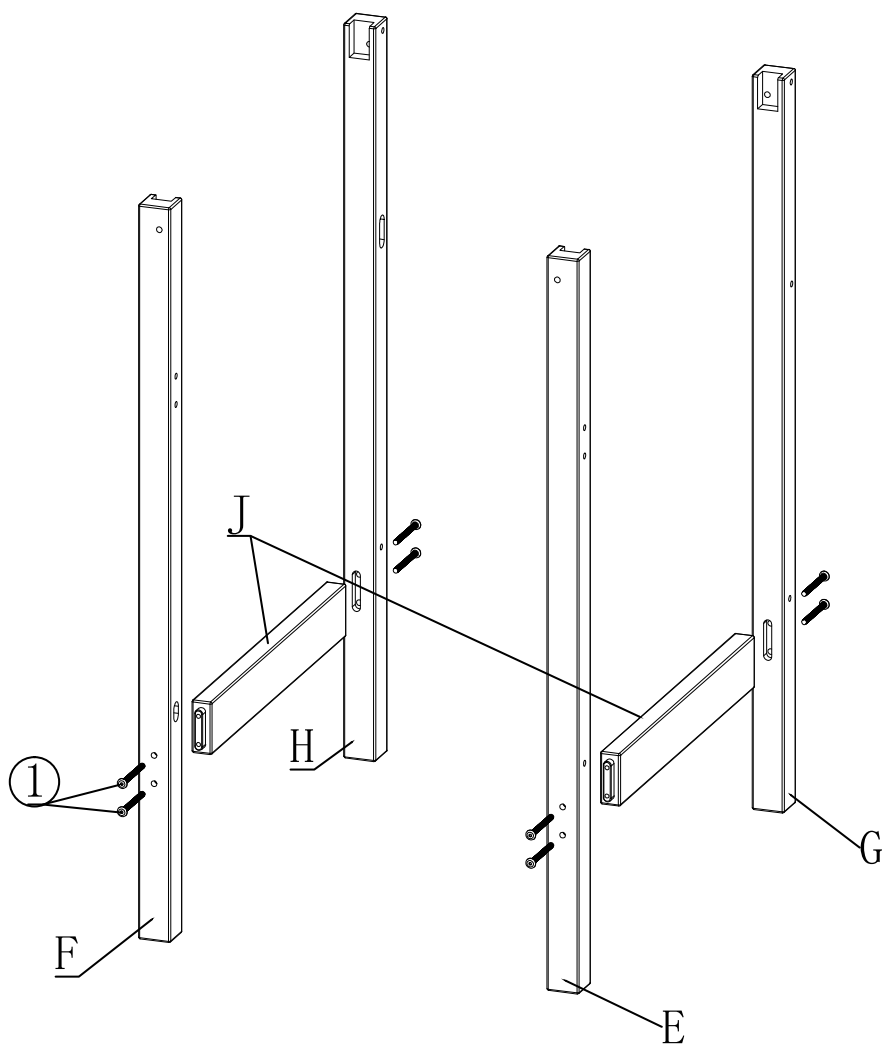

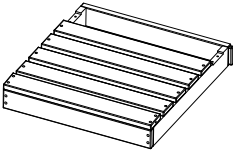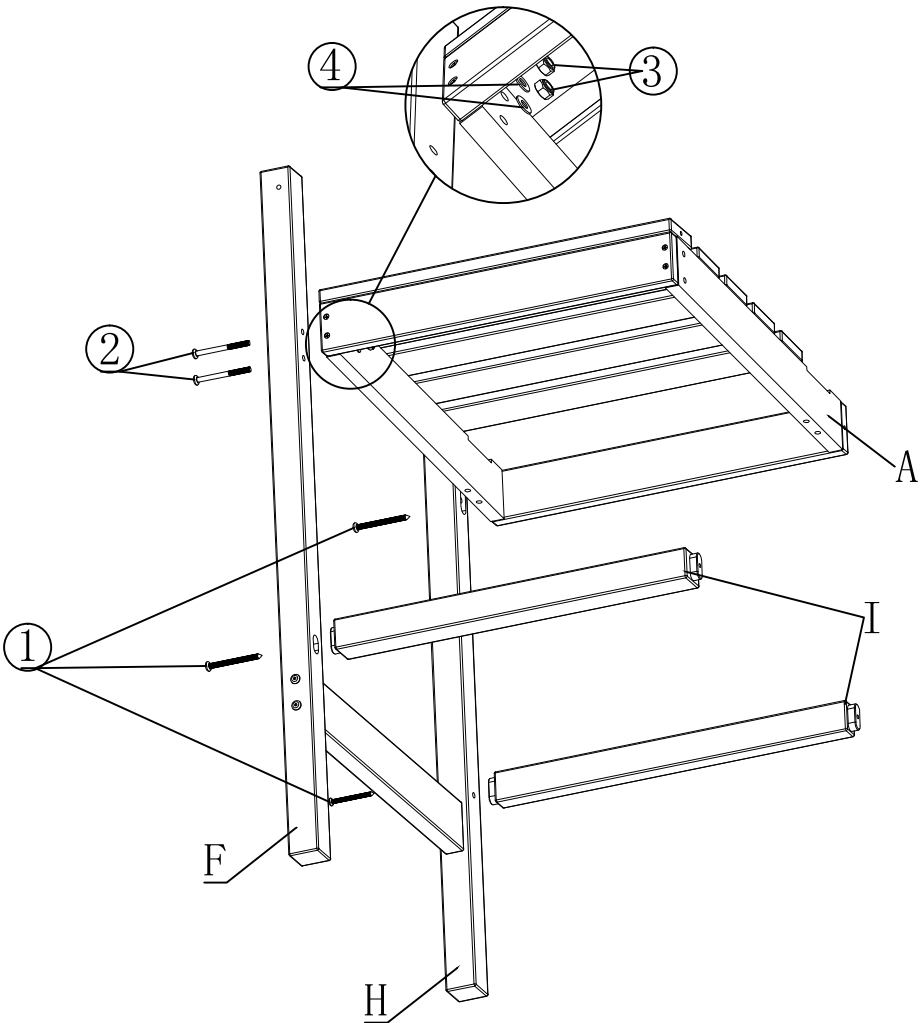
A  X1	Step2 (1) Attach each Brace #I to Leg #F and Leg #H using one Screw #1 per side. (2) Attach the Seat Slats #A to the assembled structure. Use 2 Bolts #2, 2 Washers #4, and 2 Nuts #3 on one side, and use 1 Screw #1 on the other side.
I  X2	
①  ST6*65 X3	
②  M6*70 X2	
③  X2	
④  X2	
	

①		ST6*65	X3
②		M6*70	X2
③		M6	X2
④			X2


Step3

Attach Leg #E, Leg #G, and Brace #J to the assembled structure using the following hardware: Upper-left connection: 2 Bolts #2, 2 Washers #4, and 2 Nuts #3.

Other three sides: 1 Screw #1 each.

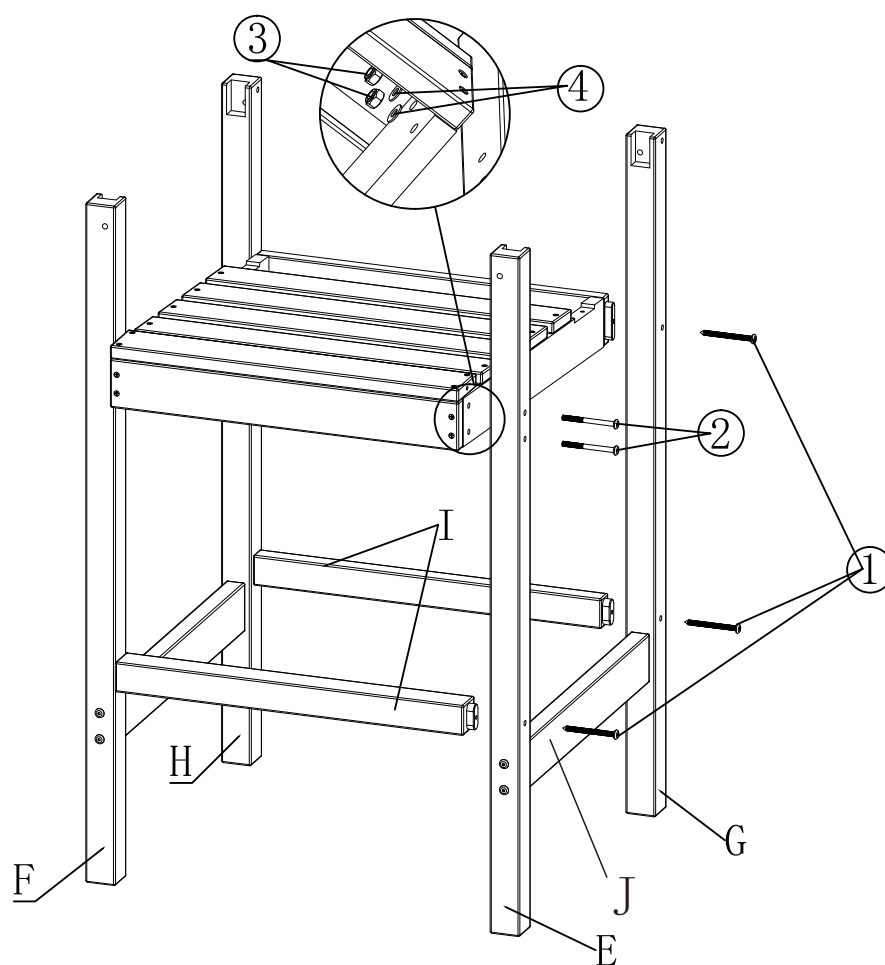


C

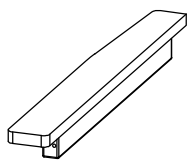

X1

D

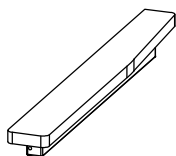

X1

⑥




ST6*60


X4

Step4

Attach Armrest Part #D and Armrest Part #C to the 4 legs using 1 Screw#6 per leg (4 screws in total).

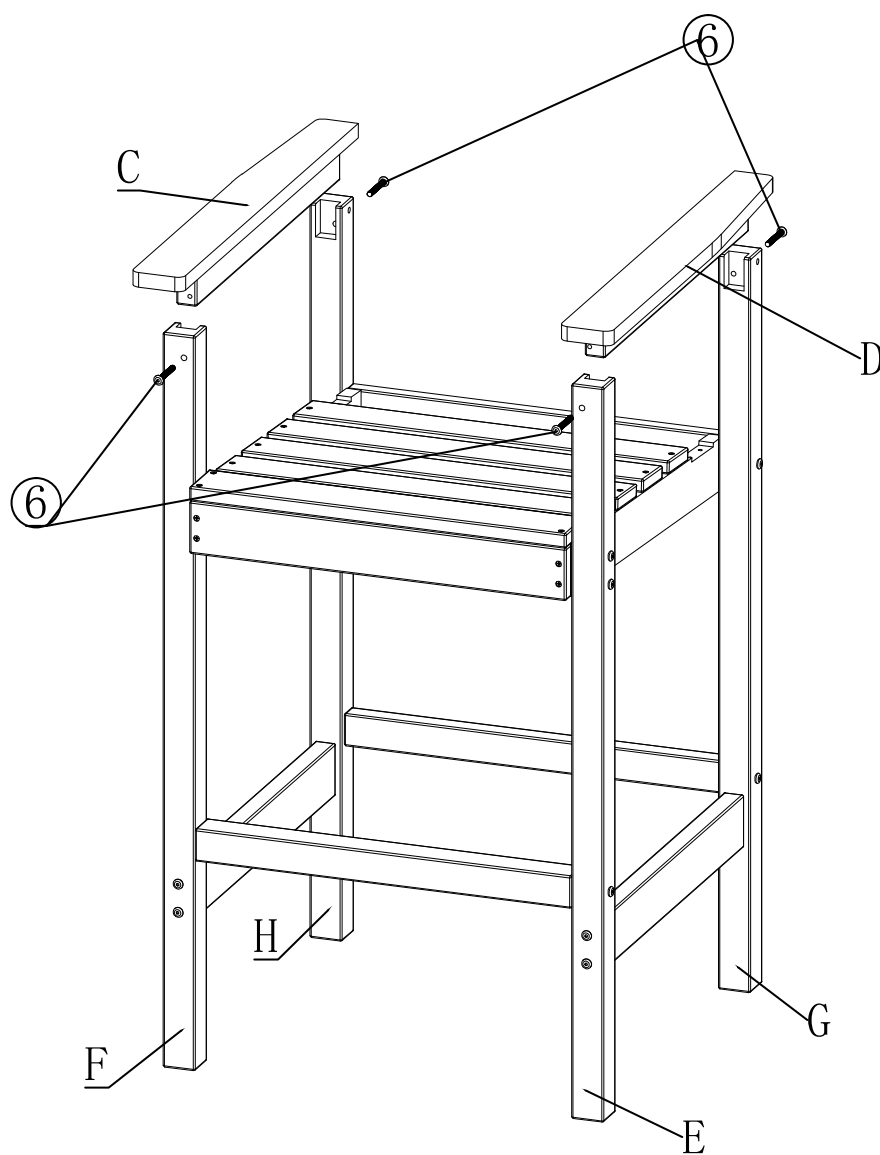


B

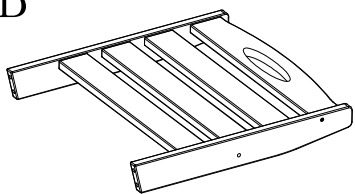

X1

②



M6*70

X2

③



M6

X2

④



X2

⑤



ST6*80

X4

Step5

Attach Backrest Slats #B to the frame. On each side of the backrest: 2 Screws #5, 1 Bolt #2, 1 Washer #4, and 1 Nut#3.

Align the holes and assemble Bolts#2 first.

