



ASSEMBLY INSTRUCTION

SIZE: Full/Queen

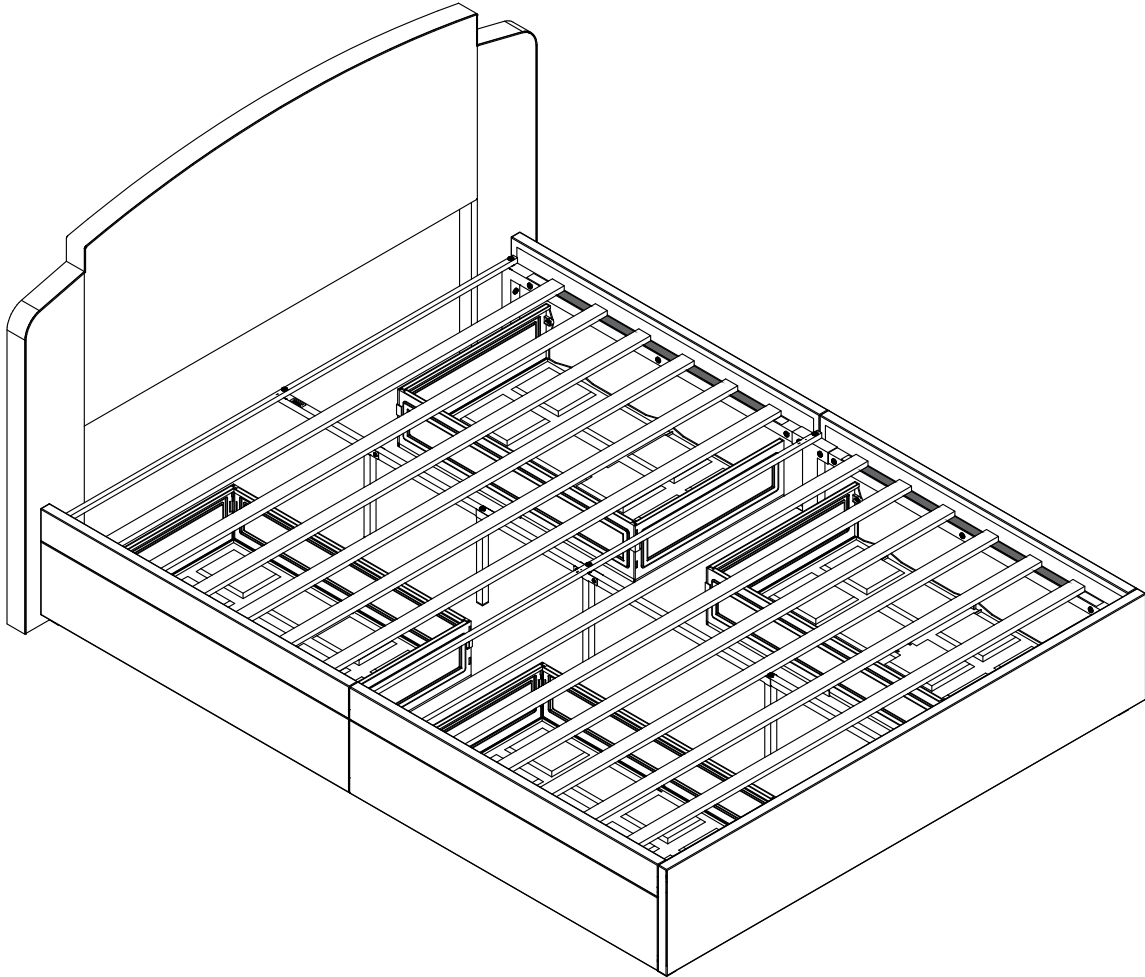


IMPORTANT NOTE

1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed, it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email

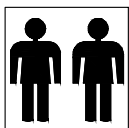

Minimum two
person assembly


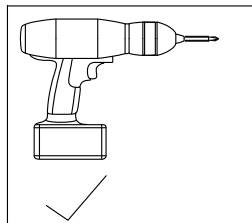


Gloves x1 pair









Please note gloves.
This fabric is very light colour.
So when assembling bed,
please wear them.

PART LIST











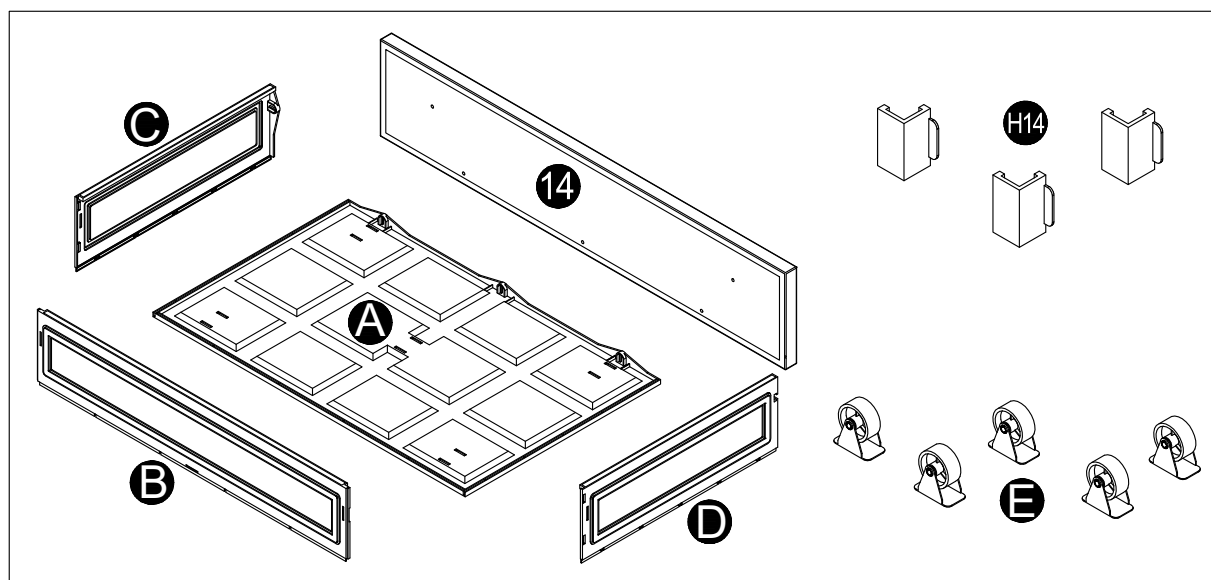
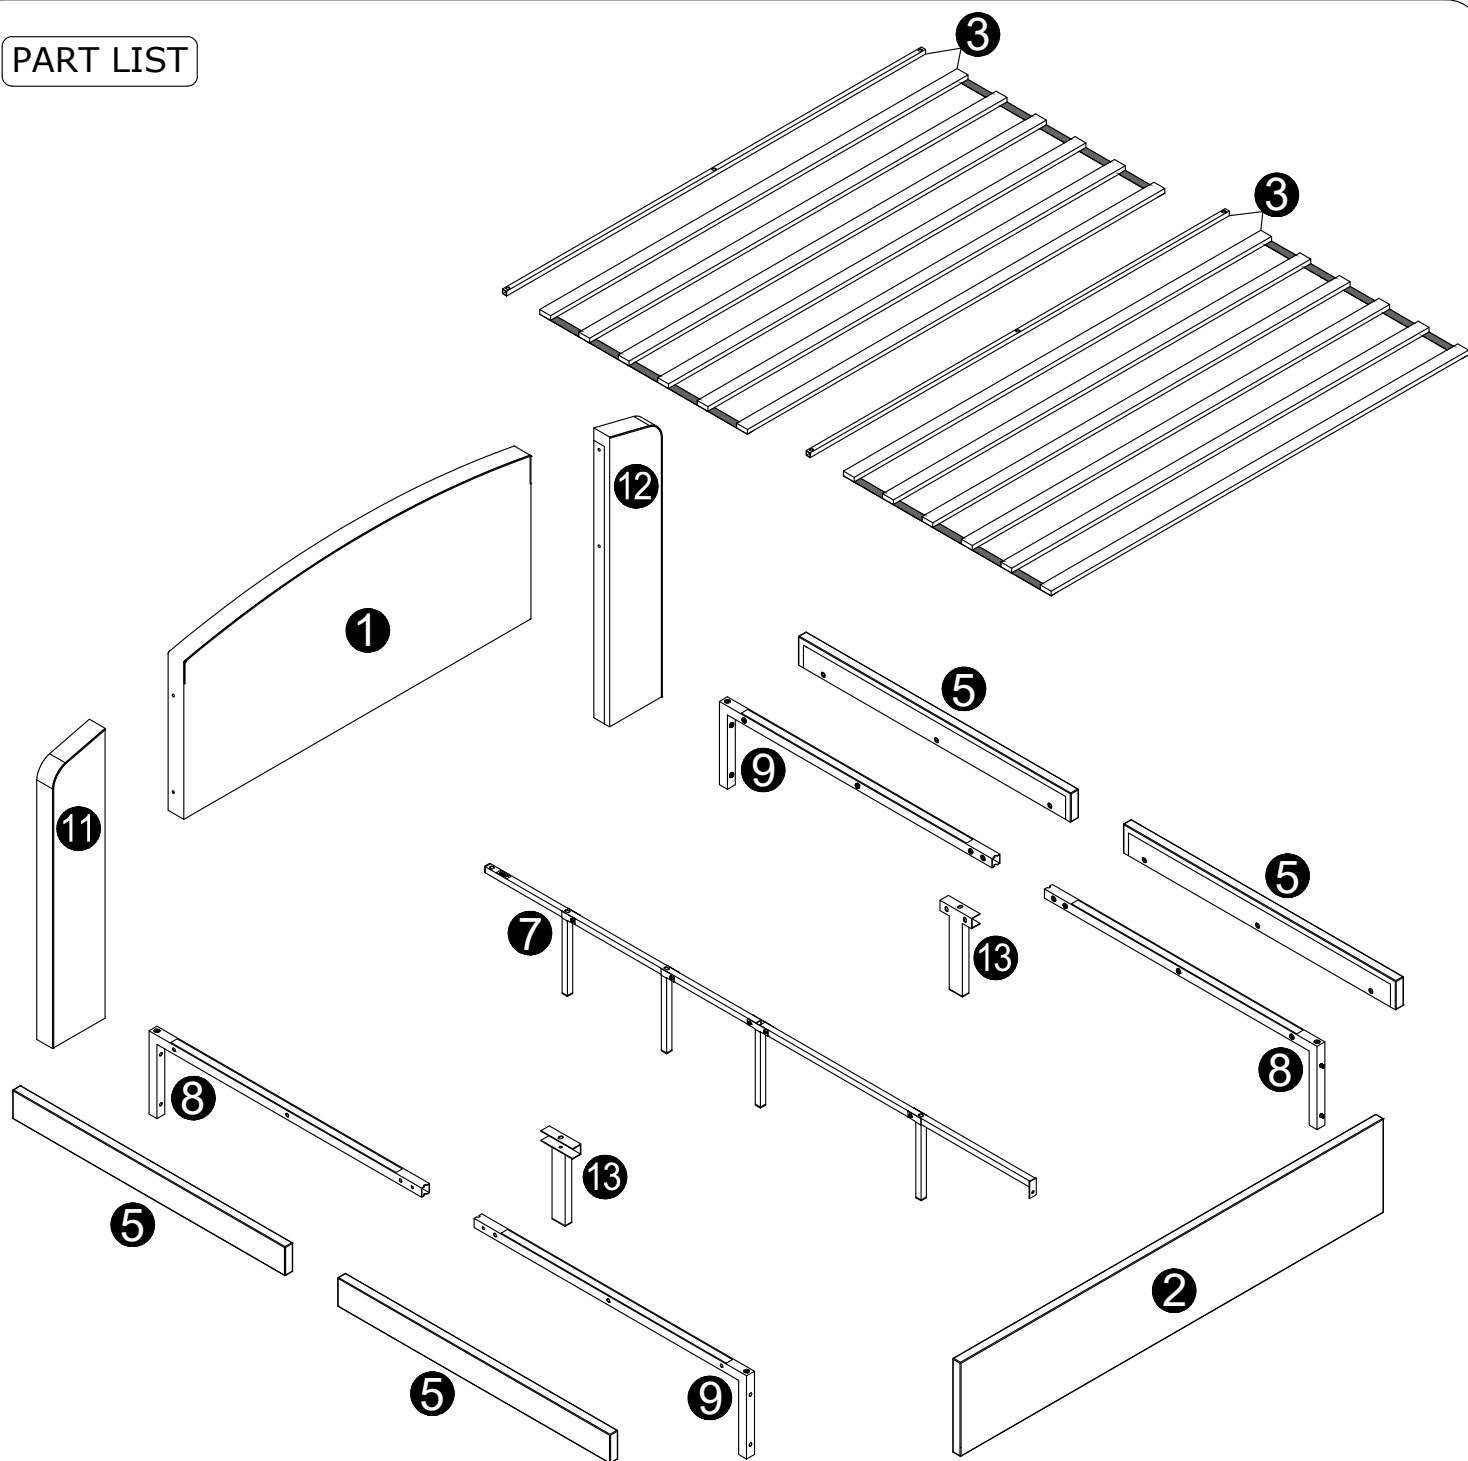


X4

Components of Carton A


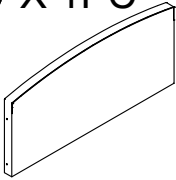
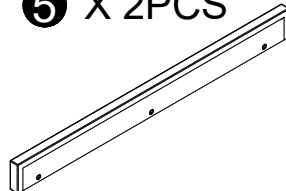
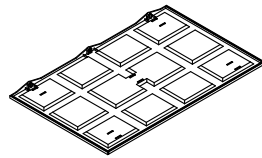
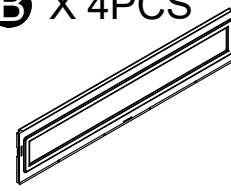
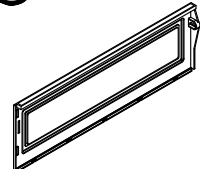
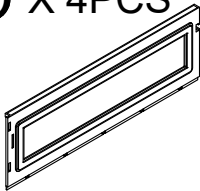
① X 1PC 	⑤ X 2PCS 	A X 4PCS 	B X 4PCS 	C X 4PCS 
D X 4PCS 				

Components of Carton B

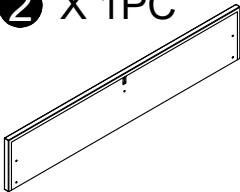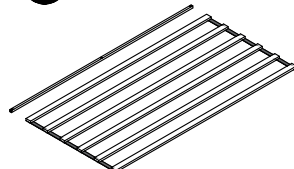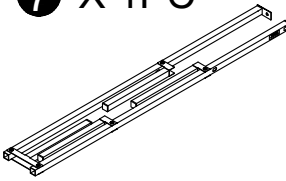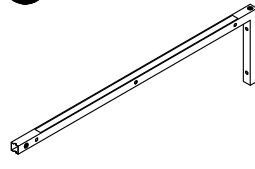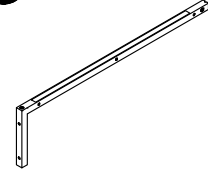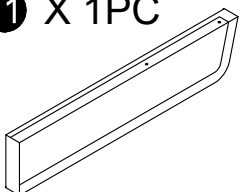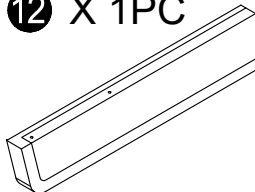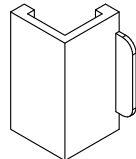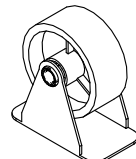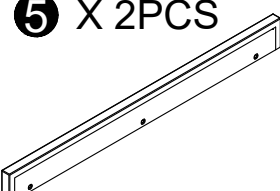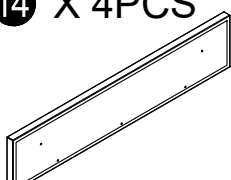② X 1PC 	③ X 2PCS 	⑦ X 1PC 	⑧ X 2PCS 	⑨ X 2PCS 
⑪ X 1PC 	⑫ X 1PC 	⑬ X 2PCS 	H14 X 12PCS 	E X 20PCS 
⑤ X 2PCS 	⑭ X 4PCS 			


HARDWARE LIST

Components of Carton B

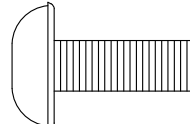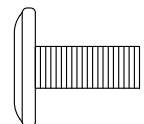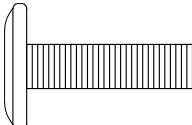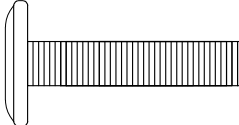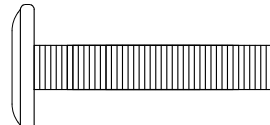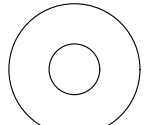
H1 M5 X 1PC 	H2 M4 X 1PC 	H3 M6 X 15mm X 20PCS 	H4 M6 X 60mm X 4PCS 	H5 M8 X 20mm X 5PCS 
H6 M8 X 40mm X 7PCS 	H7 M8 X 50mm X 16PCS 	H8 M8 X 60mm X 6PCS 	H9 M8 X 22mm X 24PCS 	

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box. If you have any assembly issues, missing or wrong parts, or need help, please contact us first via messages. We will solve it for you within 24 hours.


- 1** As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately

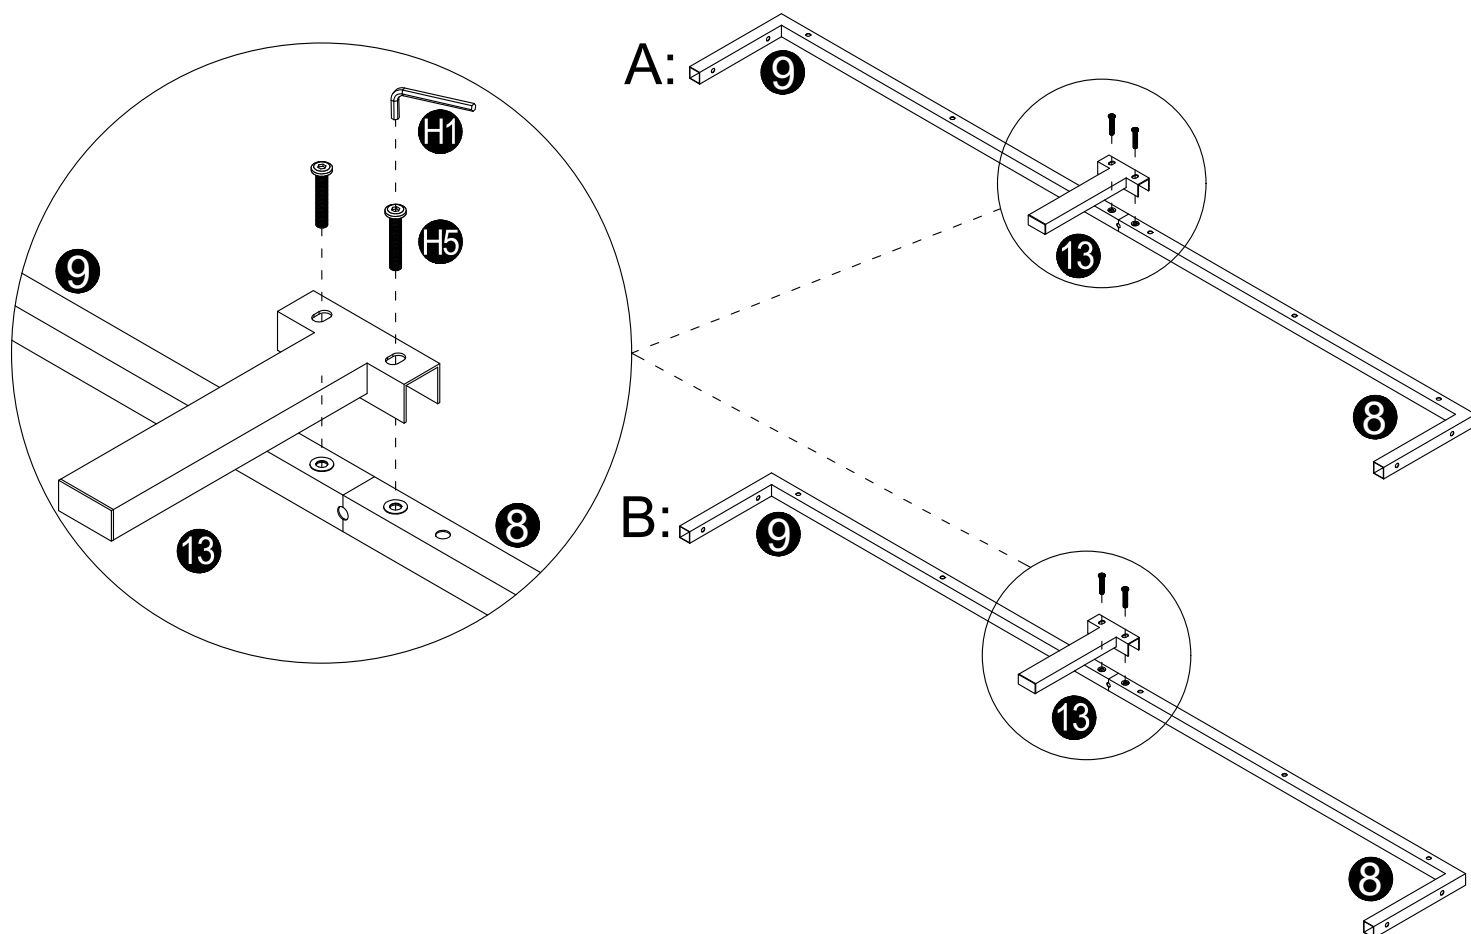


- 2** As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately

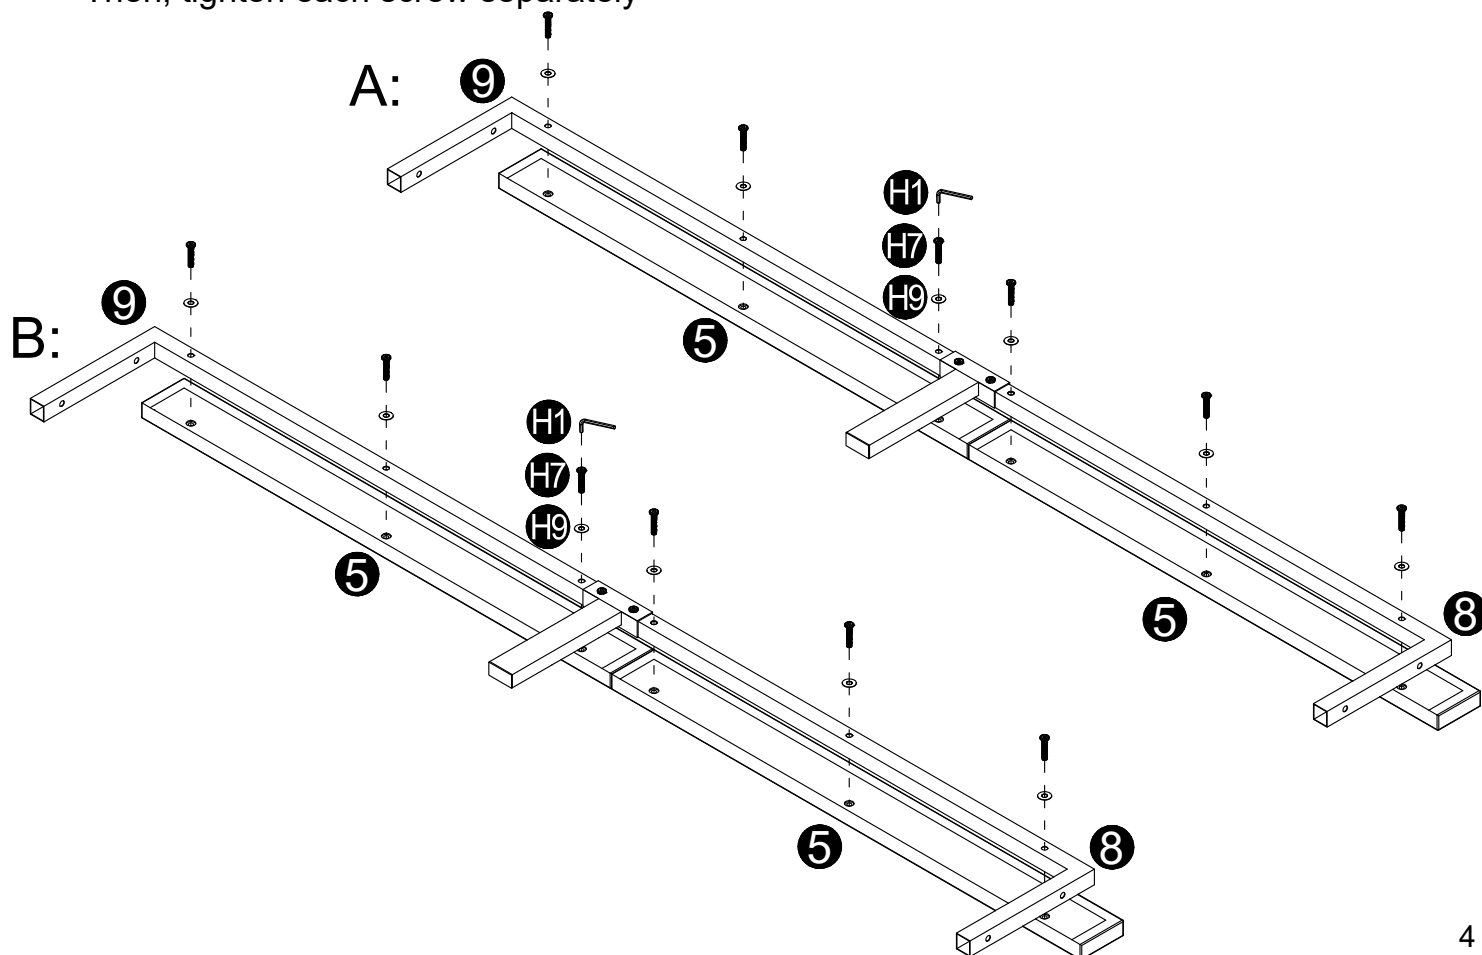



- 3** As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately

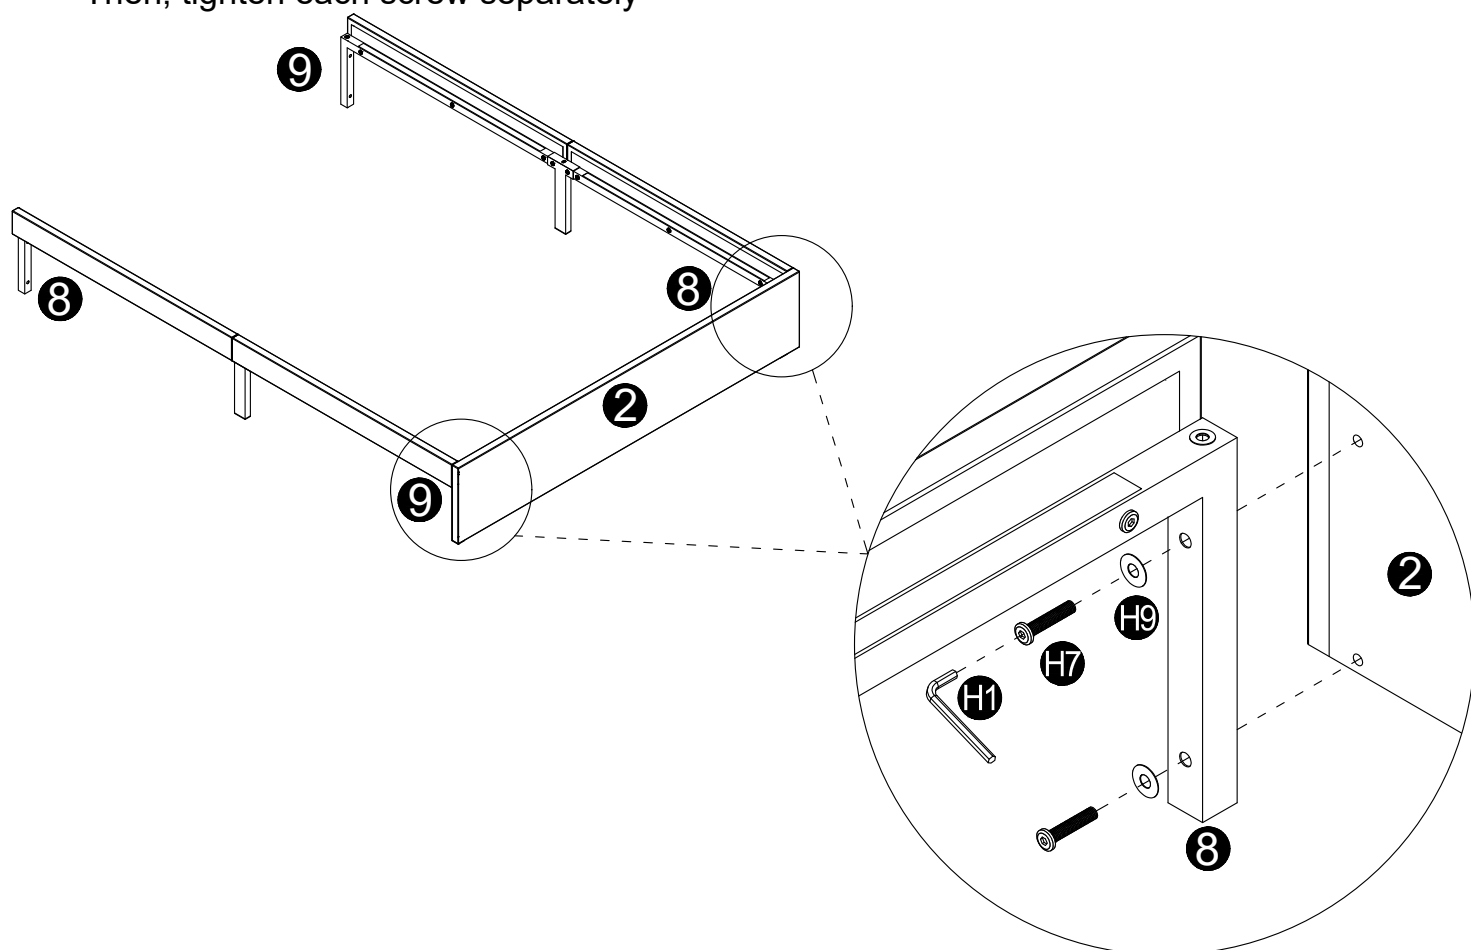



- 4** Note: Install H4 bolts with the H2 hex wrench.

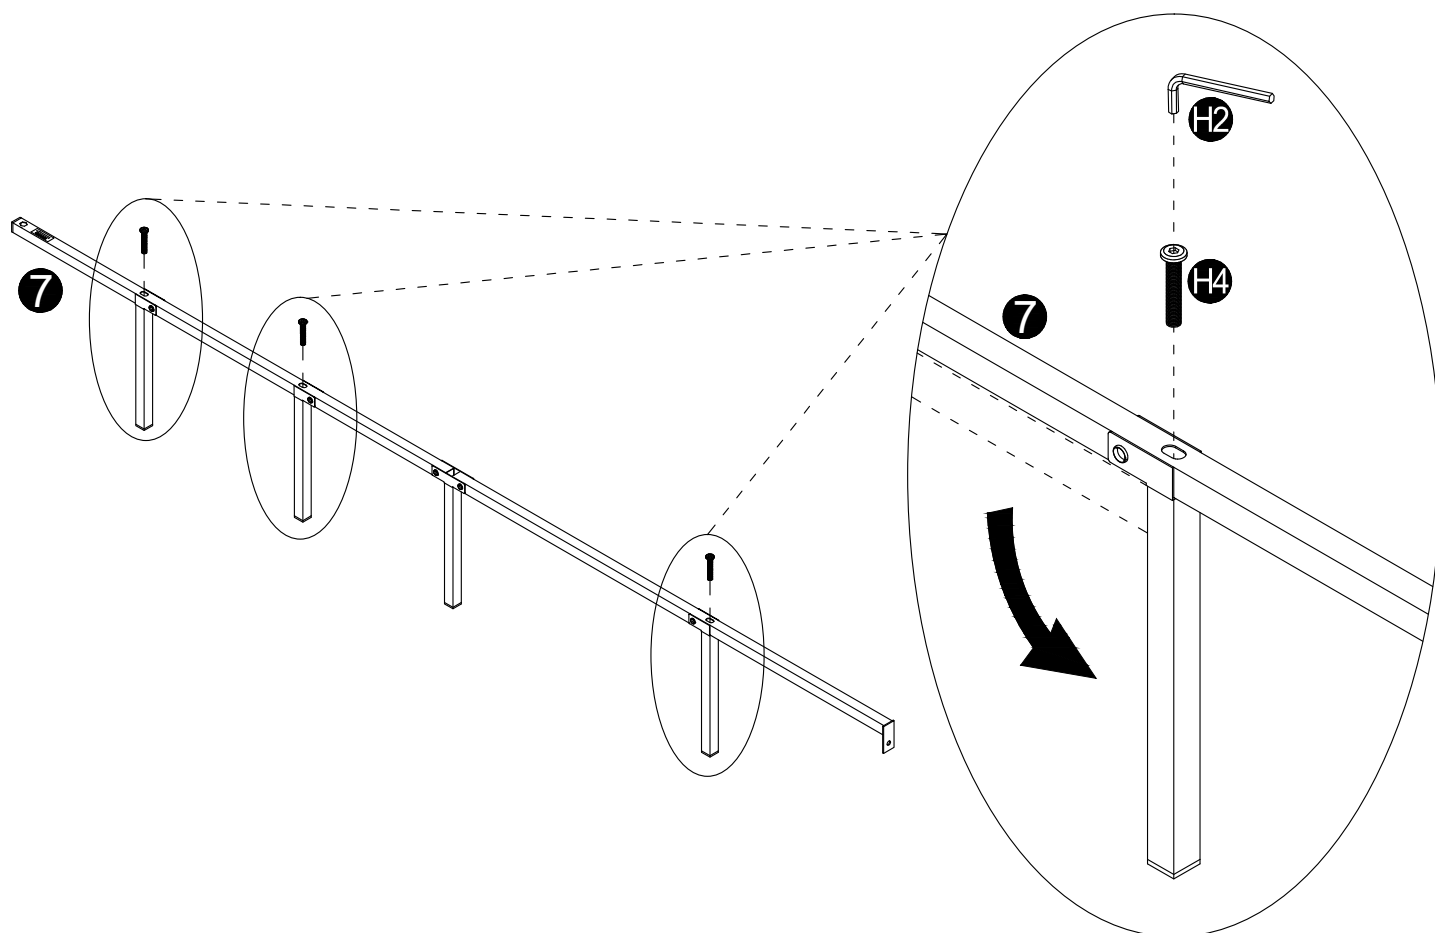




5

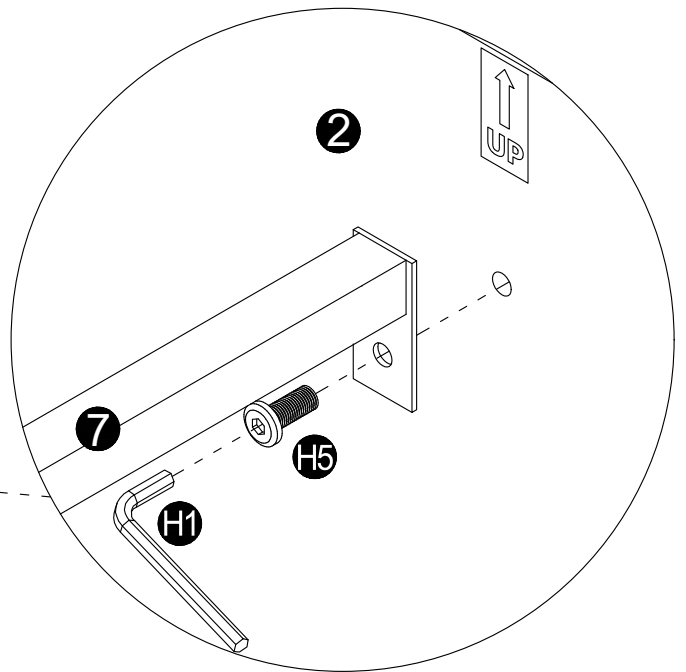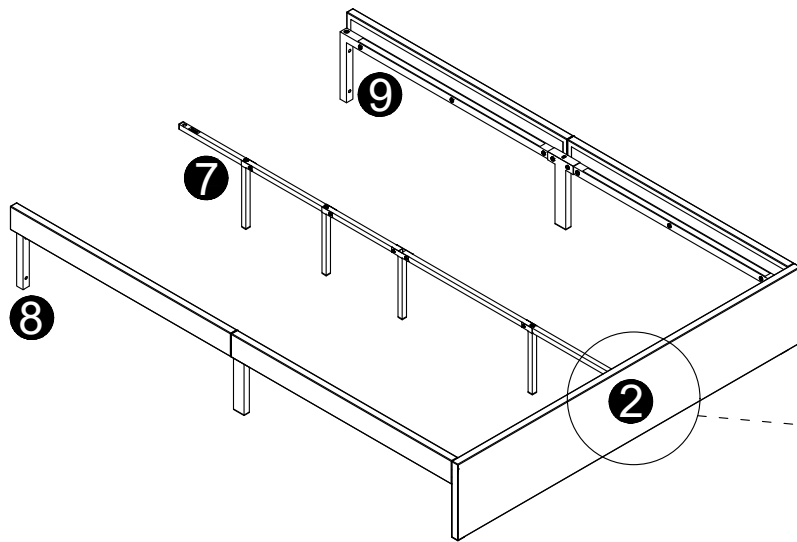


6 Note: Install H4 bolts with the H2 hex wrench.

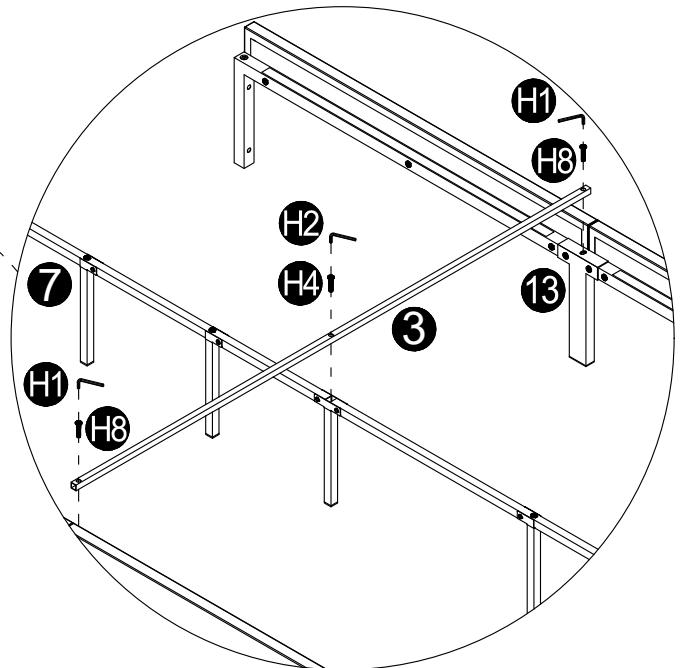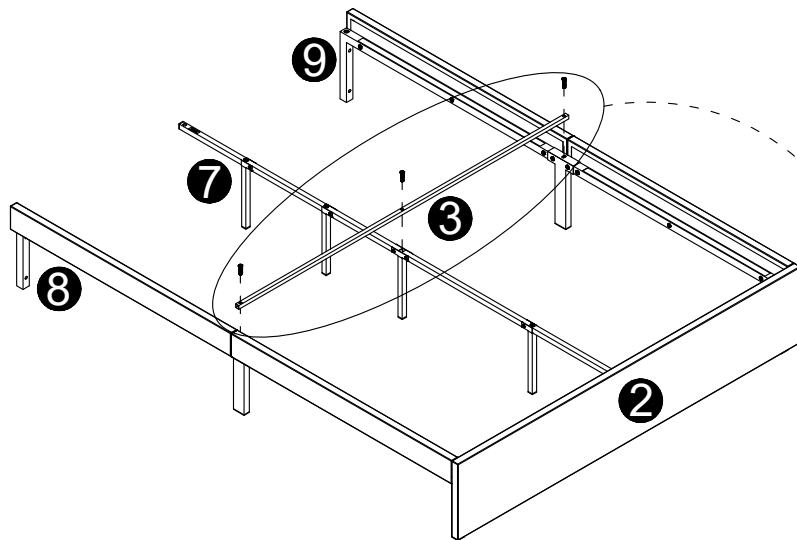


7

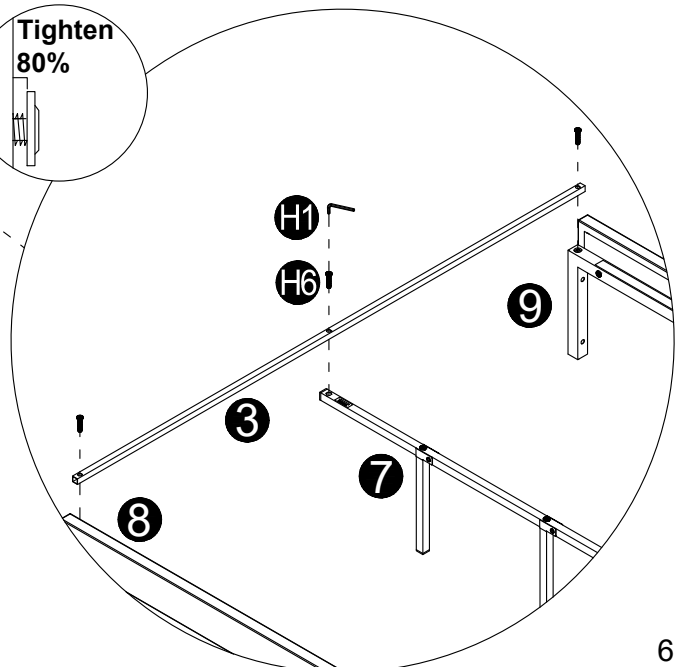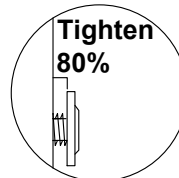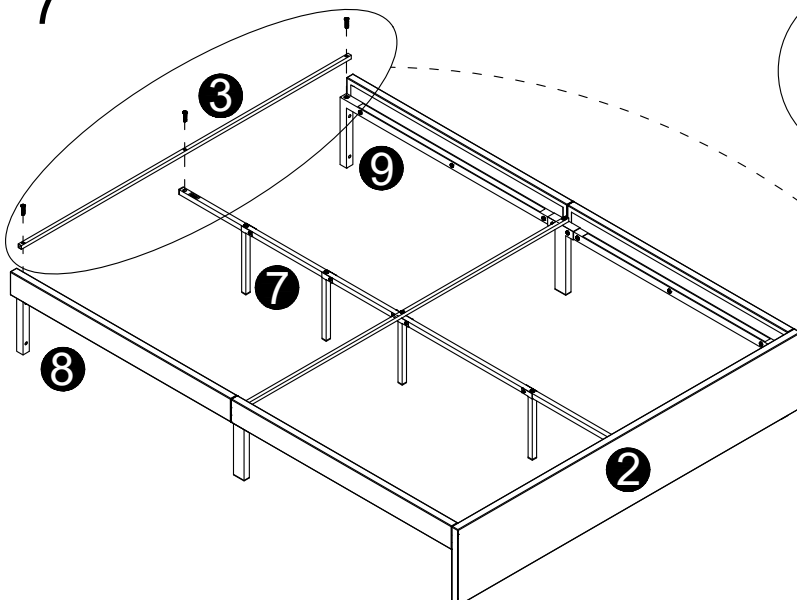


- 8 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately

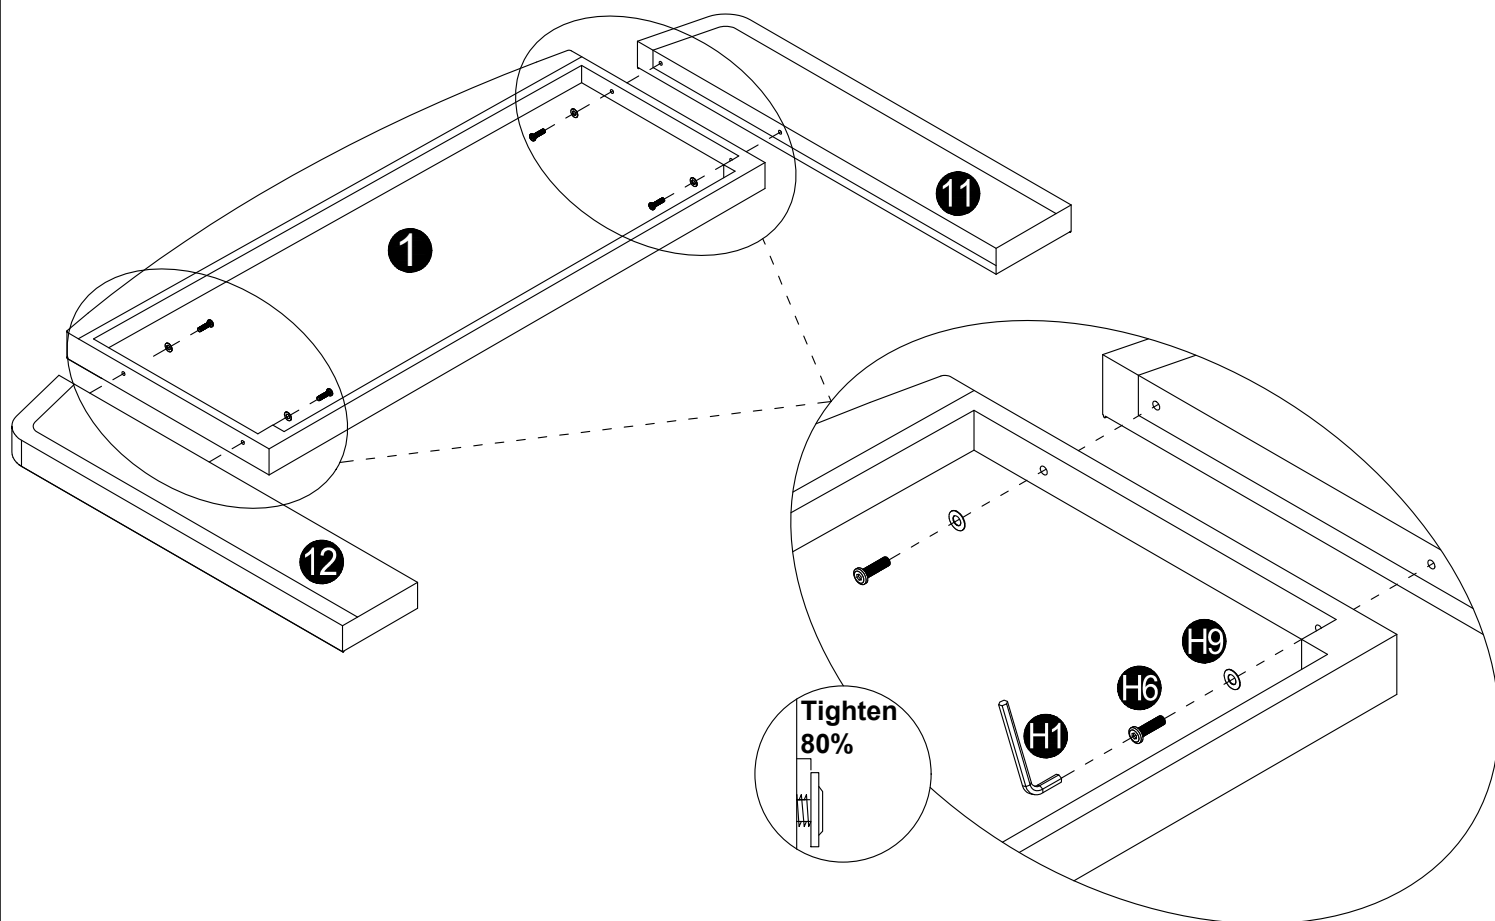


9

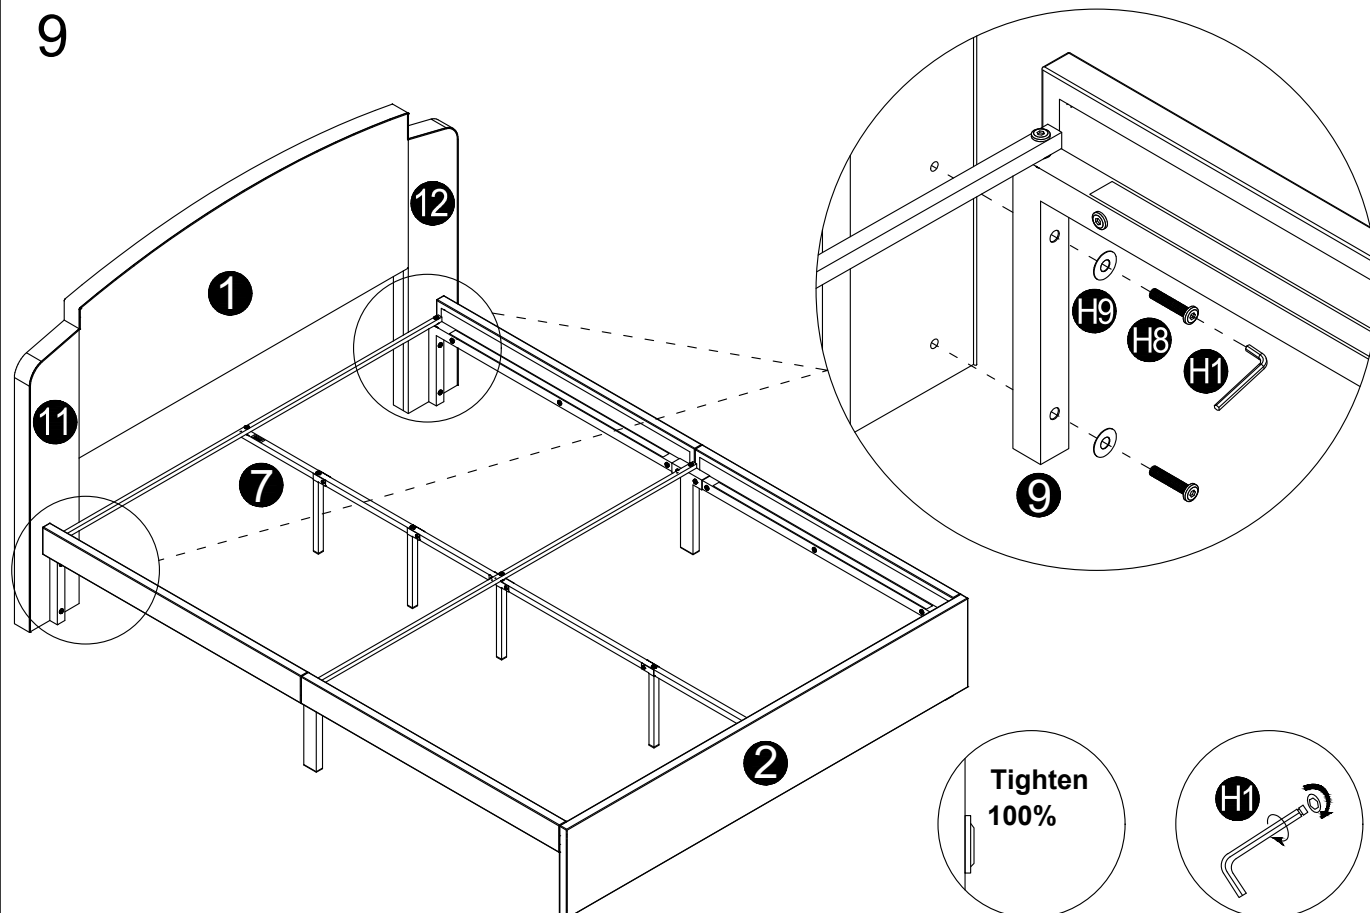


As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately. Tighten all screws from step 7 to step 9.

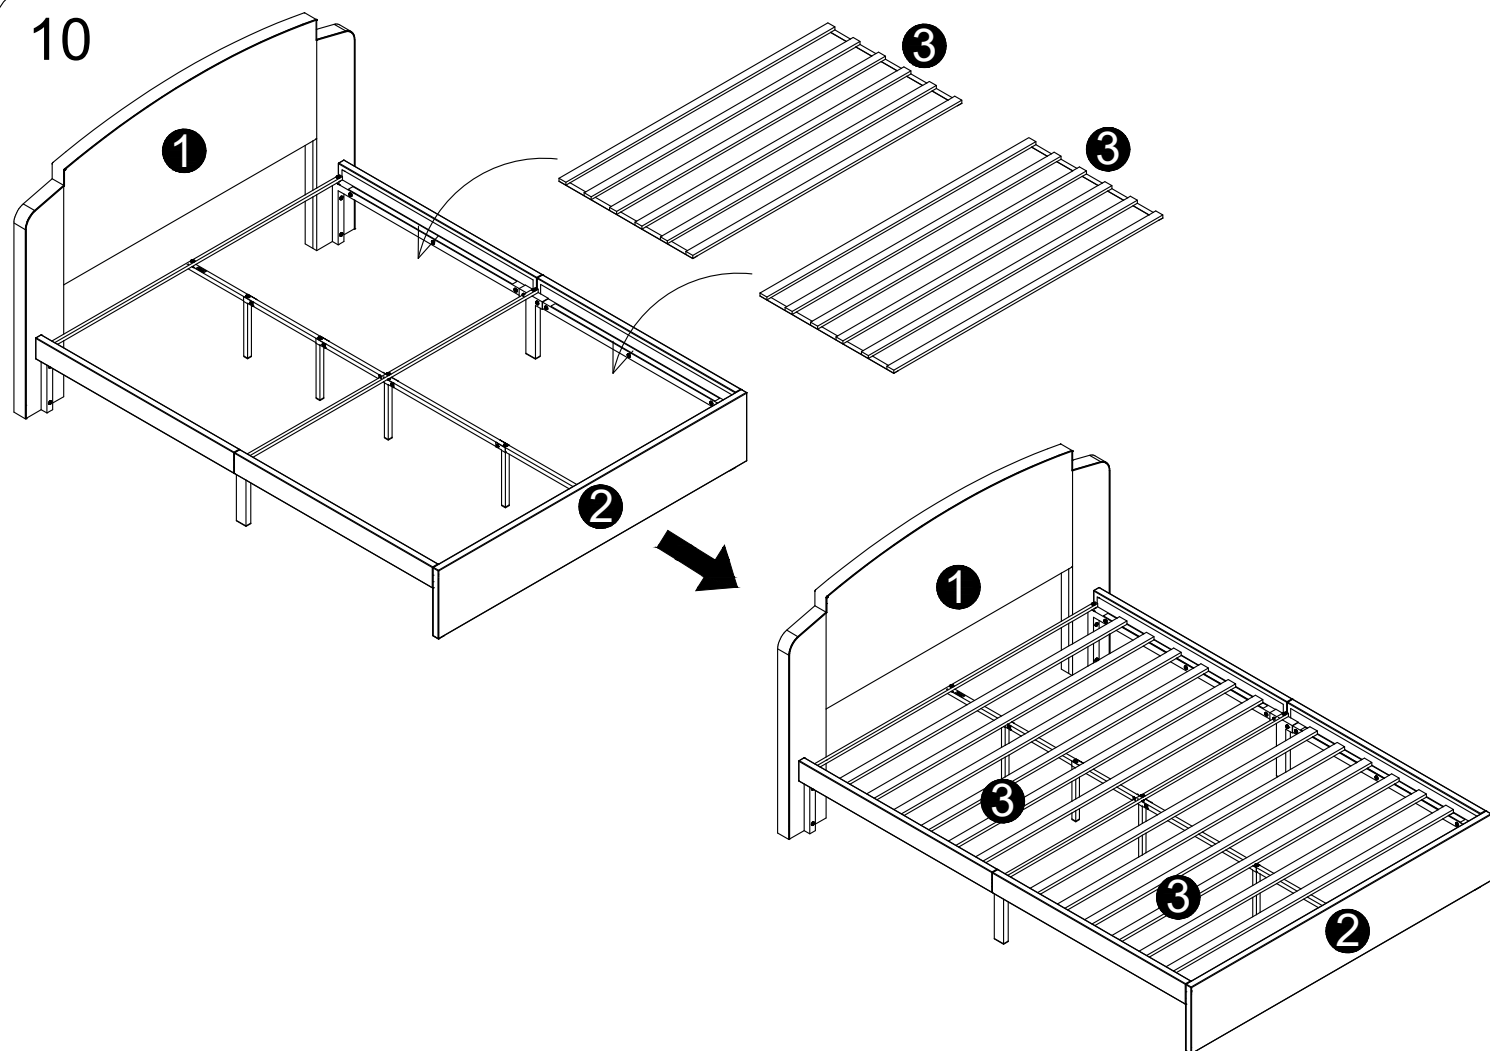


- 11 Put plastic baseboard (A) flat on the floor, assemble side baffles (C&D), following the assemble picture aligning them inward, ensuring all fit into all slots, and push forcefully until the side panels are flush with the baseboard.

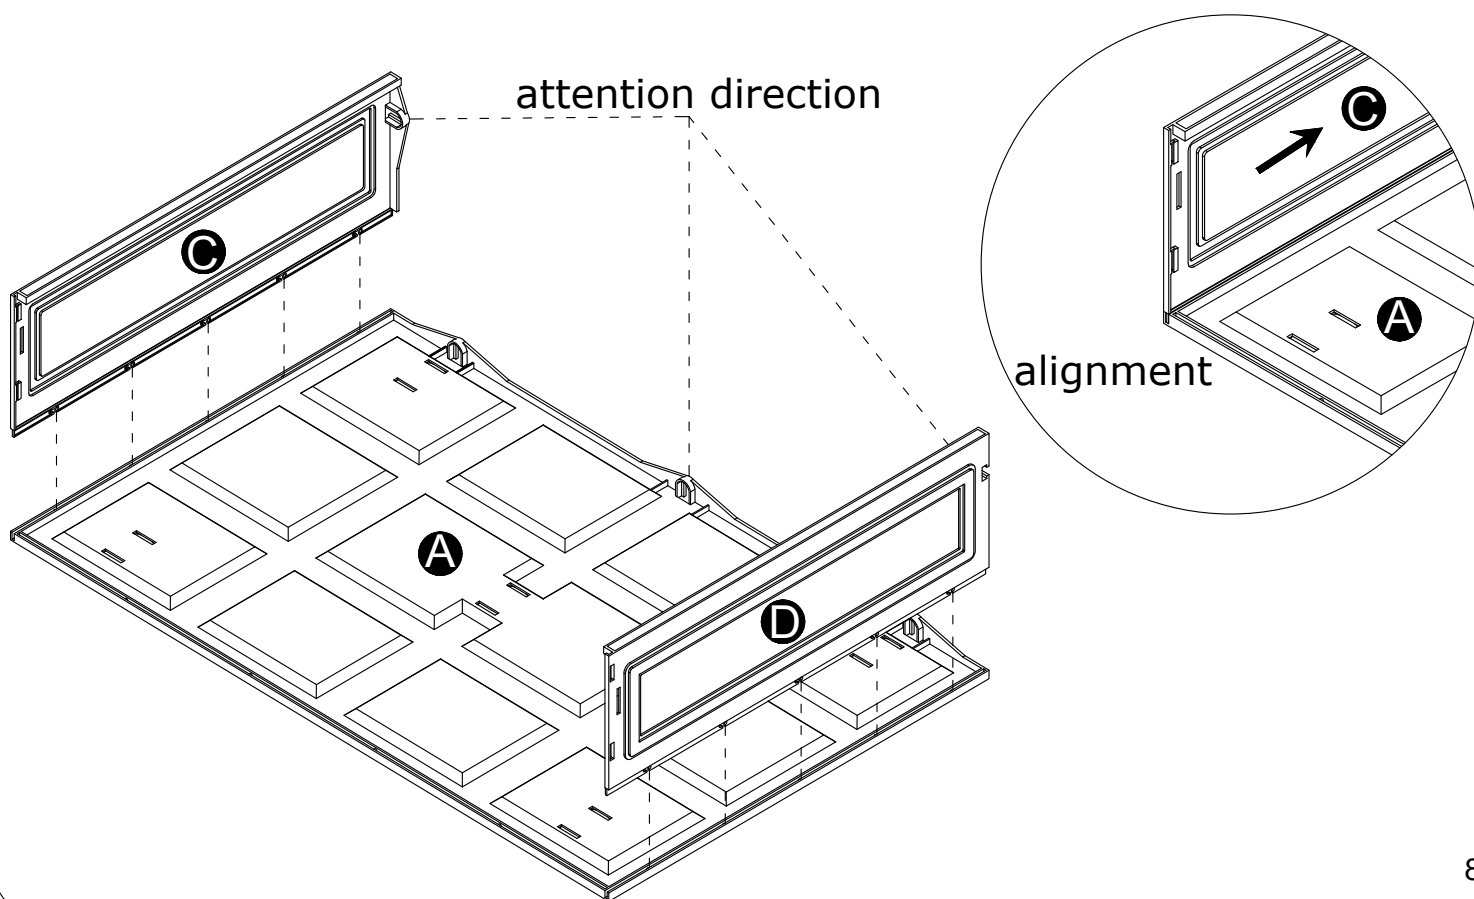



- 12** Align the rear side panel (B) with the slots on side panels C&D, push downward forcefully to ensure B fits into the slots of "A."

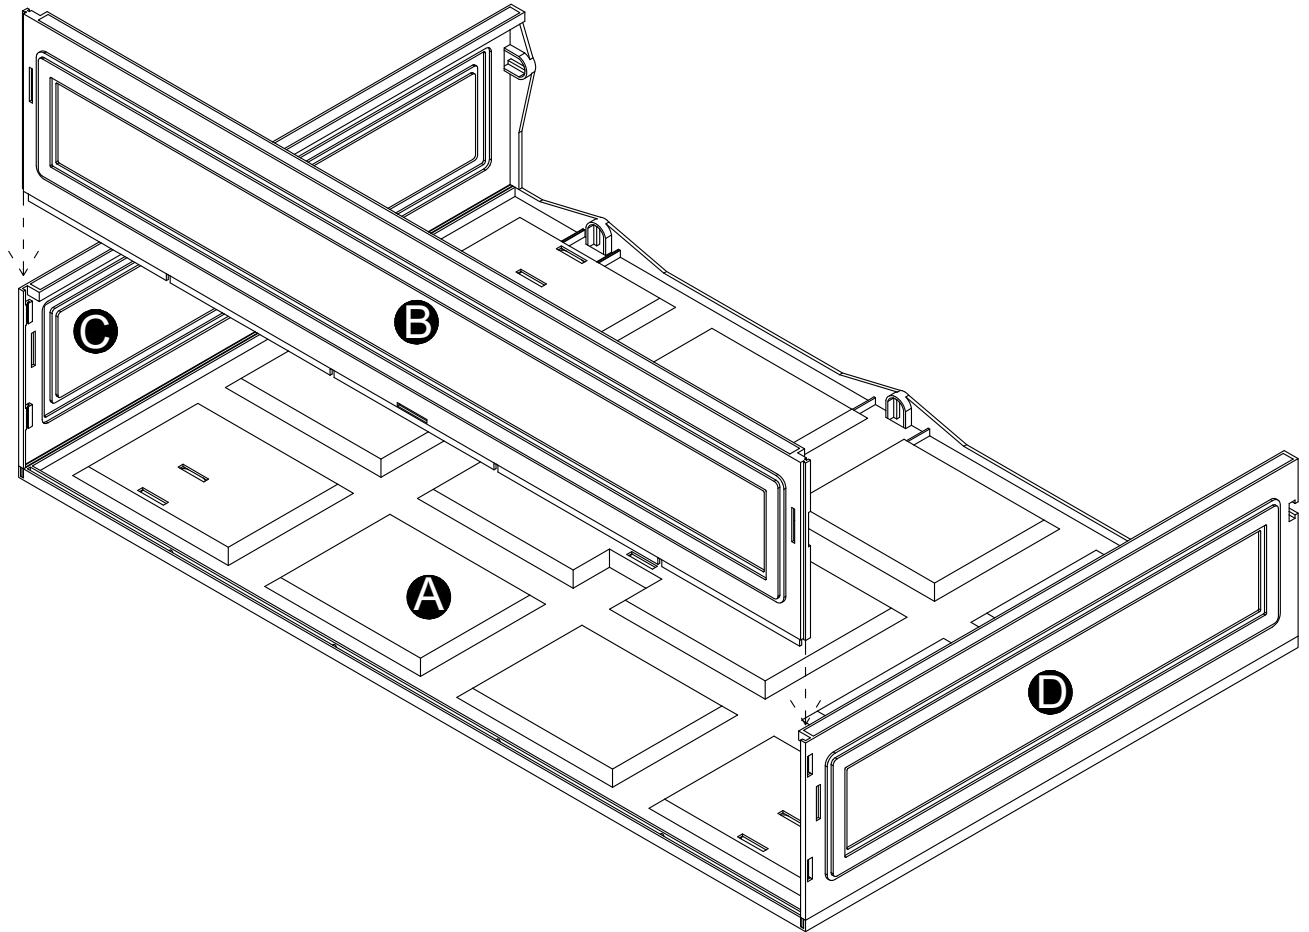


- 13** Take clip H14 and secure side panels D&B, B&C, and A&B, ensure the clips fully engage with the slots.

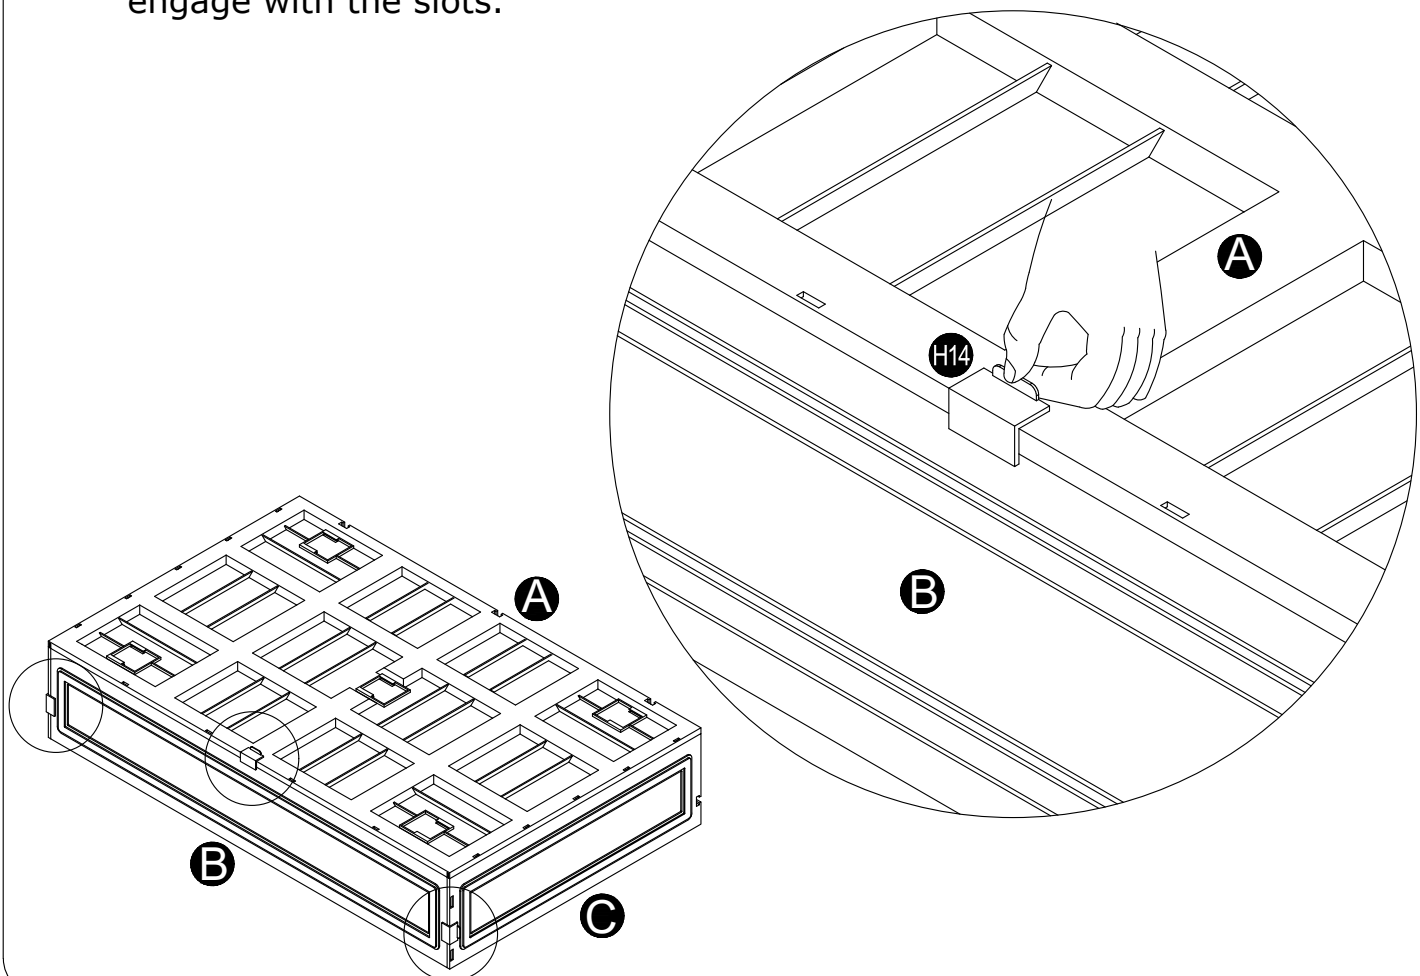

- 14** Install wheels" E "by forcefully pushing them into the slots; once pushed to the bottom, a protrusion will engage with the metal sheet to prevent them from easily coming off. All five part "E" wheels need to be installed correctly.

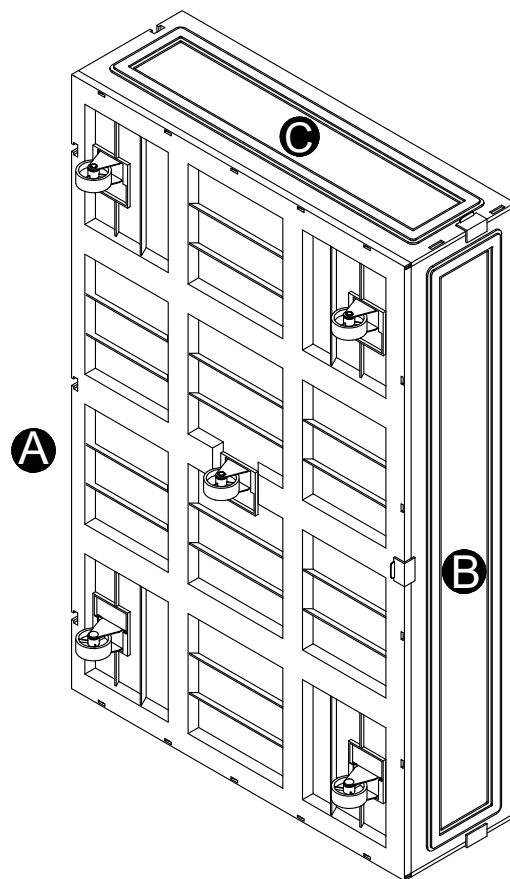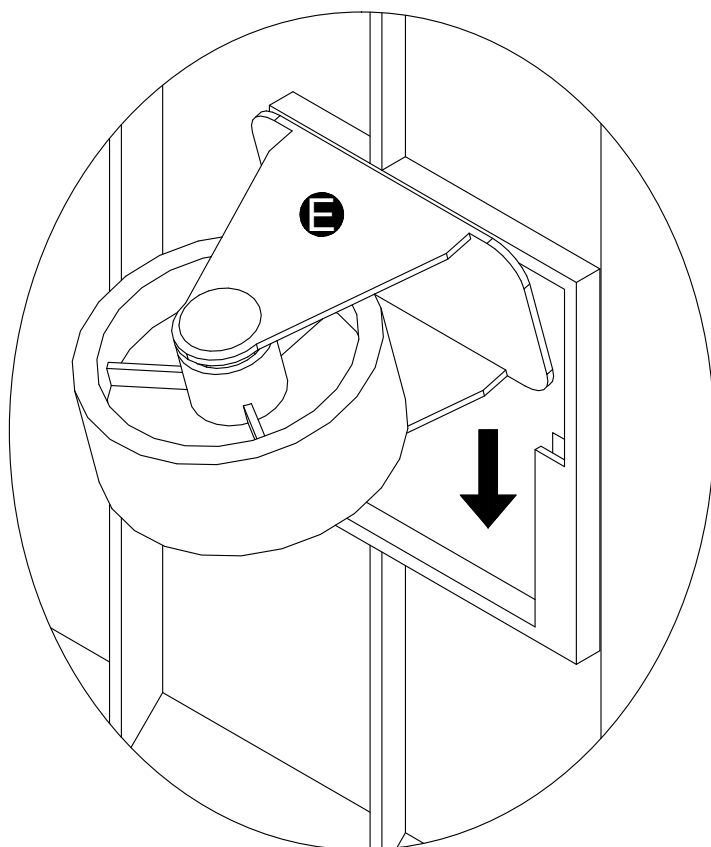


- 15** Take screw **H3** , first install it into drawer panel 14, then screw in the bottom 3 screws partially leaving them protruding 8mm (for easy installation). Insert the drawer bottom A into the three screws of the panel, ensuring no distortion of the drawer and panel to prevent plastic parts from breaking during installation.

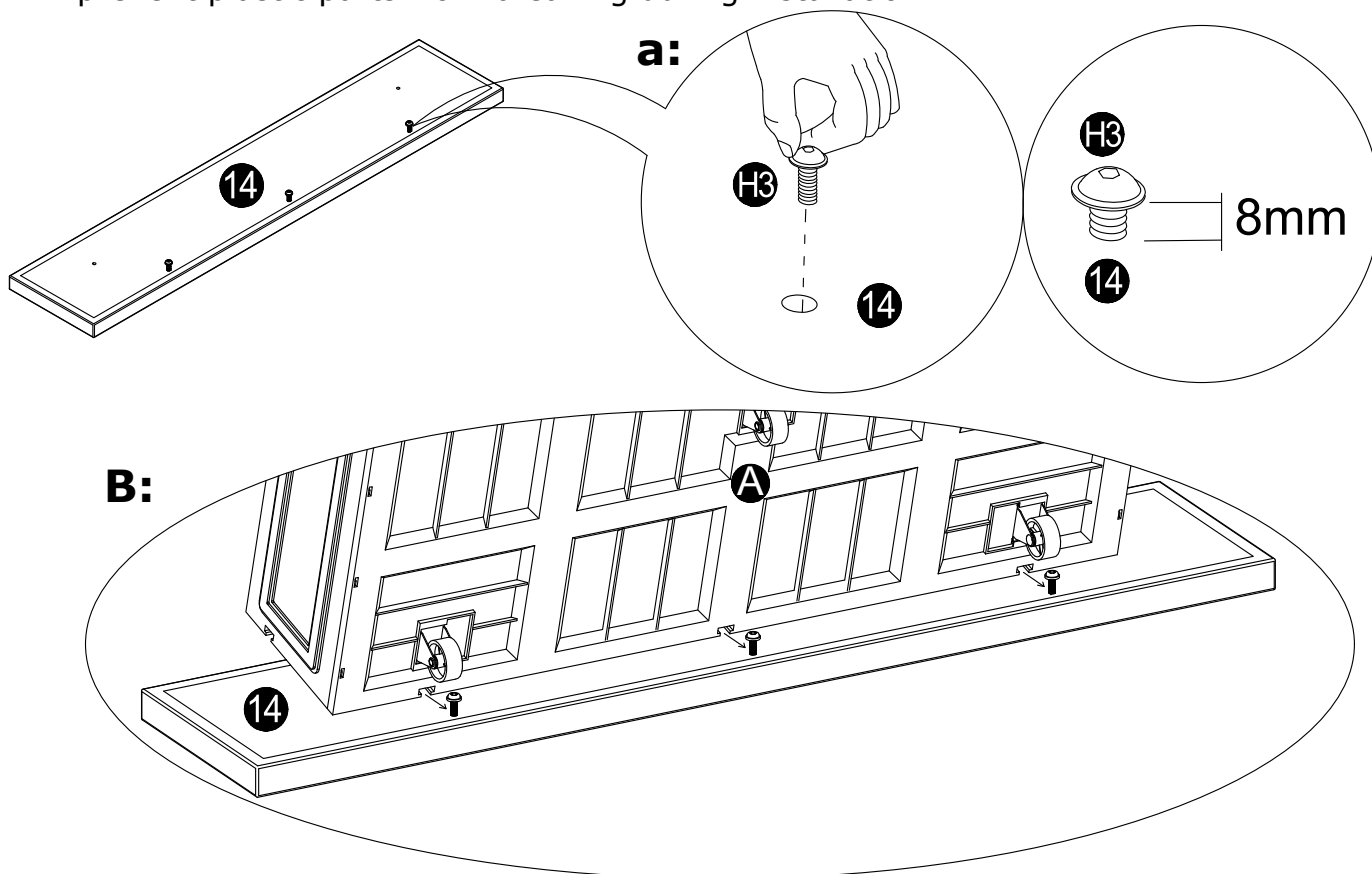


16 Put the drawer flat, install screw **H3** through the holes in drawer sides C&D, then tighten all screws.

Note: Plastic drawers should not be installed with power tools; tightening manually is sufficient.

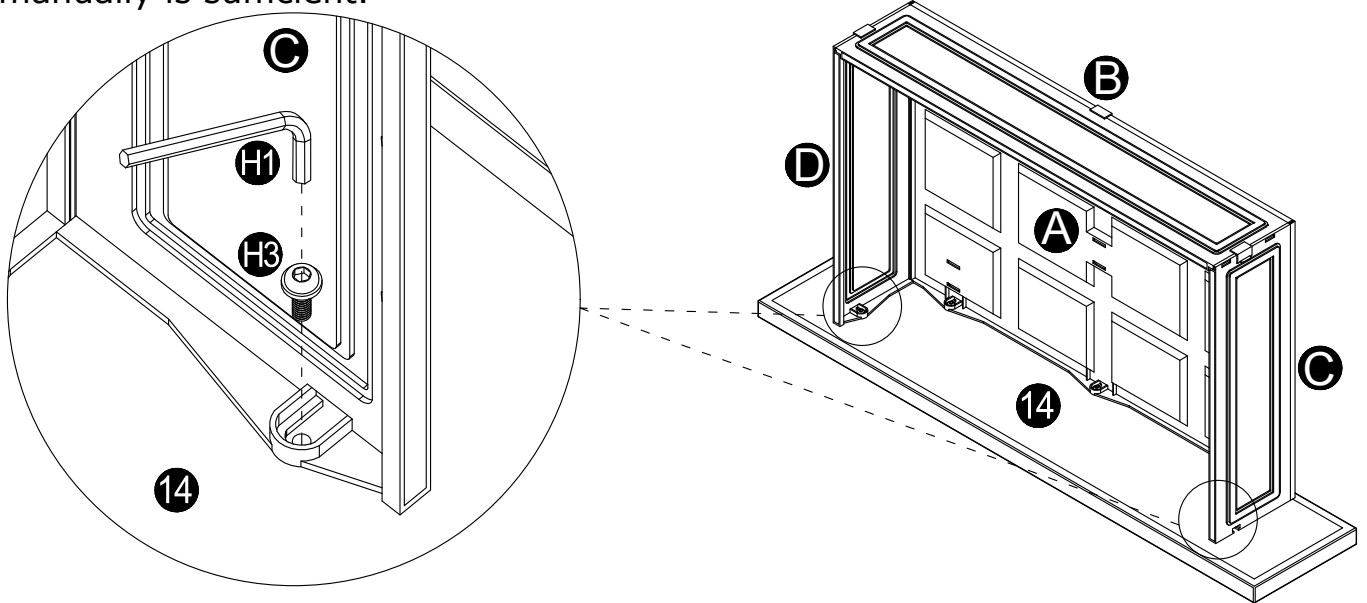

17 Repeat Steps 11 through 16 until you've assembled four full drawers.

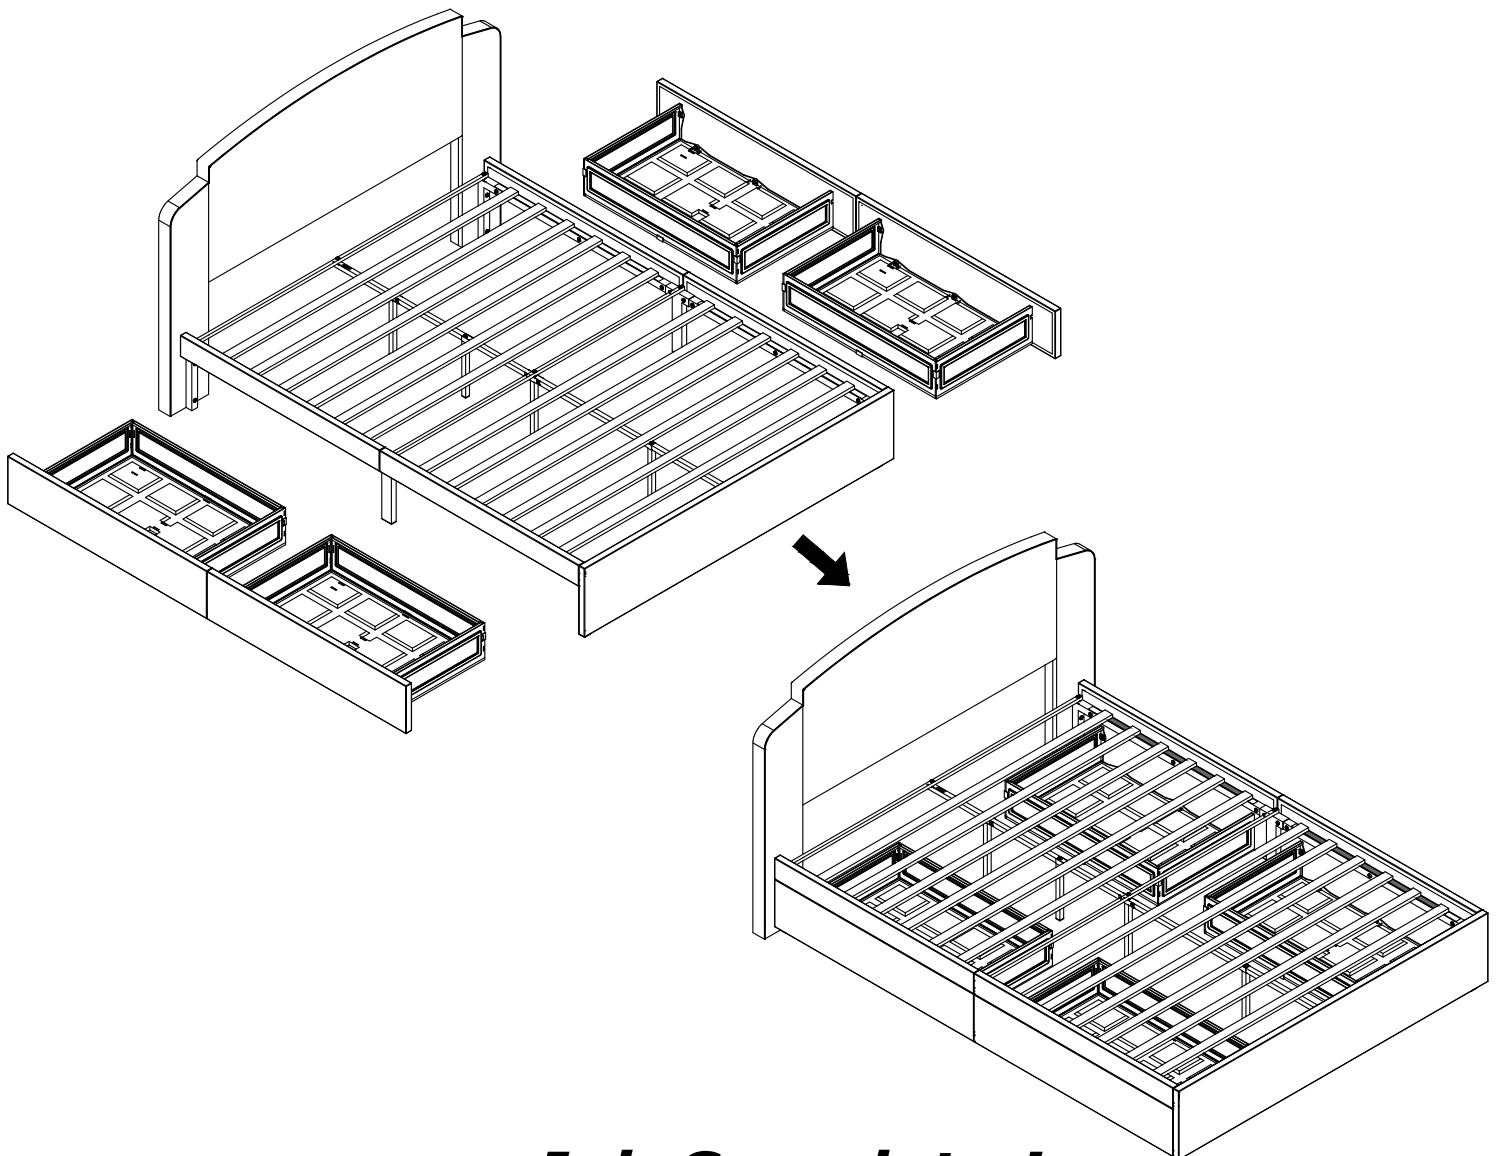

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.