
INSTALLATION
Product Manual

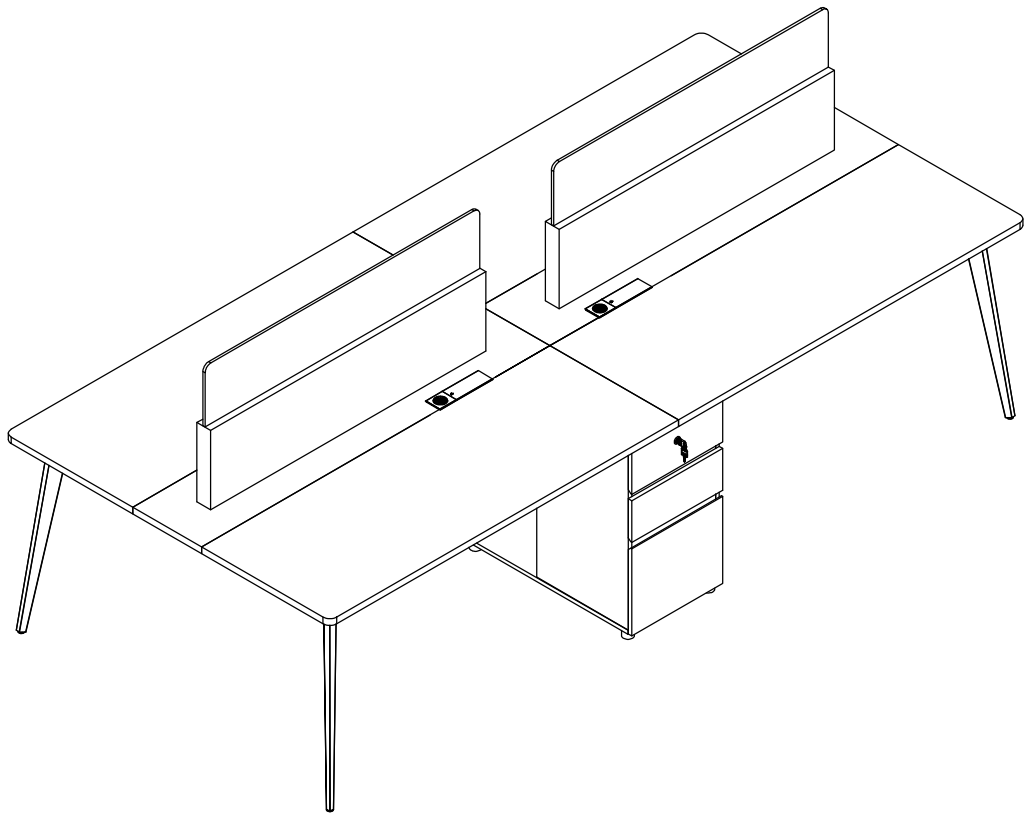



MODEL:BGZ-GK020-01



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

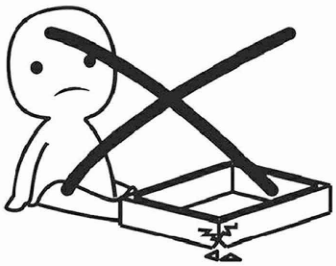


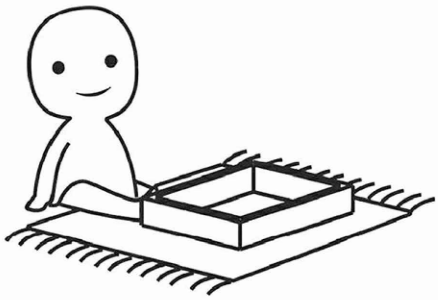

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.




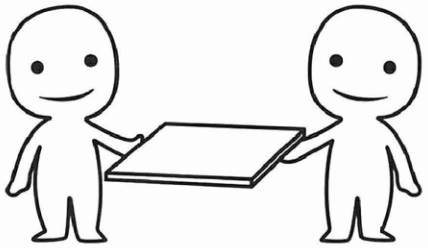

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

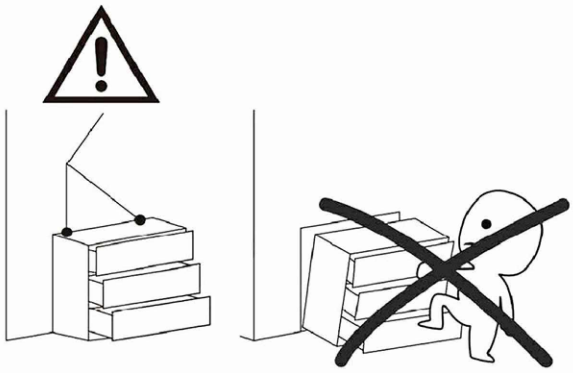

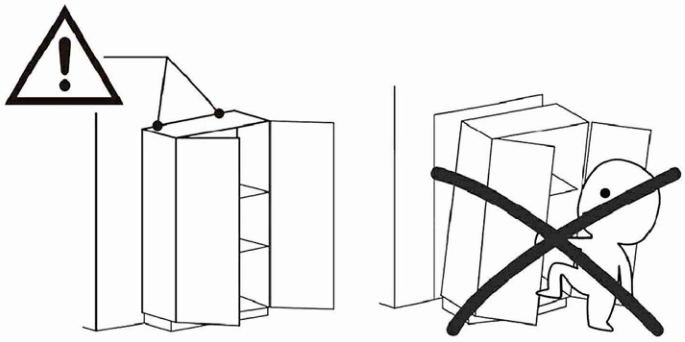

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !










It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

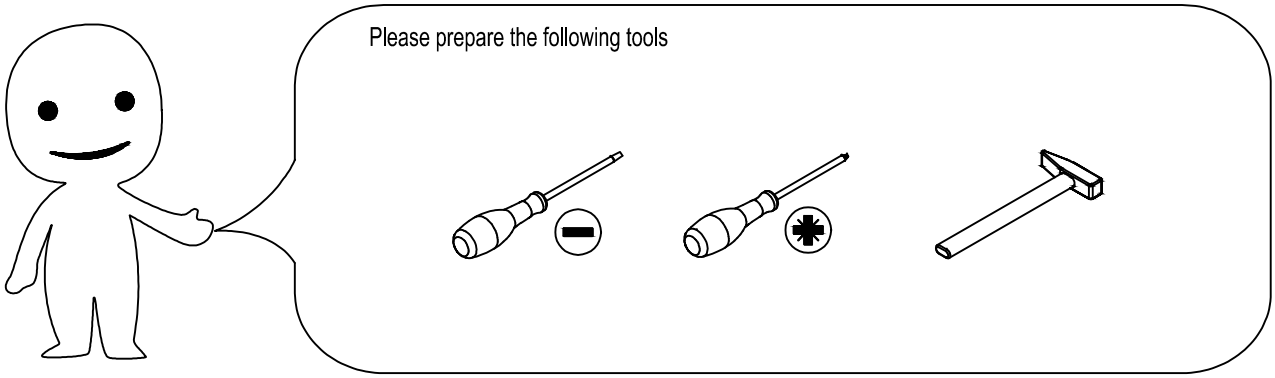

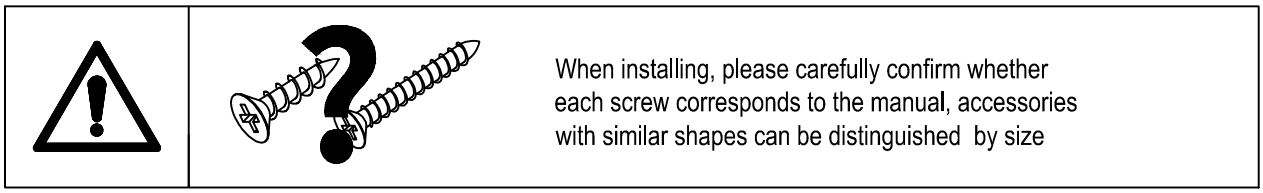


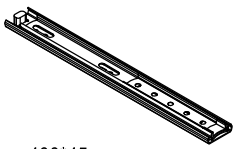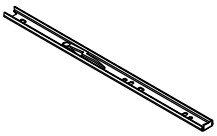A×4	B×44	C×44	D×8	E×338
			 M3.5×18	 M3.5×14
F×62	**G×2**	**H×24**	**I×2**	**J×8**
 M3.5×35				 400*35
T×8	**K×24**	**M×14**	**O×8**	**P×8**
 400*18				
Q×1	**R×16**	**S×4**	**U×4**	**V×8**
	 M3.5×25	 400*45	 400*24	 415*15*15=4pcs 310*15*15=4pcs


Die Rutschen müssen vor dem Zusammenbau getrennt werden. Nach dem Trennen beiseite legen, bis sie für die Montage benötigt werden.

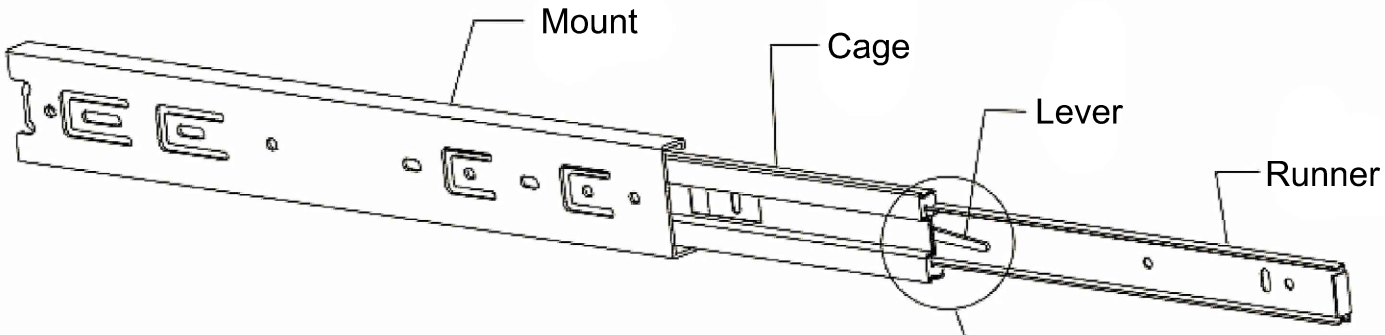


SCHRITT 1: Rutsche ausfahren

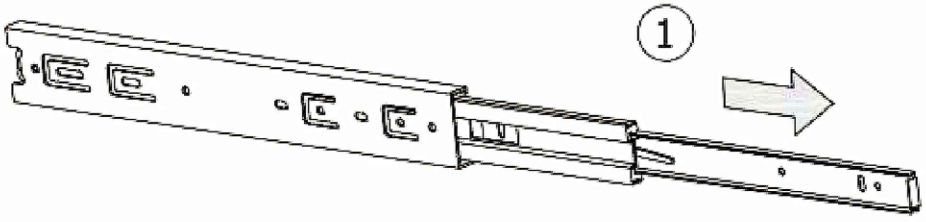



SCHRITT 2: Hebel nach oben drücken

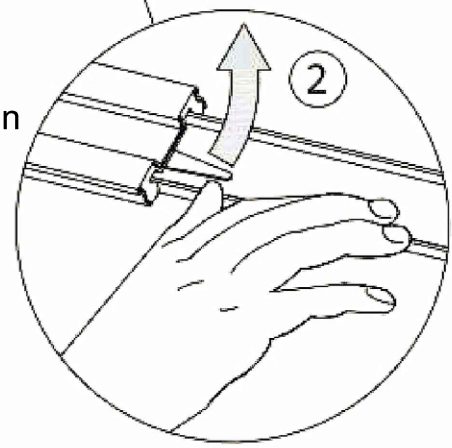

SCHRITT 3: Läufer entfernen

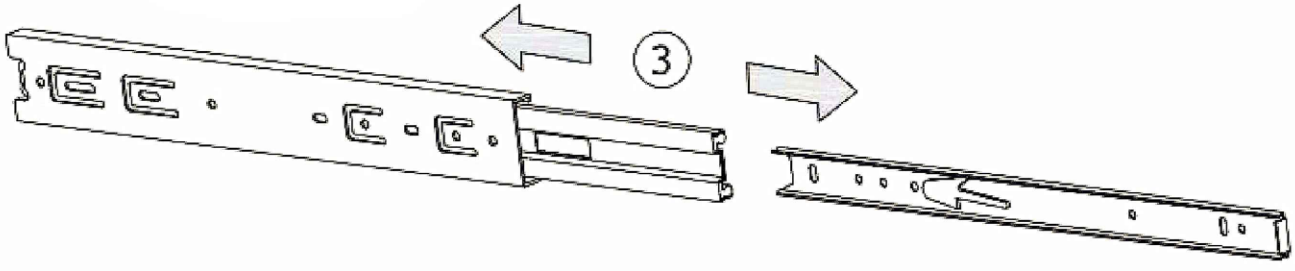


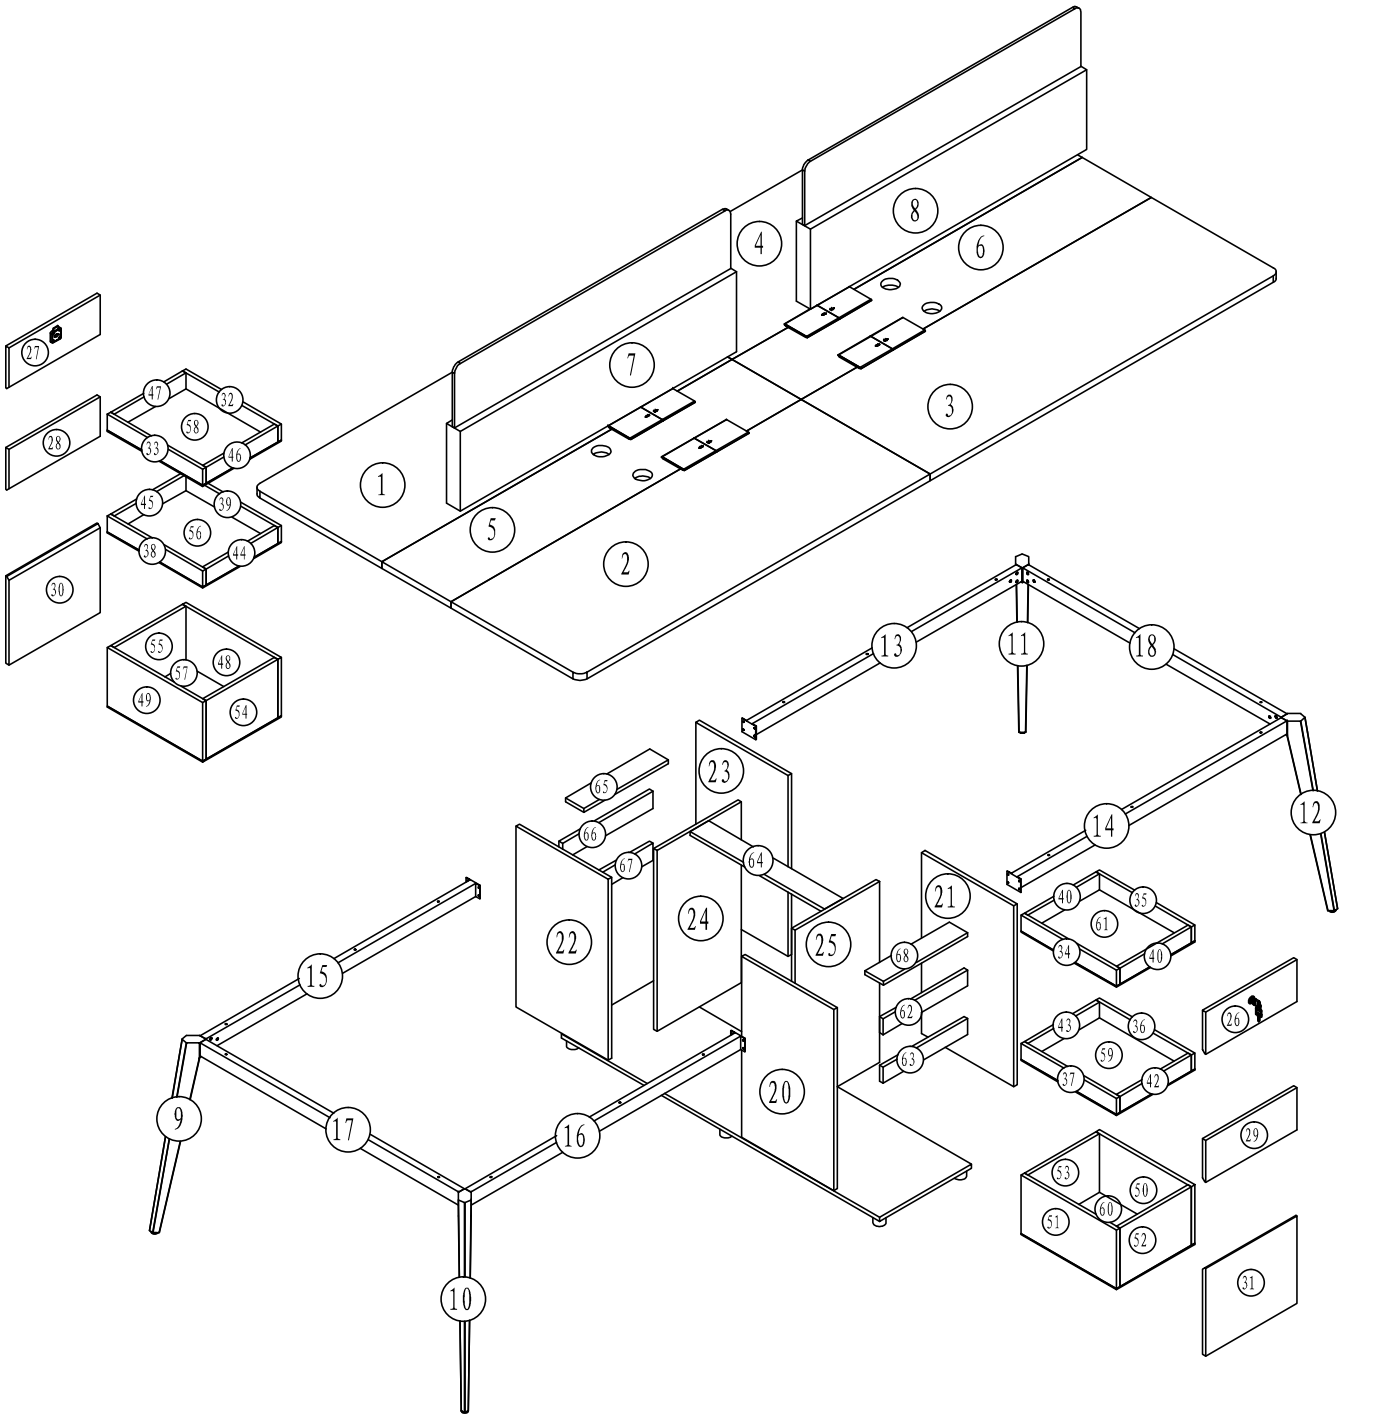
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

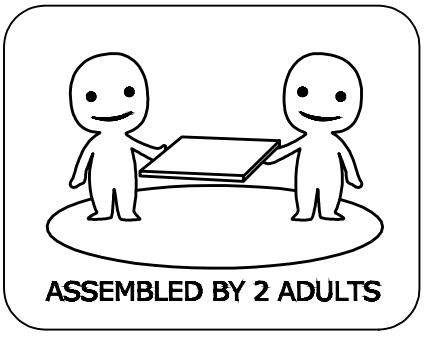

ASSEMBLED BY 2 ADULTS

01

F×32




Use the screw (F) fix the plate ㉞㉟㊵㊶ .

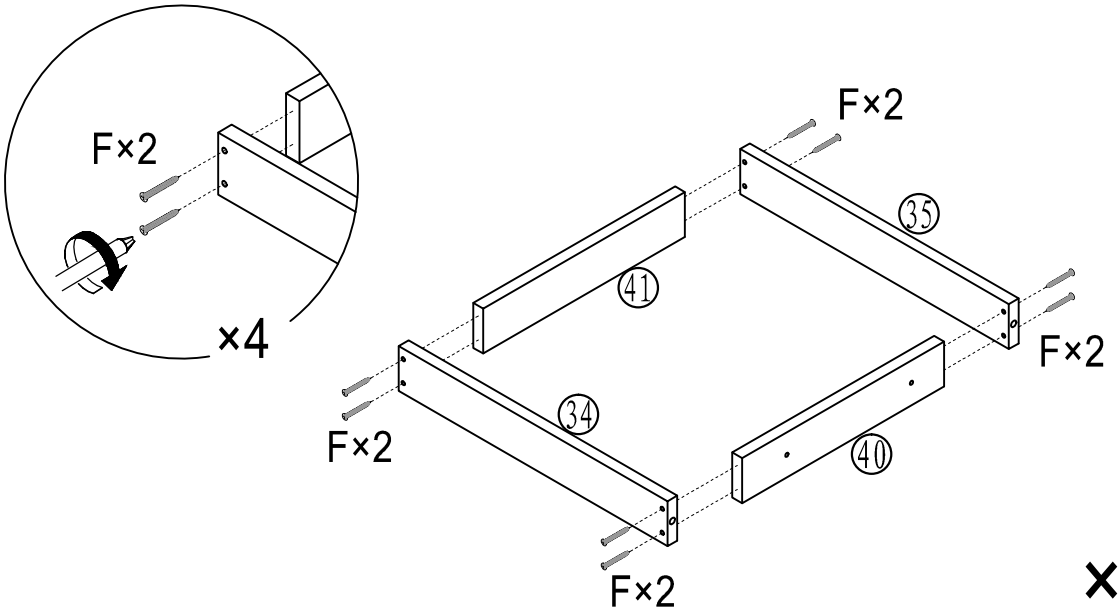


×4

02

E×48





Use the screw (E) fix the plate ㊶ with ㉞㉟㊵㊶ .

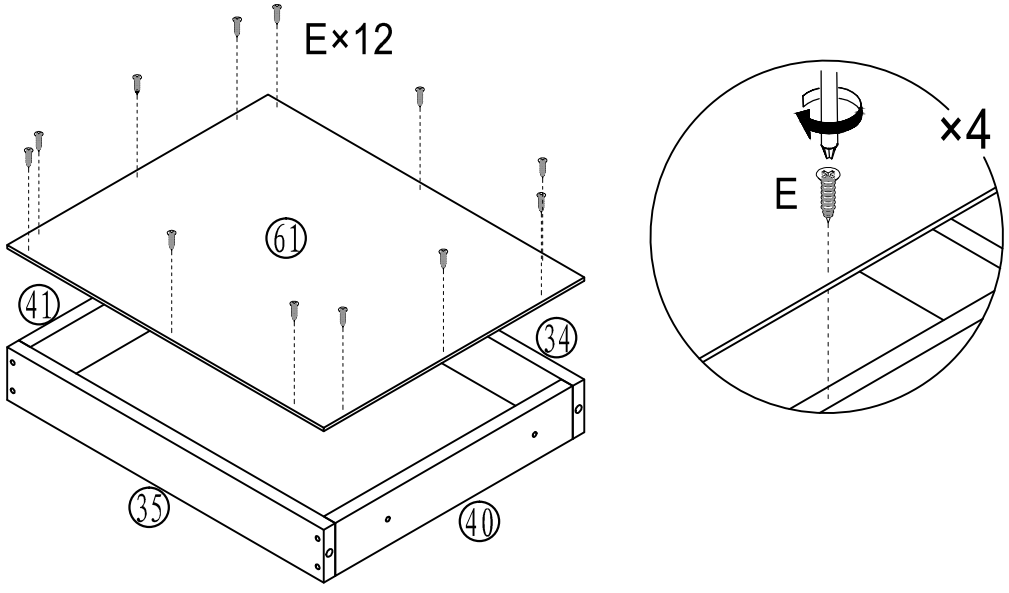


×4

03

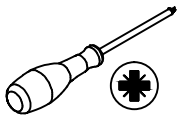
G×2	D×8	
		

Install KEL (G) with screws (D).

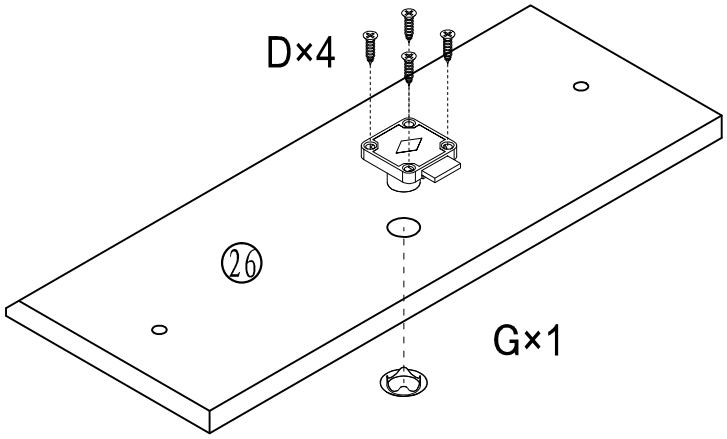


×2

04

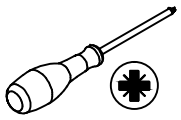H×4	R×4	
		

Insert the wood chip (H) into the board ㉖㊵.
Use a screwdriver to screw the bolts (R) into Panel ㊵.

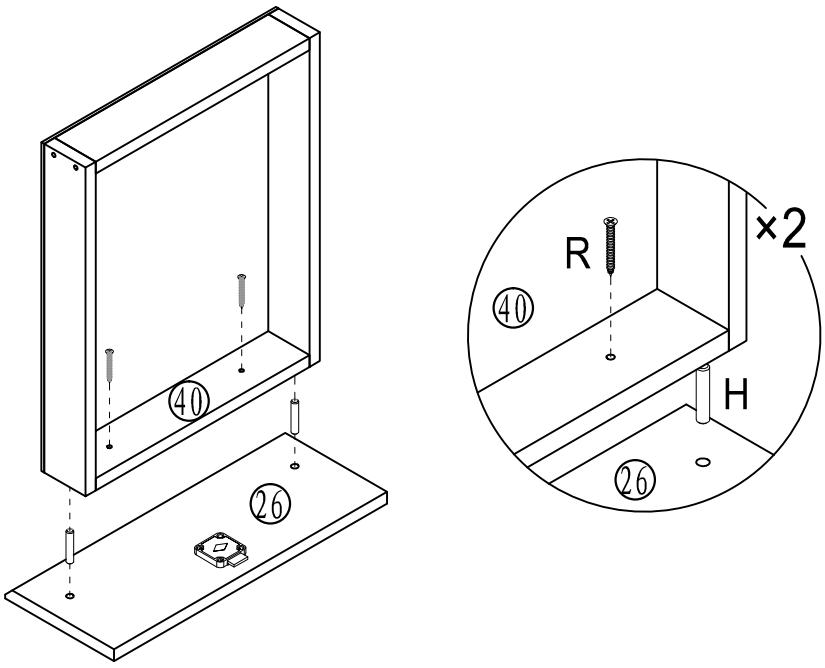


×2


05

F×16





Use the screw (F) fix the plate ㊿㊿㊿㊿ .

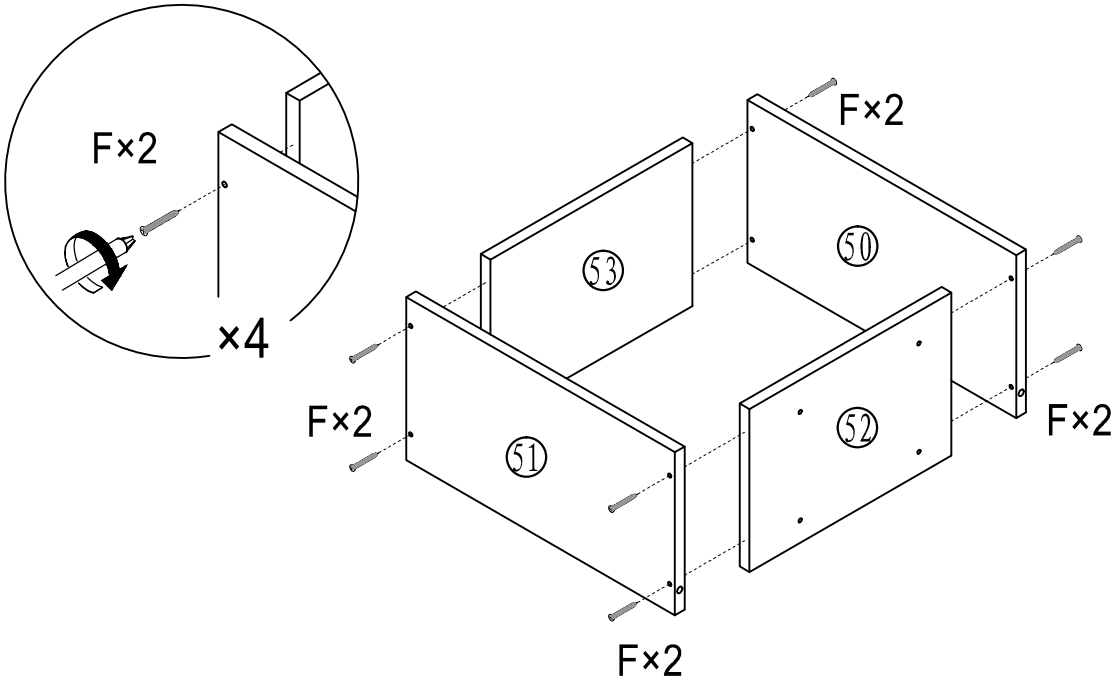


×2


06

E×24



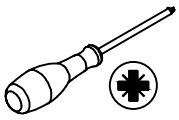

Use the screw (E) fix the plate ㊿ with ㊿㊿㊿㊿ .

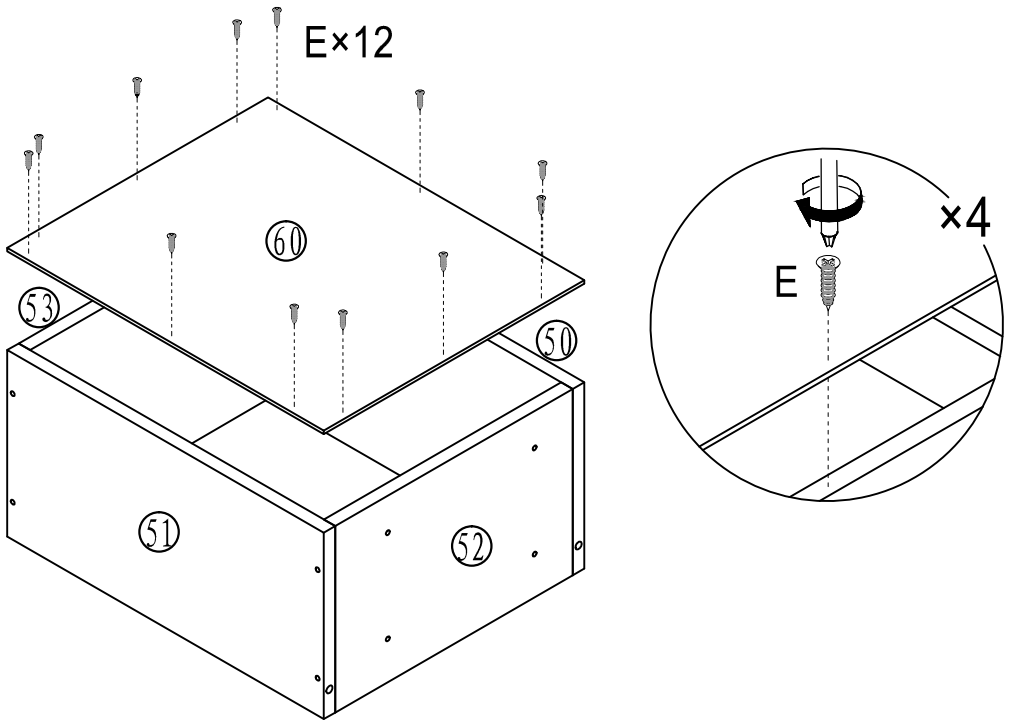



×2

07

H×8	R×8	

Insert the wood chip (H) into the board ㉛㉜.
Use a screwdriver to screw the bolts (R) into Panel ㉜.

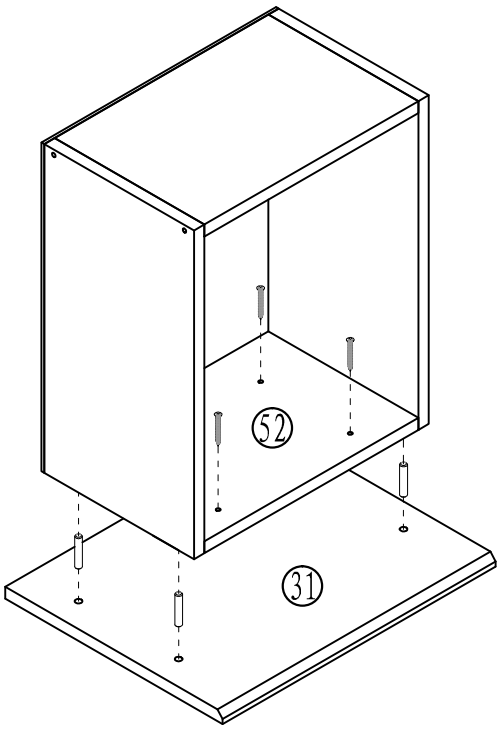

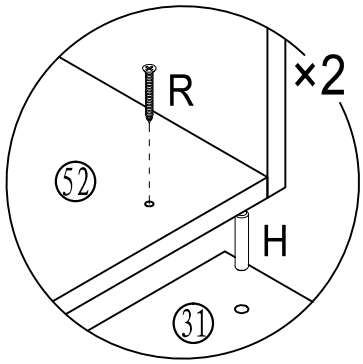



×2

08


E×24	T×8	U×4	

Befestigen Sie die Laufschiene (T) mit der Schraube (E)
for Panels ㉟㊱㉞㊲.
Befestigen Sie die Laufschiene (U) mit der Schraube (E)
for Panels ㊿㊶.



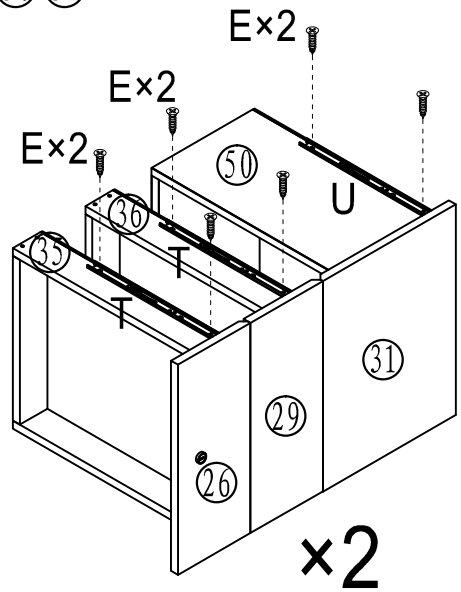

×2

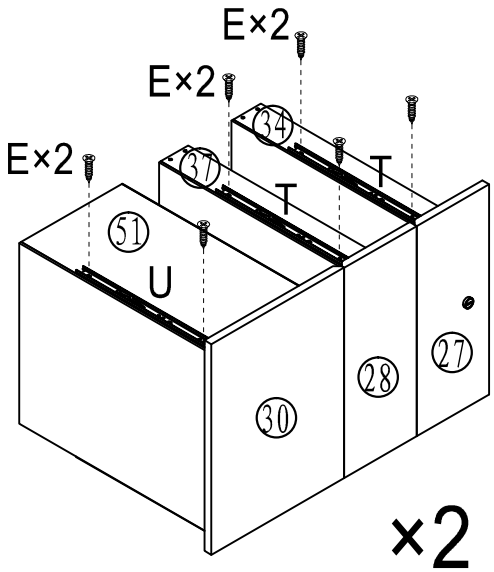


×2

Slide rails are installed under the drawer

09

E×24	V×8	

Use a screwdriver to screw (E) and the part (V) into Panel .

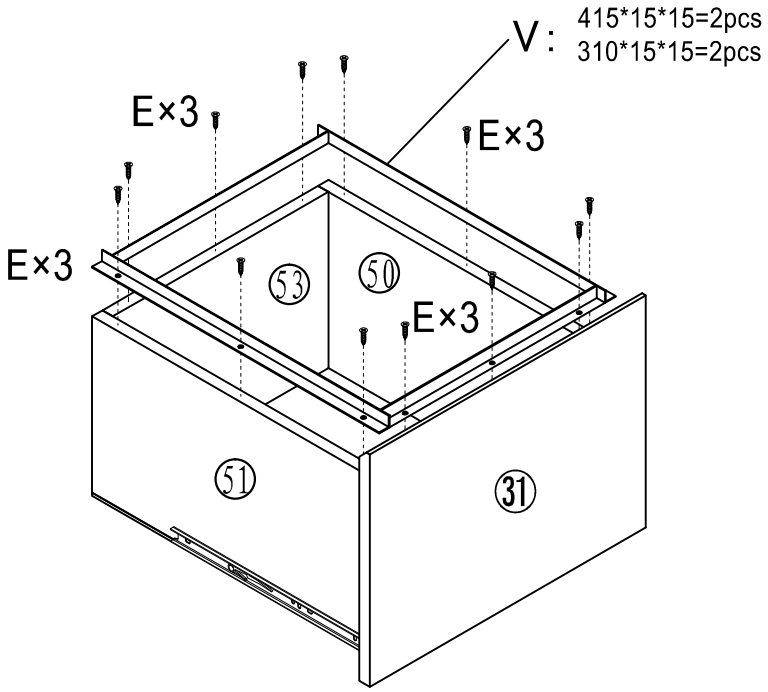


×2


10

B×16	H×4	E×12	S×2	J×4	

Befestigen Sie die Laufschiene (T) (U) mit der Schraube (E).

Insert the wooden dowels (H) halfway into Panels ㉑, and then use a screwdriver to screw the bolts (B) into Panels ㉑.

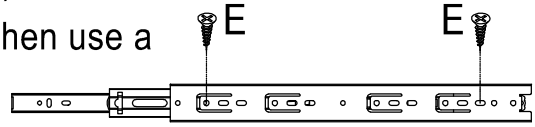

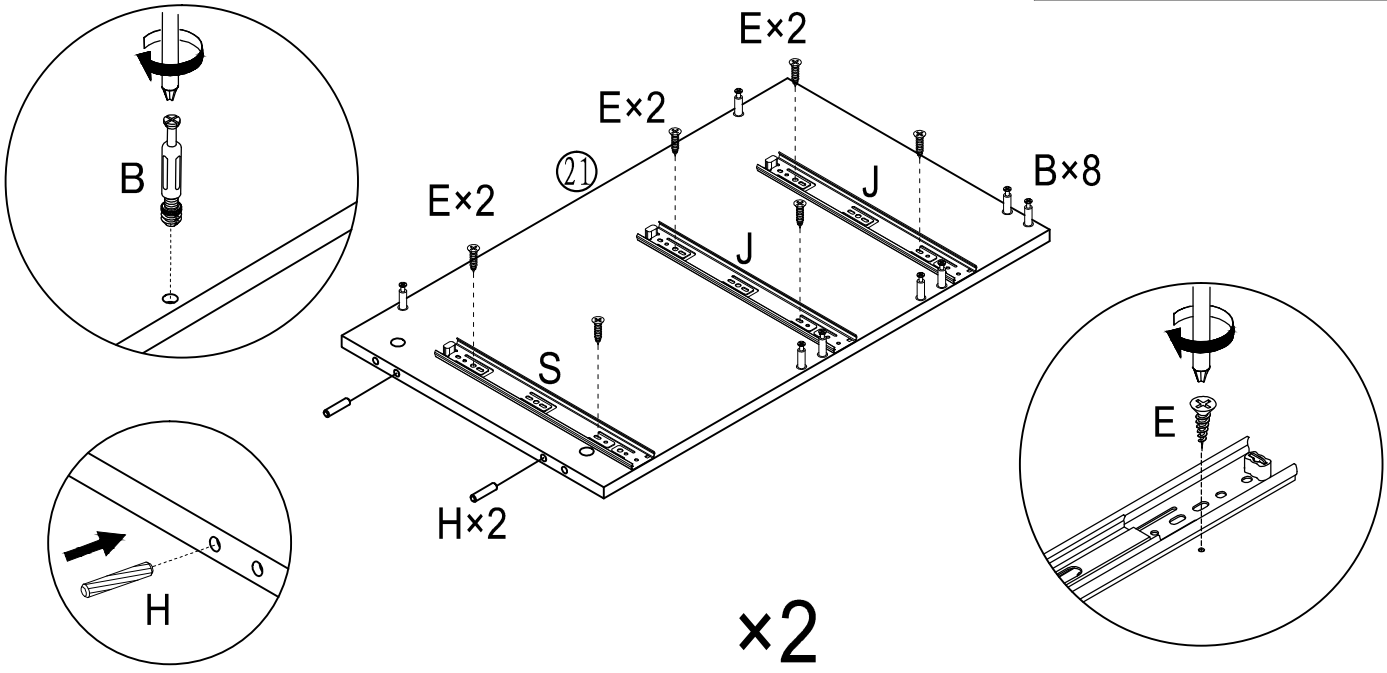


×2

11

E×4	I×2	

Use four screws (E) to secure two brackets (I) to Panel ㊶.

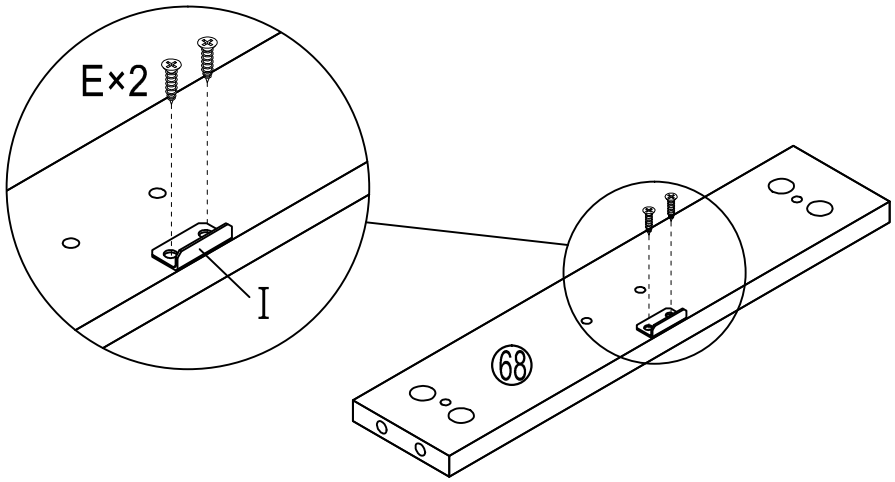



×2


12

C×16	

Align the holes in the Panel ㉑ with tholse in Panels ㉕㊶㊷㊸ . Insert and tighten the cam locks (C).


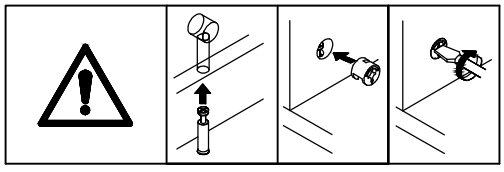


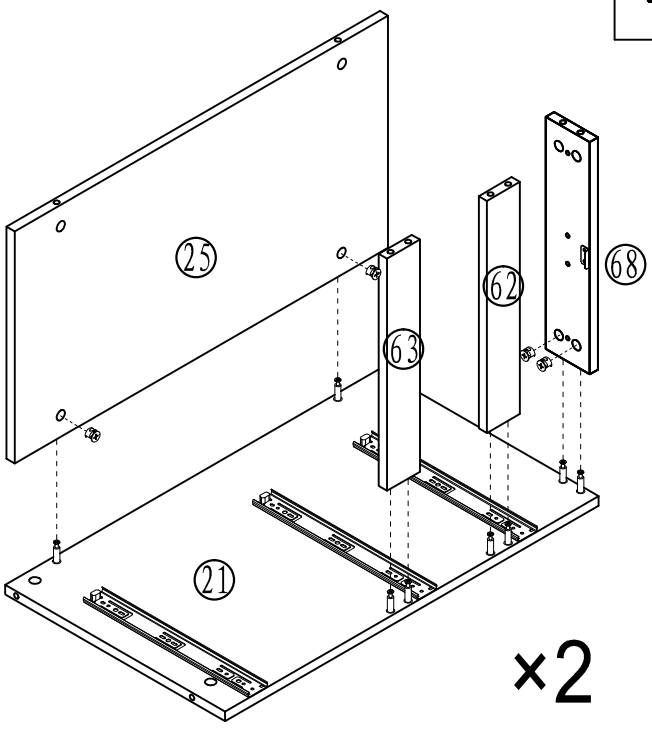

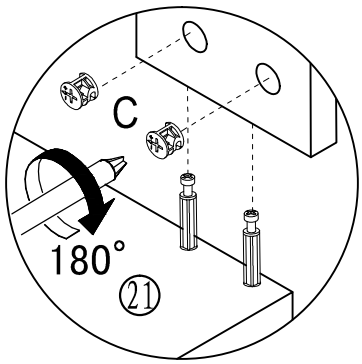



×2

13


B×16	H×4	E×12	S×2	J×4	
					

Befestigen Sie die Laufschiene (T) (U) mit der Schraube (E).
Insert the wooden dowels (H) halfway into Panels ㉑, and then use a screwdriver to screw the bolts (B) into Panels ㉑.

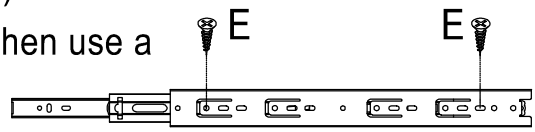


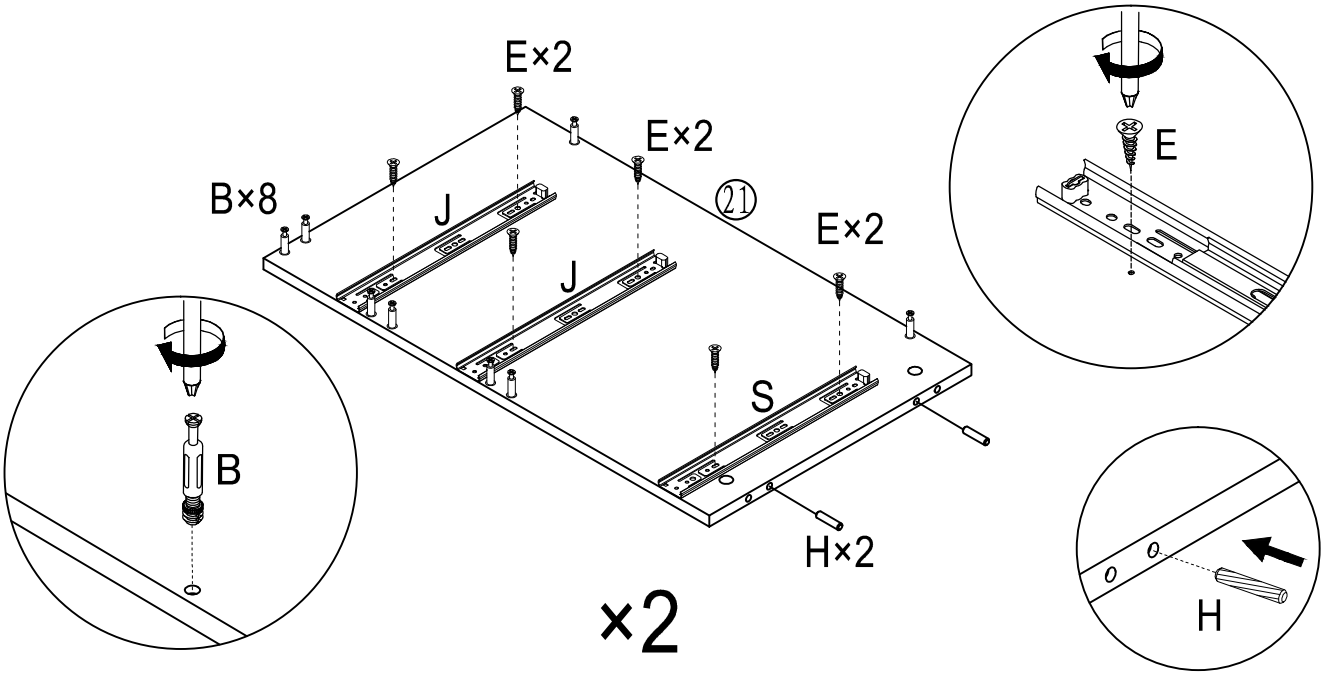


14

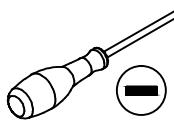C×16	
	


Align the holes in the Panel ㉑ with the holes in Panels ㉕㊶㊷㊸ . Insert the cam locks from the three-in-one connectors into the holes and tighten them.

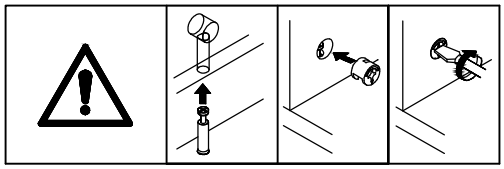


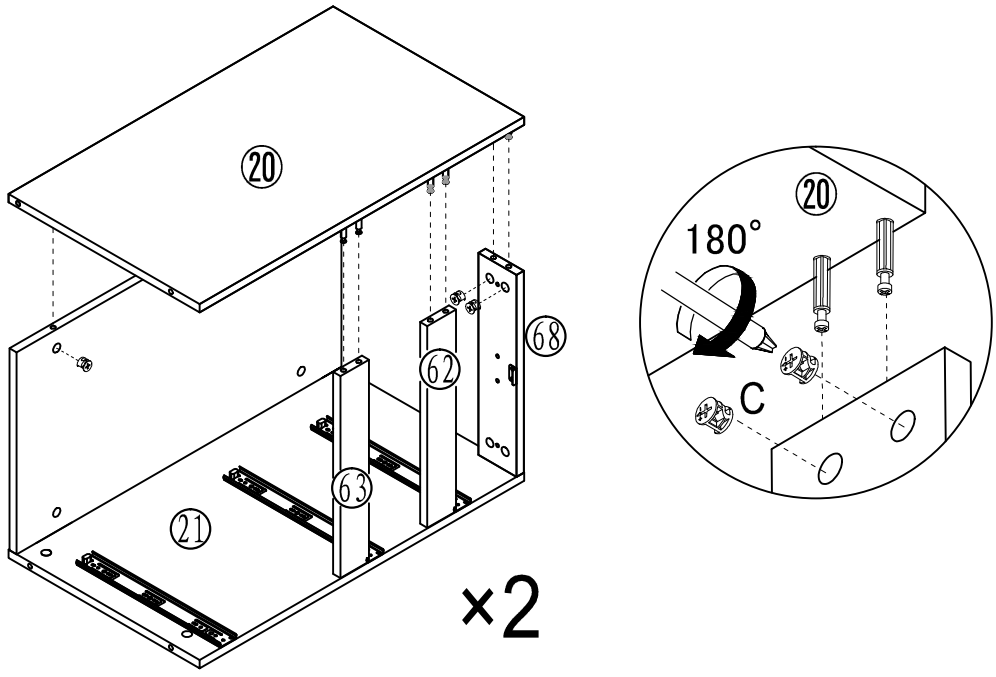


15


B×4



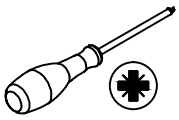

Use a screwdriver to screw the bolts (B) into Panel ㉔.

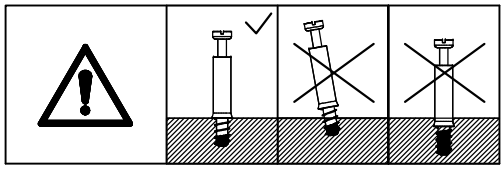

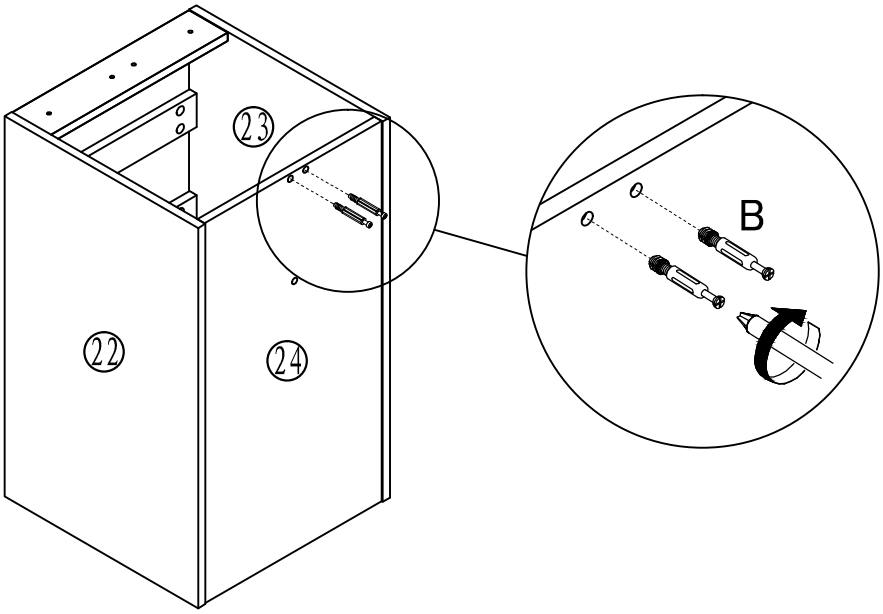


×2


16


C×4



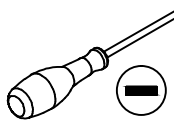

Align the holes in the Panel ㉔㉕ with the holes in Panels ㊹. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

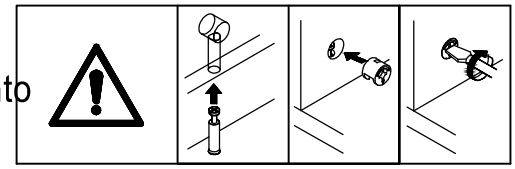


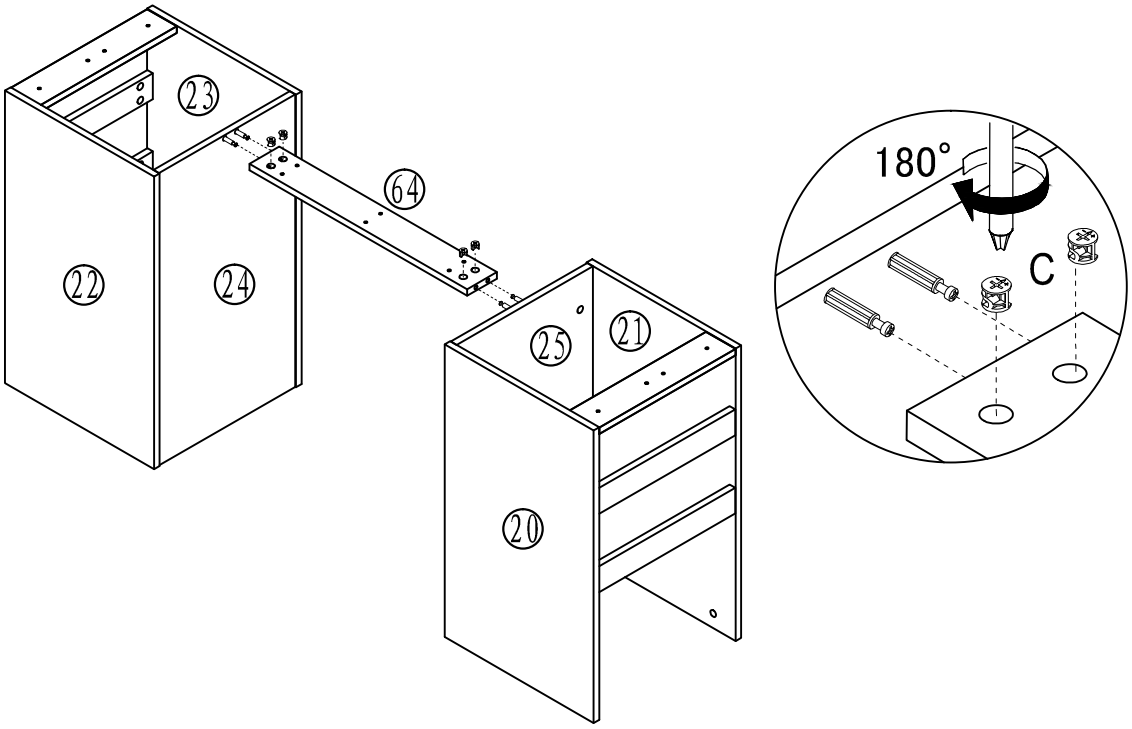

17

E×24	O×8	


Use screws (E) to secure the eight grommets (O) to Panel ⑲.

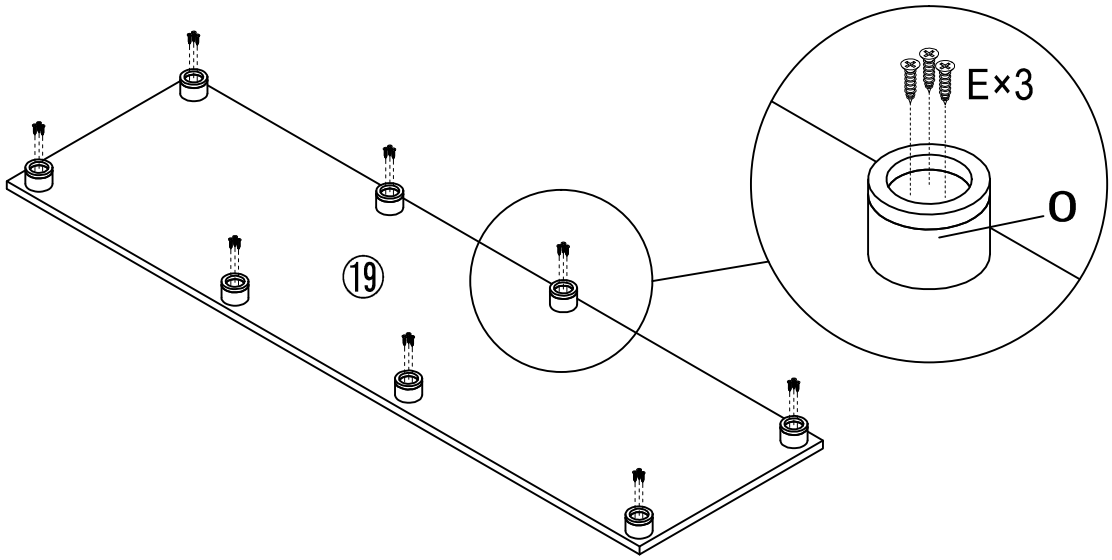


18

B×8	


Use a screwdriver to screw the bolts (B) into Panels ⑲. Be careful not to use the wrong holes.

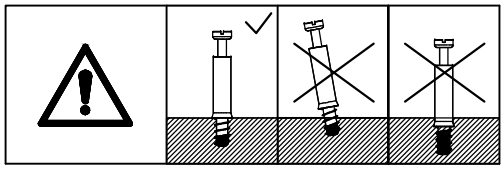

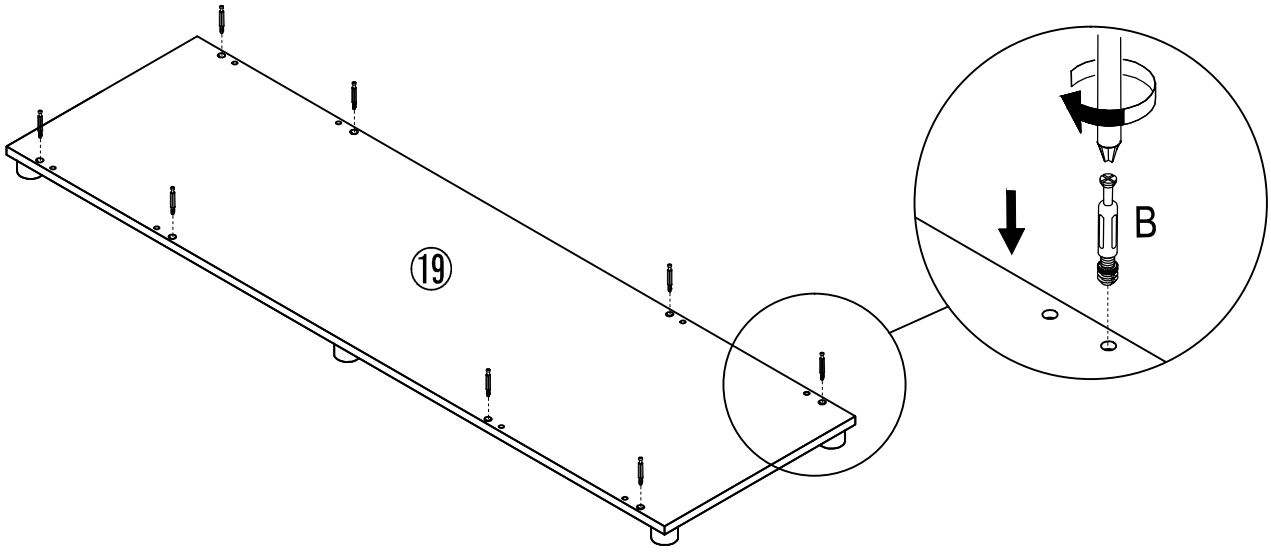



19

C×8

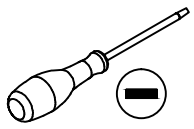


Align the holes in the Panel ⑳㉑㉒㉓㉔㉕ with the holes in Panels ⑲. Insert the cam locks from the three-in-one connectors into the holes and tighten them.

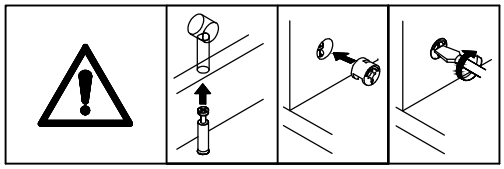

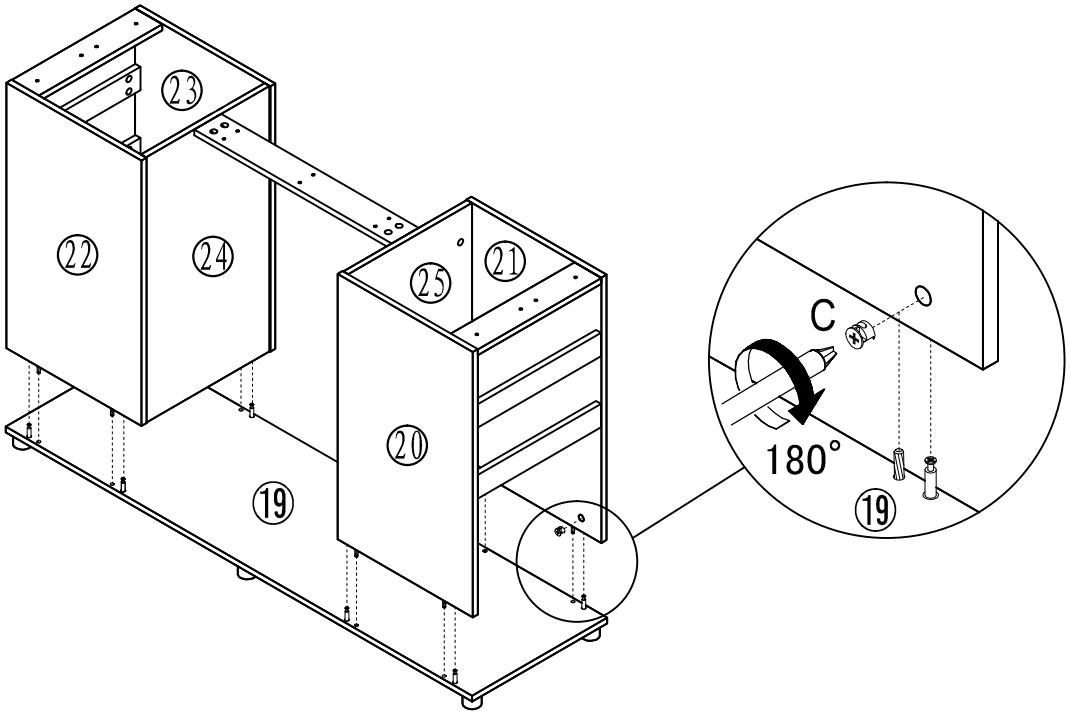

20

Schienen ausrichten, Schubladen wie gezeigt einschieben.

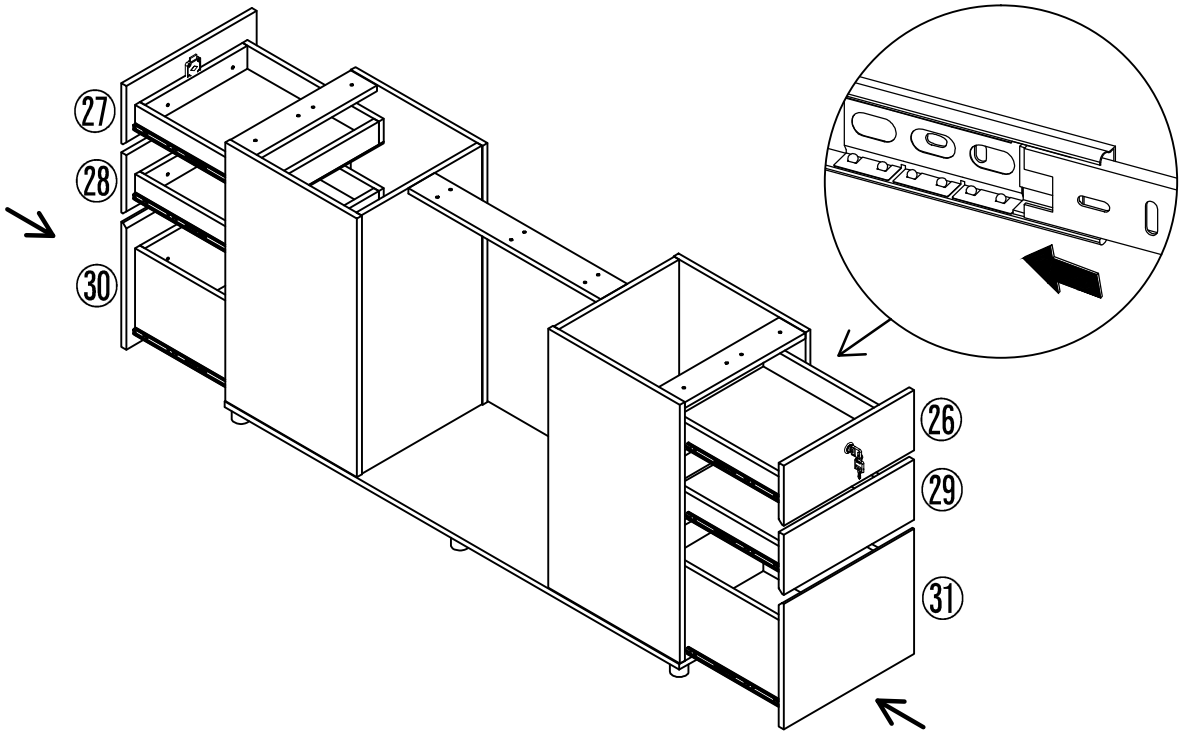


21

K×24

Q×1


Connect these parts together with screws (K).

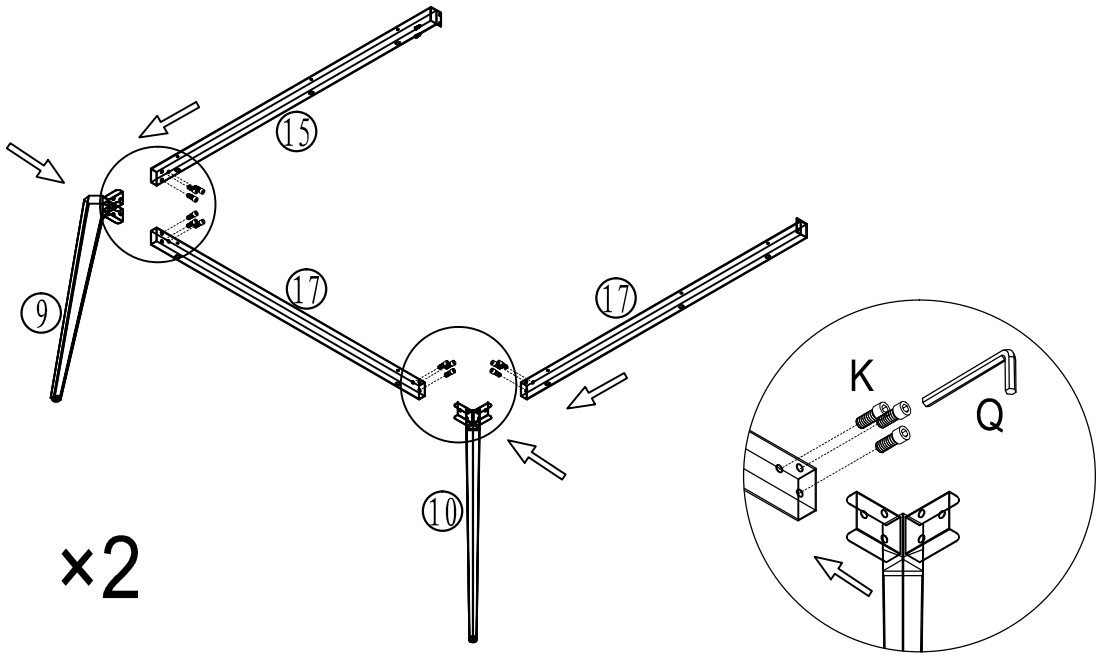

22

E×8


Connect these parts together with screws (E).

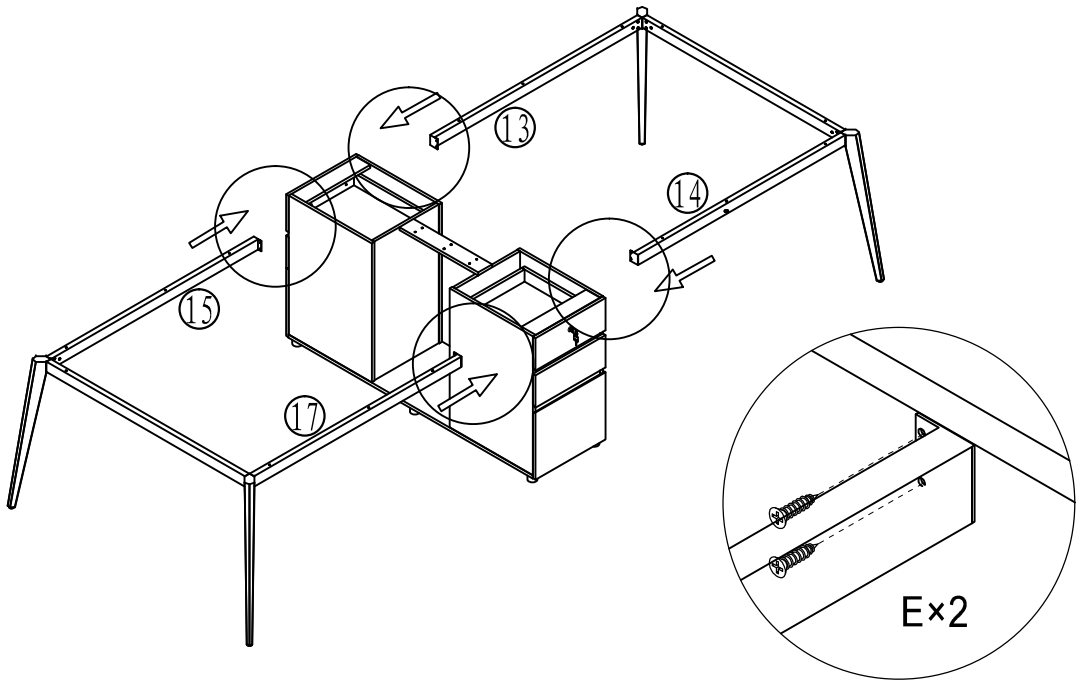

23

E×30	M×3	


Connect the parts ① ⑤ together with screws (E) and part（M）.

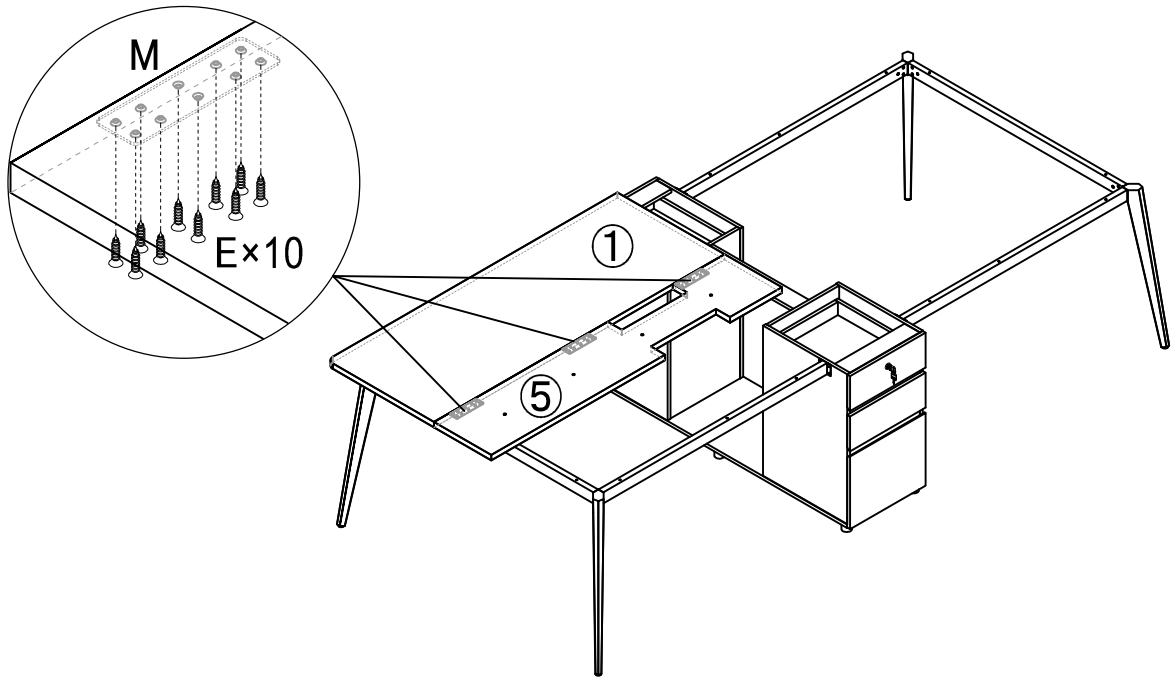

24

E×30	M×3	


Connect the parts ② ⑤ together with screws (E) and part（M）.

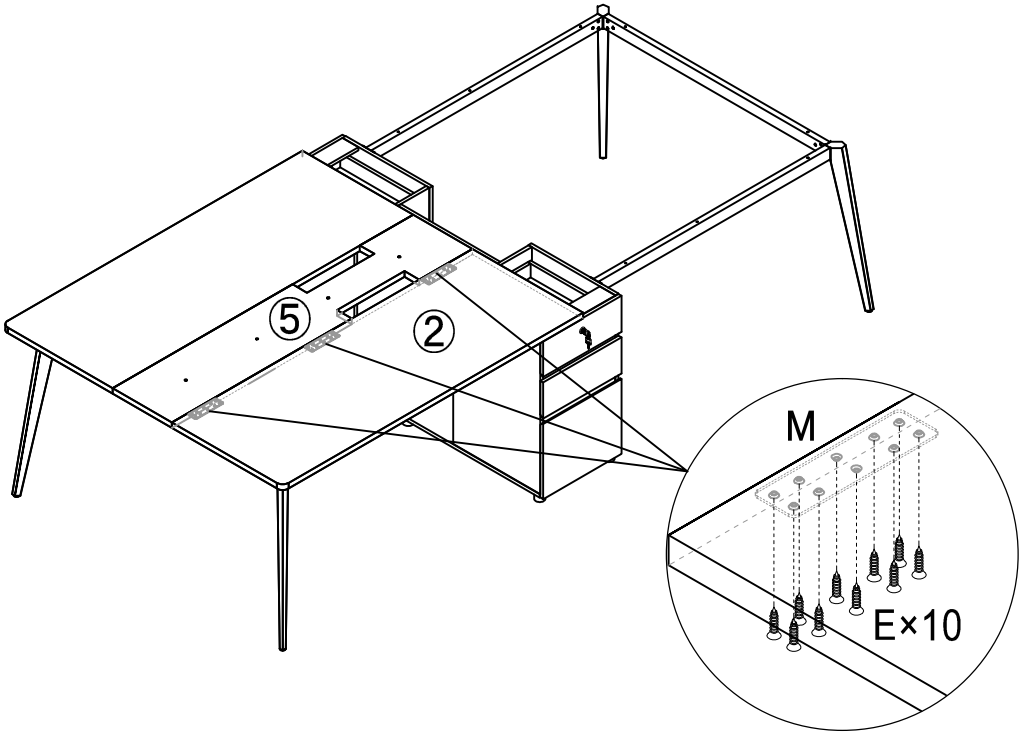

25

E×30	M×3	


Connect the parts ④ ⑥ together with screws (E) and part（M）.

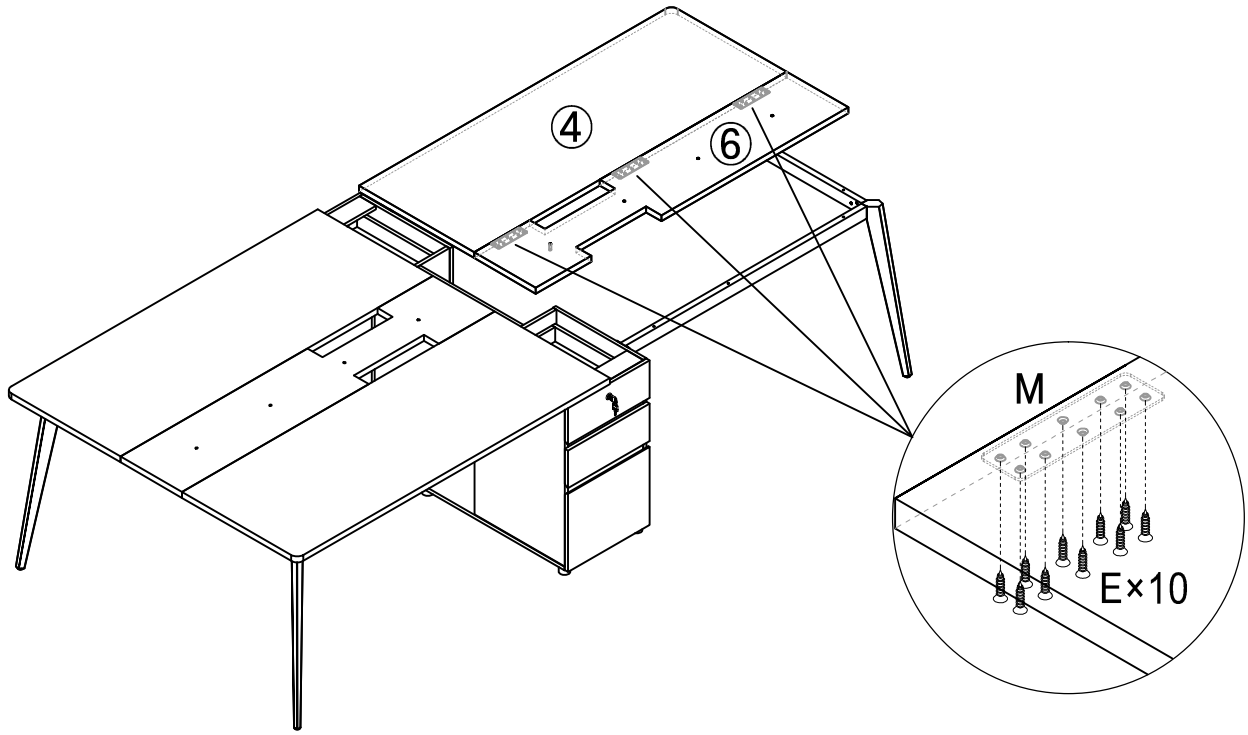

26

E×30	M×3	


Connect the parts ④ ⑥ together with screws (E) and part（M）.

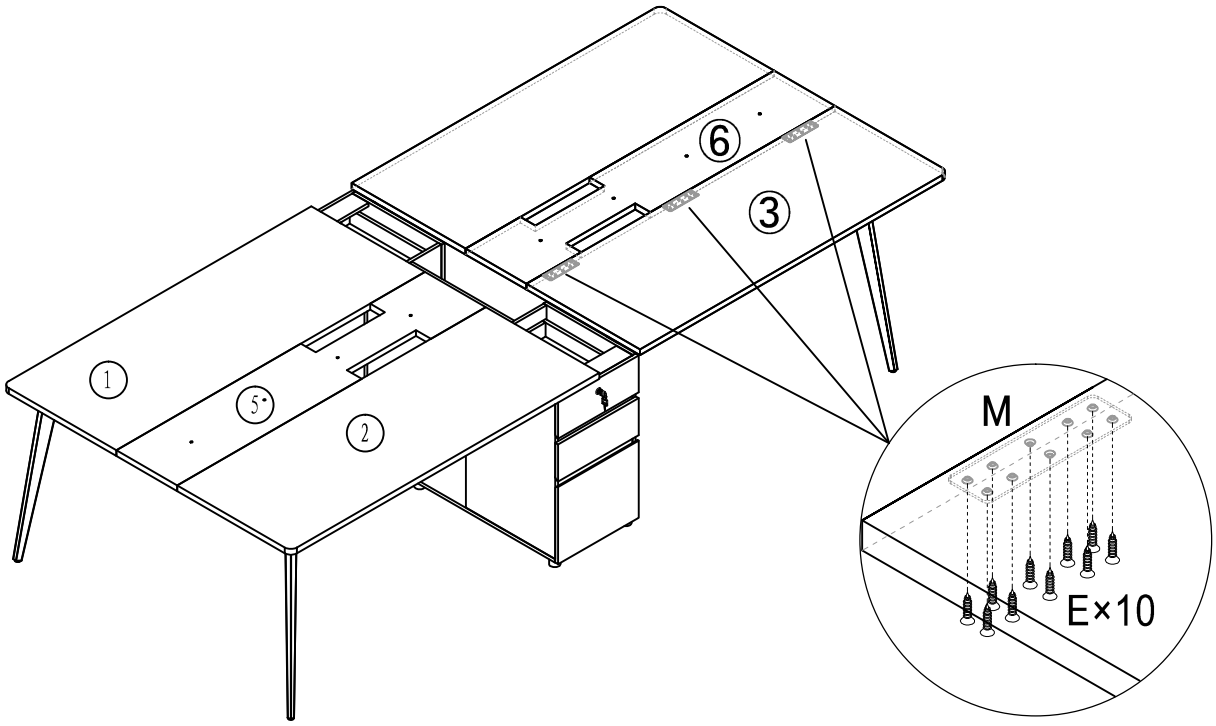

27

E×20	M×2	


Connect the parts ①②③④⑤ together with screws (E) and part（M）.

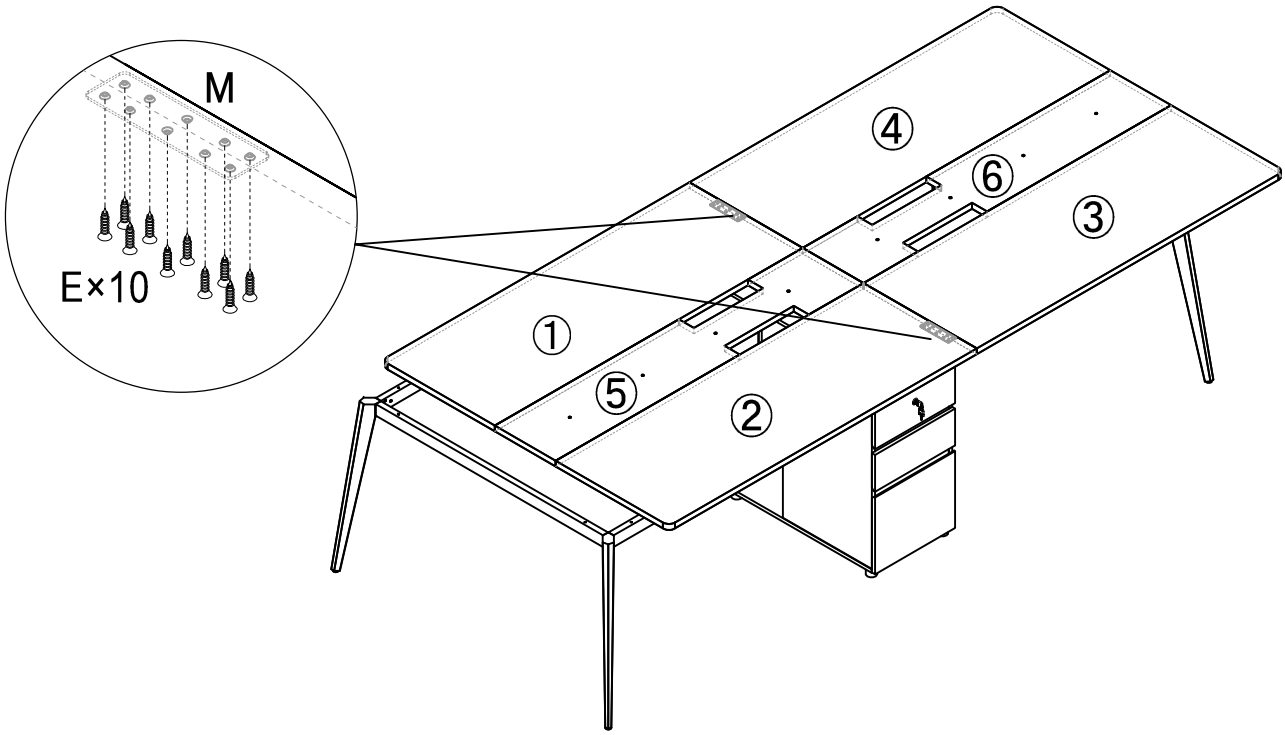

28

A×4	


Install socket（A）as shown in the picture..

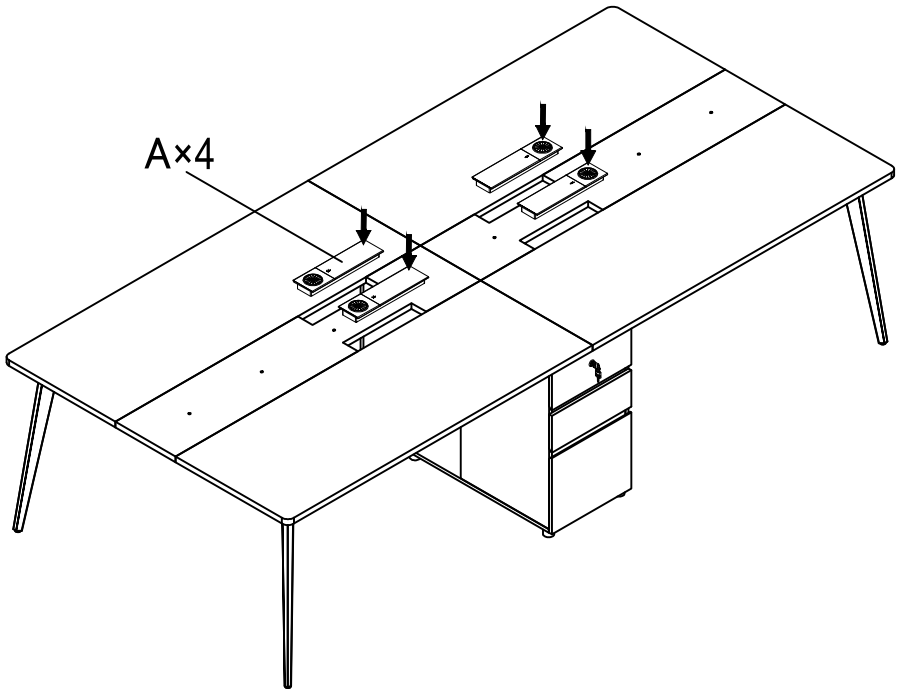

29

E×18	F×14	

Connect the parts ①②③④⑤ together with screws (E) (F) and table frame.

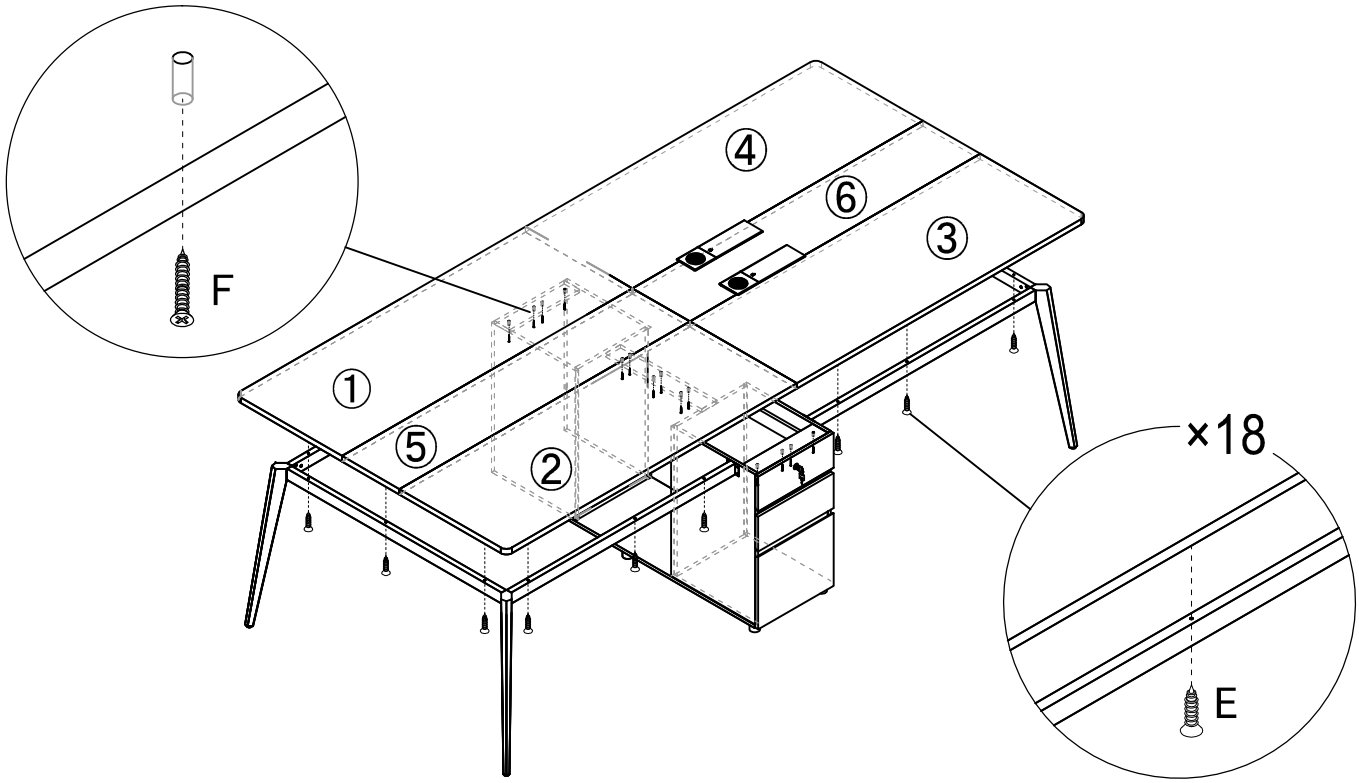

30

P×8	

Use a screwdriver to screw the bolts (P) into Panel ⑦ ⑧.

