



# Screw Instructions


Type A

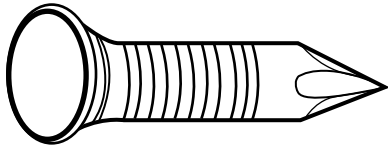


Type B

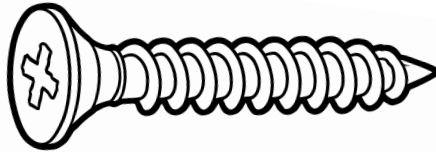

S

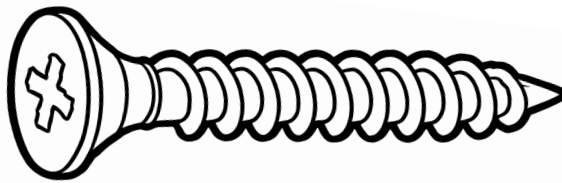


M

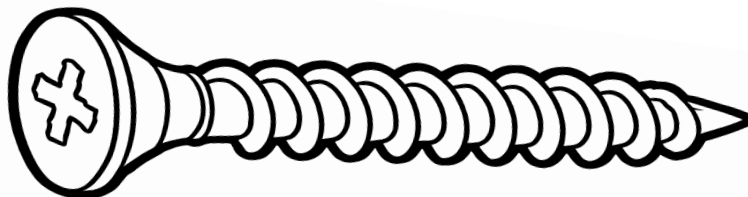

L


**Type A screws**  
**used to secure asphalt shingles.**

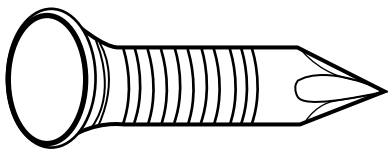


Type A

**Asphalt shingles installation**


① Suggestion: Use a nail gun to fix the three places in the middle of the head and tail of each piece.

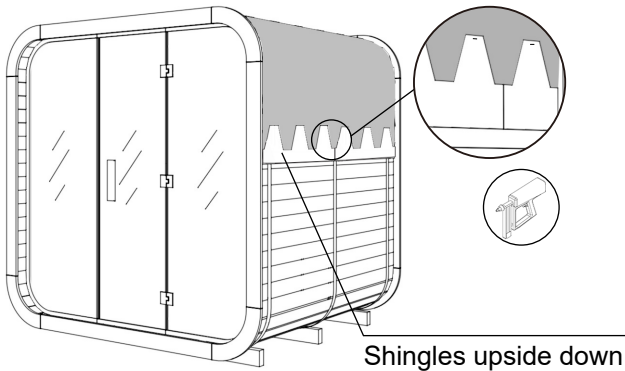


②

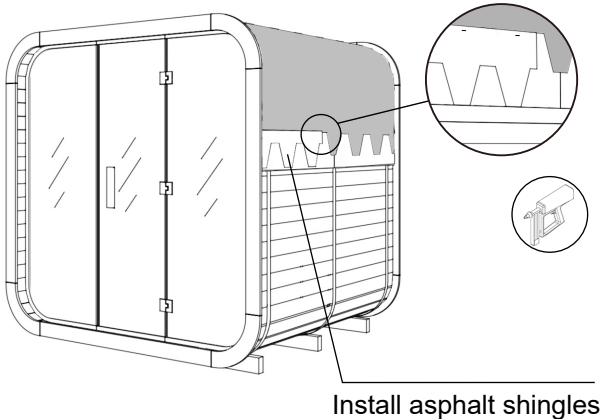

③ Cut off excess asphalt shingles.

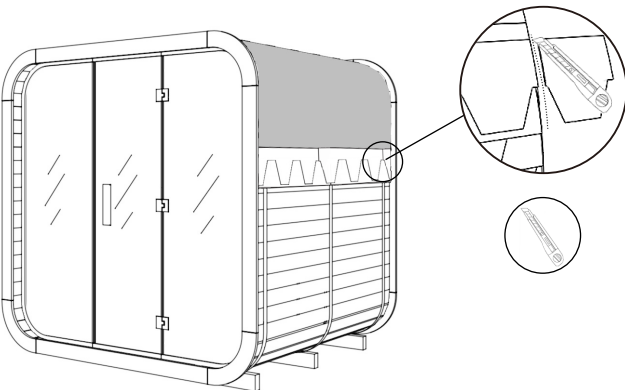


④

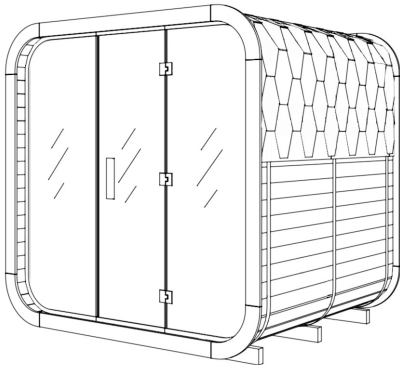


## Type B-S



Type B-S

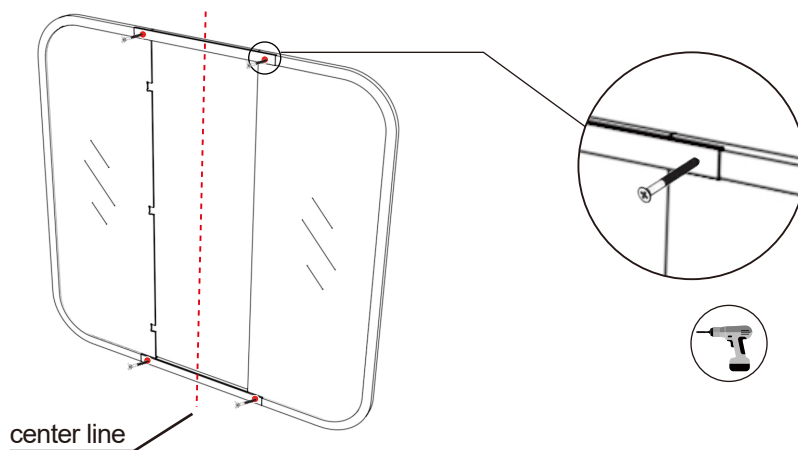


## Type B-M

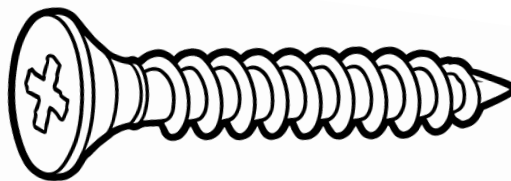


Type B-M

① Install 3–5 wooden support strips evenly around the perimeter of the sauna. These strips help to secure and stabilize the entire frame structure.

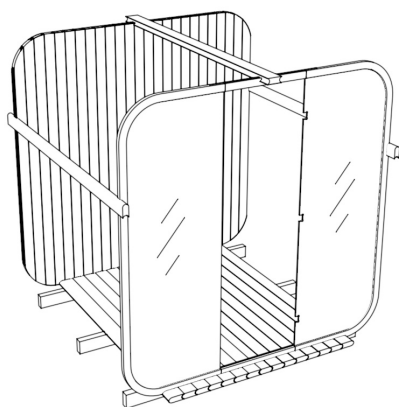


② Install the slats below the side panels of the sauna to cover the lower fillet. Fasten the slats securely with screws.

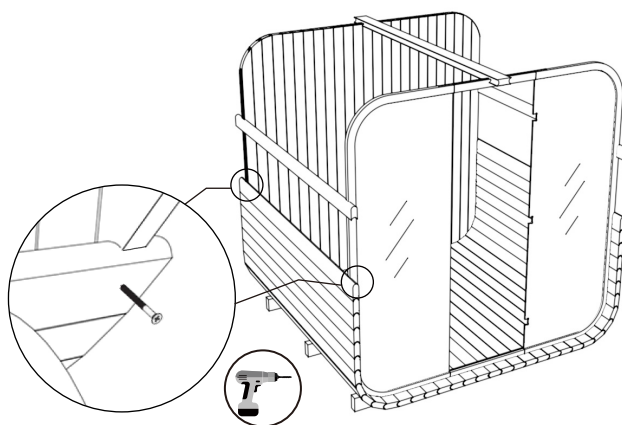


## Waterproof layer installation

Fasten the front and rear decorative strips with screws. (Letter number: F and G)

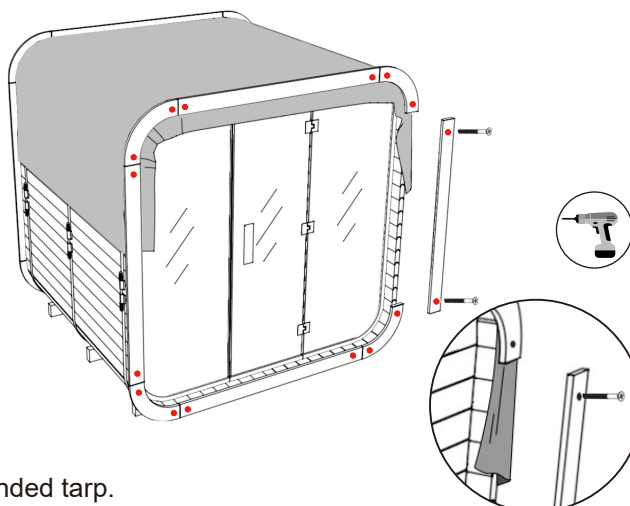

**NOTE:**  
Use the outer decorative strips to hold down the extended tarp.

**Type B-L screws, used for other areas of the sauna room**

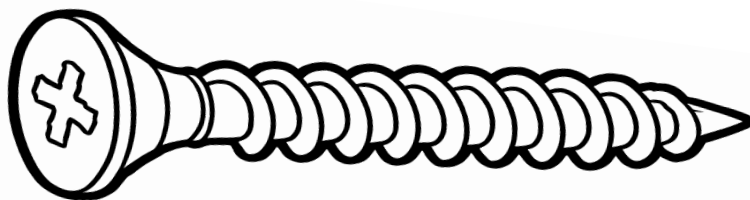

Type B-L