



PPSTN047B805

Canopy Bed













Queen

Weight Limit:
Bed: 1000LBS / 454KG





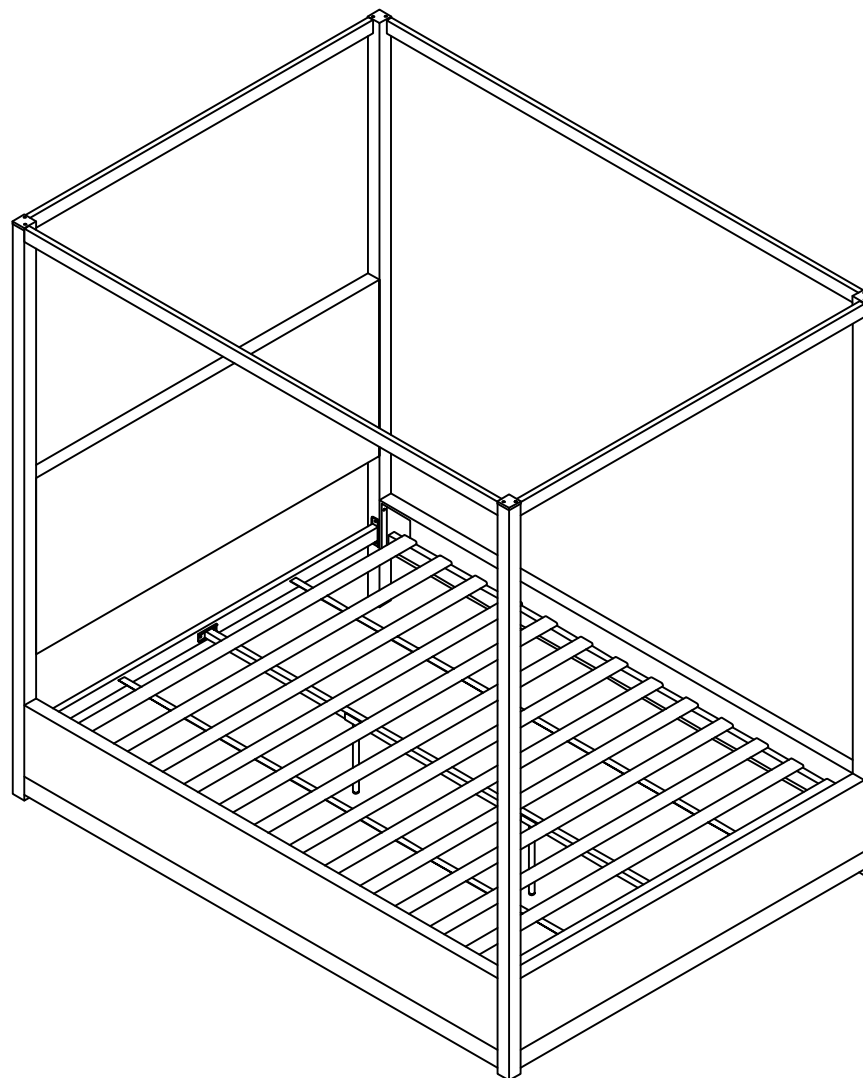


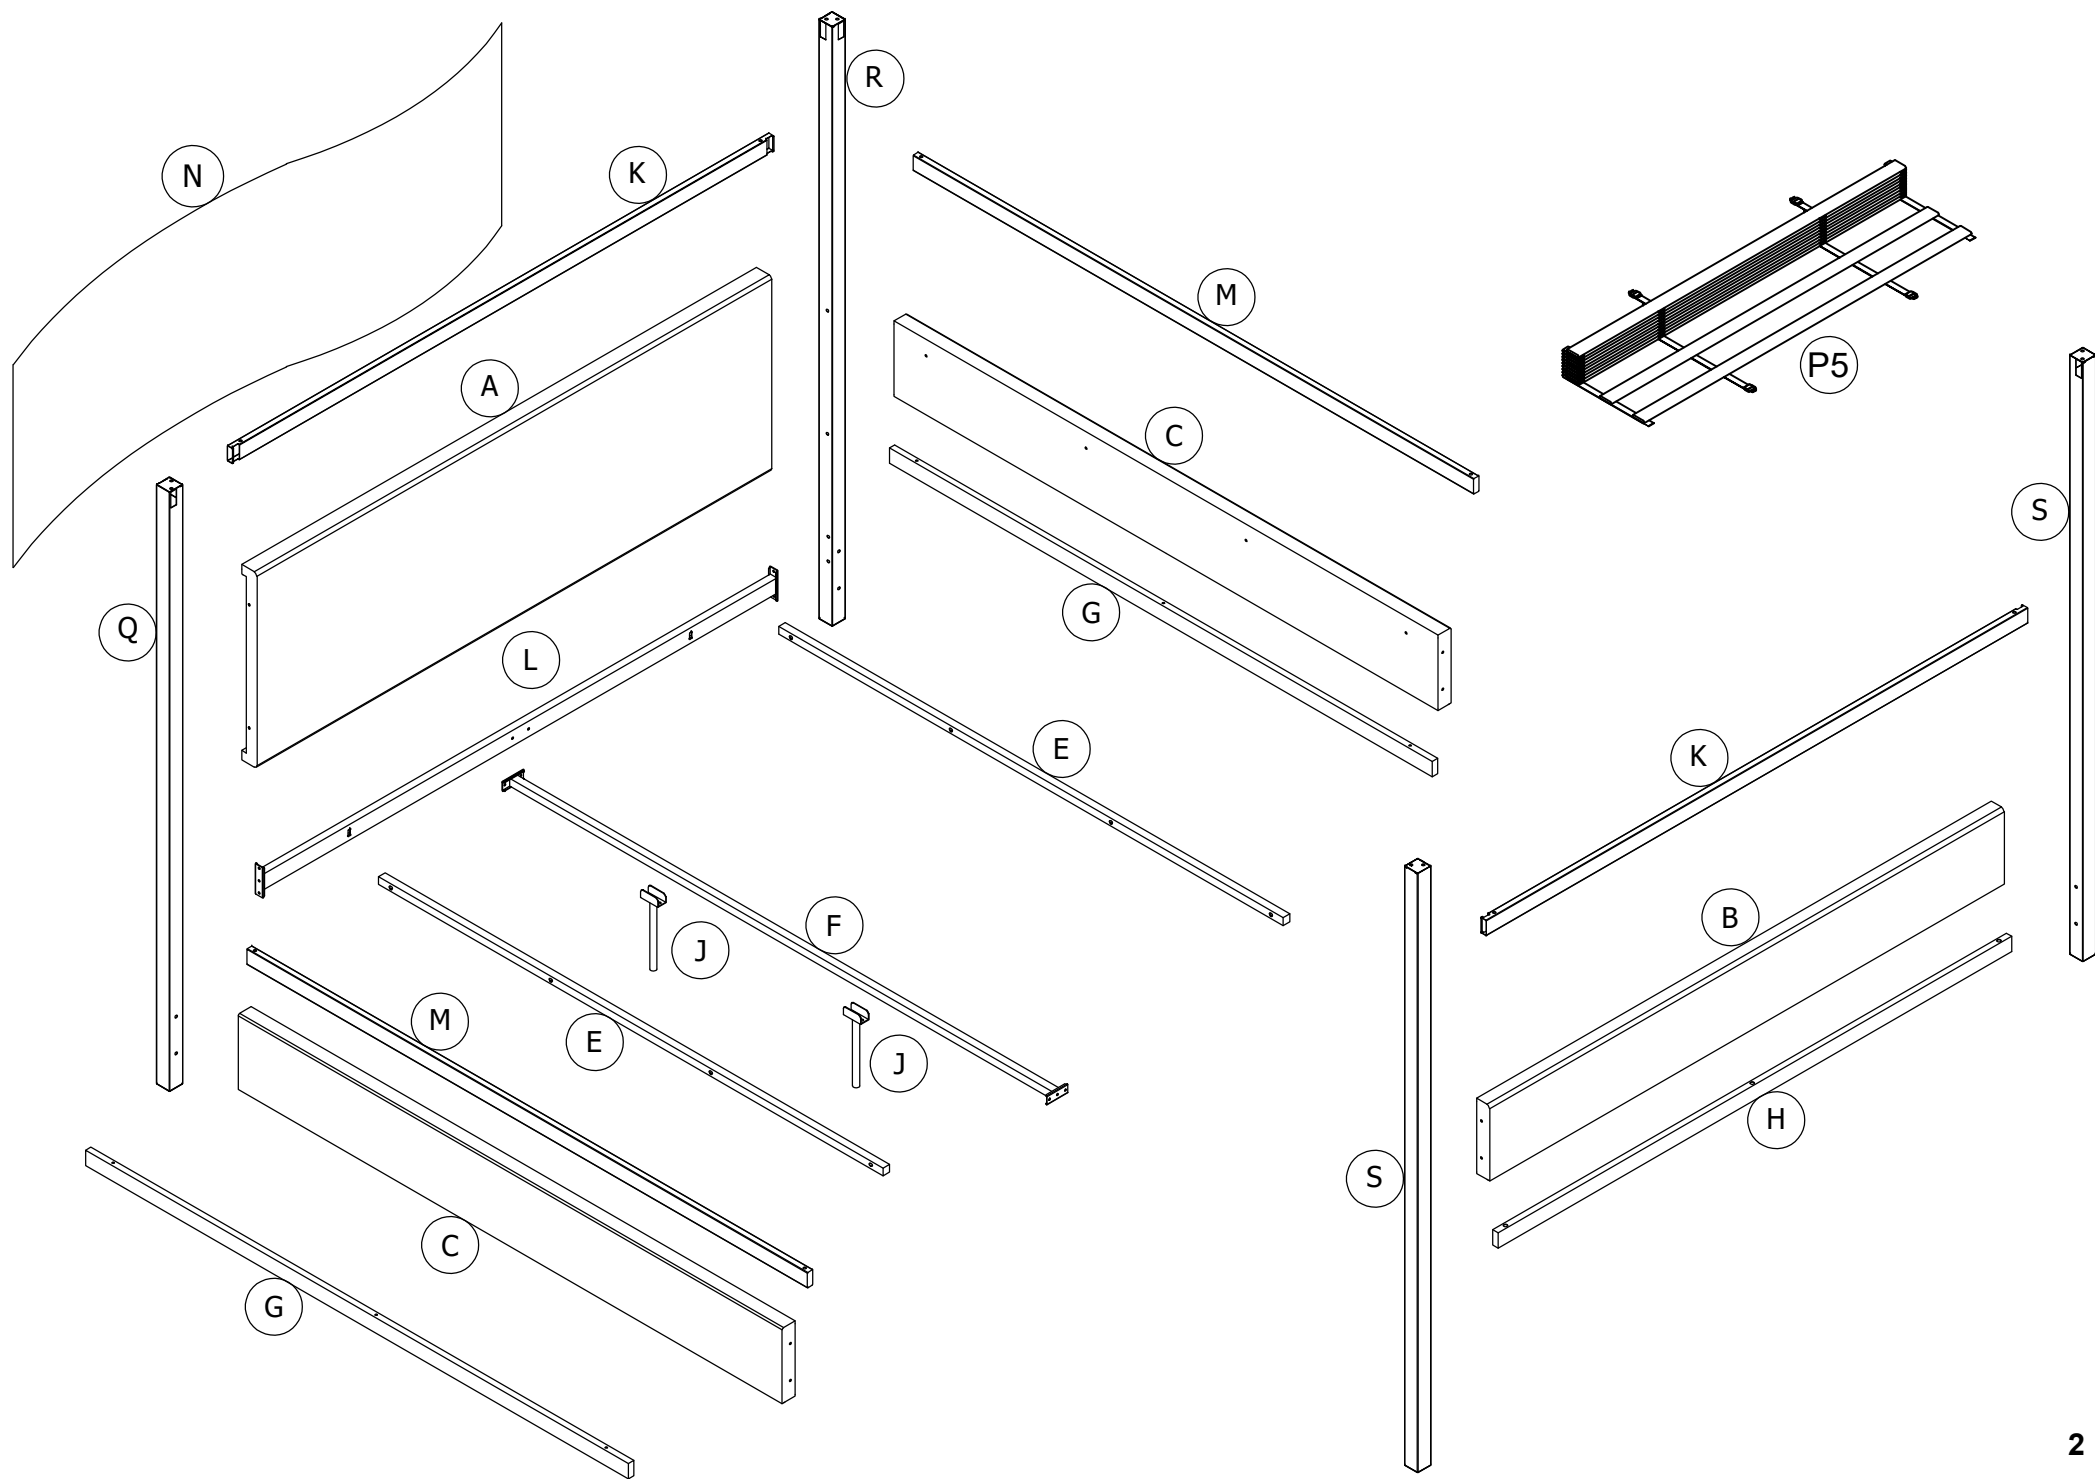

PARTS LIST

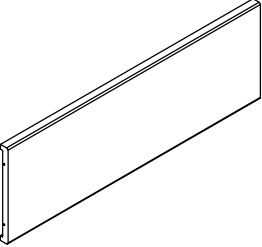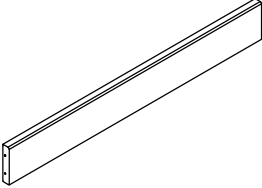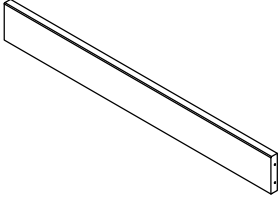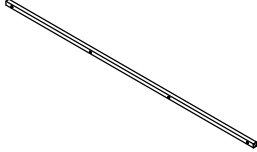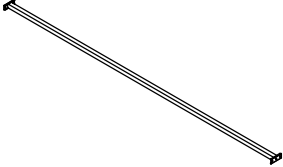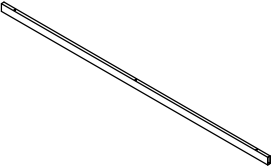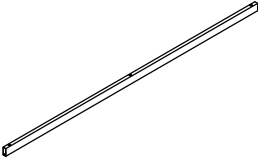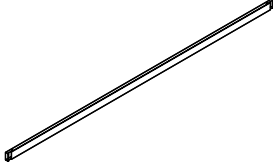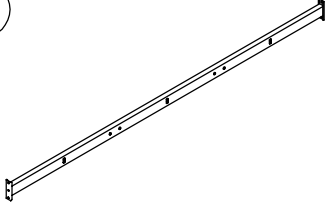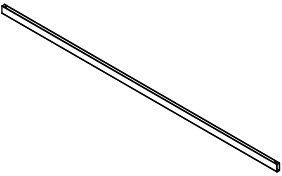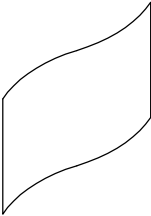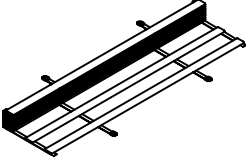
				
Headboard 1 PC	Footboard 1 PC	Side Panel 2 PCS	Side Rail 2 PCS	Center Rail 1 PC
				
Bottom Bar 2 PCS	Bottom Bar 1 PC	Support Leg 2 PCS	Top Bar 2 PCS	End Rail 1 PC
				
Top Bar 2 PCS	Back Cover 1 PC	Wooden Slats 1 PC	Post 1 PC	Post 1 PC
				
Post 2 PCS				

HARDWARE LIST

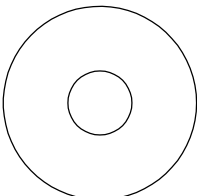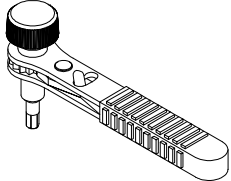1  1/4" X 3/4" Bolt 12 PCS	2  1/4" X 1 9/16" Bolt 12 PCS	3  1/4" X 1 3/16" Bolt 20 PCS	4  1/4" Metal Washer 16 PCS	5  1/4" X 2 3/4" Bolt 9 PCS
6  4mm Allen Key 1 PC	7  Ratchet Wrench 1 PC			


How To Use The Ratchet

1. Before assembling the furniture, please adjust the lock tool as needed.

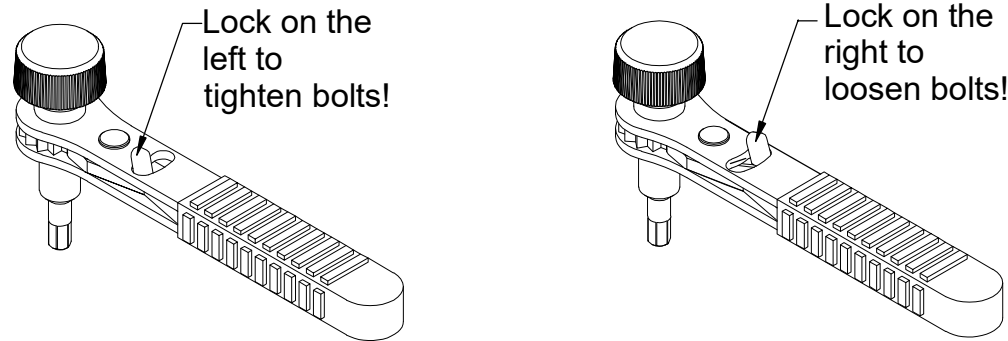

2. Tighten or loosen the bolts


- **Tighten bolts** : Locate the turncap (picture) and rotate it clockwise to screw the bolt quickly, until it cannot be rotated any more. Then start rotating with the handle clockwise to finalize tightening the bolts.
- **Loosen bolts** : Rotate the handle counterclockwise to loosen the bolt. Then, to completely remove the bolts, continue rotating with the turncap in the same direction.

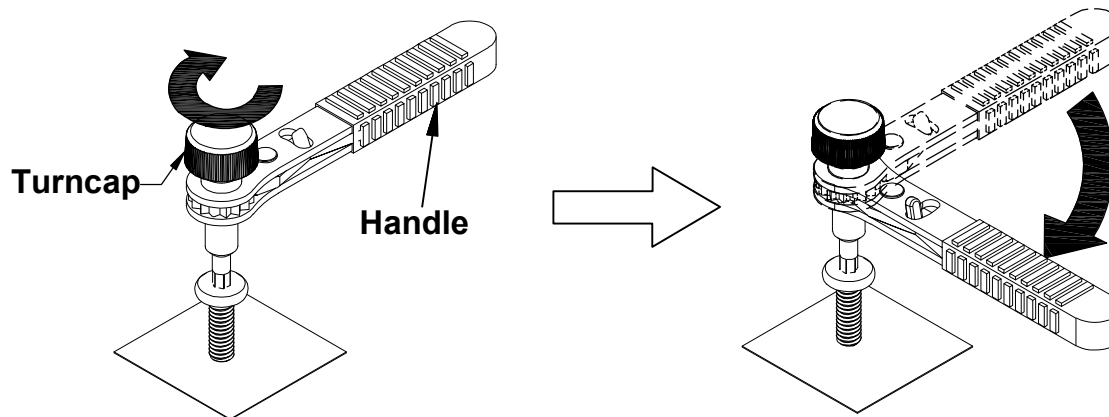

Helpful Hints

- Before assembling the furniture, please read the instructions on how to use ratchet, it will help you to assemble the furniture quickly.
- Please don't throw away the ratchet in case you may need to use in future.


⚠ Holes on K should be towards the top .

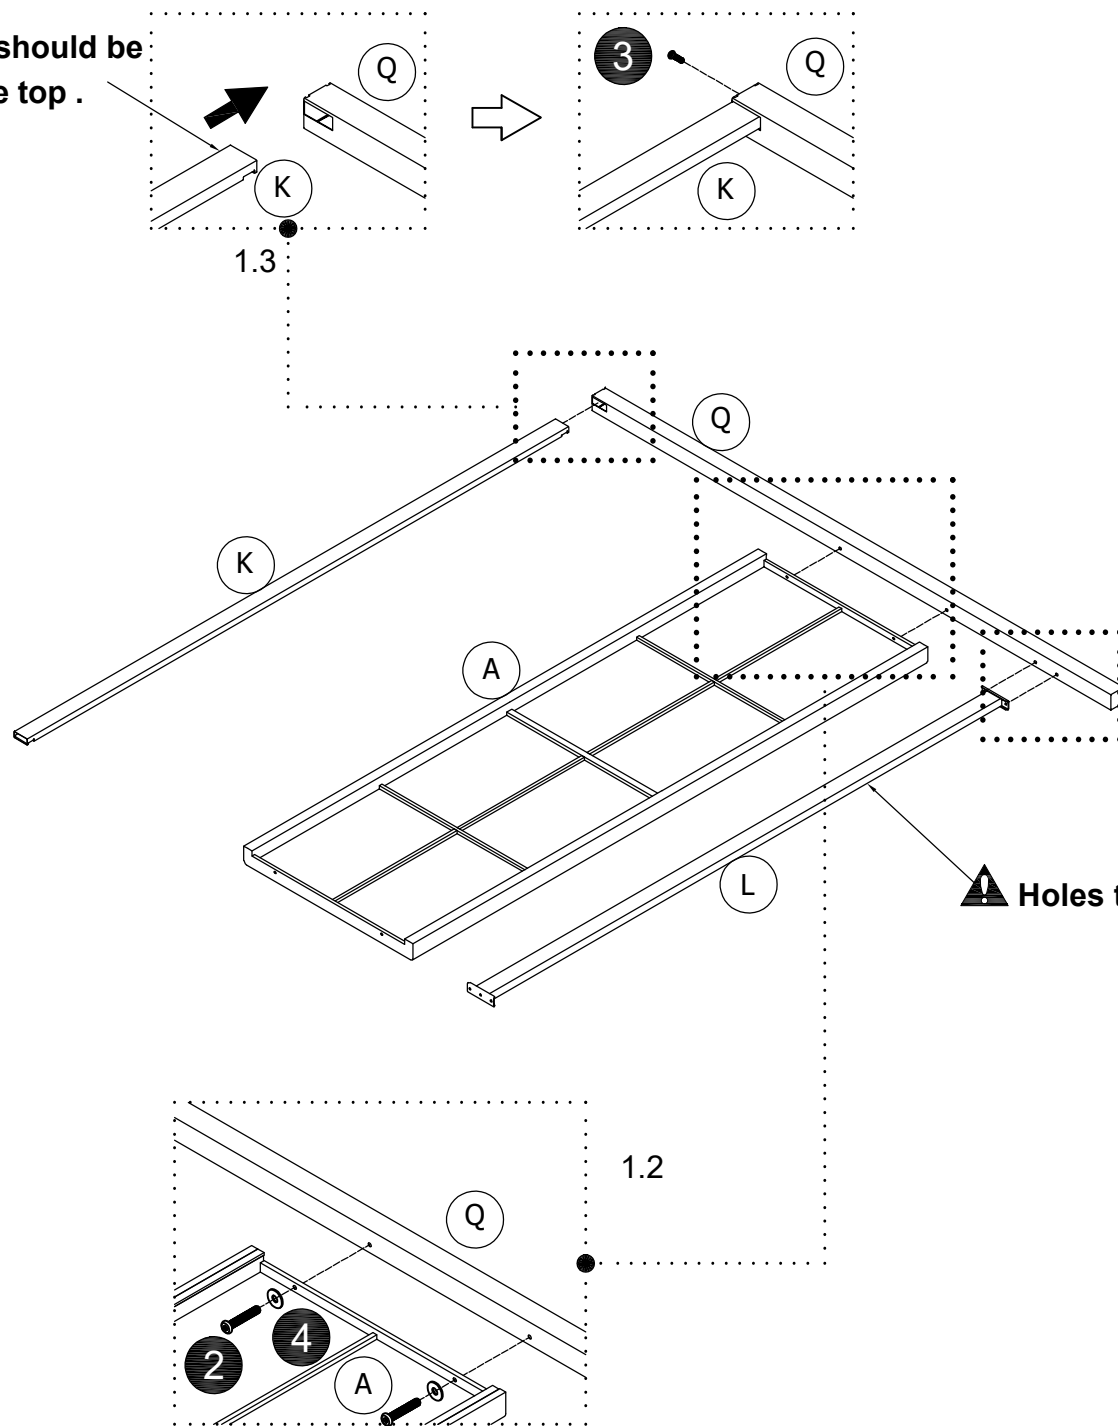

Step 1

- 1.1 Attach L to Q with ①.
- 1.2 Attach A to Q with ② & ④.
- 1.3 Attach K to Q with ③.



⚠ Fully tighten all the bolts in this step.

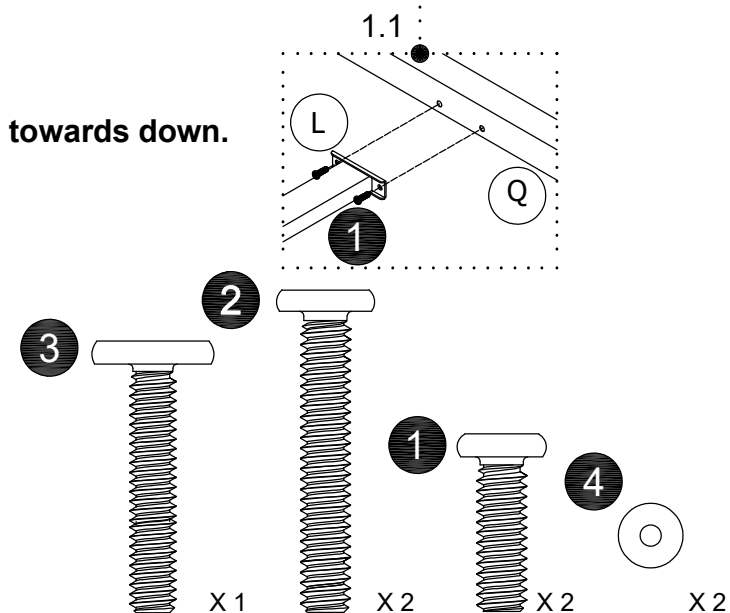

Step 2

- 2.1 Attach **L** to **R** with **1**.
- 2.2 Attach **A** to **R** with **2** & **4**.
- 2.3 Attach **K** to **R** with **3**.



⚠ Fully tighten all the bolts in this step.

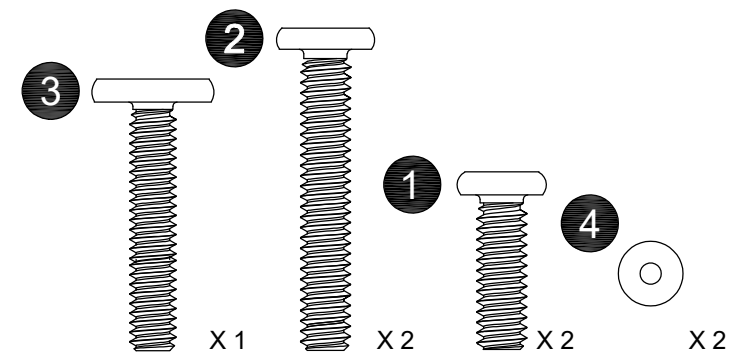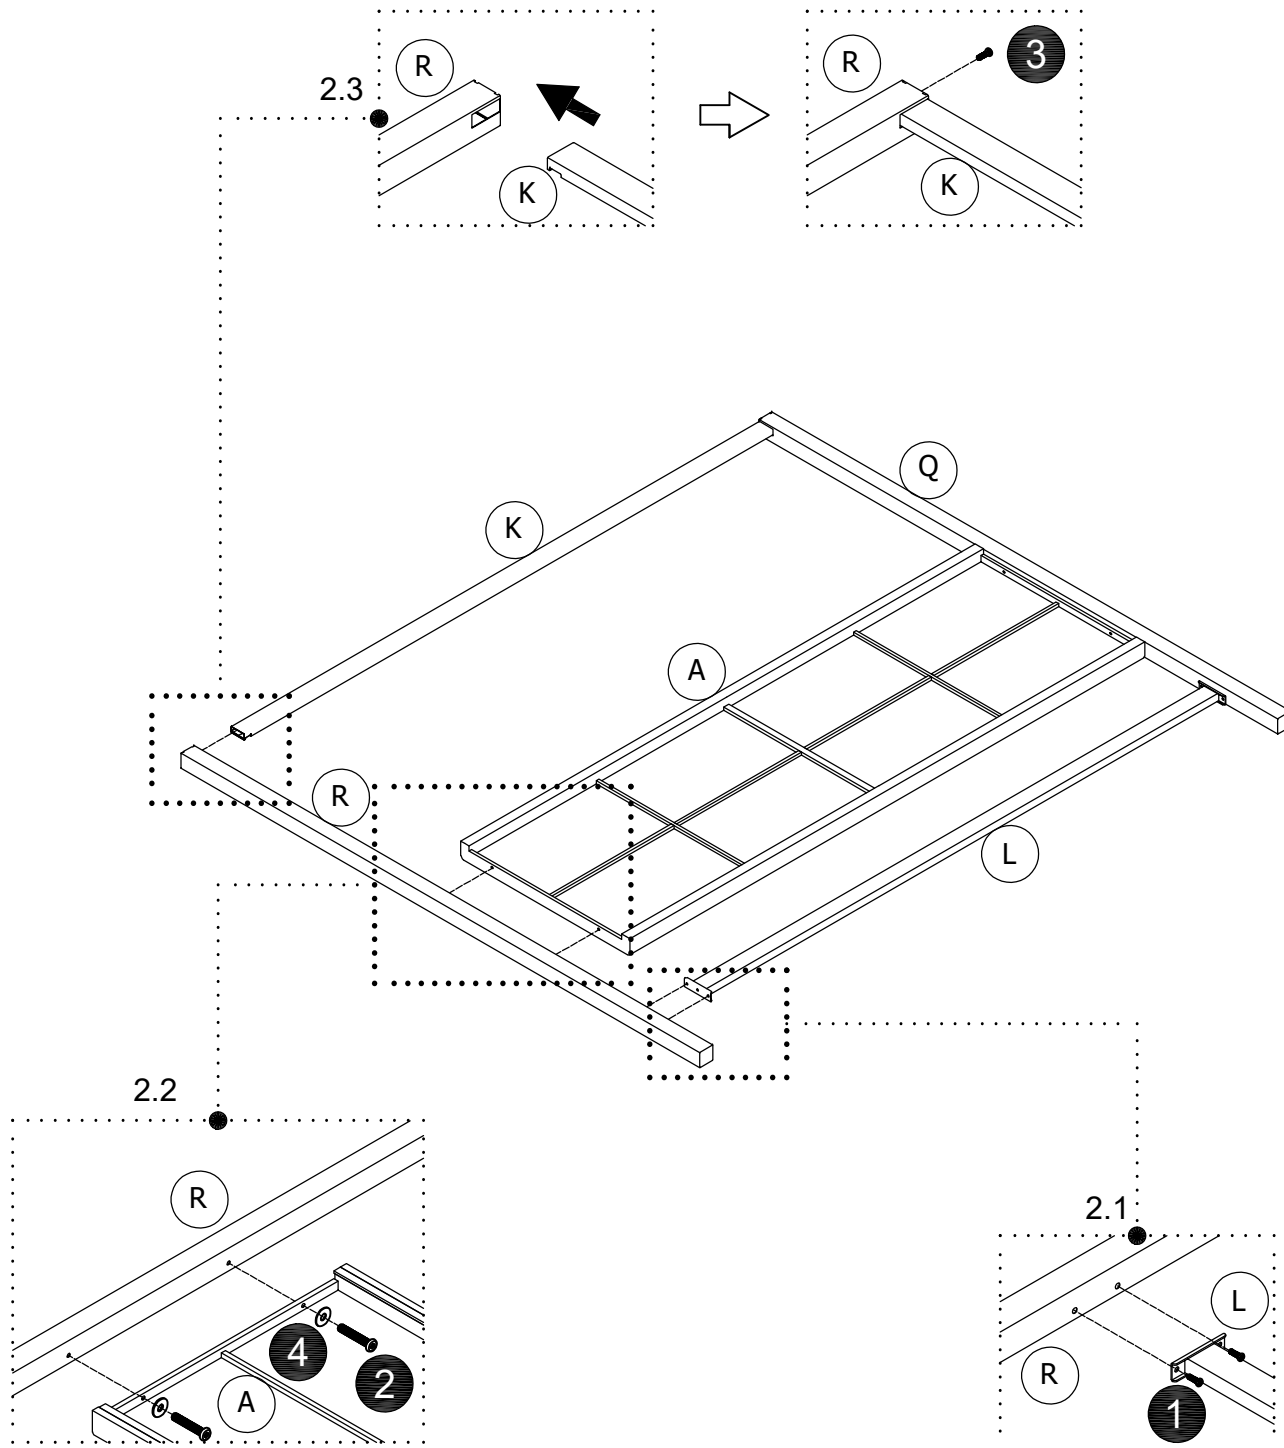



Step 3

Attach **H** to **B** with **5**.

 Fully tighten all the bolts in this step.

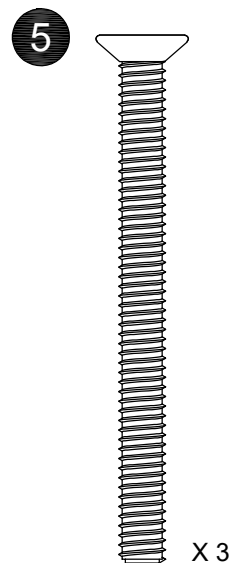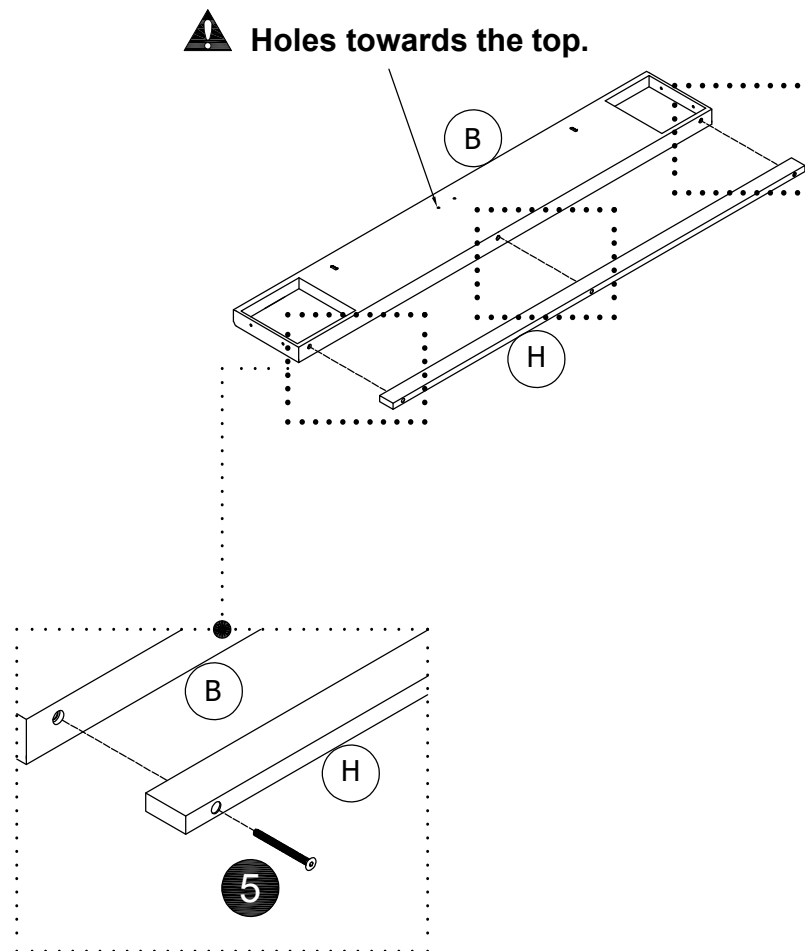

⚠ Holes on K should be towards the top .

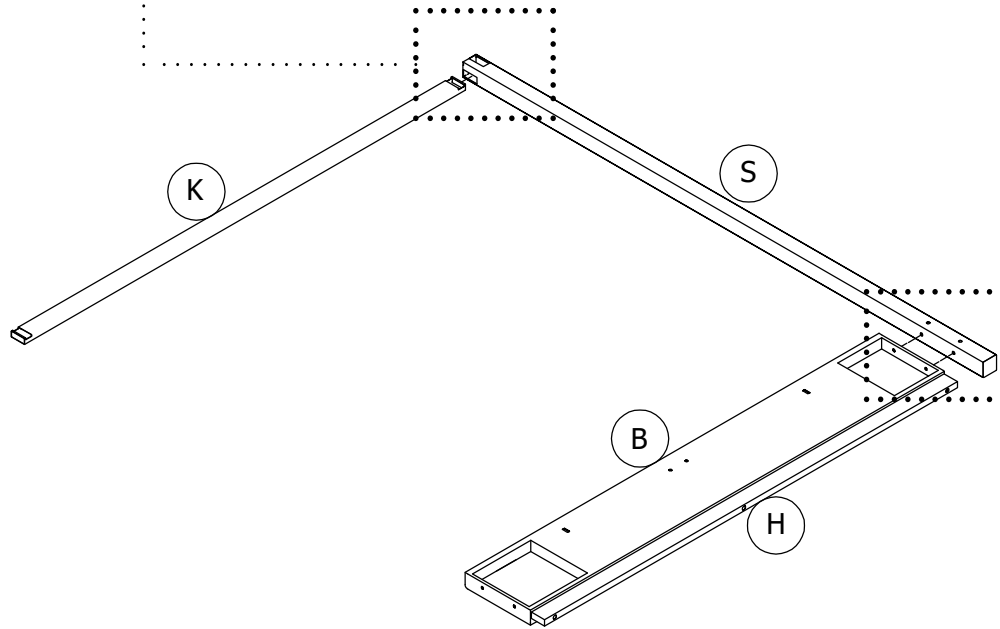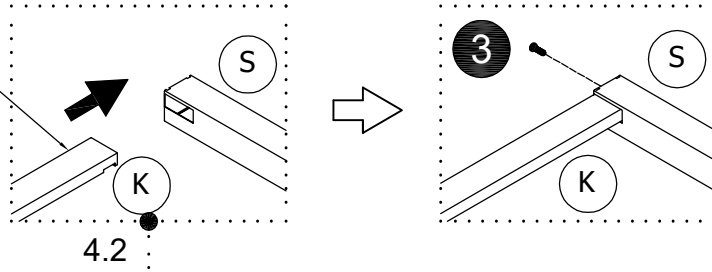



Step 4

4.1 Attach **B** & **H** to **S** with **3** & **4** .

4.2 Attach **K** to **S** with **3** .

⚠ Fully tighten all the bolts in this step.

⚠ Holes towards the top.

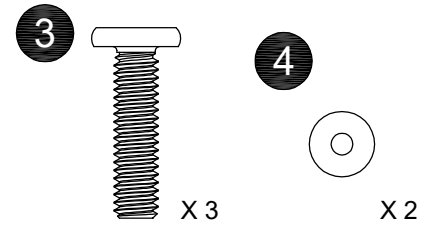
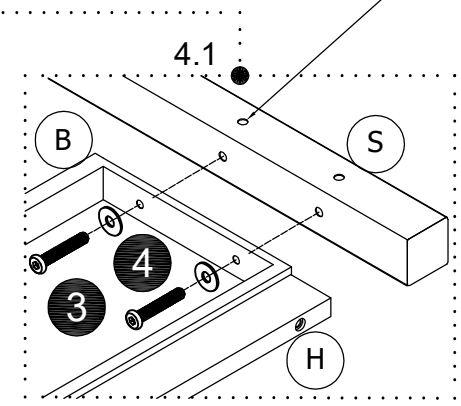


Step 5



5.1 Attach **B** & **H** to **S** with ③ & ④.

5.2 Attach **K** to **S** with ③.

 **Fully tighten all the bolts in this step.**

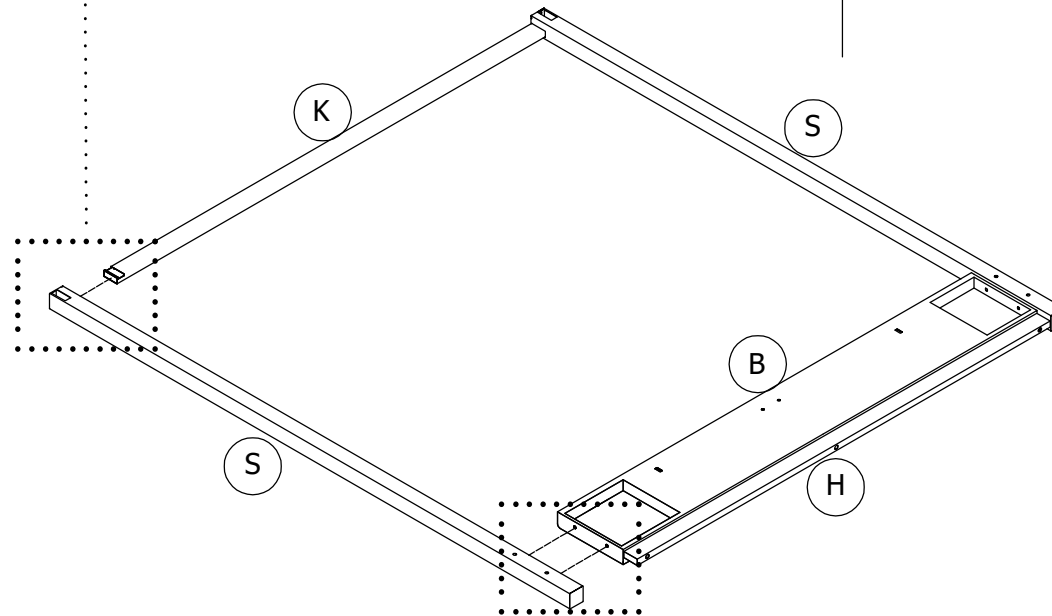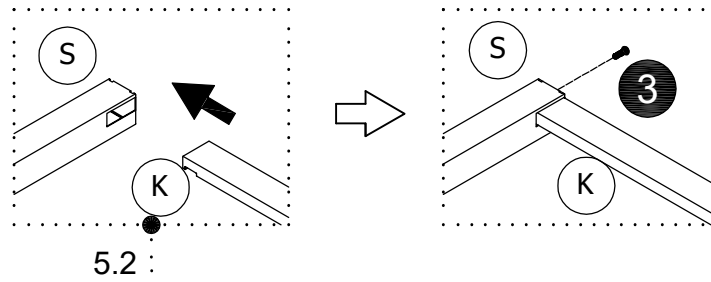



 **Holes towards the top.**

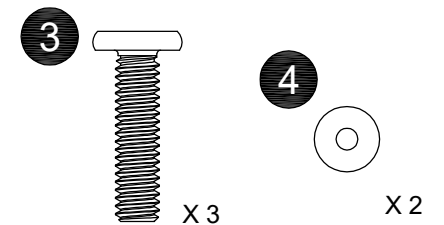
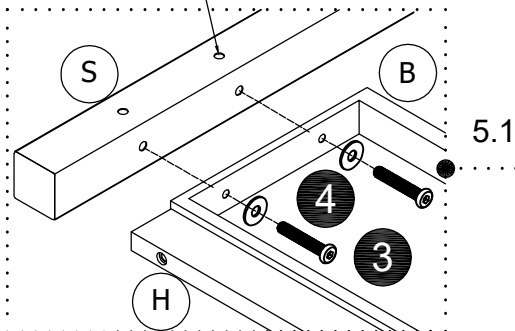


Step 6

Attach **G** to **C** with **5**.

! Fully tighten all the bolts in this step.

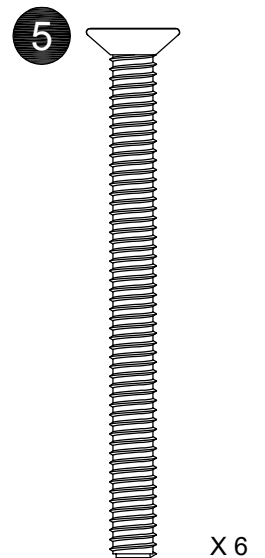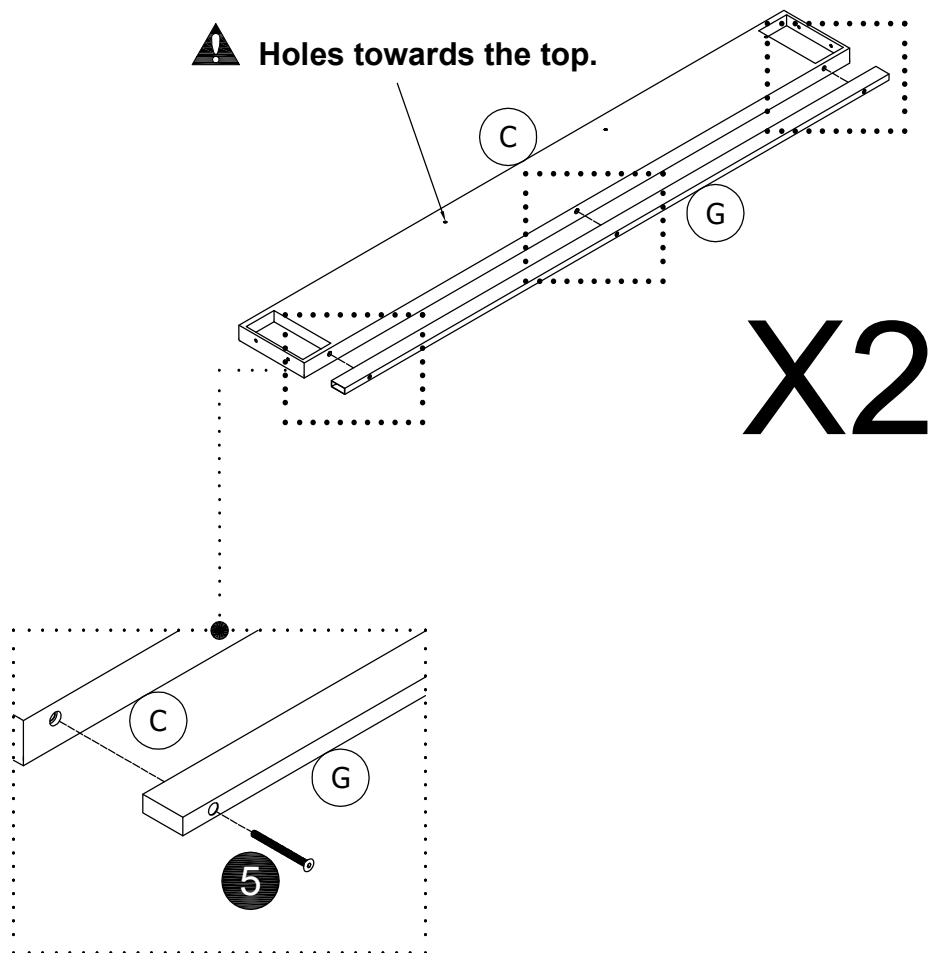

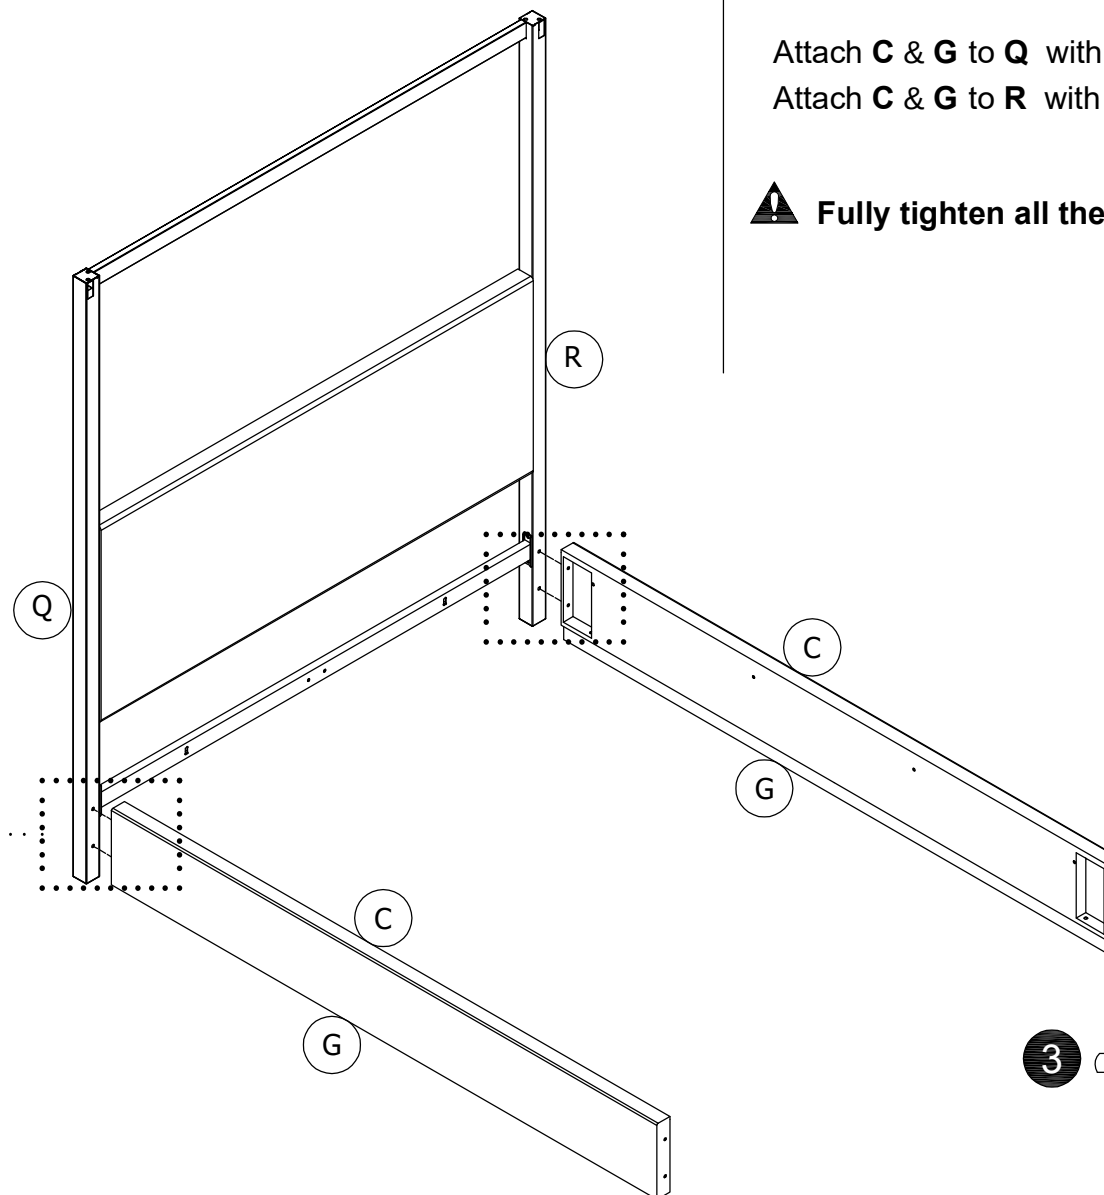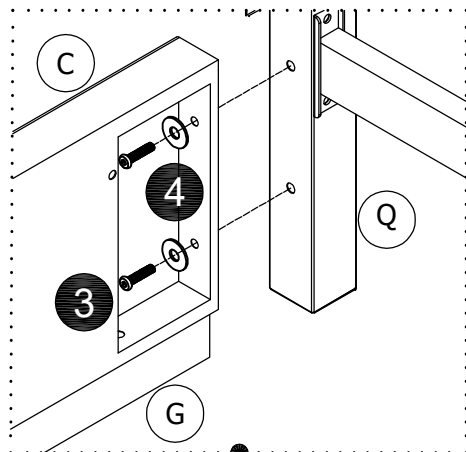


Step 7

Attach **C** & **G** to **Q** with ③ & ④.

Attach **C** & **G** to **R** with ③ & ④.





⚠ Fully tighten all the bolts in this step.


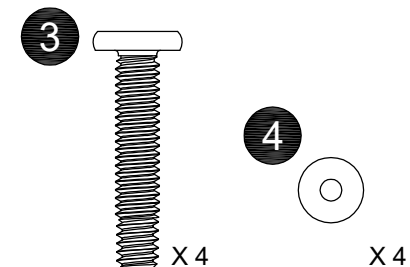


Step 8

Attach (C & G) x 2 to S x 2 with ③ & ④.

⚠ Don't completely tighten the bolts until STEP 9 is complete.

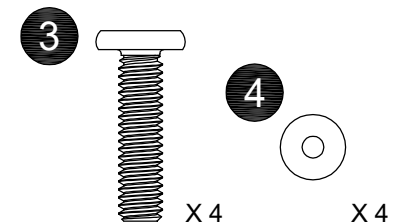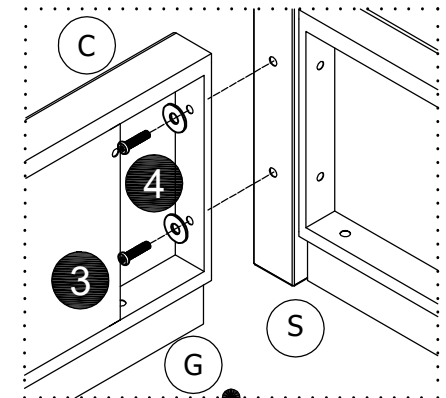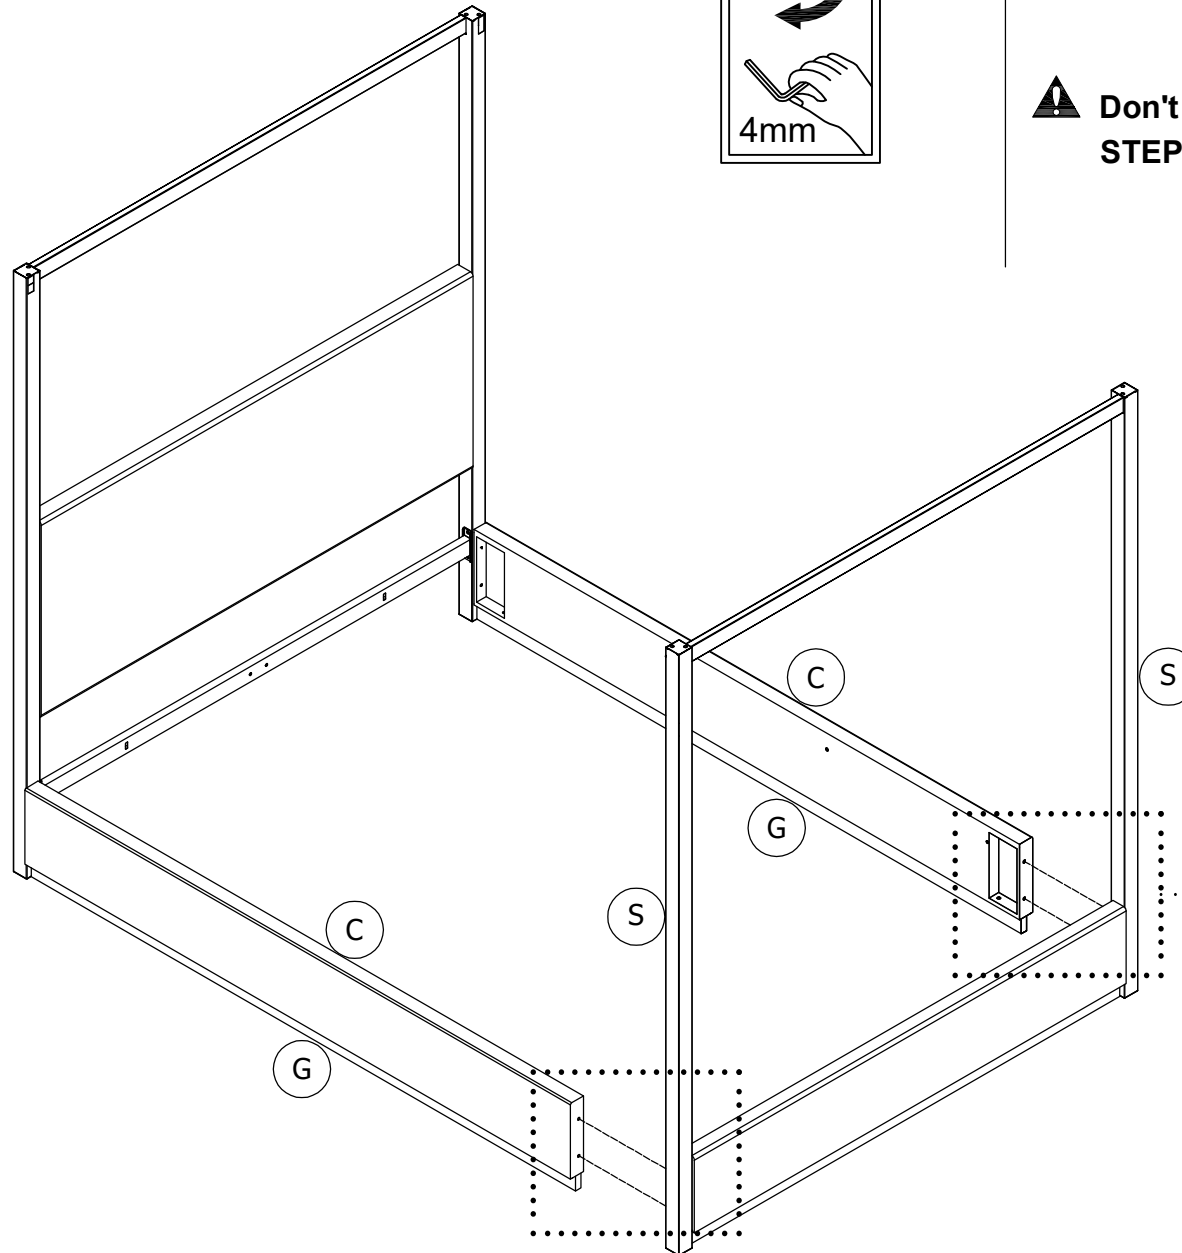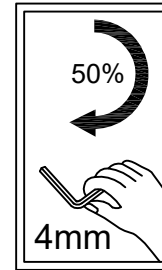

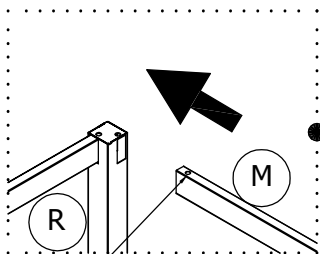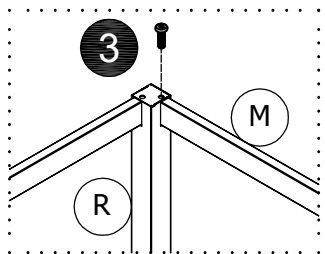



⚠ Holes on M should be towards the top .

Step 9

Attach **M** to **R** & **S** with **3**.

Attach **M** to **Q** & **S** with **3**.

⚠ Fully tighten all the bolts in this step.

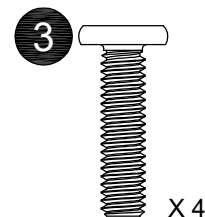
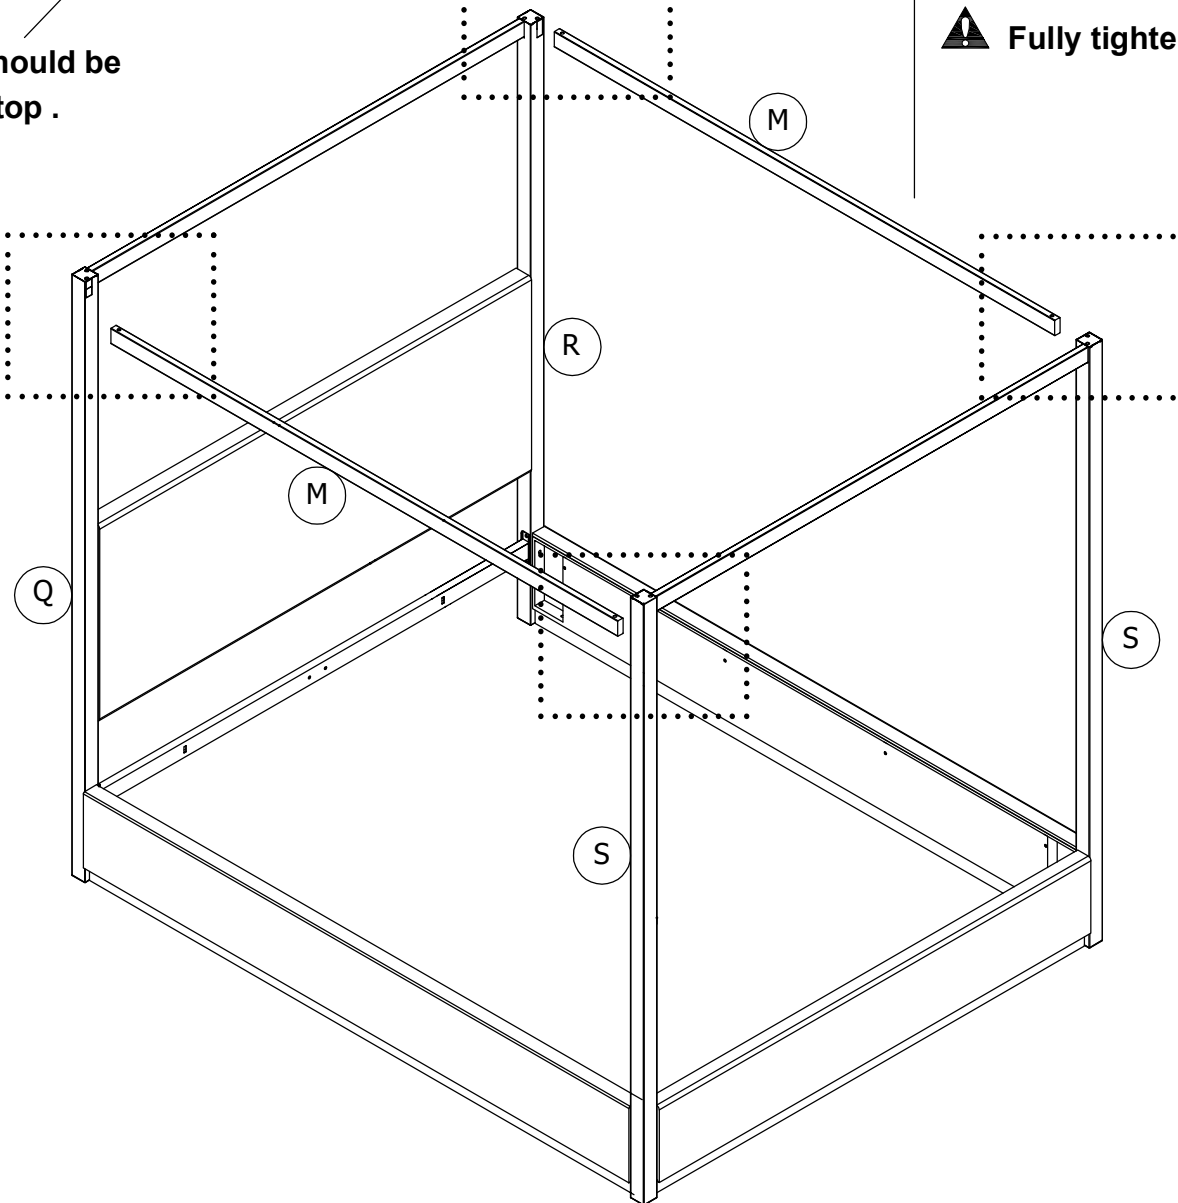


X 4

Step 10

Attach **J x 2** to **F** with **1**.




 Fully tighten all the bolts in this step.

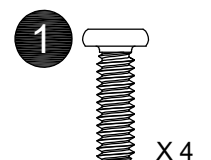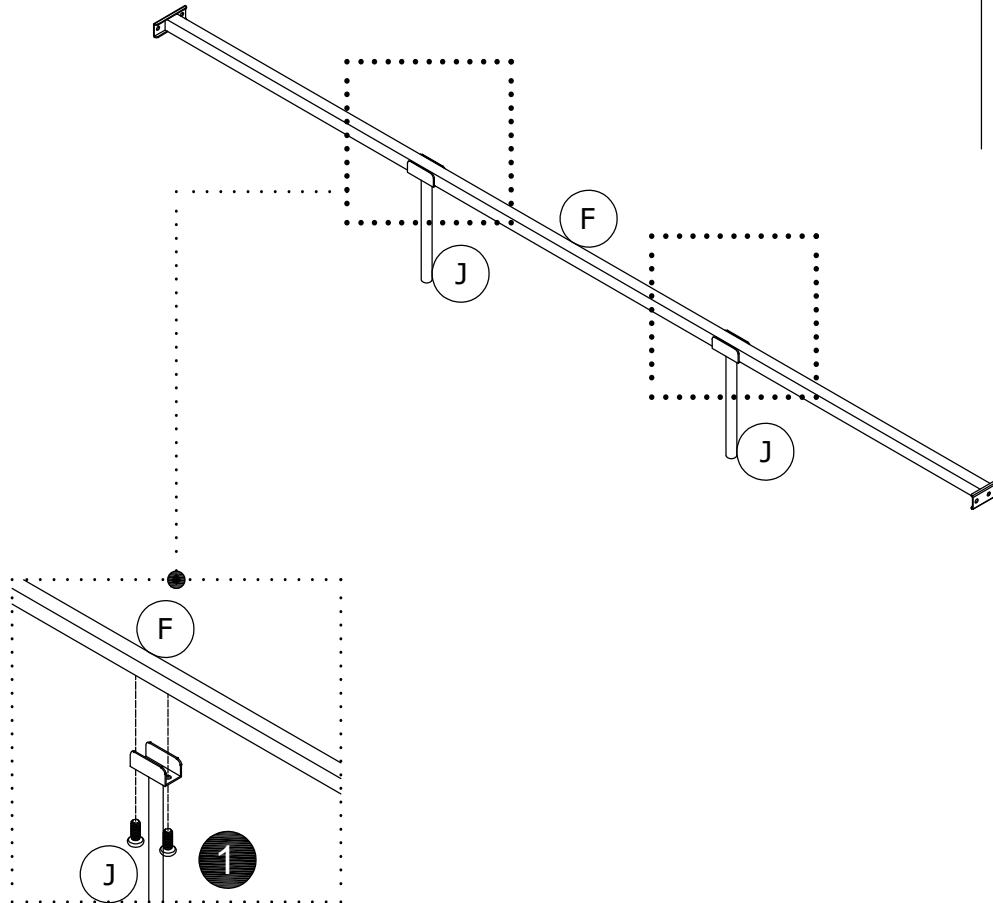

Step 11

Attach subassembly (**F & J x 2**) from previous step to **L & B** with **1**.

 **Fully tighten all the bolts in this step.**

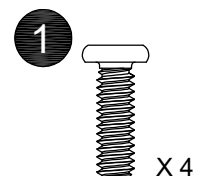
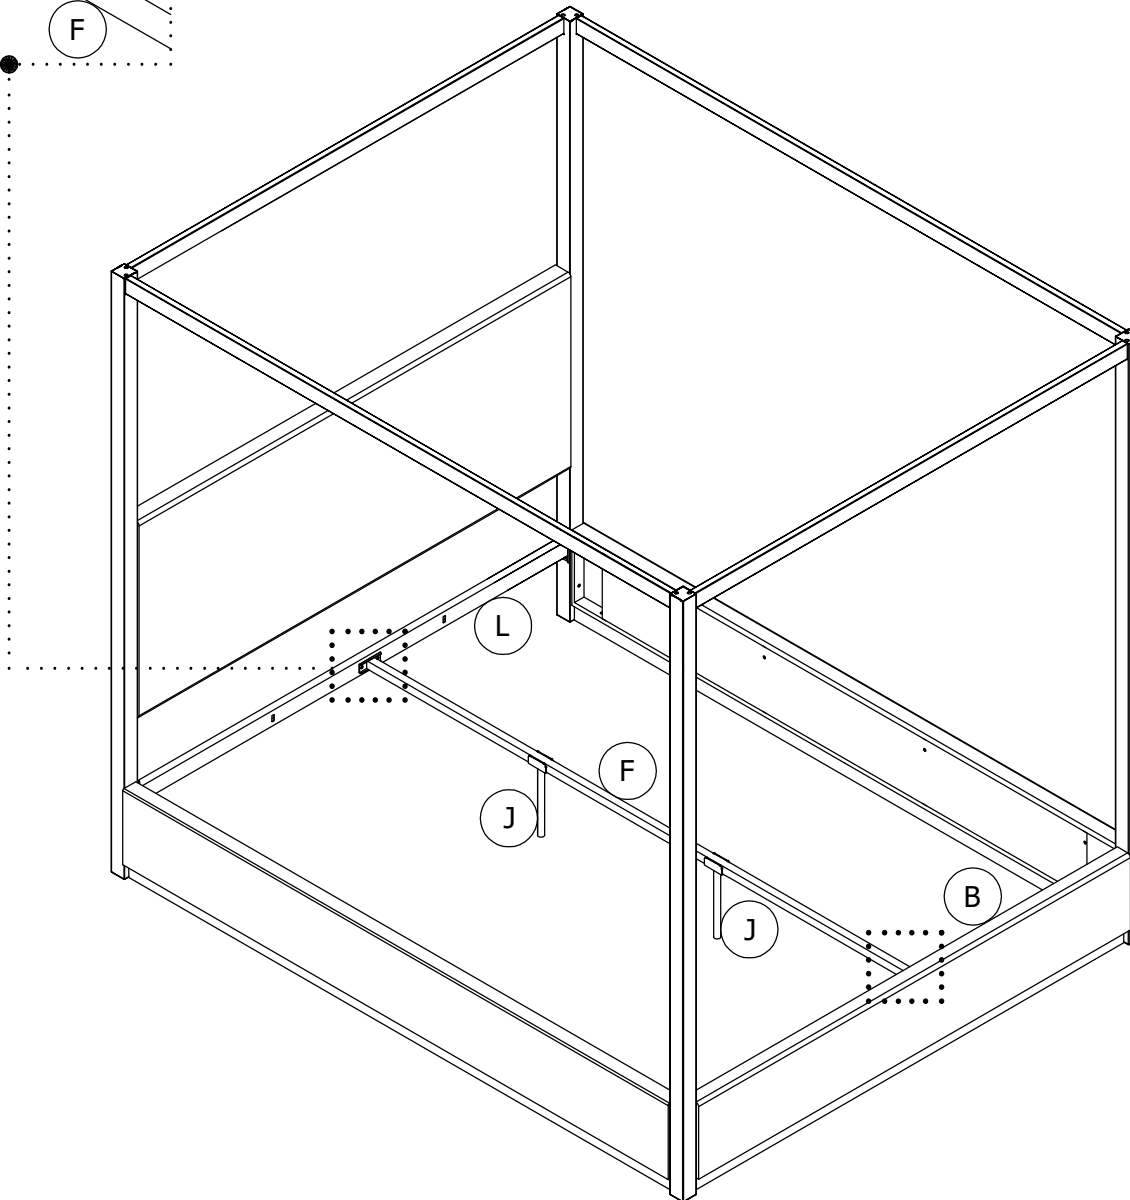
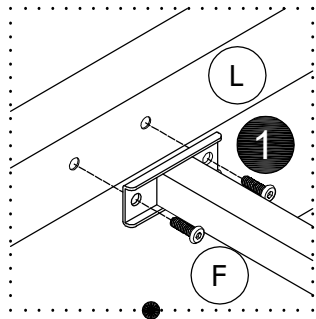


Step 12


Attach E x 2 to C x 2 with 2.

⚠ Fully tighten all the bolts in this step.

⚠ Velcro towards the top.

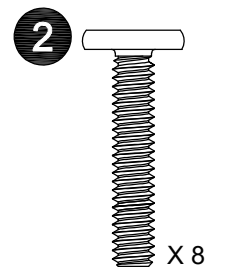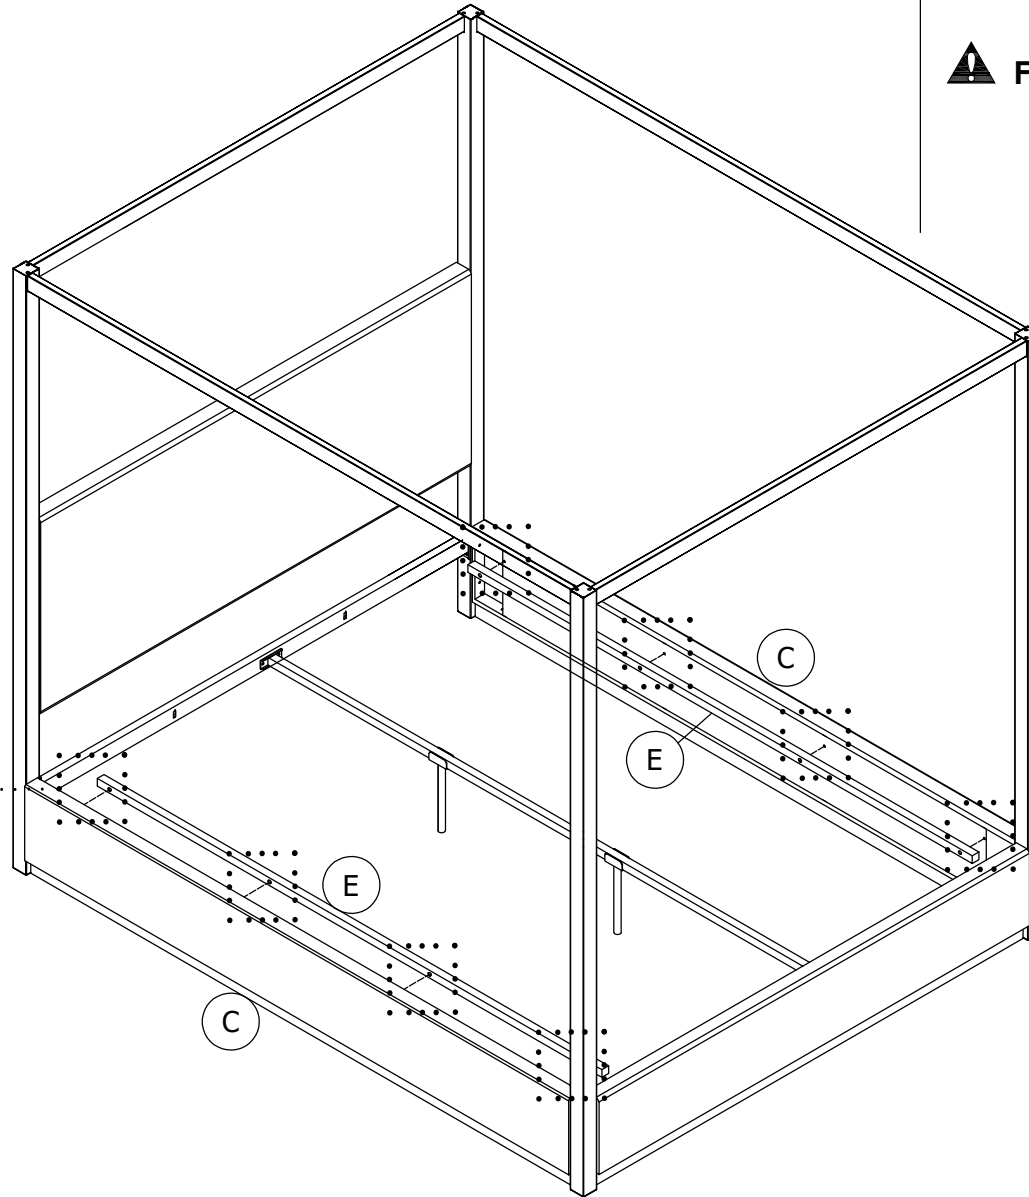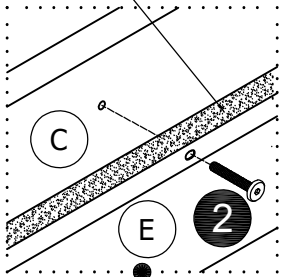


Step 13

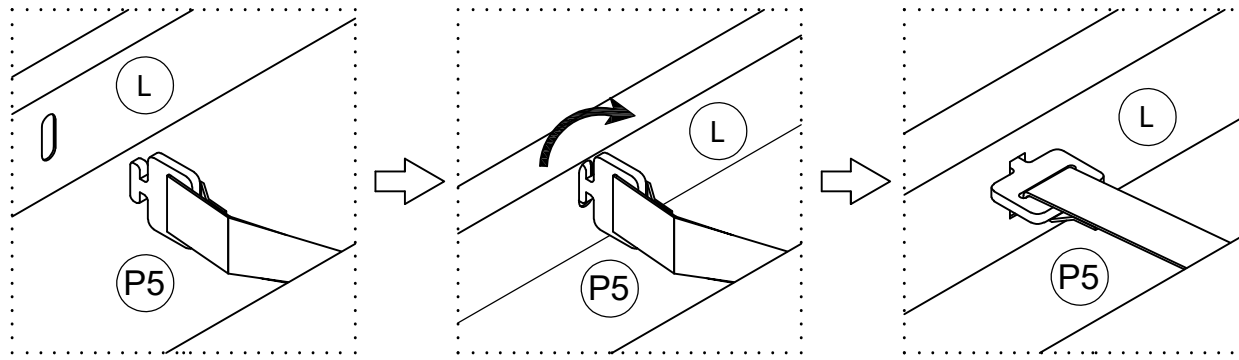


12.1


12.1 Attach one end of **P5** to **L** by inserting the tab into the slot and turn it to the level position.

12.2 Spread the slats **P5** along the bed with equal spacing, engage the velcro at the end of slat with the counter part on **E**.

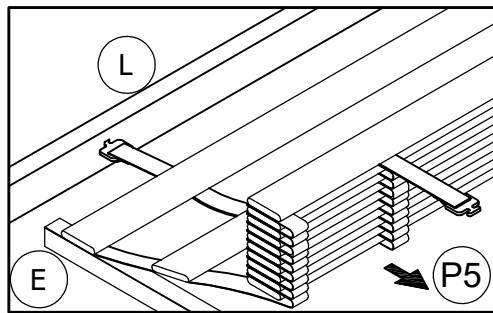


12.2

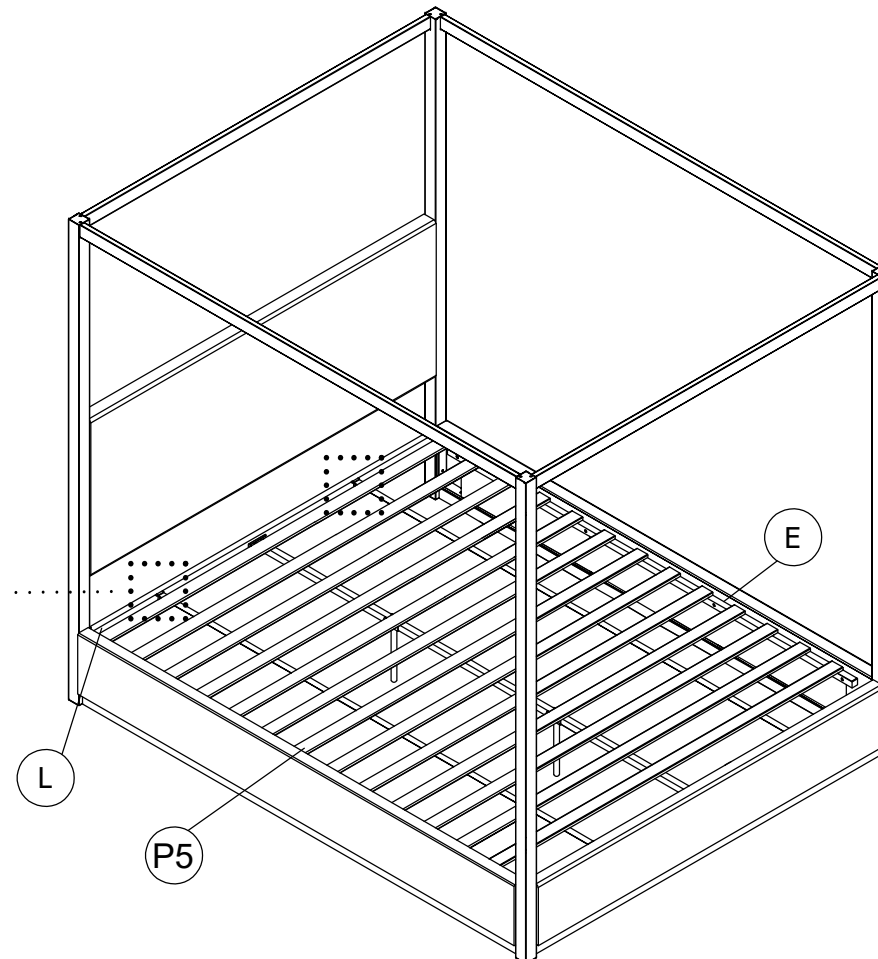

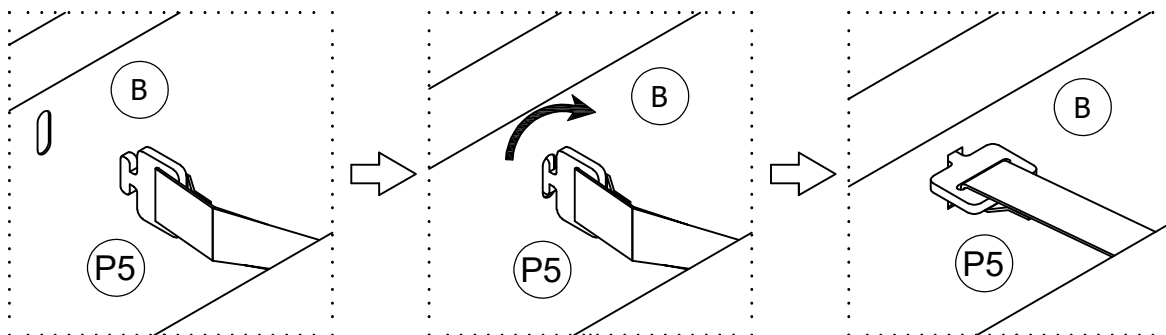

Step 14

Attach the other end of **P5** to B by inserting the tab into the slot and turn it to the level position.

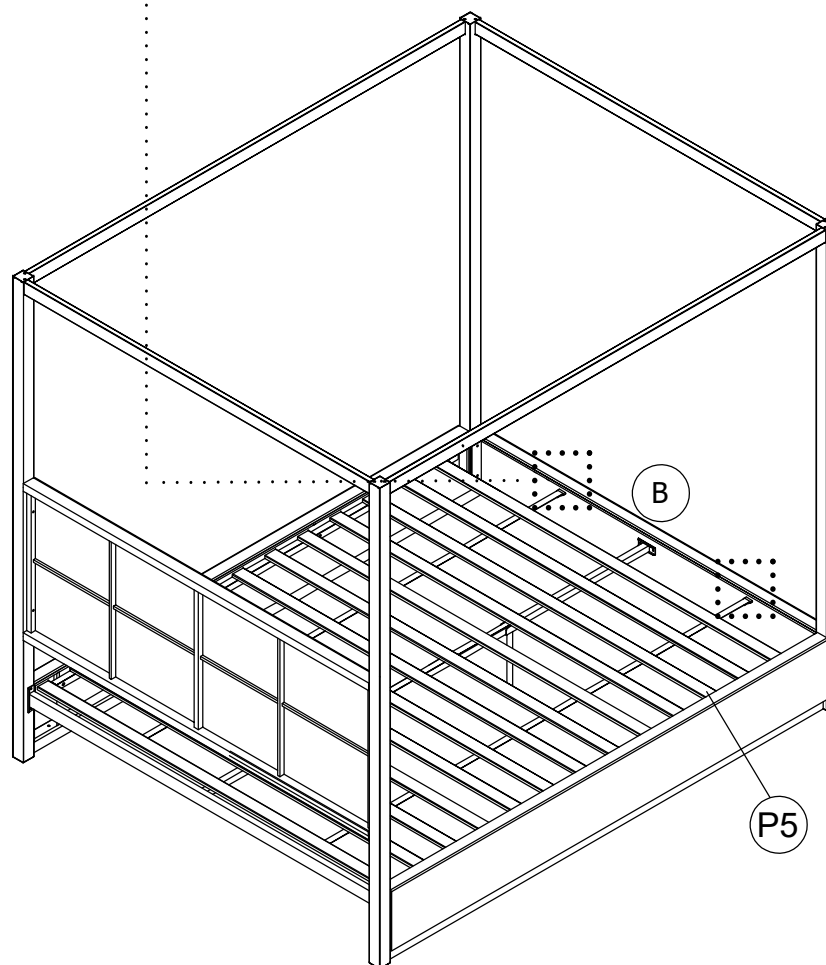

Step 15

Attach the **N** to **A** by the Velcro.

