

installation guide



Before You Begin:

Unroll and lay out the wallpaper panels to check the sequence and pattern alignment.

Each panel is marked at the bottom with "C" (Column) followed by its number: C1, C2, C3...

Install from left to right.

Each panel overlaps the previous one by 0.5 inch (1.27 cm) on the right edge.


01 TOOLS NEEDED



Soft squeegee

PEEL & STICK

02 WALL PREPARATION

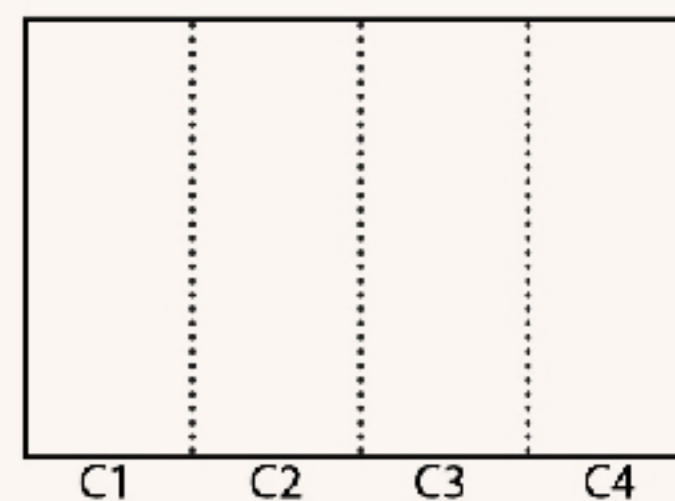


- Ensure the wall is smooth, clean, dry, and light-colored.
- Remove old wallpaper, dust, and loose paint.
- Fill holes and sand any rough areas.

05 APPLY THE SECOND PANEL AND THE NEXT PANELS

- Position Panel C2 so that it overlaps the right edge of C1 by 0.5 inch (1.27 cm).
- Align the design/pattern carefully at the overlap zone.
- Use a squeegee to press and smooth panel C2 from top to bottom.

03 MARK YOUR STARTING LINE

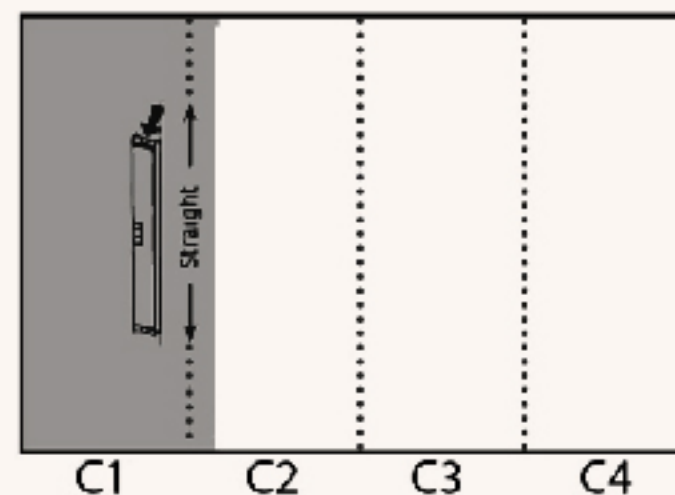


- Use a level or plumb line to draw a straight vertical line where the right edge of Panel C1 will go. This ensures your mural stays perfectly aligned.

06 TRIM THE EDGES


- Once all panels are in place, use a sharp utility knife to trim any excess along ceilings, baseboards, and around outlets.
- Press edges and overlaps again to ensure adhesion.

04 APPLY FIRST PANEL

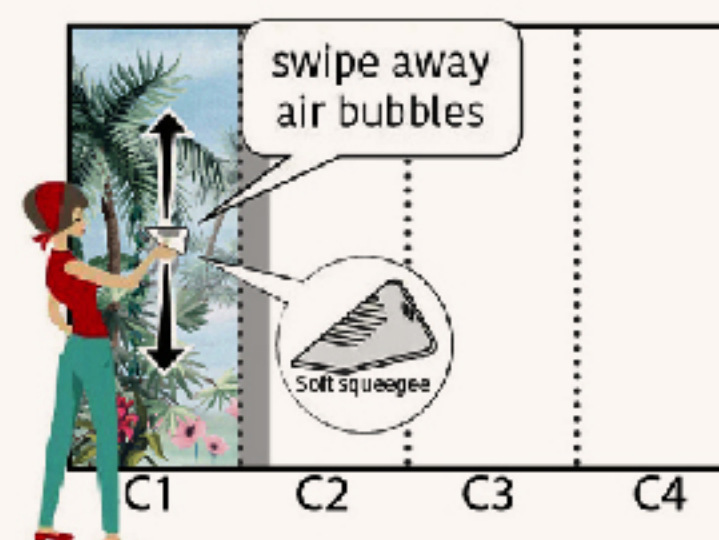

- Peel down 10–20 cm (4–8 inches) of the backing paper from the top.
- Line up the left edge of C1 with your pencil line.
- Press the exposed adhesive area to the wall and smooth downward using your hand or squeegee.

07 FINISH

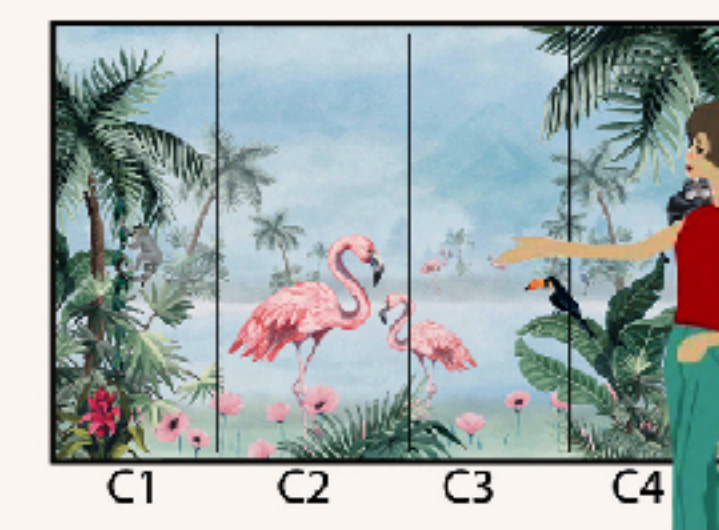

N O B L E



WALLPAPERS

installation guide

Before You Begin:

Unroll and lay out the wallpaper panels to check the sequence and pattern alignment.

Each panel is marked at the bottom with "C" (Column) followed by its number: C1, C2, C3...

Install from left to right.

Each panel overlaps the previous one by 0.5 inch (1.27 cm) on the right edge.


01 TOOLS NEEDED



Suitable Adhesive




Roll to apply adhesive

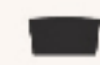

Soft squeegee


NON WOVEN - REGULAR VINYL - CANVAS VINYL

02 WALL PREPARATION

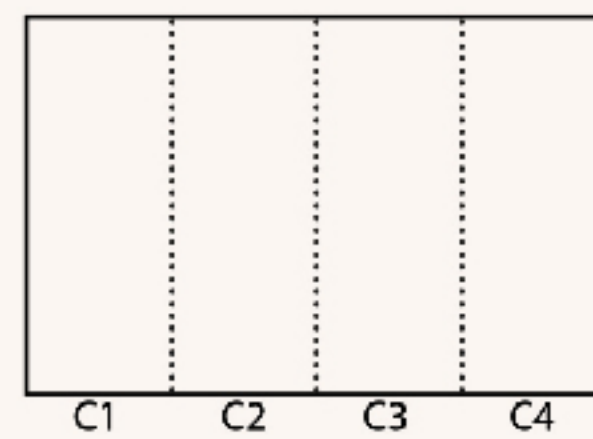


- Ensure the wall is smooth, clean, dry, and light-colored.
- Remove old wallpaper, dust, and loose paint.
- Fill holes and sand any rough areas.

03 MARK YOUR STARTING LINE

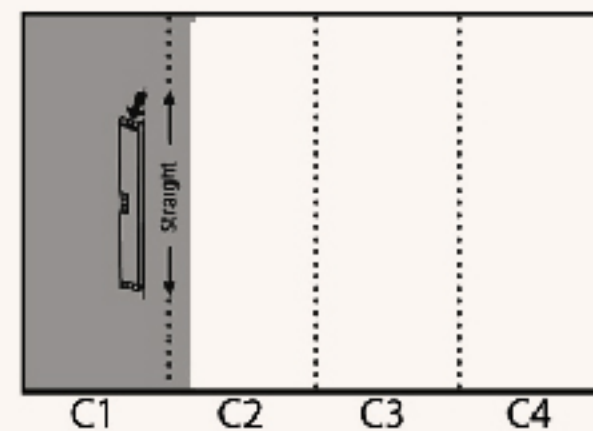


- Use a level or plumb line to draw a straight vertical line where the right edge of Panel C1 will go. This ensures your mural stays perfectly aligned.

04 APPLY PASTE ON THE WALL

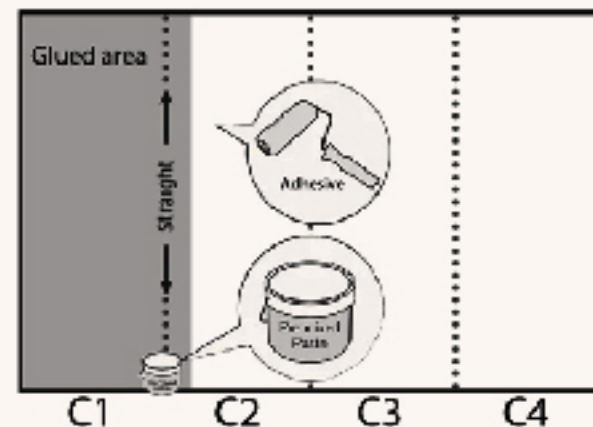


- Use a roller or brush to apply even layer of glue directly to the wall — not to the paper.
- Apply paste just a little wider than the width of the panel.

05 INSTALL PANEL C1

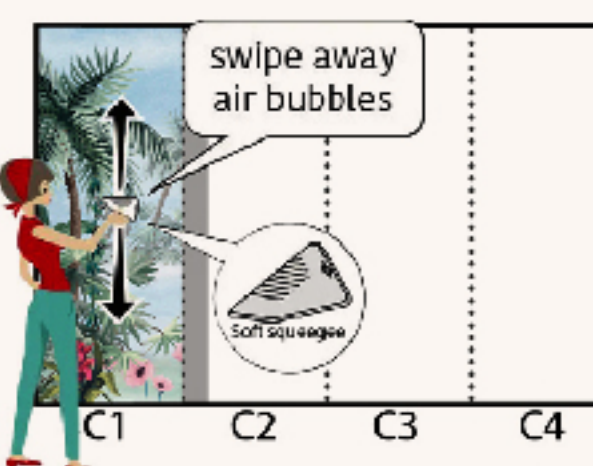


- Position the edge of Panel C1 along your marked vertical line.
- Press it gently onto the pasted area from top to bottom.
- Smooth out with a wallpaper smoother, working from the center outwards to remove bubbles.

06 INSTALL PANEL C2 AND THE NEXT PANELS

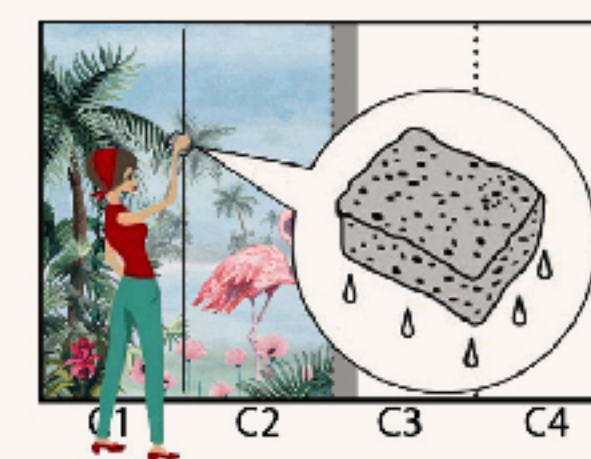


- Apply paste for the next section of wall.
- Position Panel C2 so that it overlaps C1 by 0.5 inch (1.27 cm) on the right.
- Carefully align the design/pattern at the overlap seam.
- Smooth and press down, checking alignment.
- Repeat for C3, C4, etc., always working left to right.

07 CUTTING THE OVERLAP

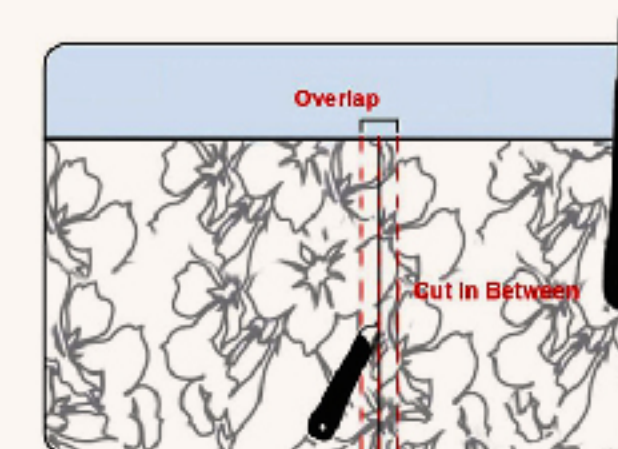

- Place a metal ruler or straight edge vertically over the center of the 0.5 inch (1.27 cm) overlap.
- Using a sharp utility knife, carefully cut through both layers of wallpaper in one clean stroke, following the edge of the ruler.
- Take out the cut parts of both panels. Be gentle but firm to avoid tearing or pulling the paper
- Make sure overlaps are sealed well.

08 CLEAN & FINISH

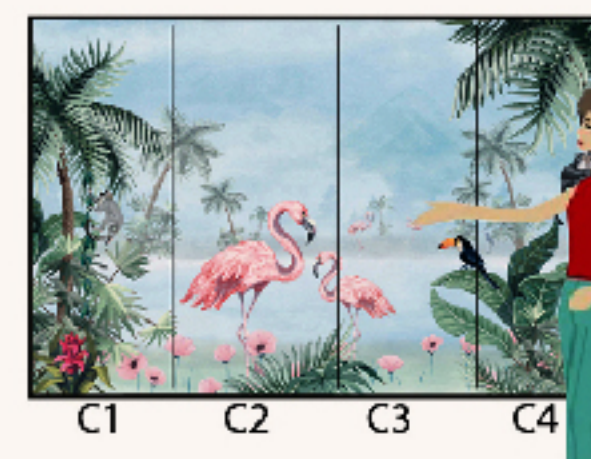

- Gently wipe any excess glue with a damp sponge.
- Allow to dry at room temperature, avoiding drafts or heat sources.
- Do not open windows or let any air circulation inside the room for 24 hours

N O B L E



WALLPAPERS