



1

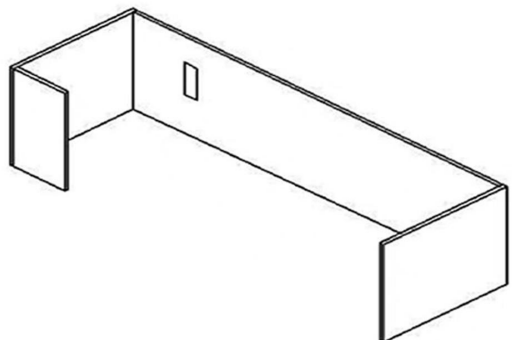

09A desk installation diagram


STEP 1: First determine the left and right directions of the sub-cabinet of the desk. Link the backplane of the sub-cabinet to the front and rear panels as shown in the figure.

2

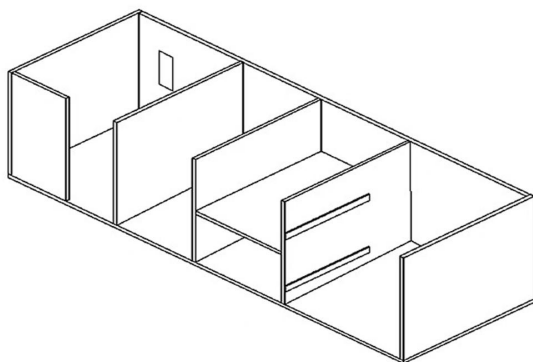


STEP 2: Install the bottom plate and neutral plate, neutral plate Pay attention to the order, the vertical plate of the guide rail is installed at the very edge.

3

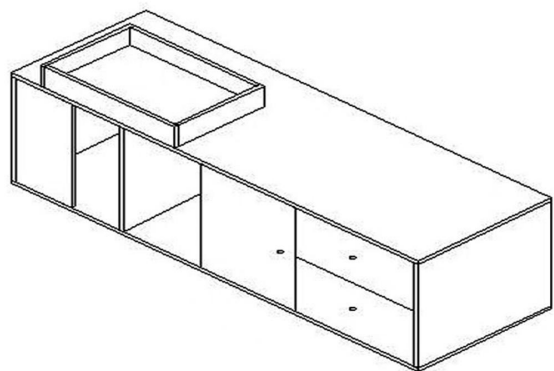


STEP 3: Cover the top plate and install the table support box.

4

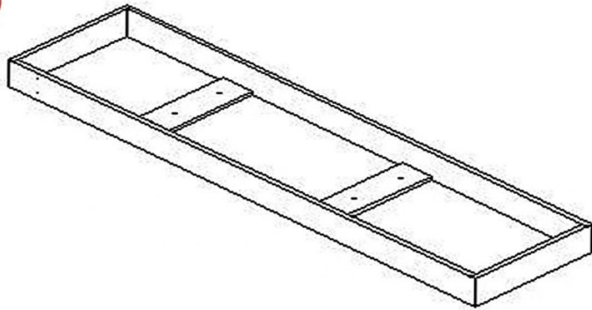

STEP 4: The foot strip at the bottom of the auxiliary cabinet, and install the foot nails.


5

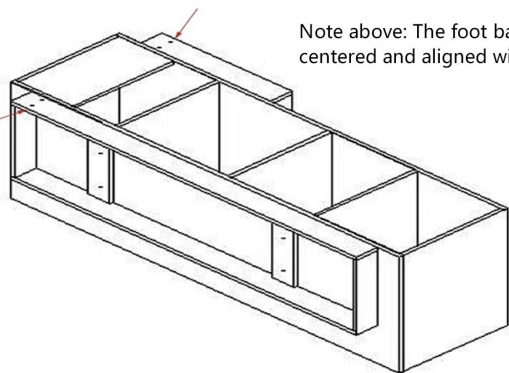


Note above: The foot bars need to be centered and aligned with the top.

STEP 5: Attach the foot bar to the bottom plate with Self-tapping screw.
Note above: The foot bars need to be centered and aligned with the top.

6

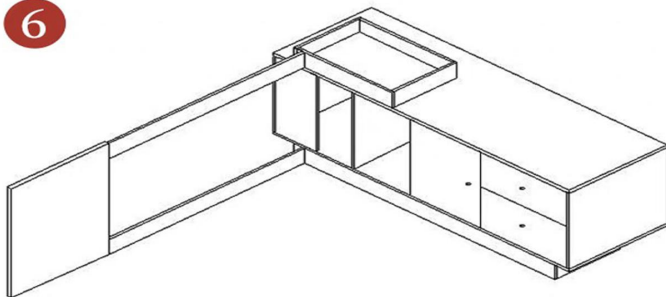


STEP 6: Front trim board link to side cabinet, trim board
Need to install foot nails.

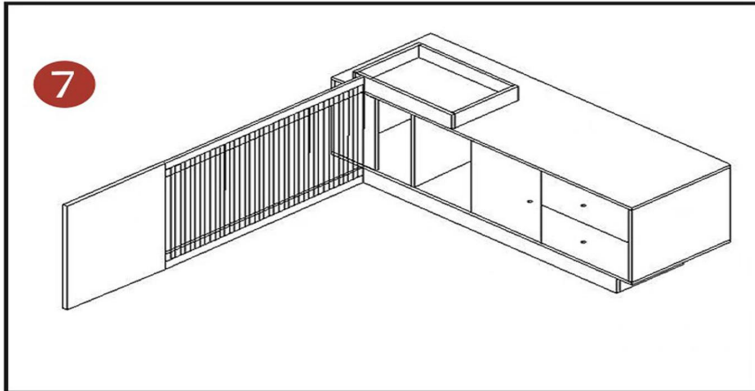


STEP 7: Stainless steel decorative plate with self-tapping screws link.

To the top of the decorative plate, stainless steel protective film is required tear off.

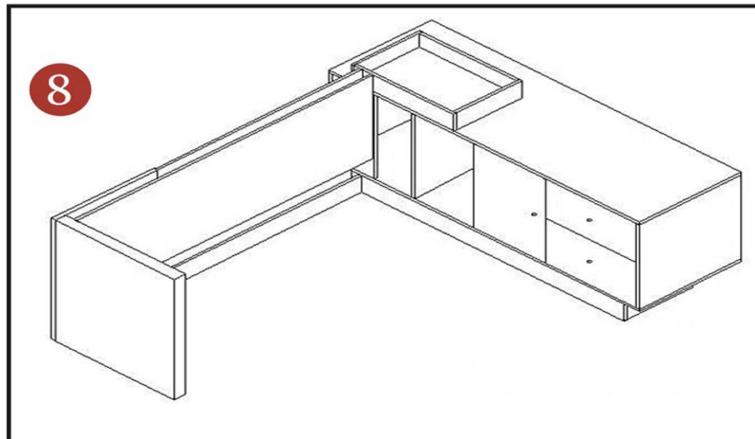

STEP 8: Start by linking the desk front to the foot lift
Then link to the Side cabinet, The final decorative board
is then linked to the foot lift, The bottom of the foot
needs to be nailed.

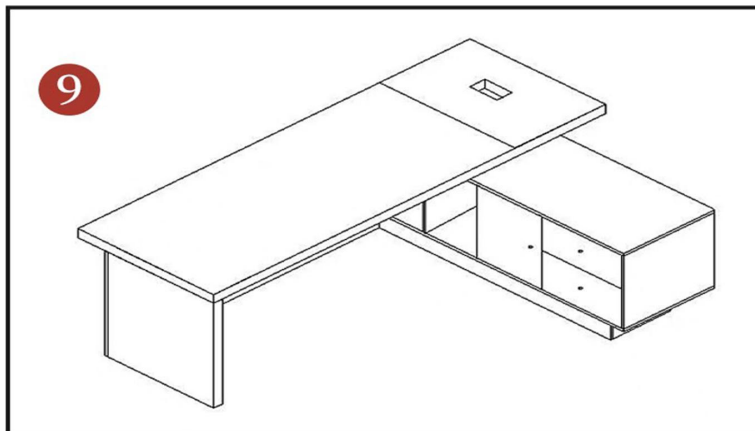

STEP 9: Installed the countertop.