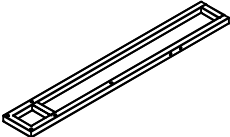


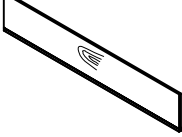
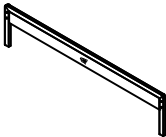
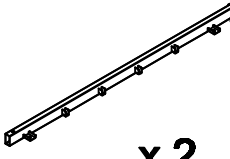
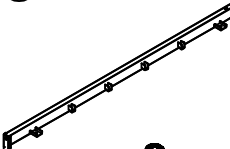













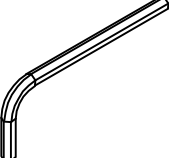

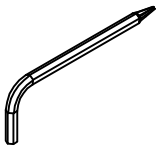
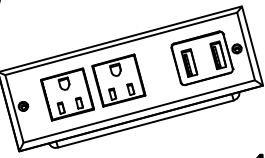





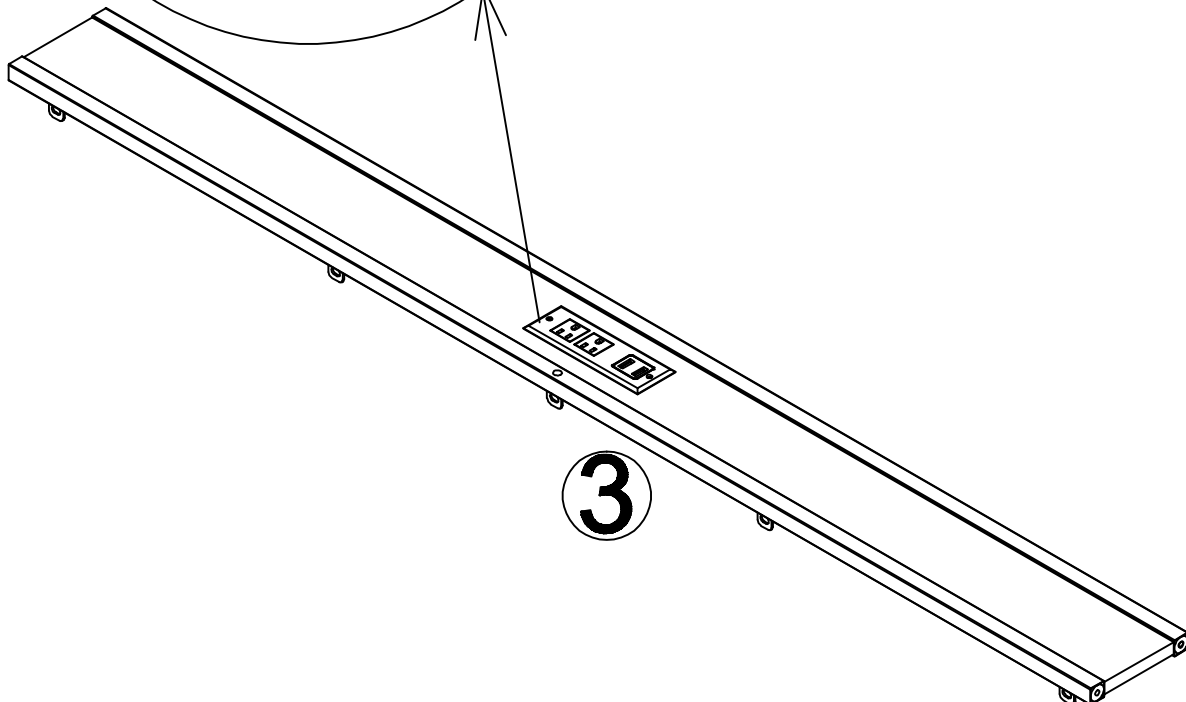
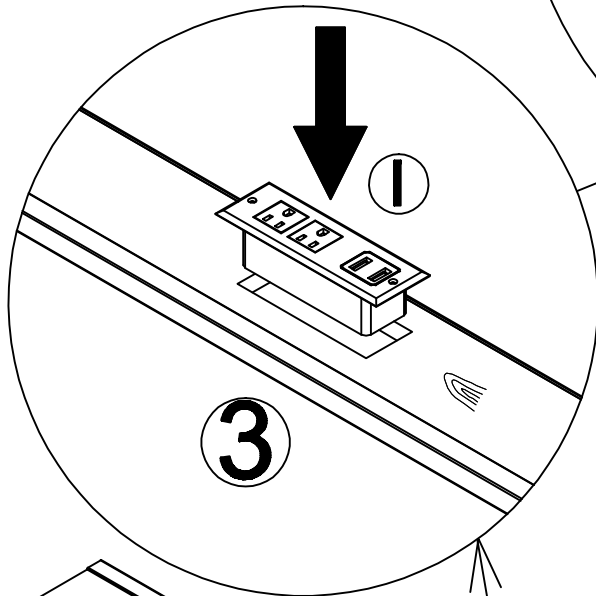
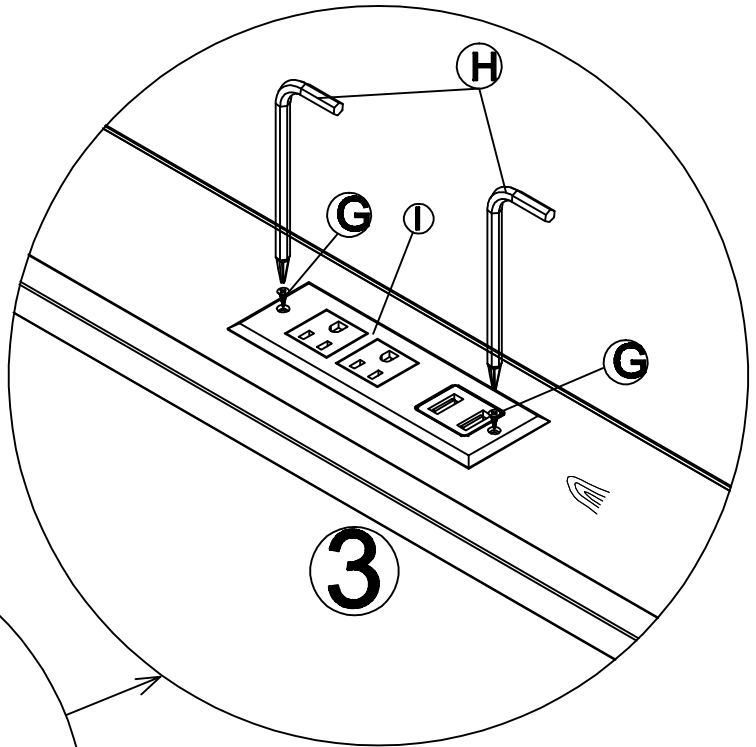
Please don't tighten the screws completely
and go back later for a final tightening of all the
screws after pieces are aligned with each other.

①  x 2	②  x 1	③  x 1	④  x 1	⑤  x 1	⑥  x 2
⑦  x 2	⑧  x 2	⑨  x 4	⑩  x 2	⑪  x 4	⑫  x 1
⑬  x 4	⑭  x 8	⑮  x 1			



A  M6 x 12 mm x5	B  M6 x 25 mm x8	C  M6 x 35 mm x26
D  M6 x 50 mm x8	E  M8 x 35 mm x8	F  4 # x1
G  Ø3x10mm x2	H  4 # x1	I  x 1

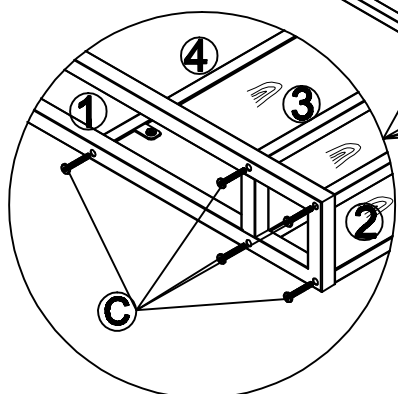
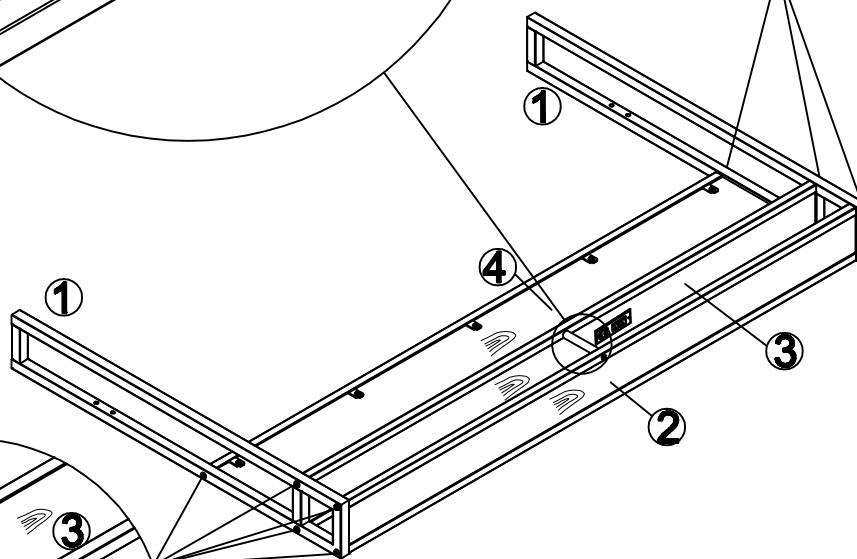
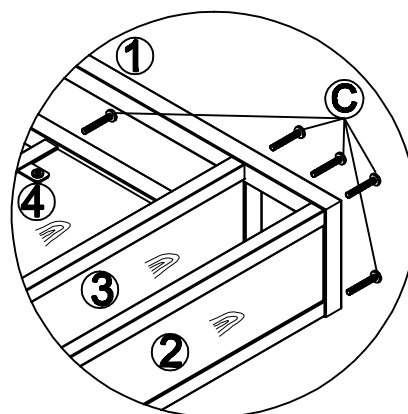
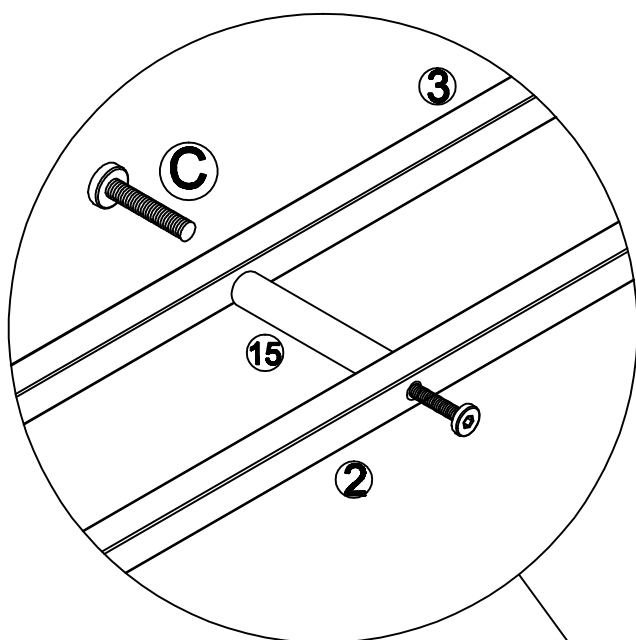
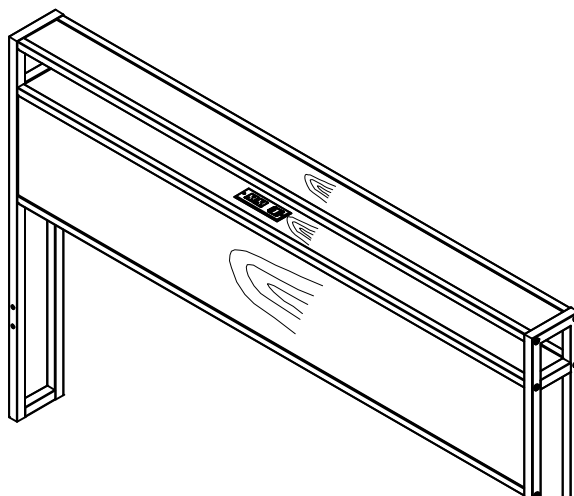
Step 1

G		Ø3 x 10	2pcs
I			1pcs
H		4 #	1pcs





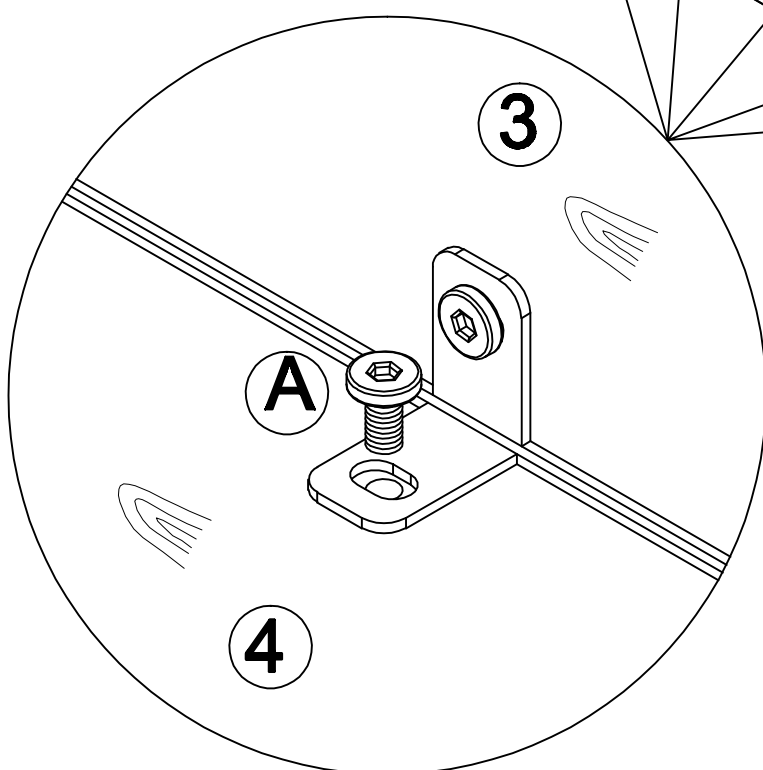
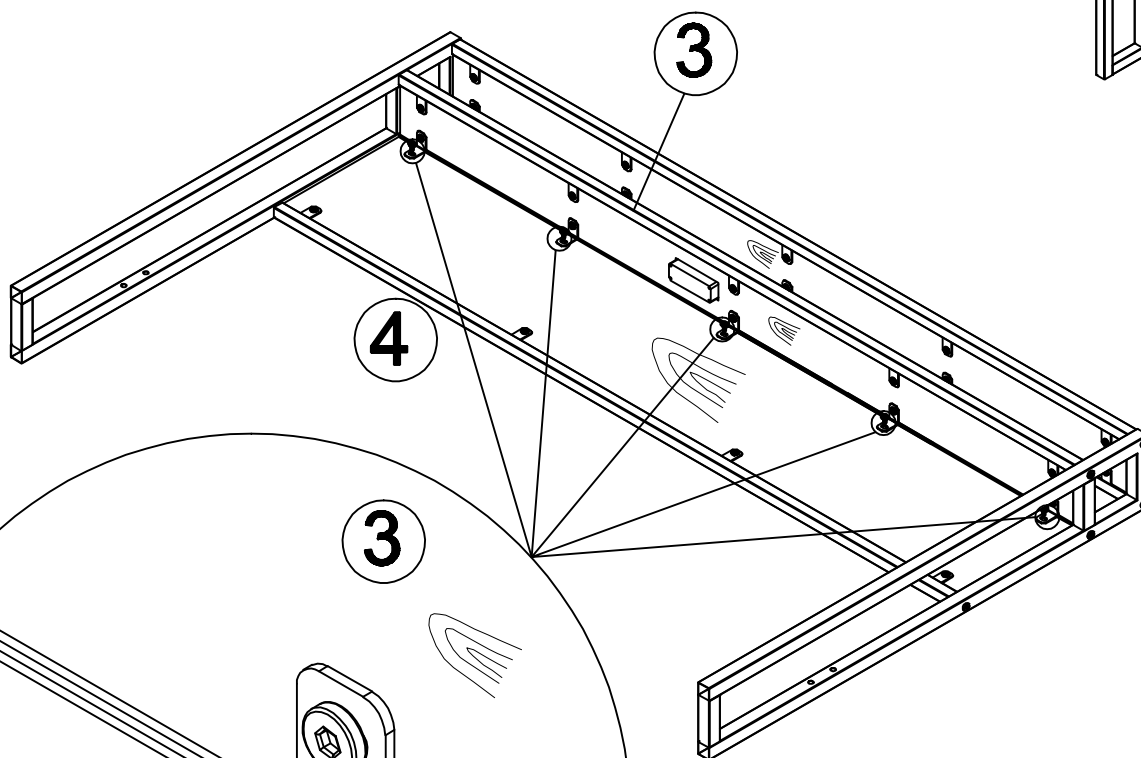
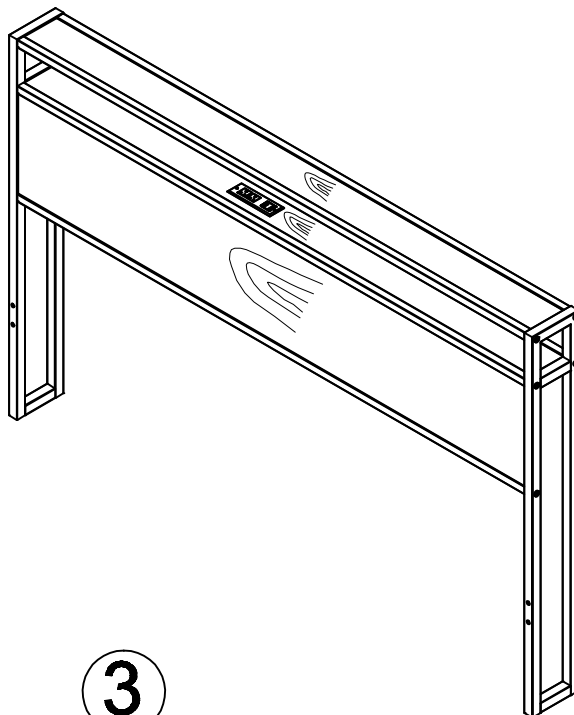
Step 2

C		M6 x 35	12pcs
F		4 #	1pcs






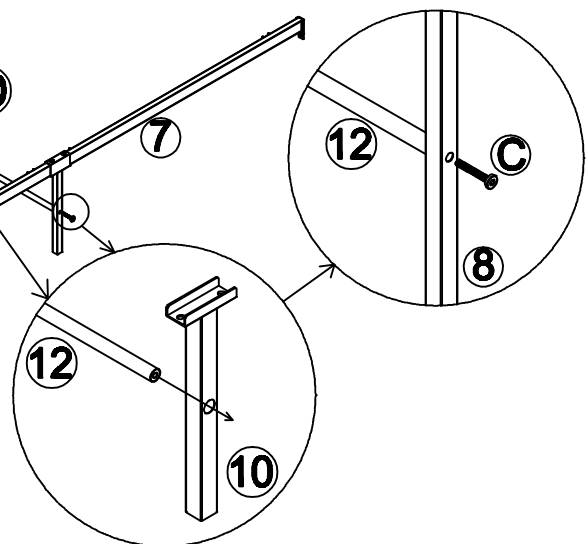
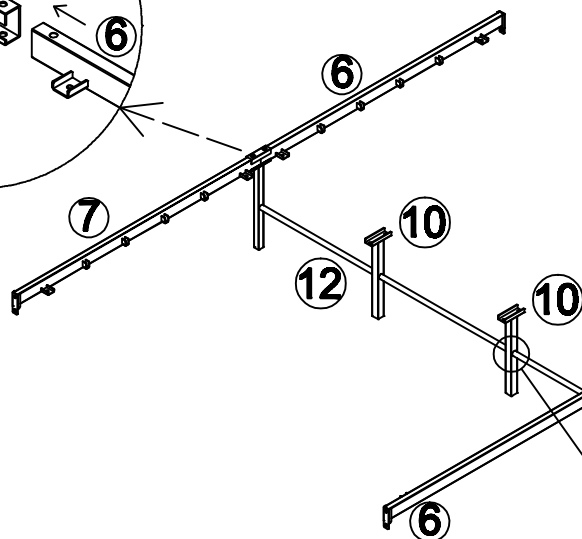
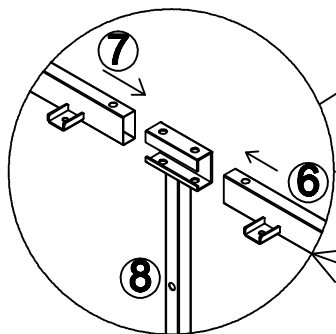
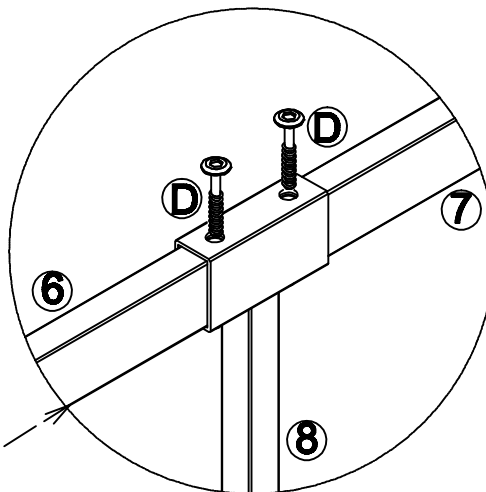
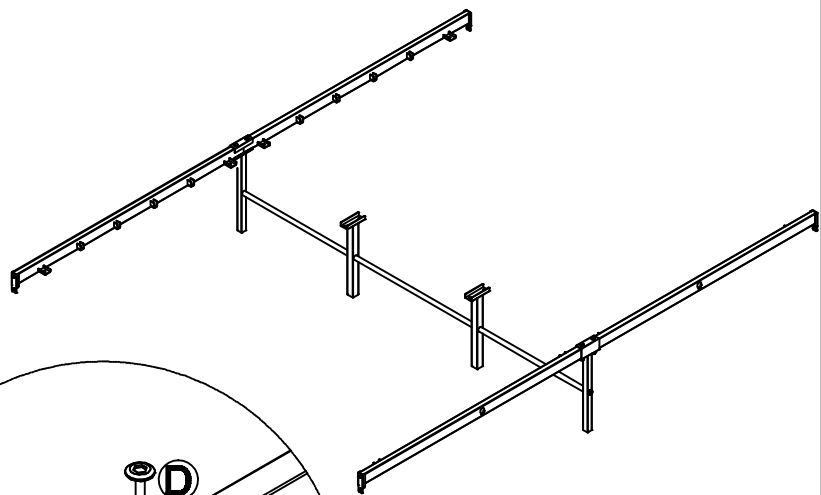
Step 3

A		M6 x 12	5pcs
F		4 #	1pcs





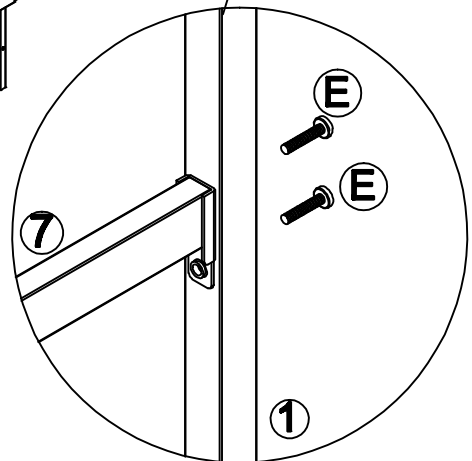
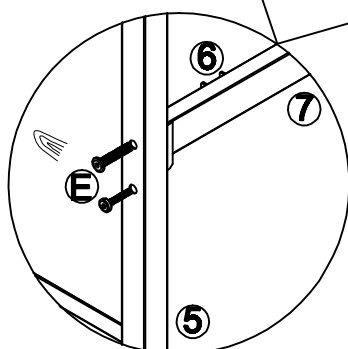
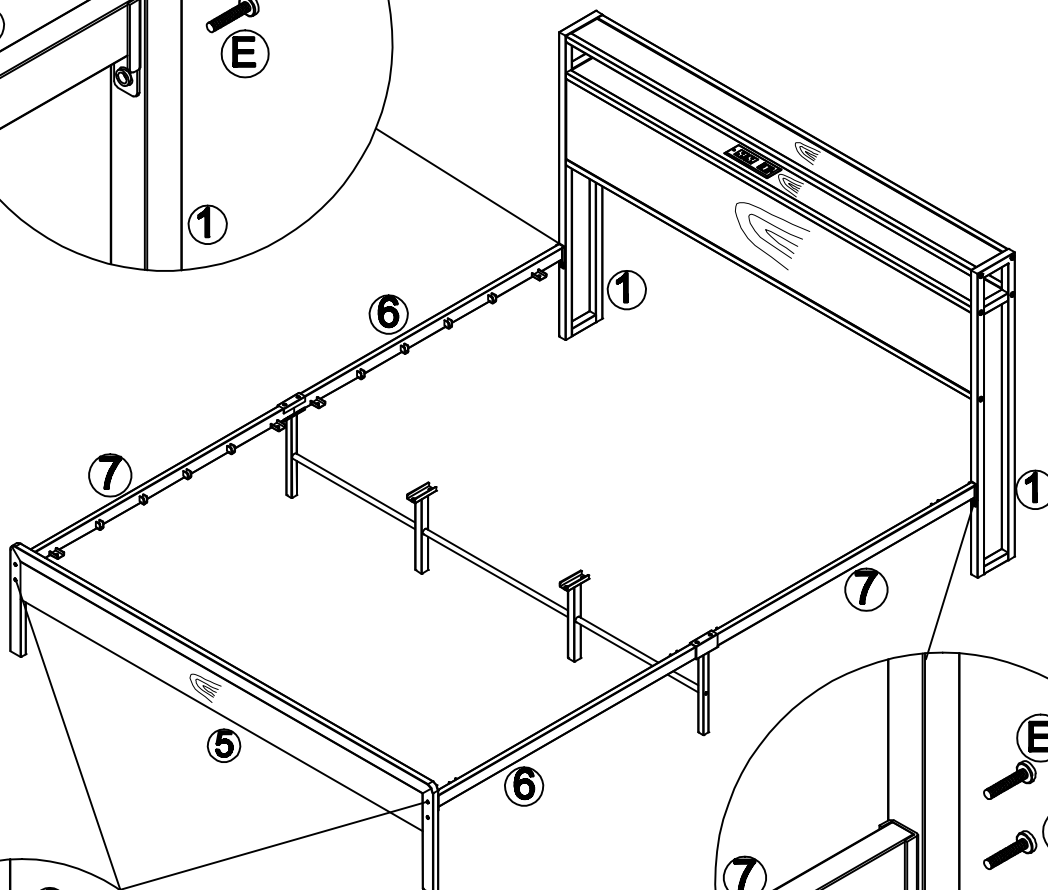
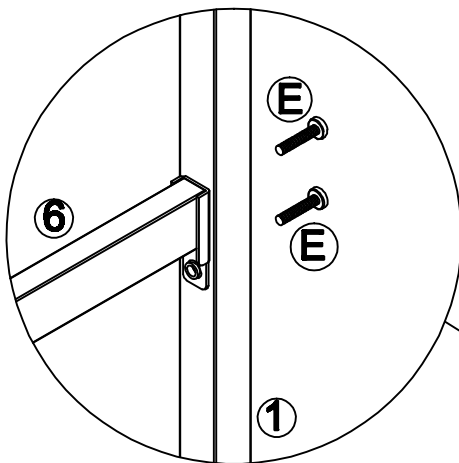
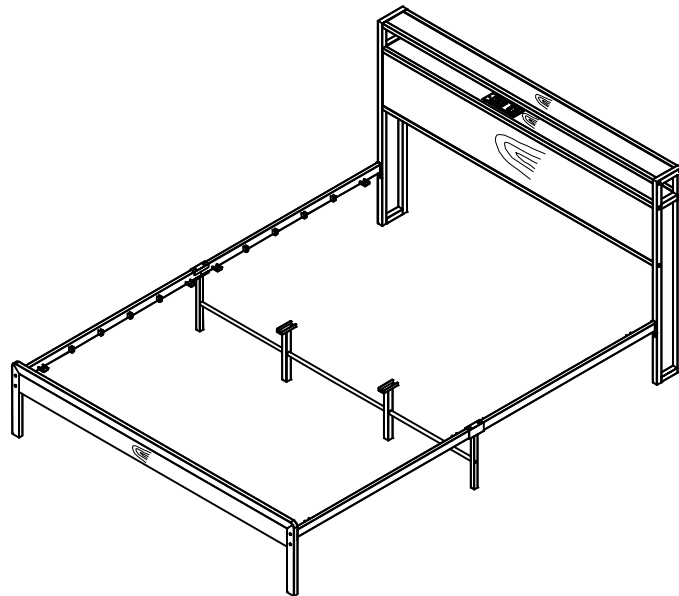
Step 4

C		M6 x 35	2pcs
D		M6 x 50	4pcs
F		4#	1pcs





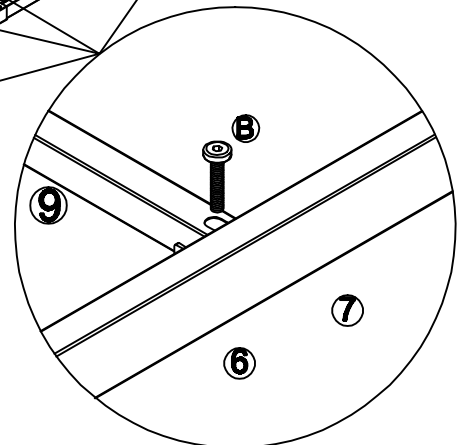
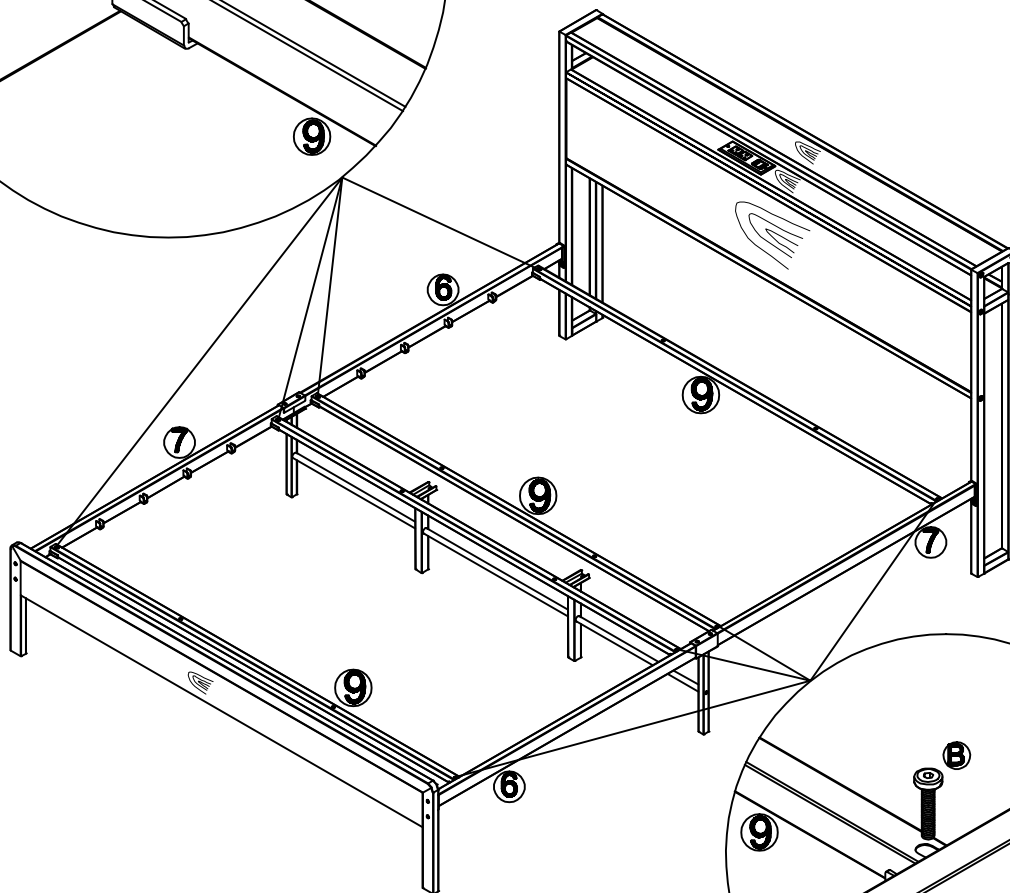
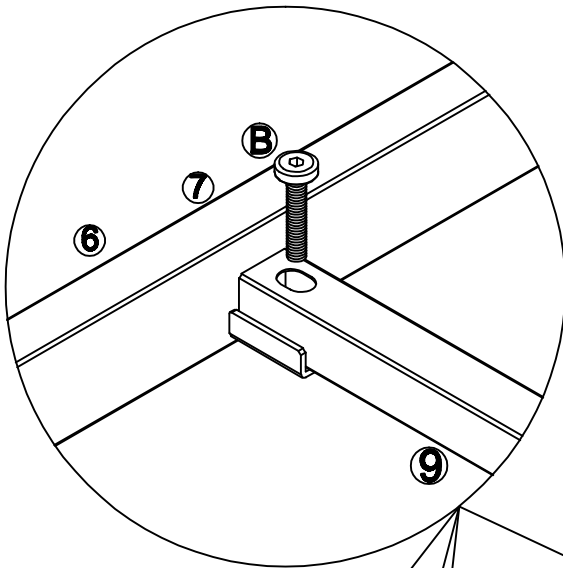
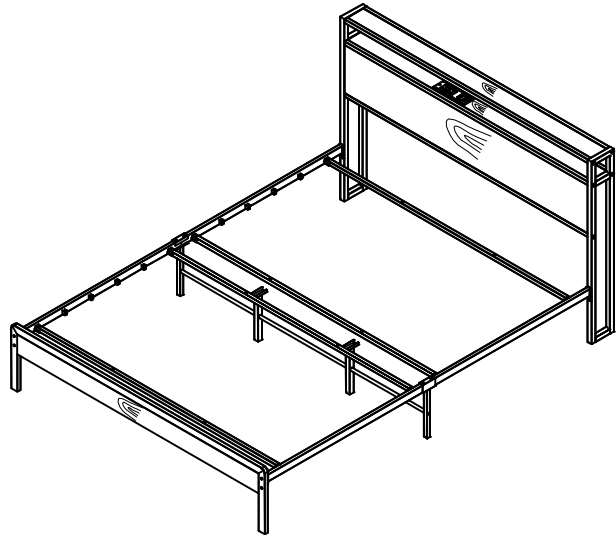
Step 5

E		M8 x 35	8pcs
F		4#	1pcs






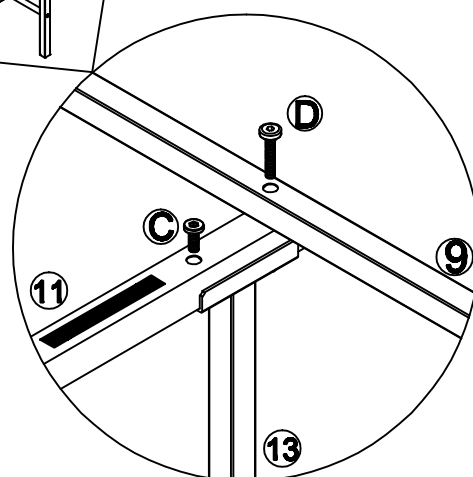
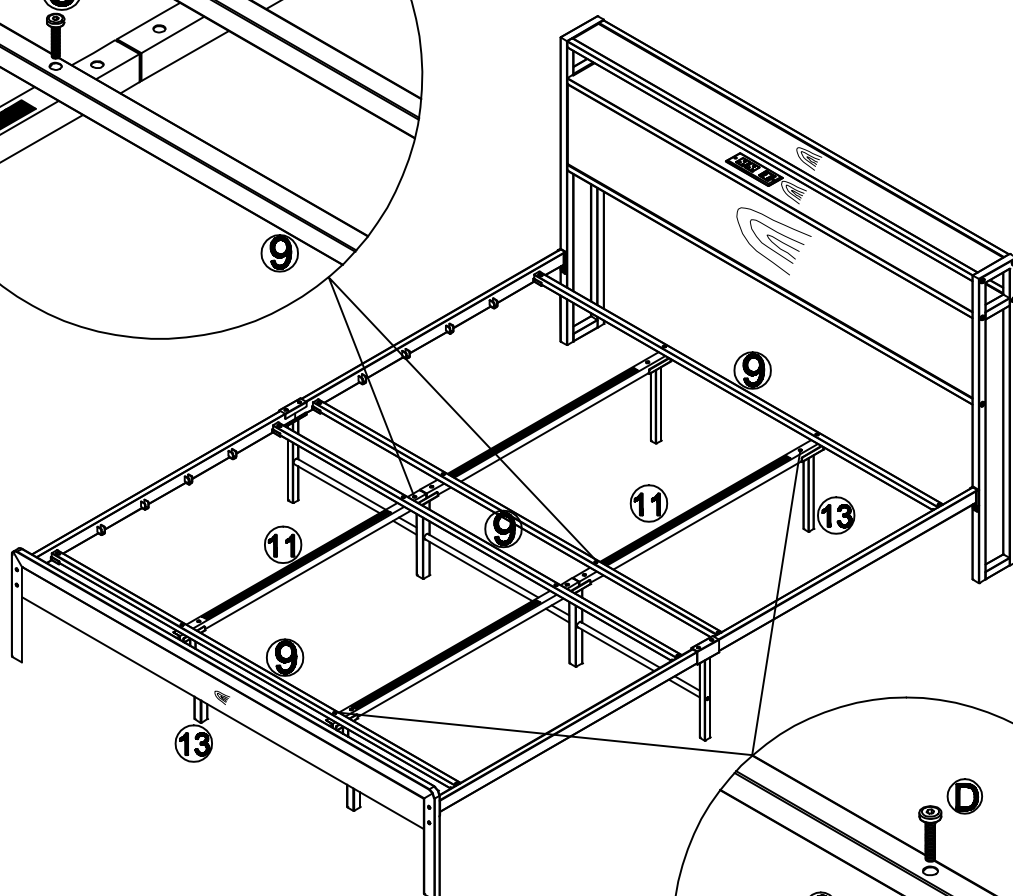
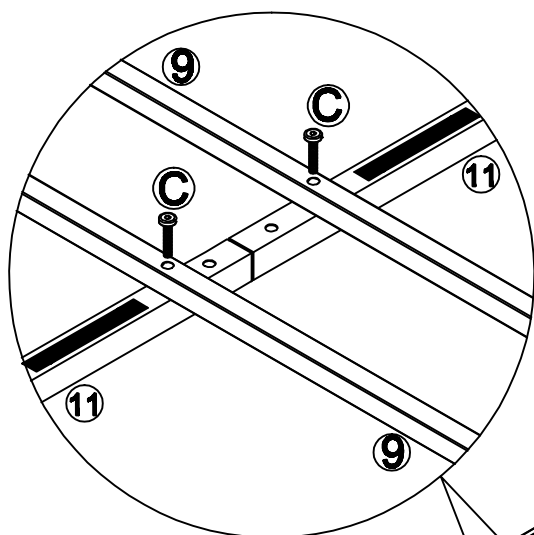
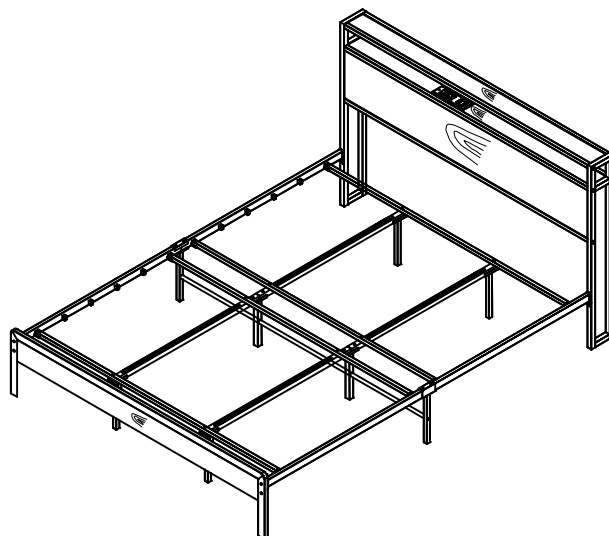
Step 6

B		M6 x 25	8pcs
F		4 #	1pcs





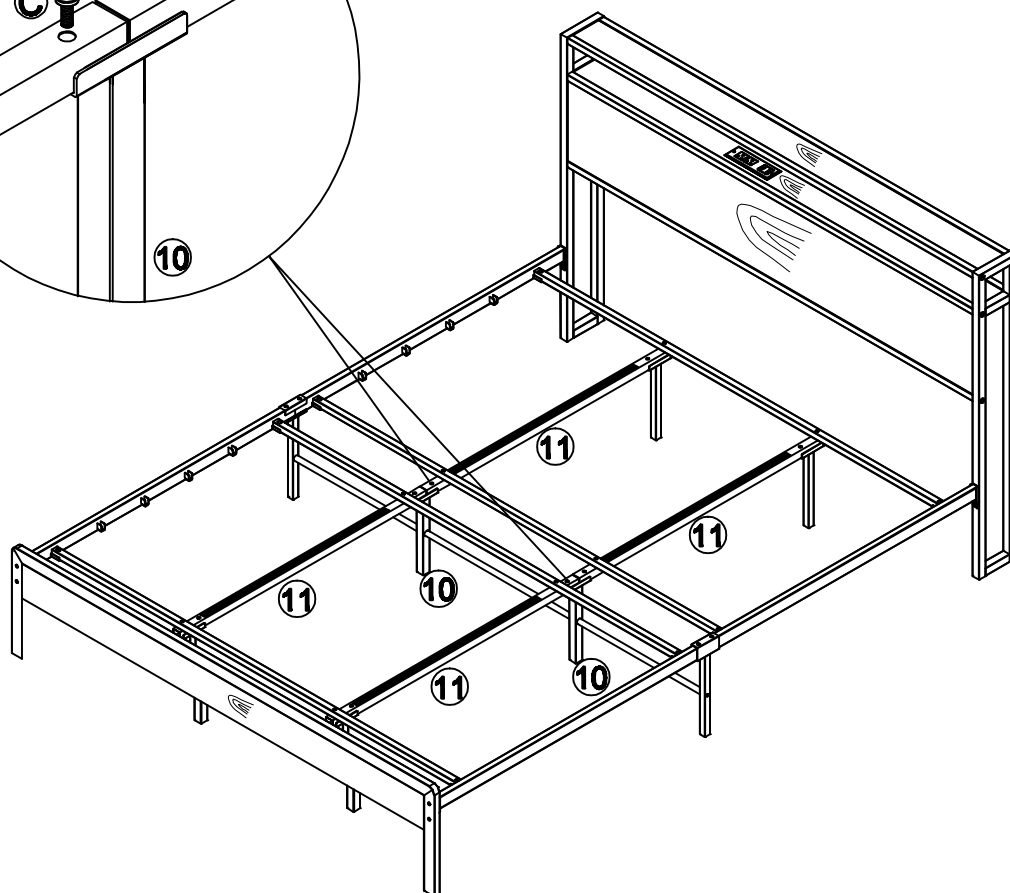
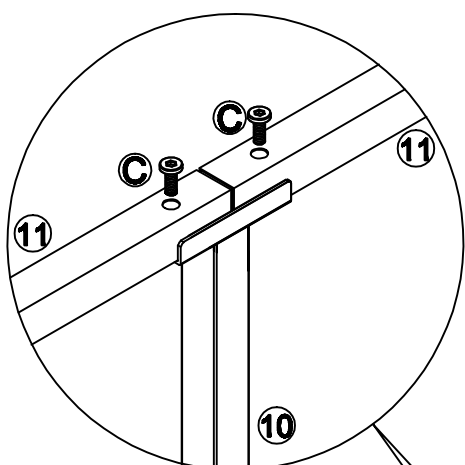
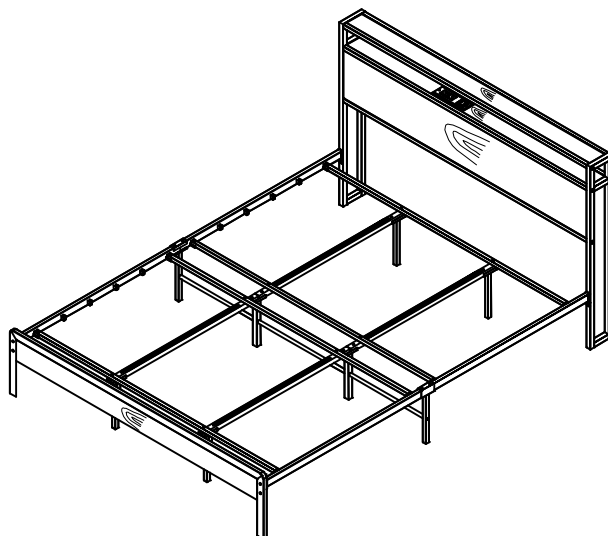
Step 7

C		M6 x 35	8pcs
D		M6 x 50	4pcs
F		4 #	1pcs



Step 8

C		M6 x 35	4pcs
G		4 #	1pcs



Step 9

