

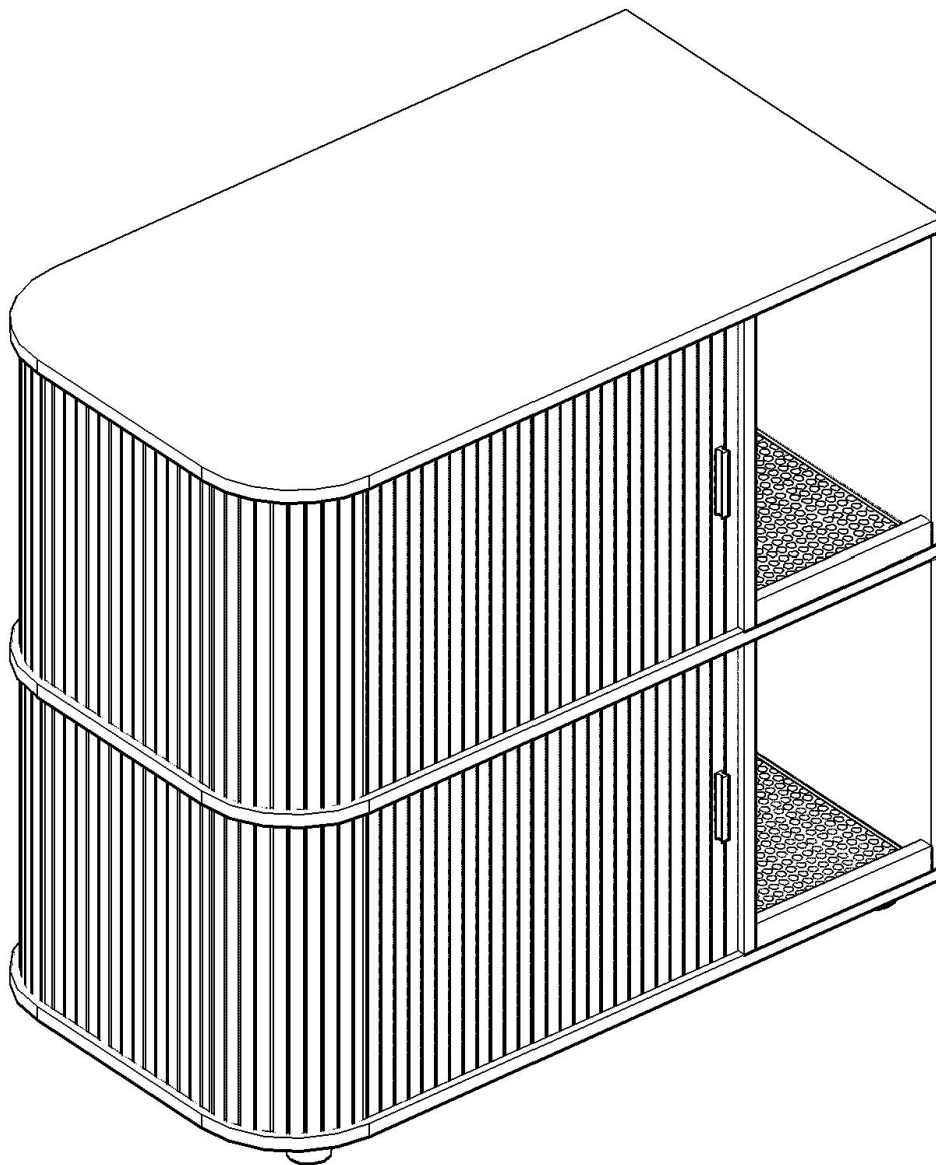
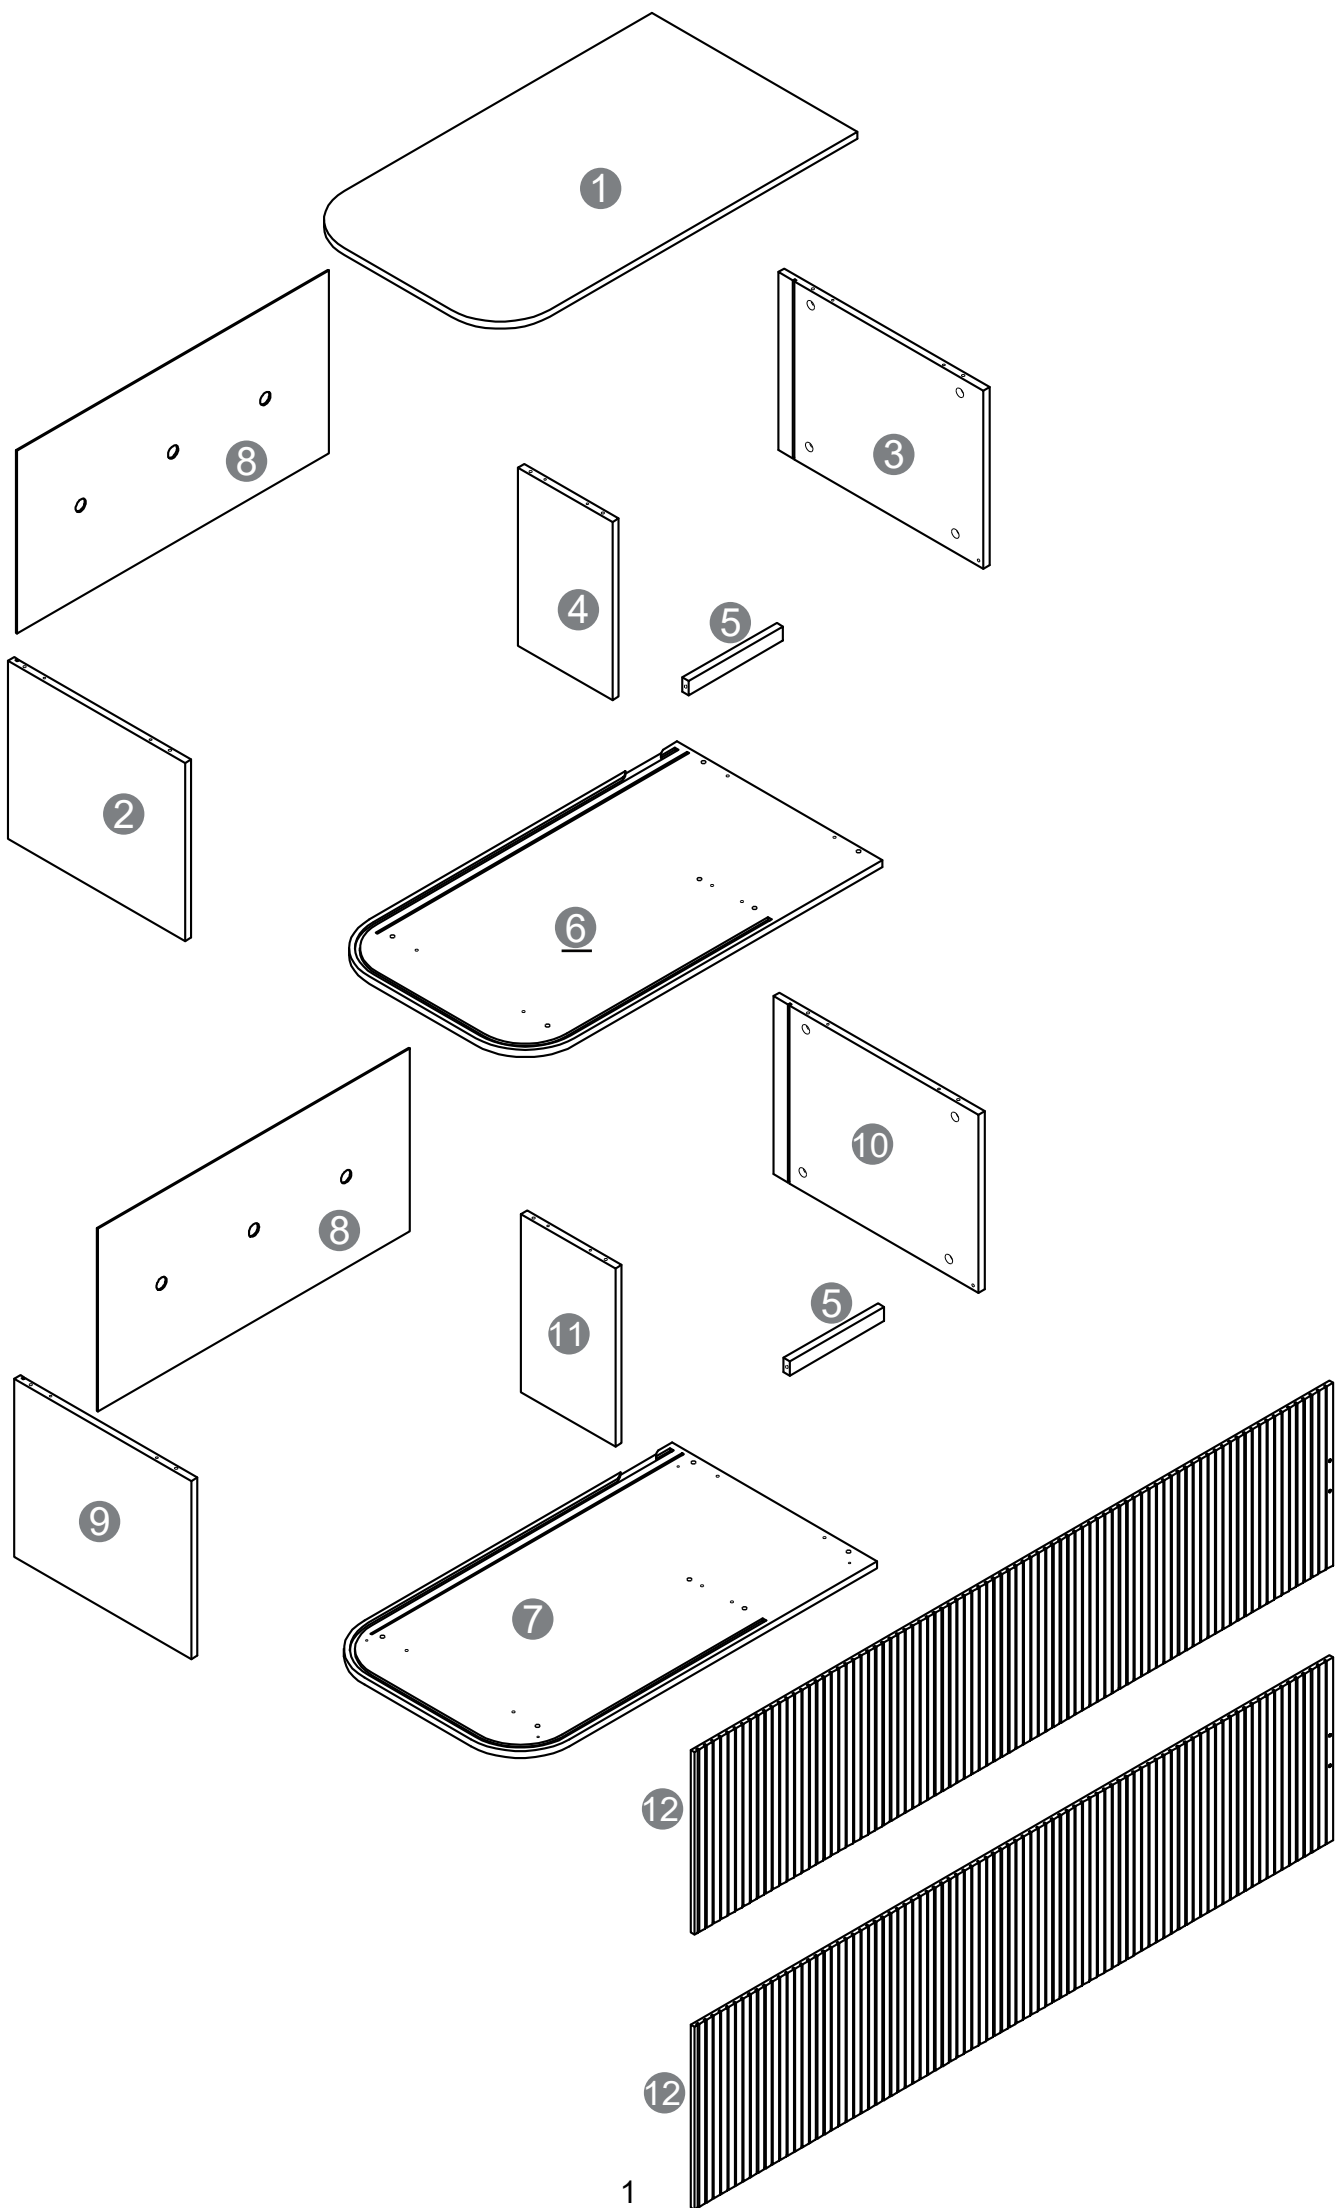
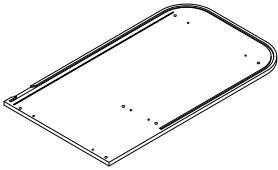








Assembly Instructions

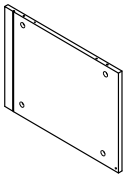


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE
We will stand behind we sell. If you have any questions about this item, please do not hesitate to contact us


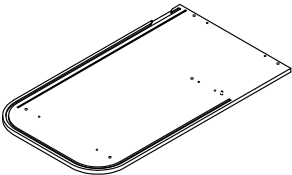


Item no.	Reference Image	Qty.
1		X1
2		X1
3		X1
4		X1
5		X2
6		X1

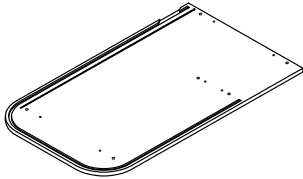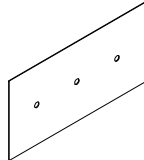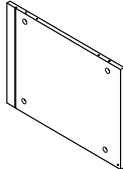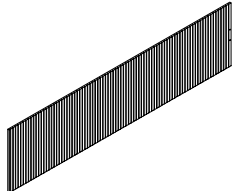Item no.	Reference Image	Qty.
7		X1
8		X2
9		X1
10		X1
11		X1
12		X2




Item no.	Reference Image	Qty.
(A)	 Cam Bolt Ø6x35mm	X24
(B)	 Cam Lock Ø15x10mm	X24
(C)	 Wood Dowel Ø8x30mm	X28
(D)	 Foot Pad	X4
(E)	 Screw M4x10mm	X4
(F)	 Handle	X2
(G)		X2
(H)	 Back Panel Fastener	X8
(I)	 Screw M3x16mm	X8

STEP 1

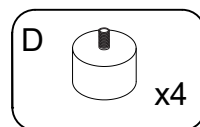
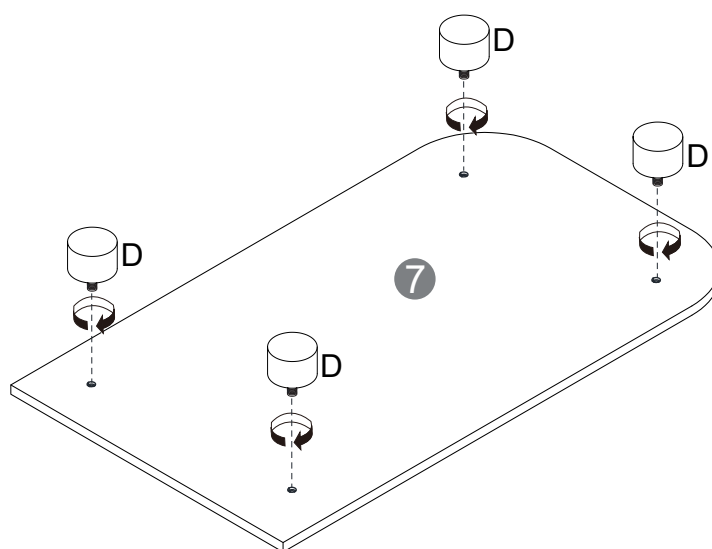


180°




STEP 2

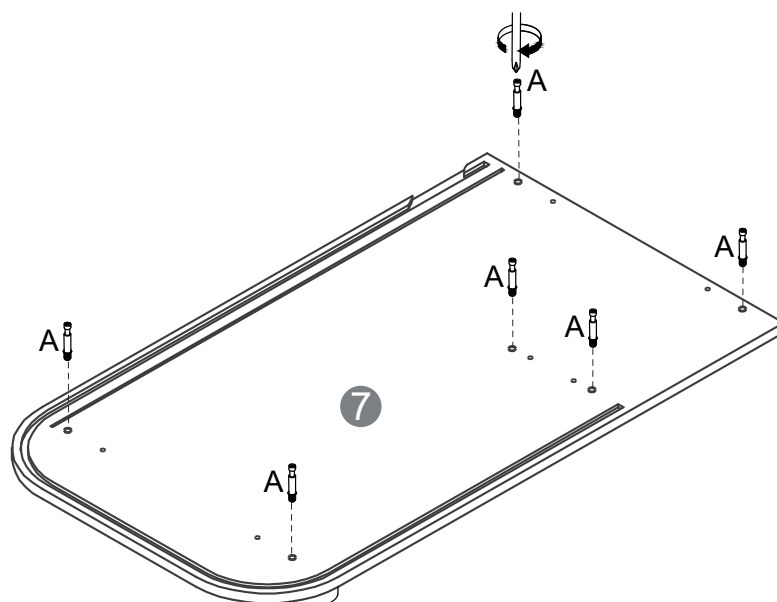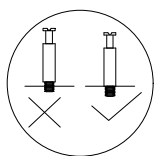


STEP 3

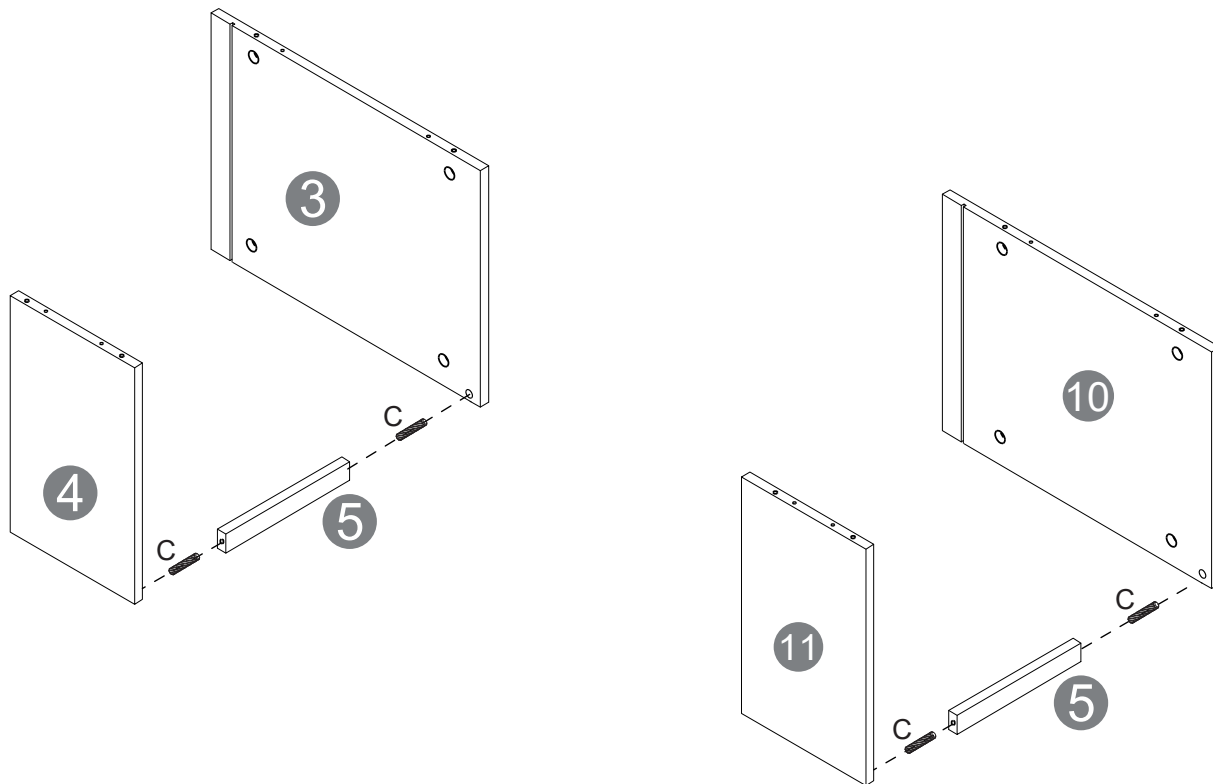




STEP 4

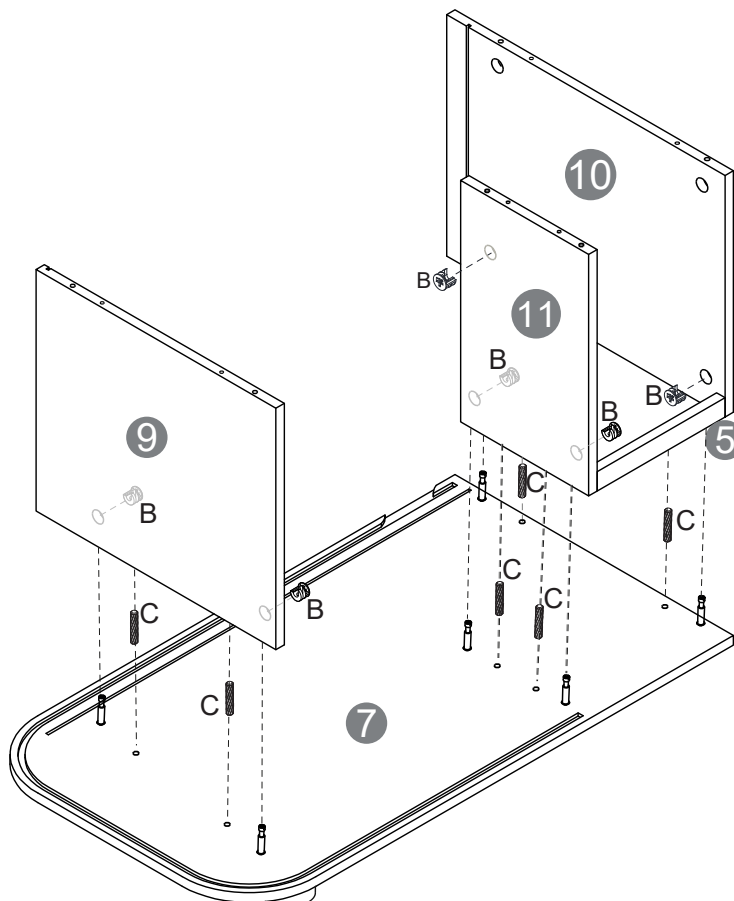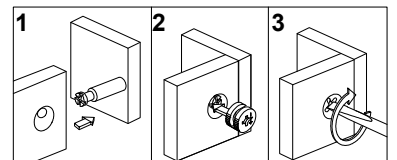



STEP 5

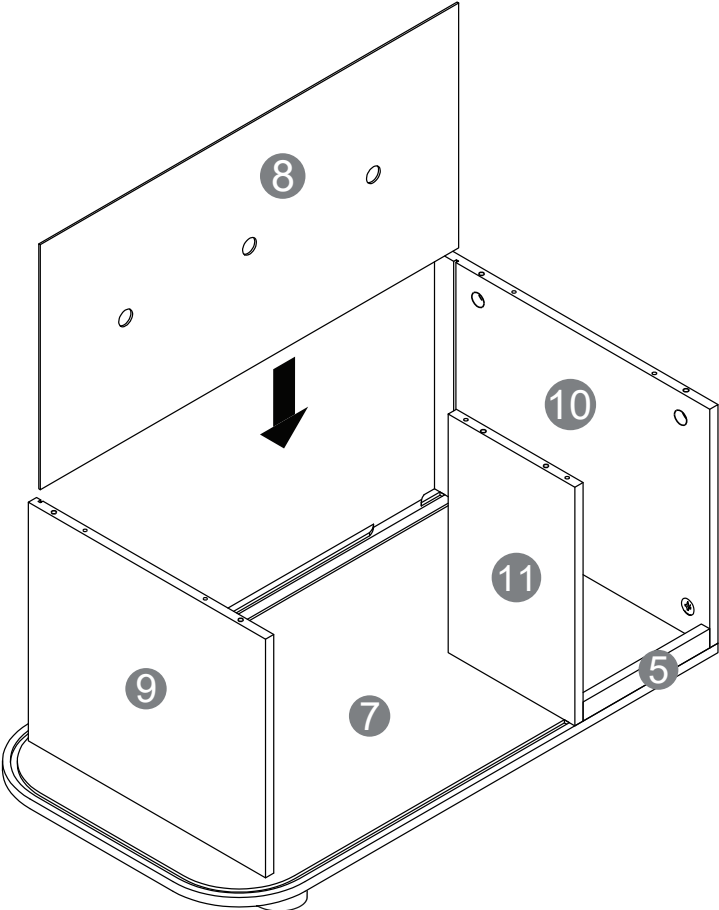



STEP 6

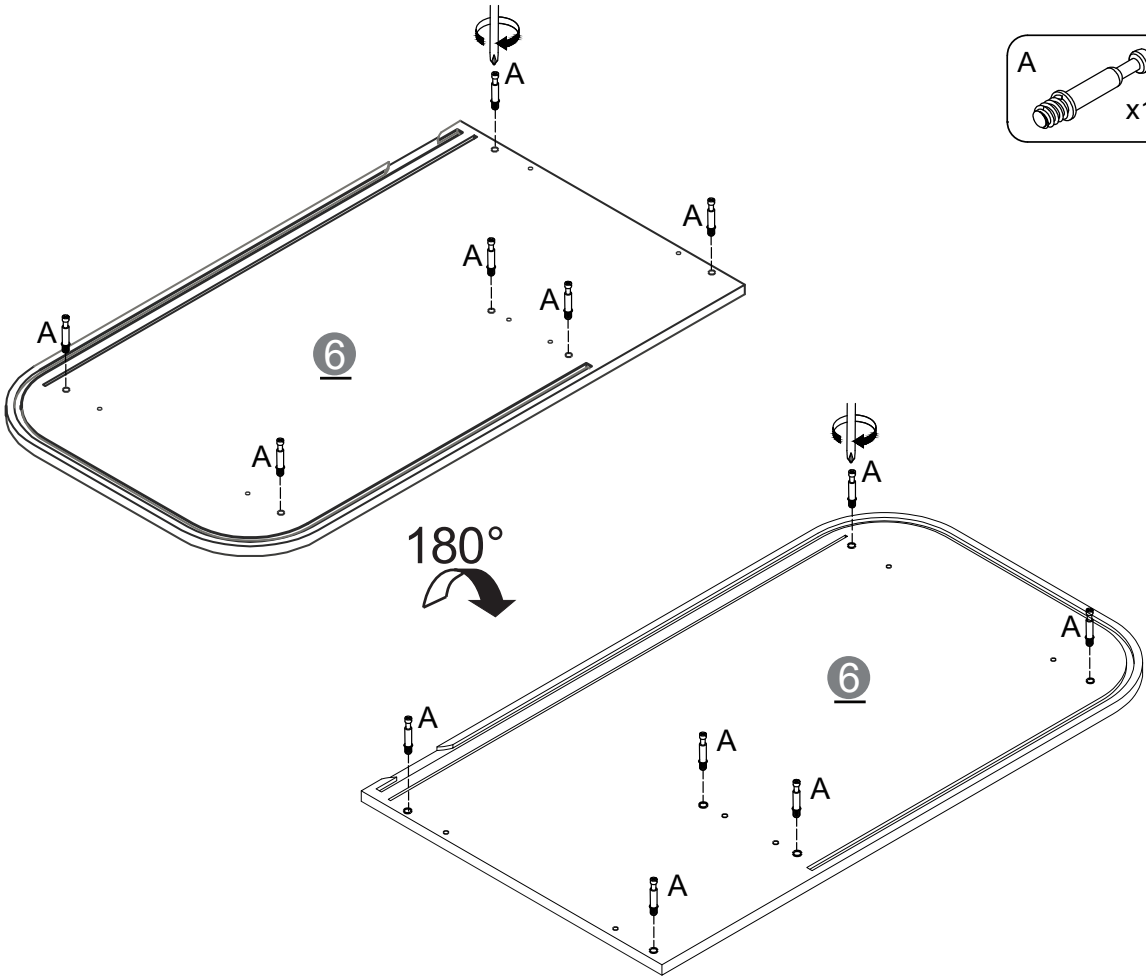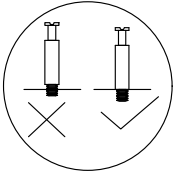


STEP 7

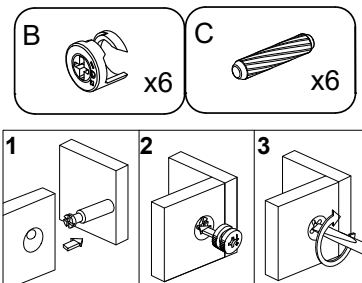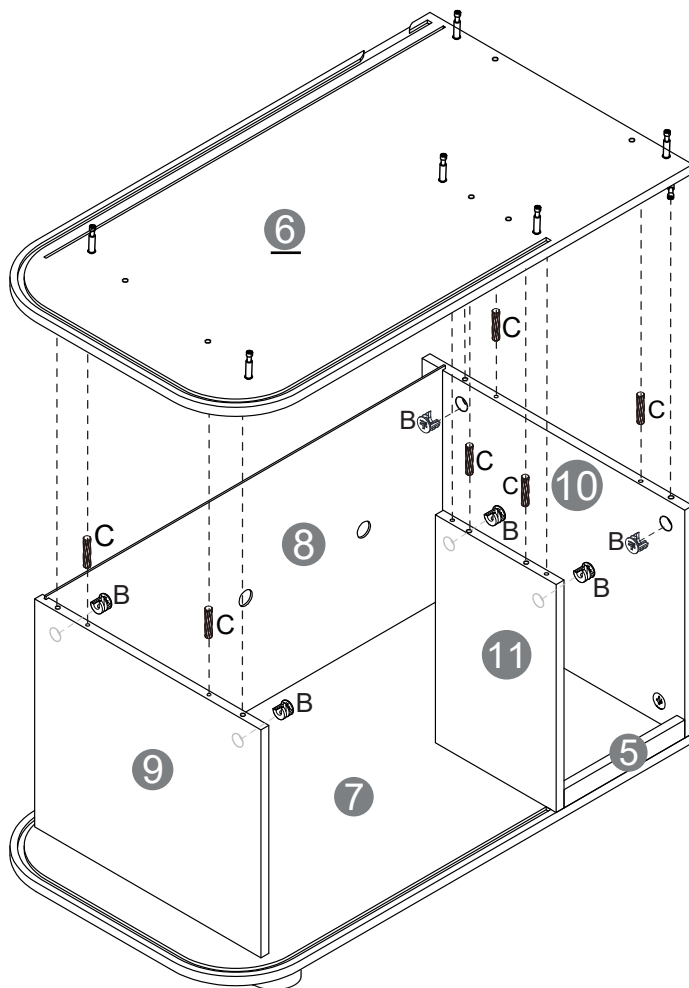




STEP 8

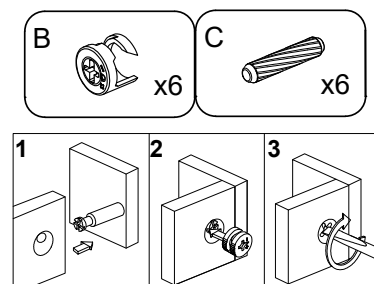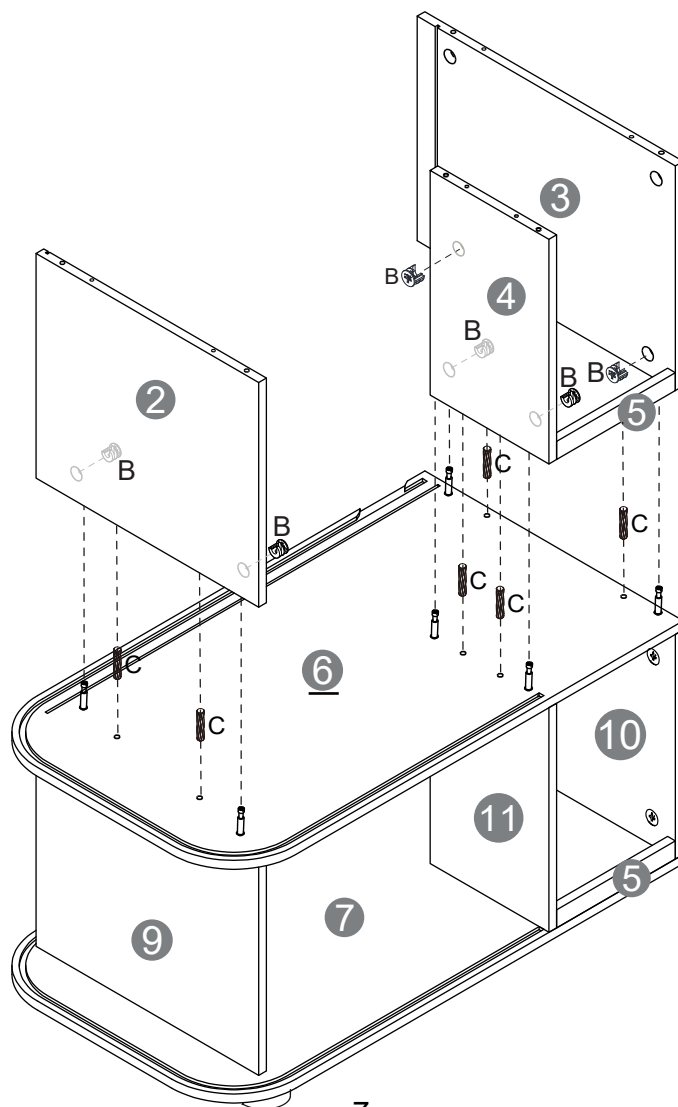




STEP 9

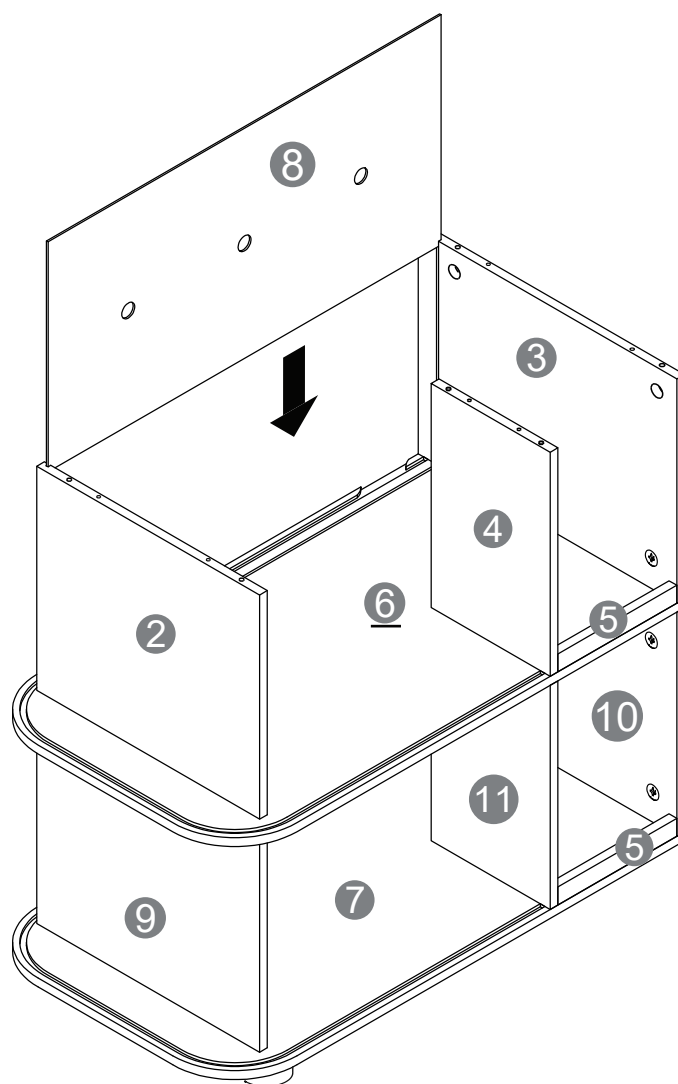




STEP 10

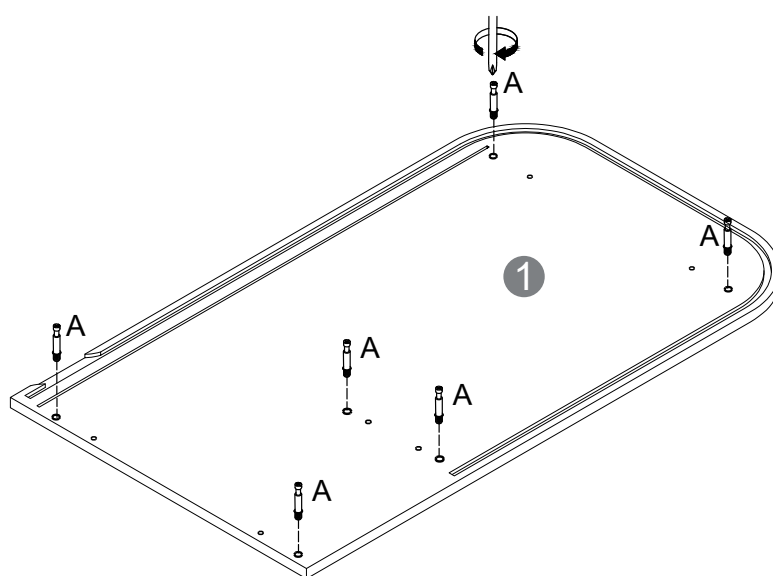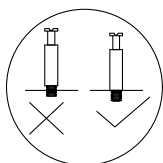


STEP 11

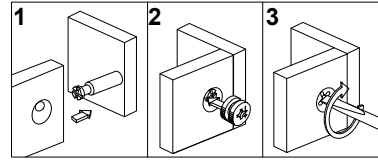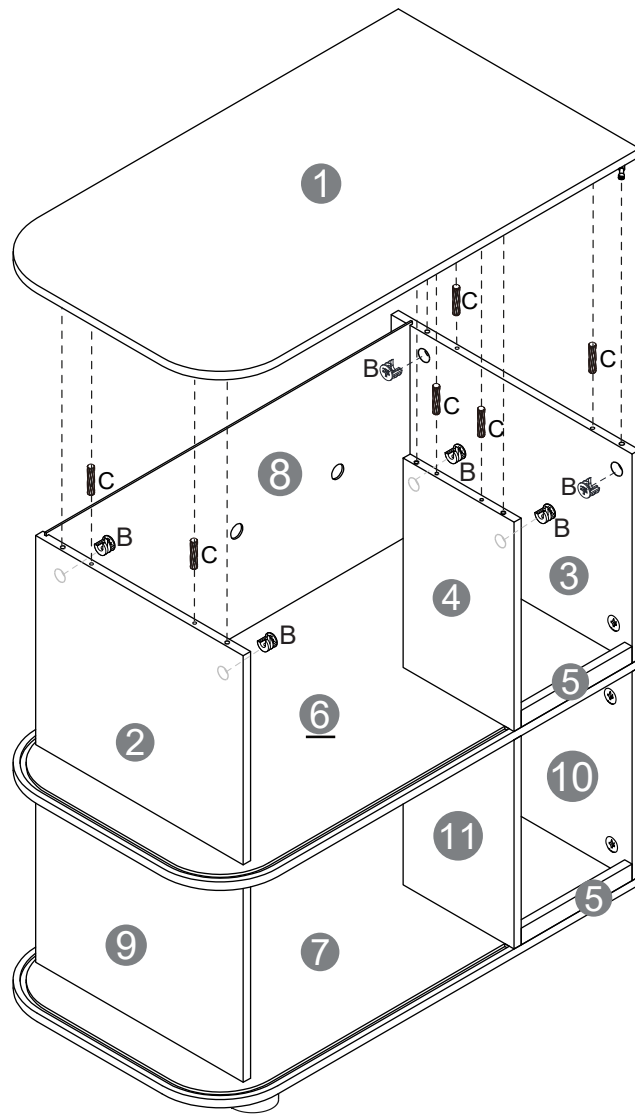


STEP 12

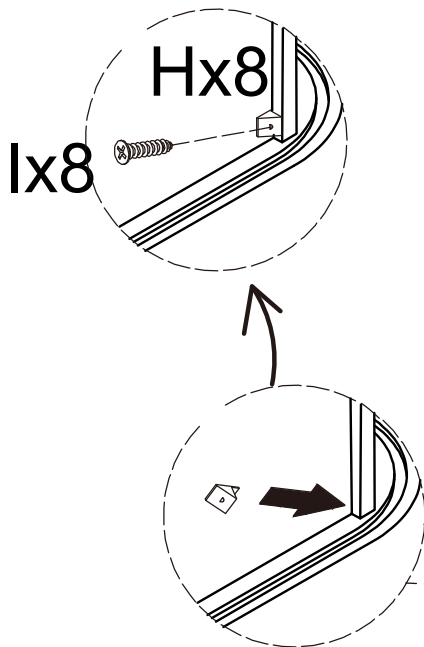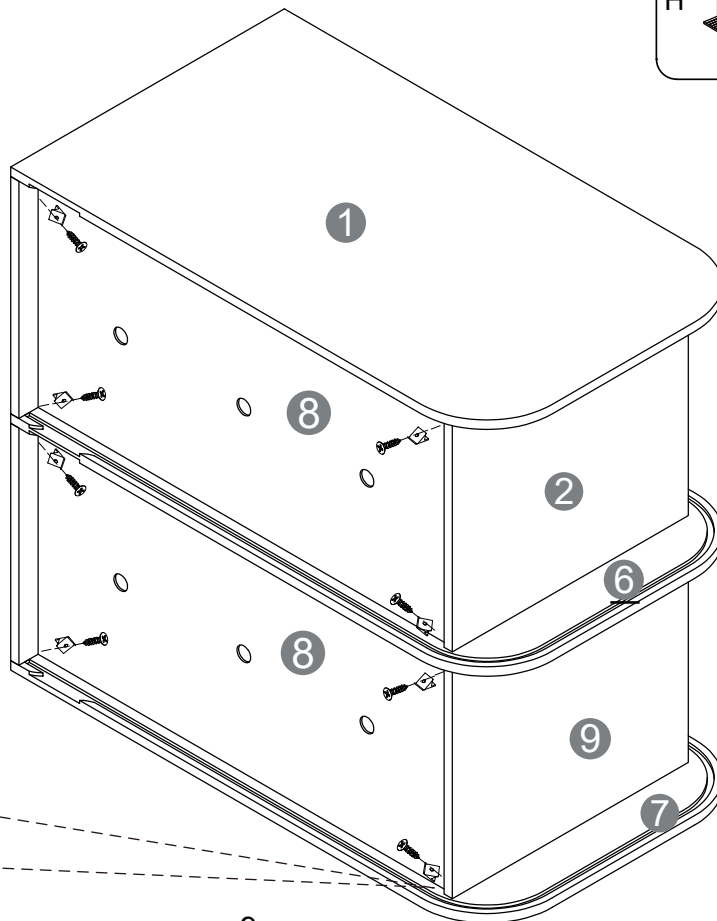



STEP 13

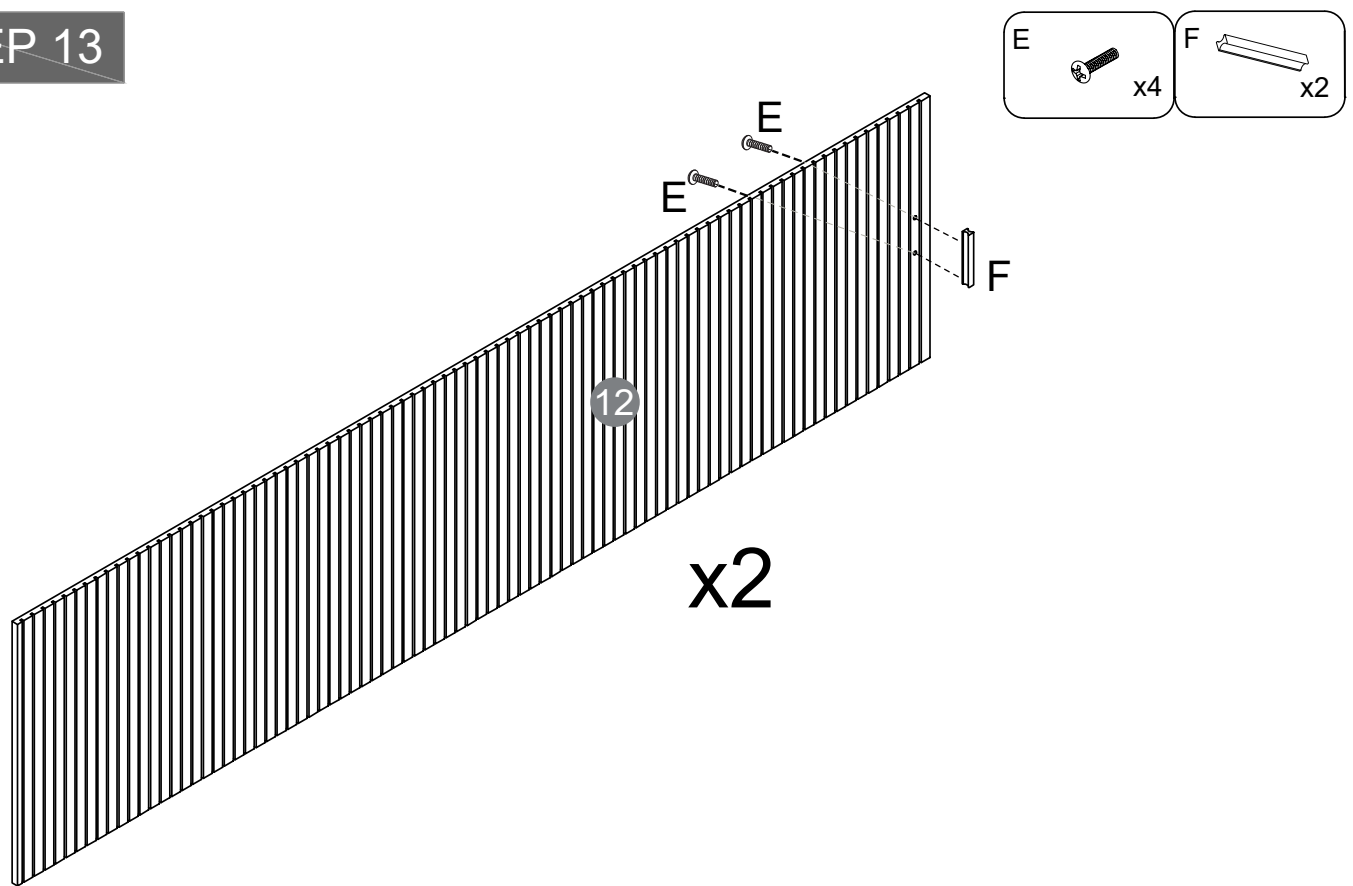

STEP 14

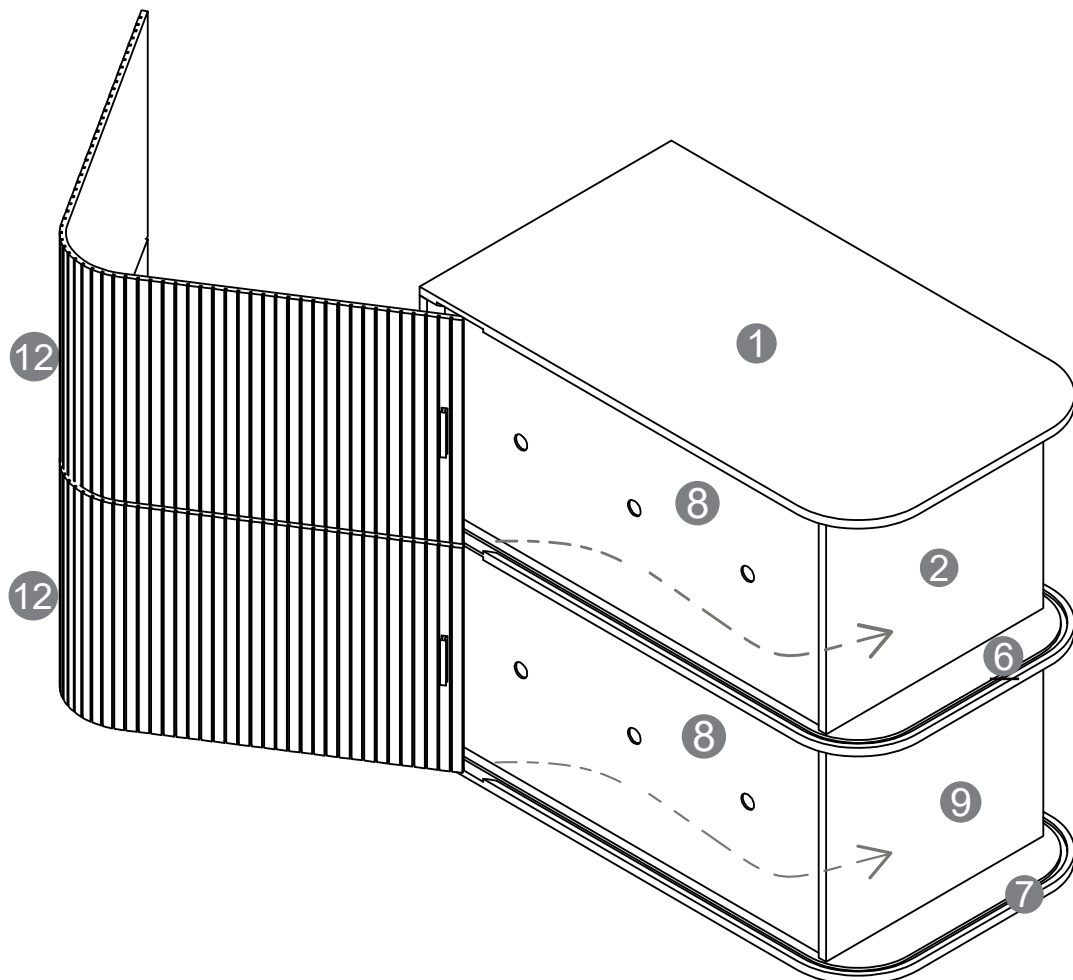

STEP 15

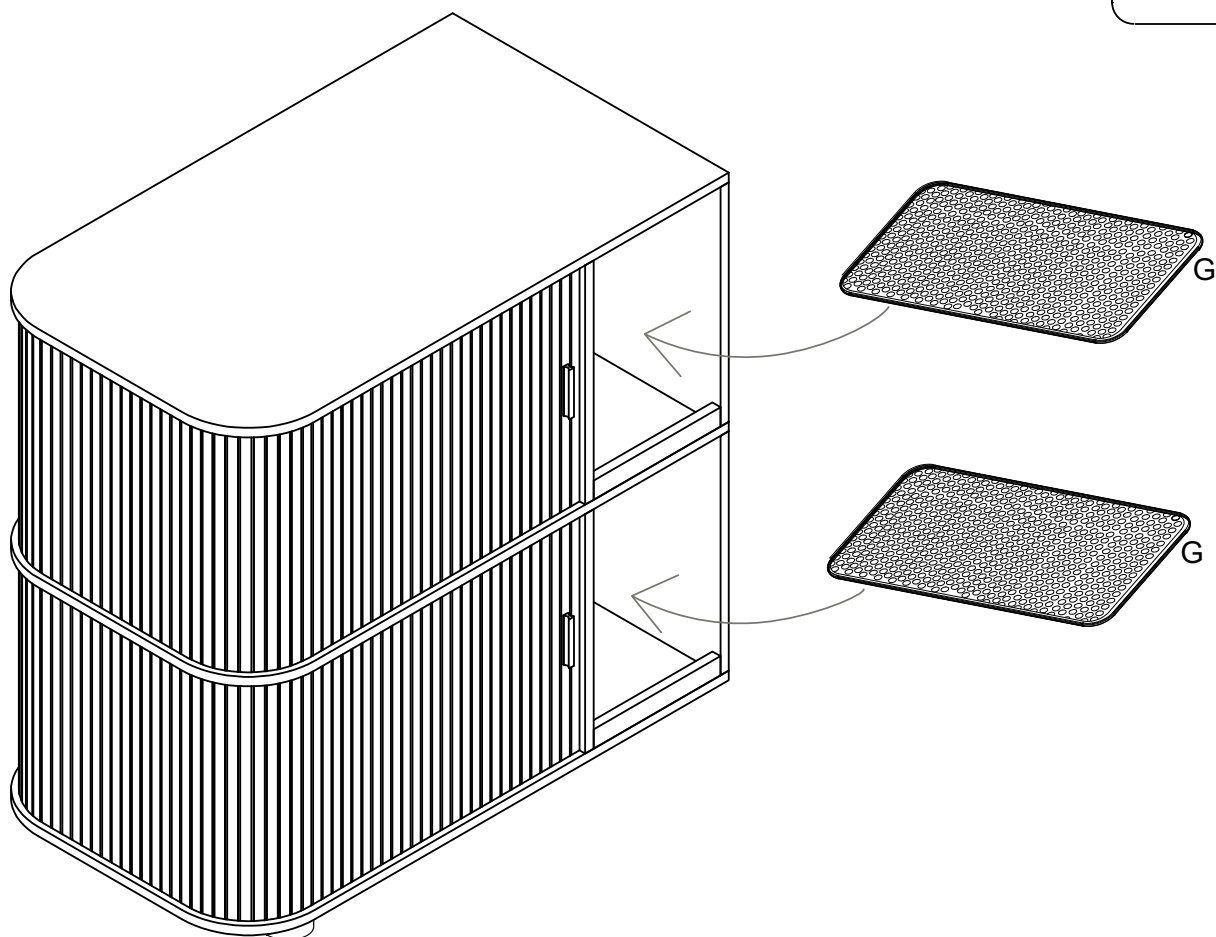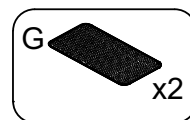

STEP 16

