
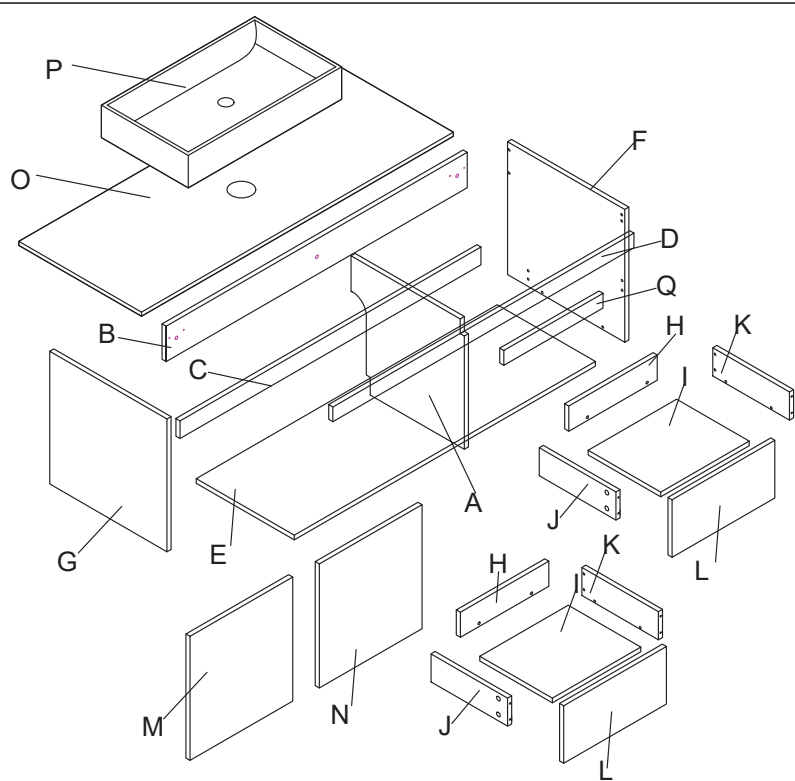


# Installation & Assembly

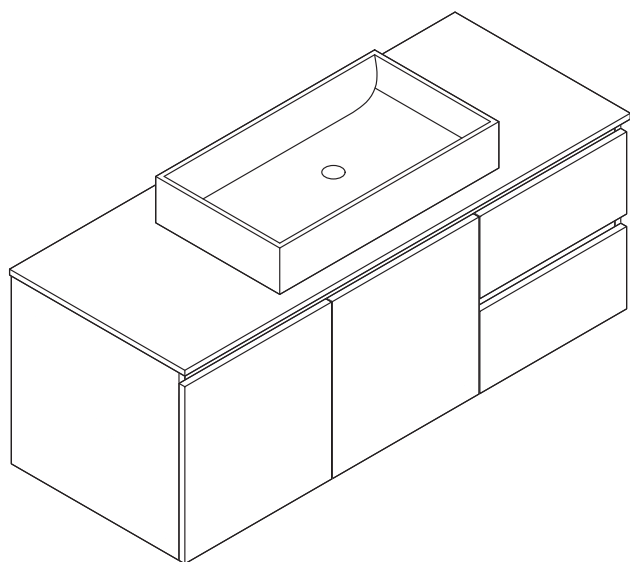


[illegible]

AA  x5


BB  x5

The lead hole is on top

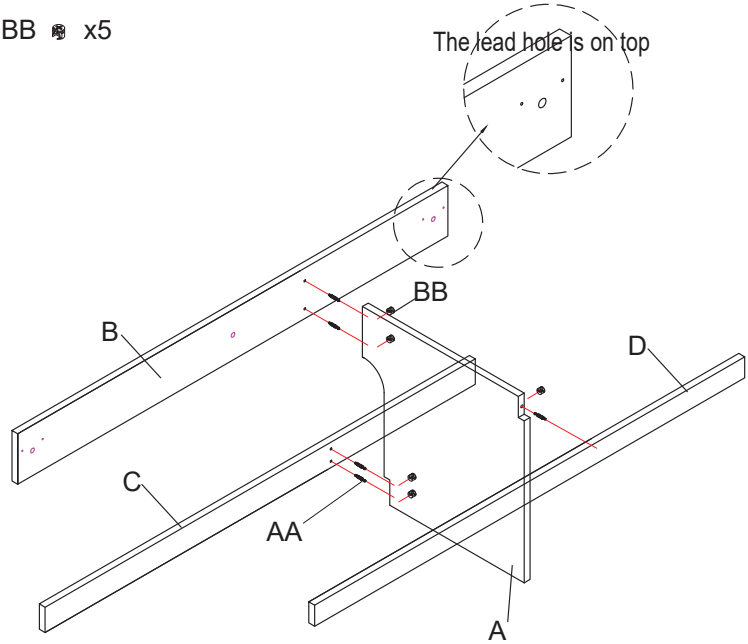


AA  x5


BB  x5

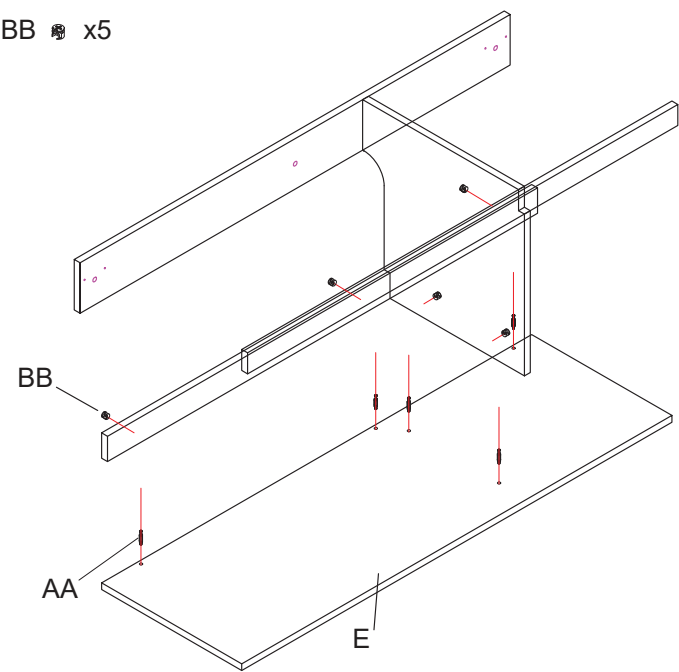


AA  x12  
BB  x12

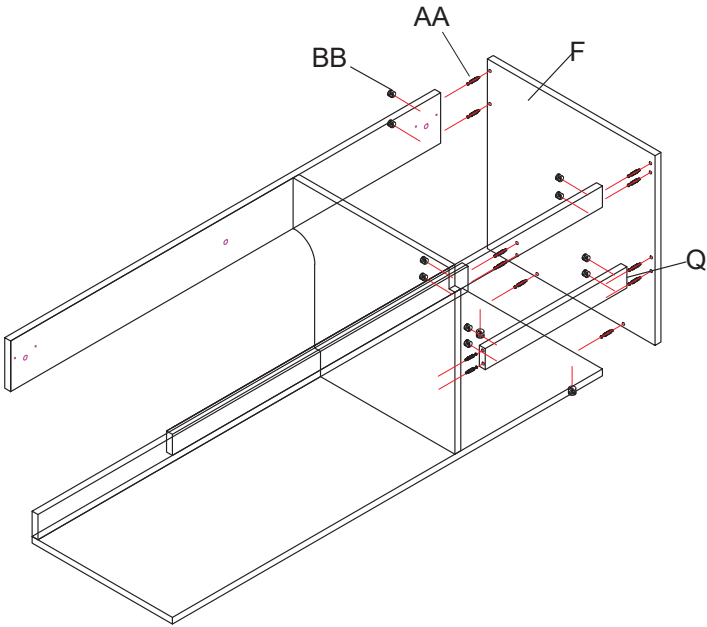


AA  x8  
BB  x8

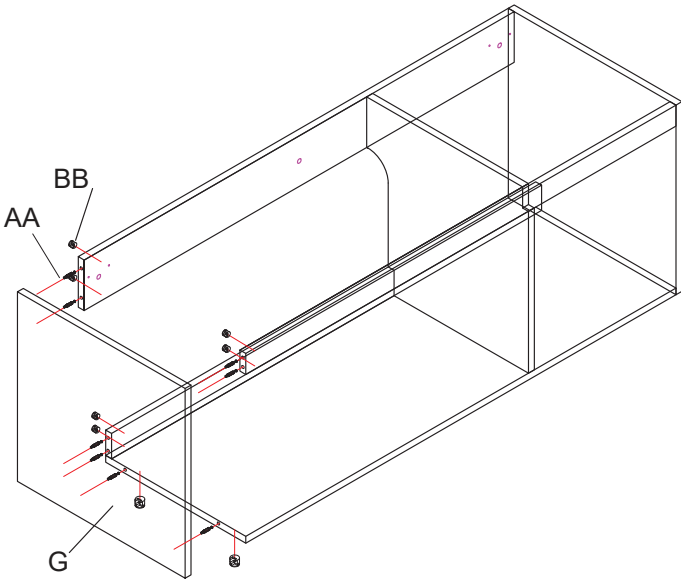

AA  x4  
BB  x4

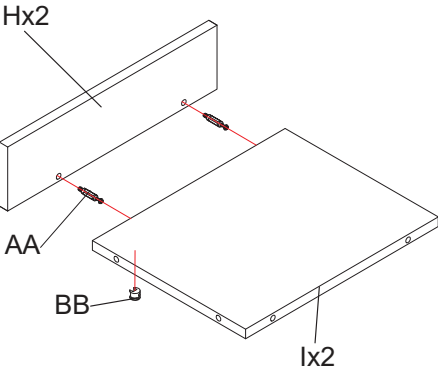


AA  x16  
BB  x16

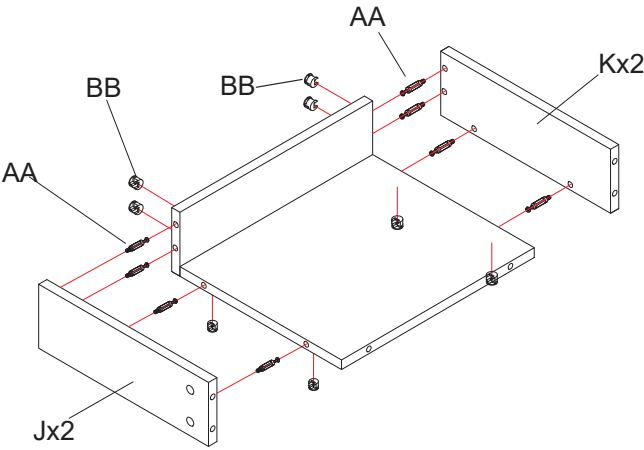


AA  x12

BB  x12

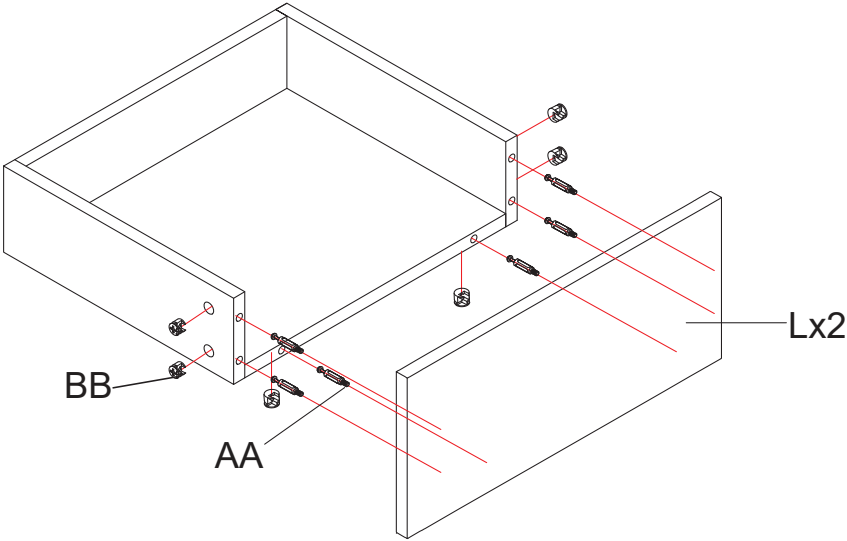



CC  x24



GG  x4

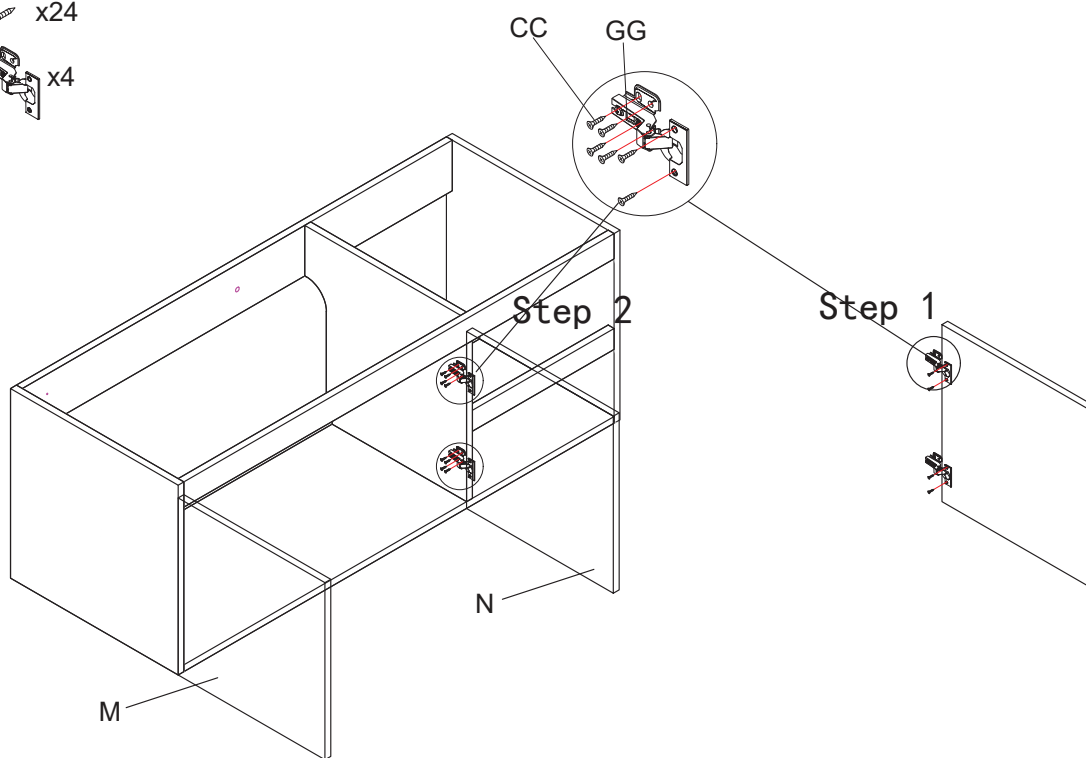

- CC  x36
- DD  x2
- EE  x2
- FF  x2


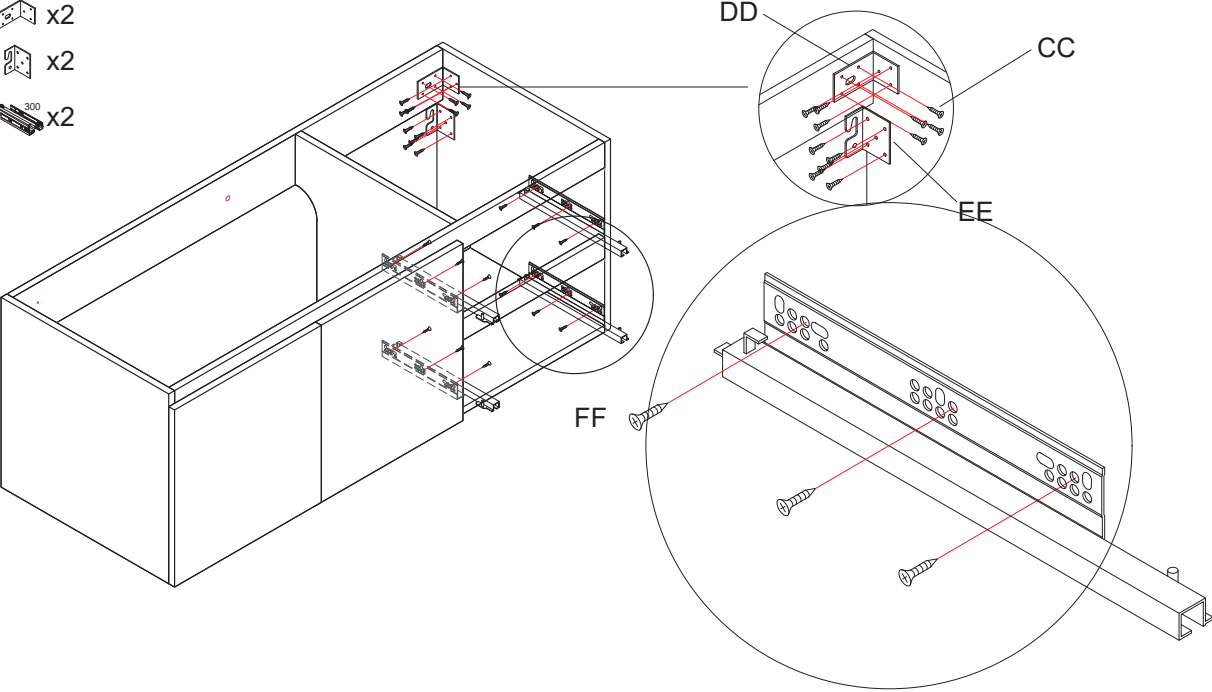


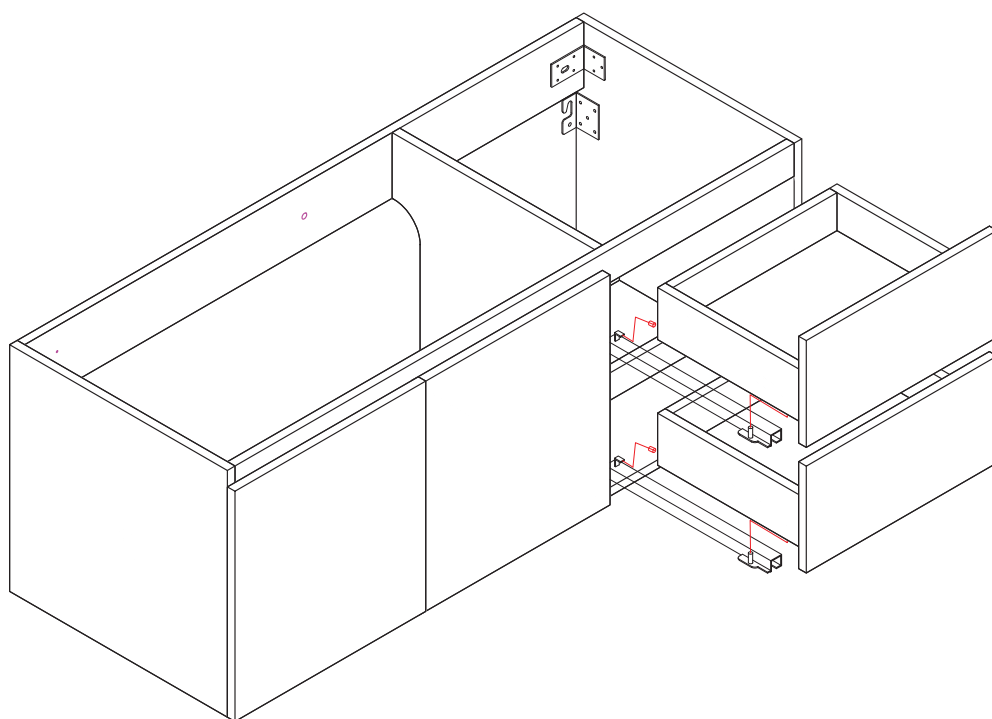

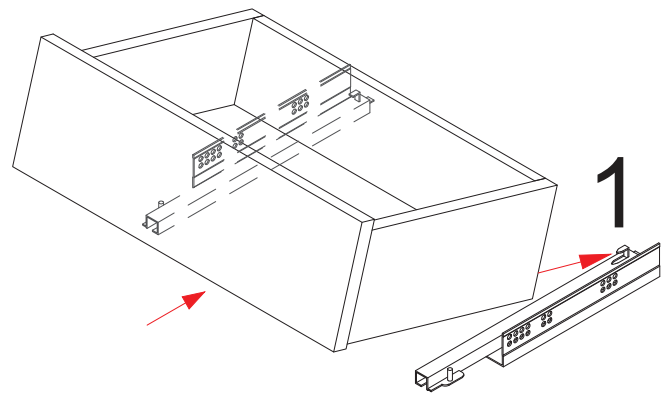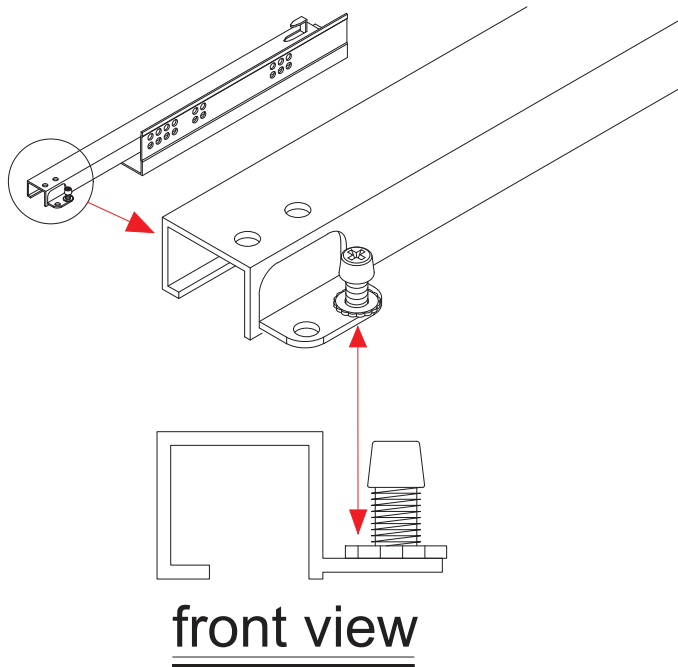

1. Check that the nut is screwed to the bottom.


2. Tilt the drawer down, and slide the drawer inside along the rails.

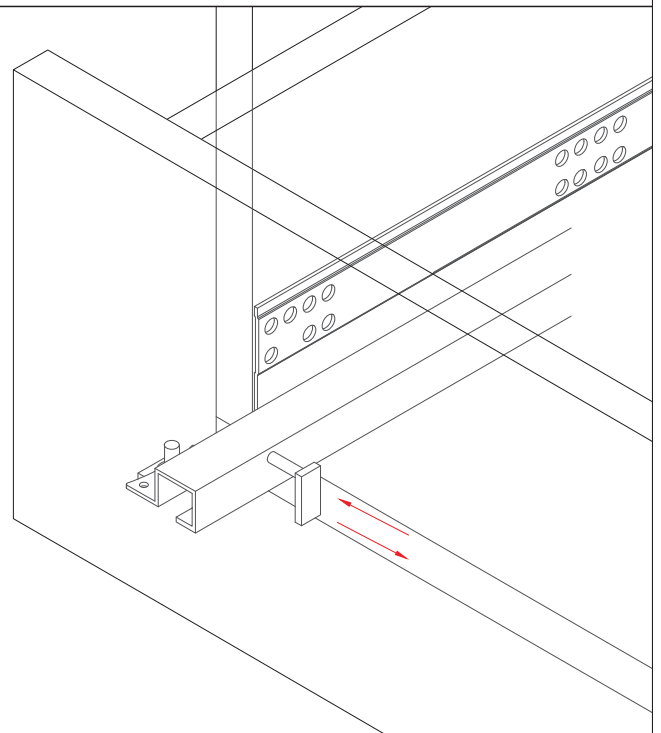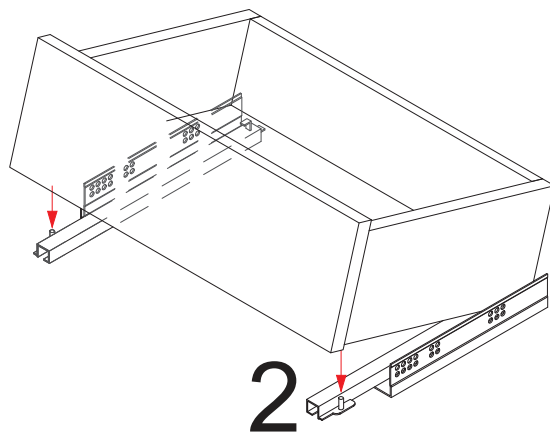

3. Put the drawer down naturally.

4. Push to lock  
Pull to unlock

- HH  x3  
II  x3  
JJ  x3  
KK  x3  
LL  x2

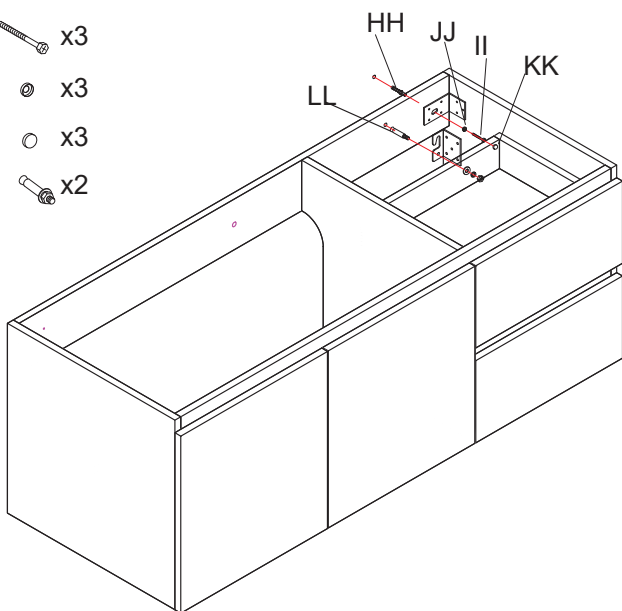

- MM  x4  
NN  x1

