


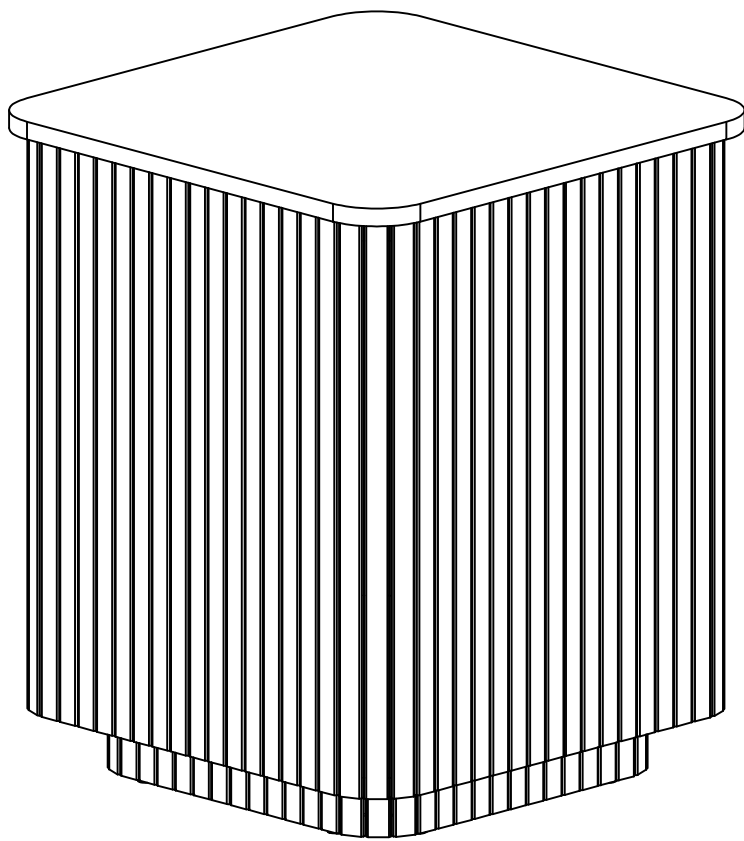
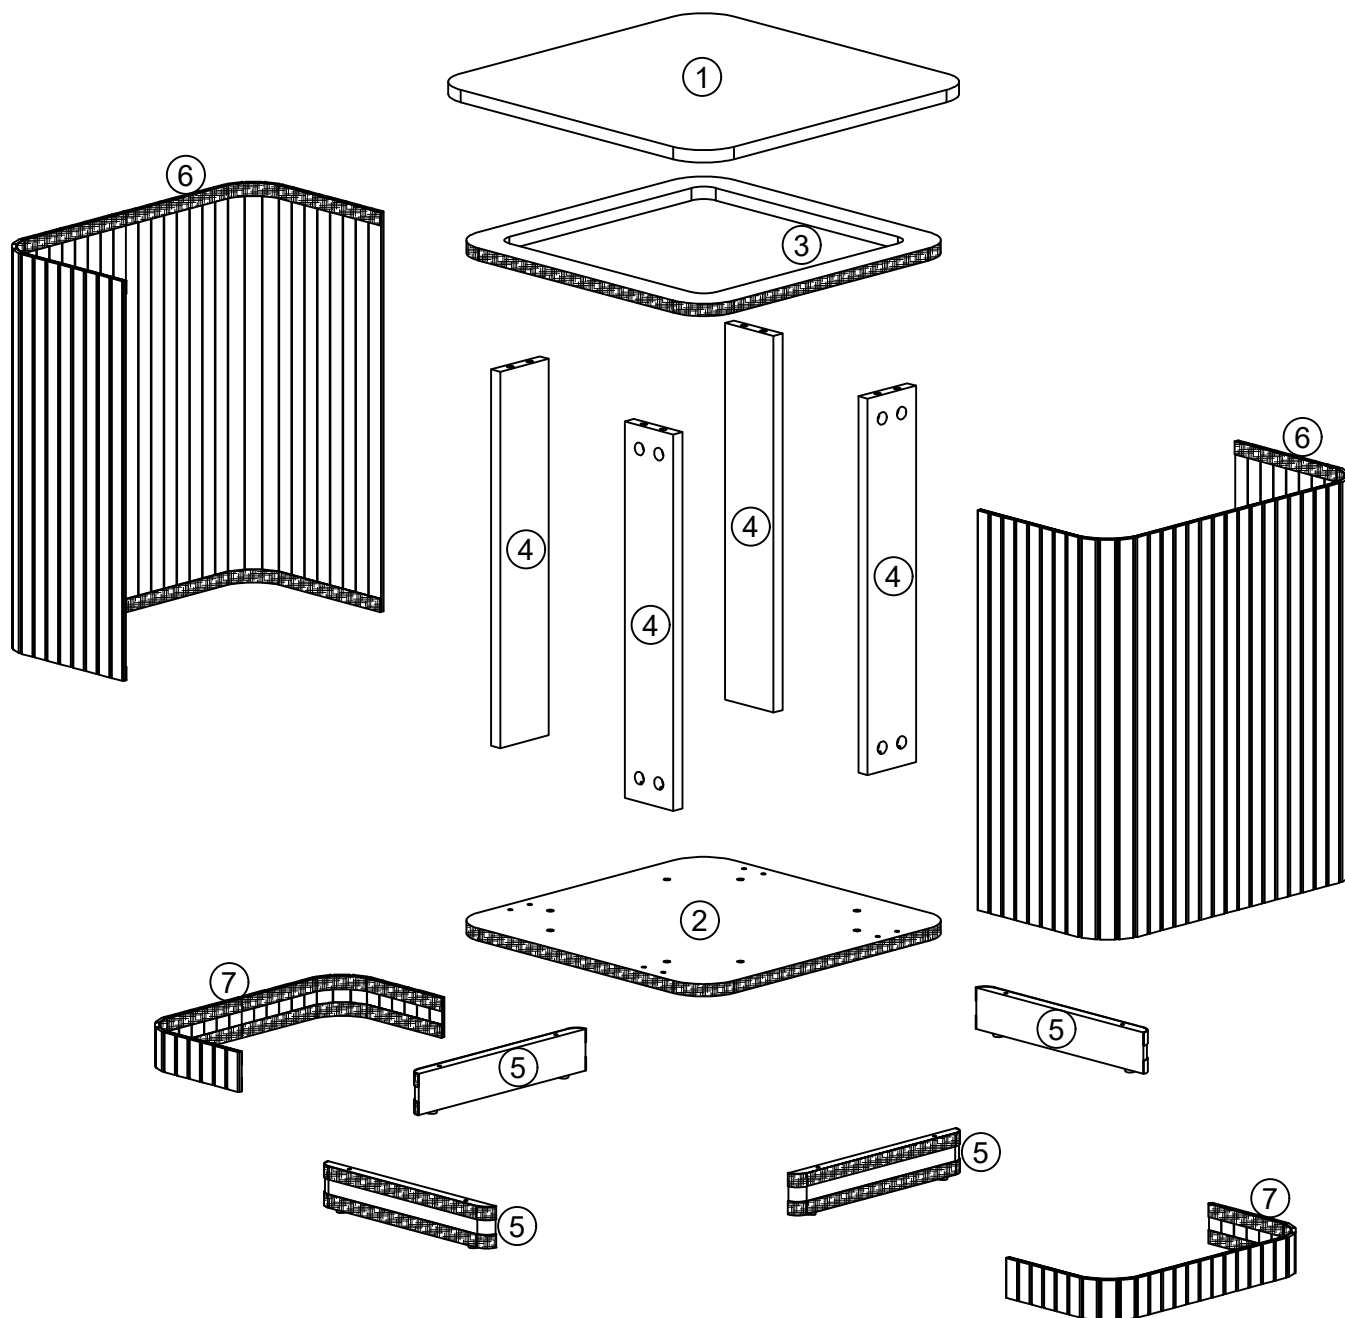







A×16PCS	B×16PCS	C×8PCS	D×8PCS	E×1PC
				
Ø6×35mm	Ø15×12mm		Ø5×40mm	M4mm

1.




D×8PCS





Ø5×40mm

Do not overtighten screws to avoid cracking the board.

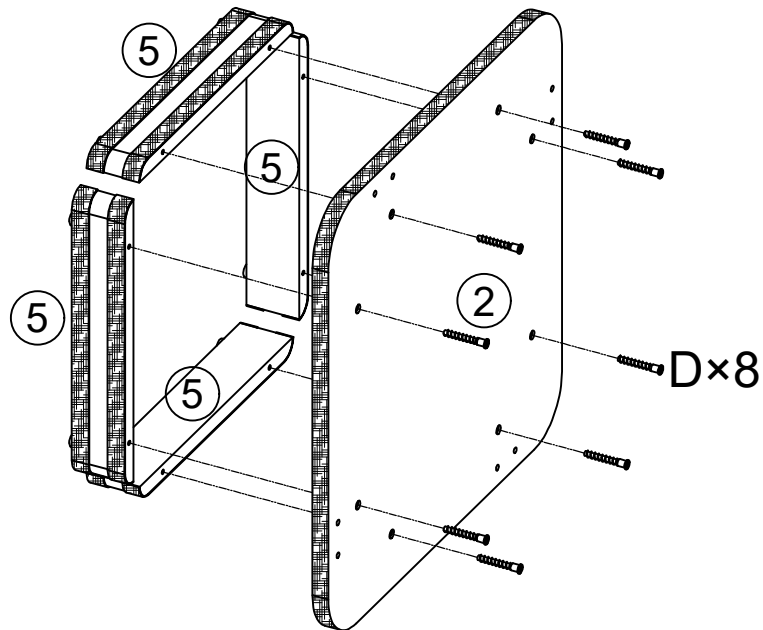


2.

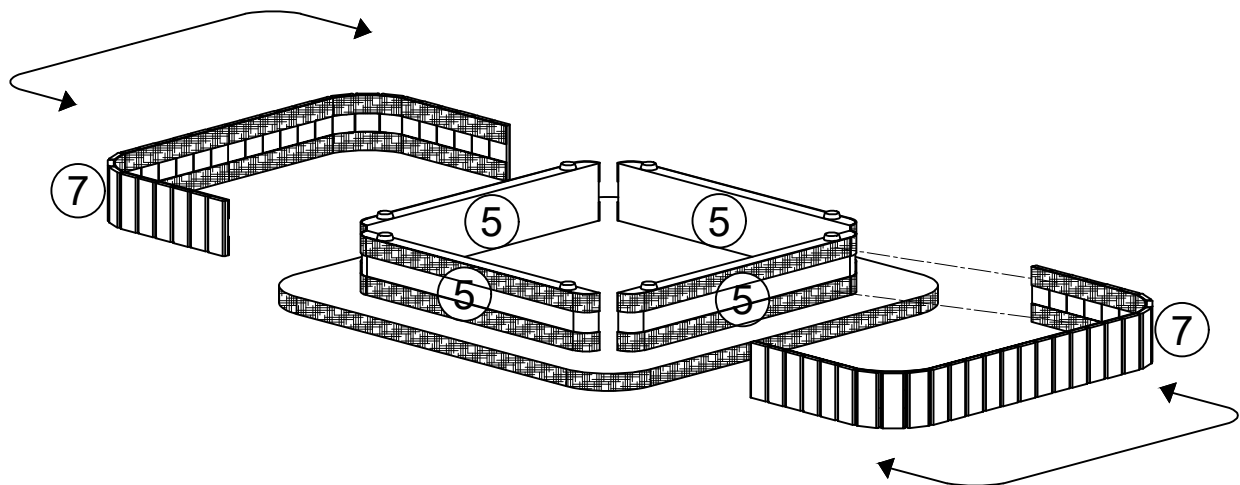

A×8PCS	C×8PCS
 Ø6×35mm	

3.


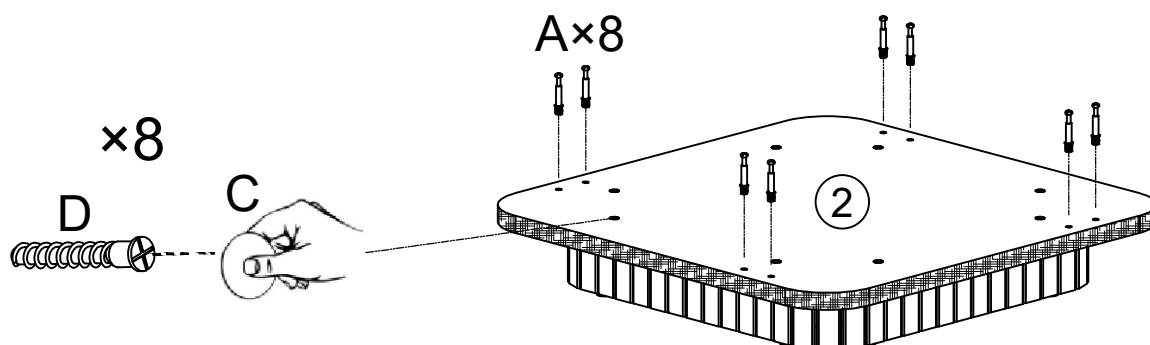


B×8PCS
 Ø15×12mm

4.




Make sure the arrow on the Cam Lock (B) points directly toward the side hole before inserting the Cam Bolt (A).

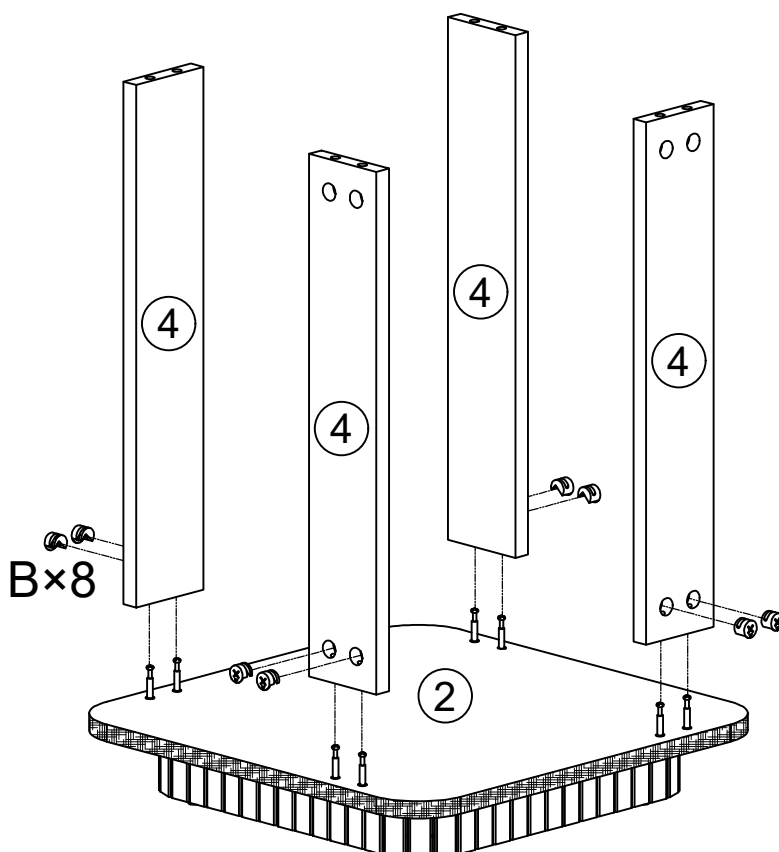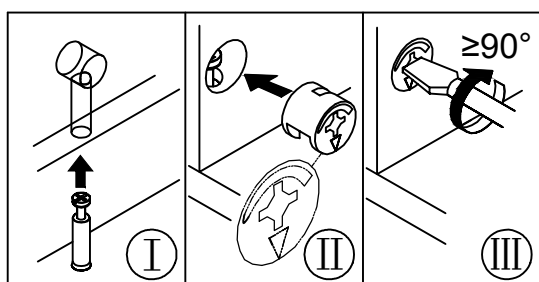


5.

A×8PCS



Ø6×35mm

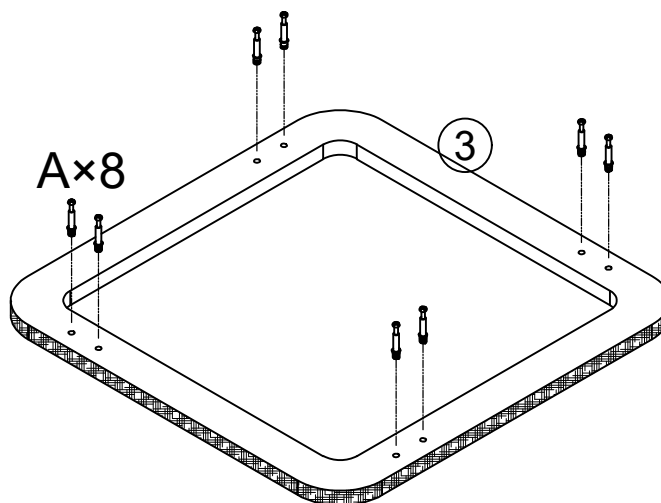


6.


B×8PCS




Ø15×12mm

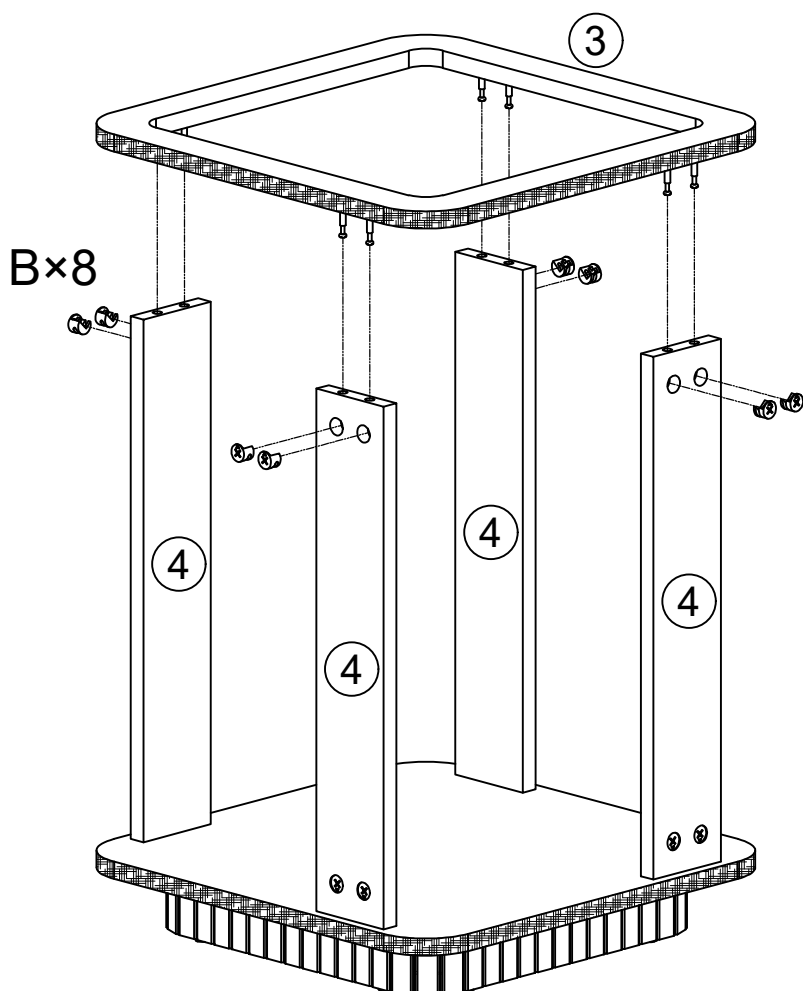

Make sure the arrow on the Cam Lock (B) points directly toward the side hole before inserting the Cam Bolt (A).

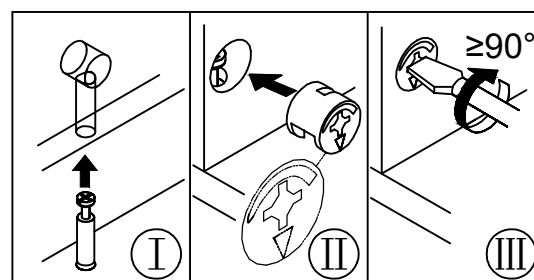

7.

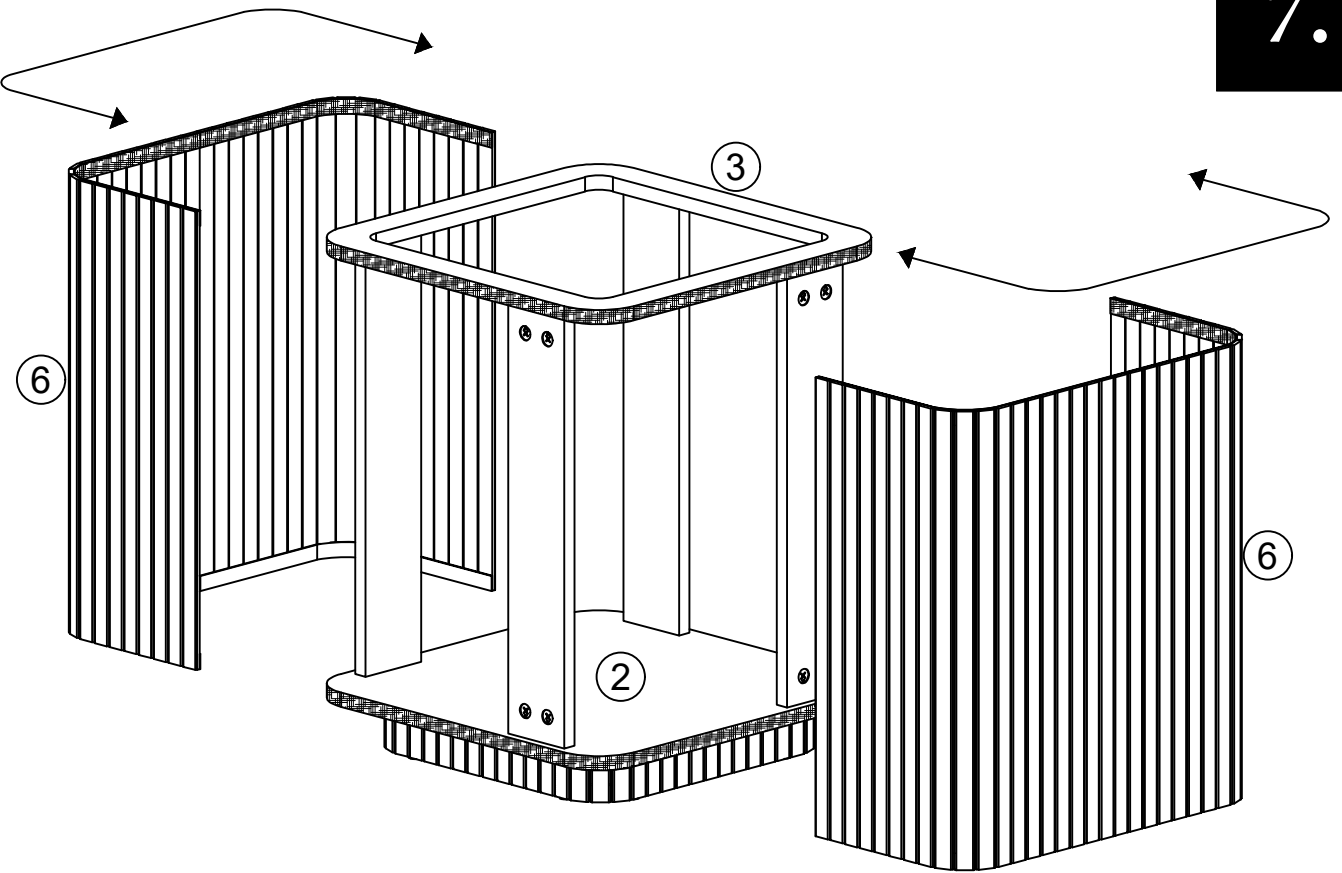

8.

