
Assembly Instructions

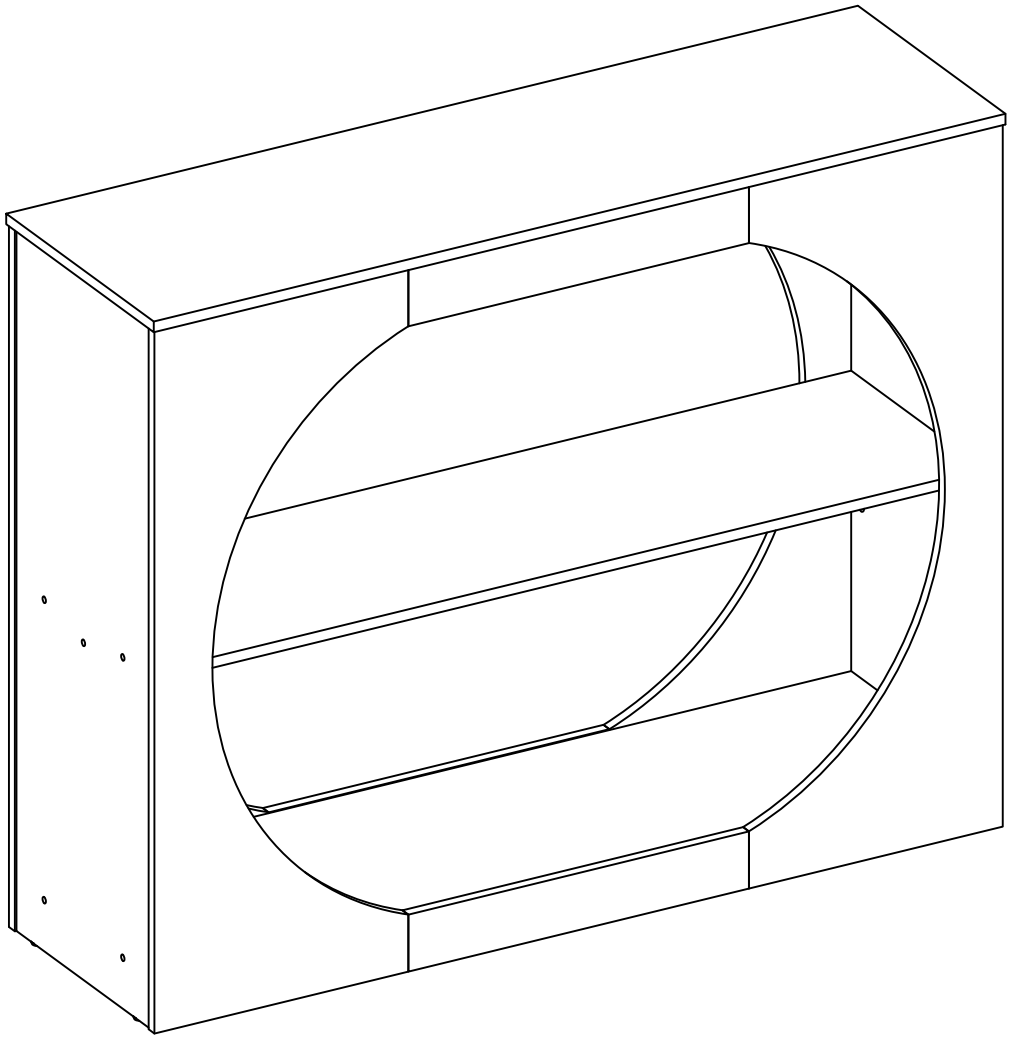


So glad you chose us! Wishing you and
your family happy moments with it.











Attention: Please ensure you have all parts and read all the instructions before commencing assembly.
The product details page includes a detailed installation video, and you can choose to follow the video step by step for installation.

PART LIST

The beginning of installation may feel confusing and painful, but it will get better.











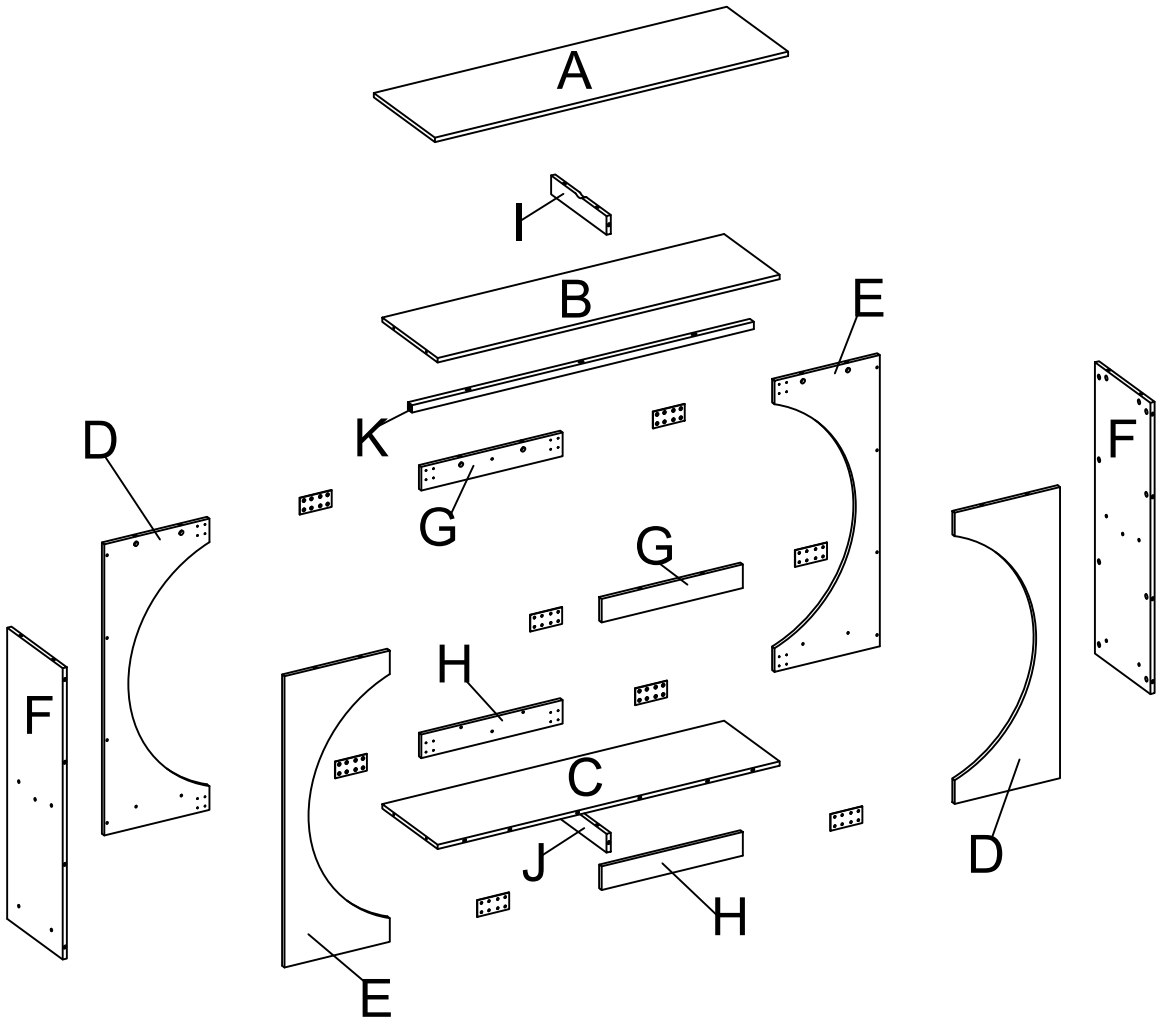


PART LIST

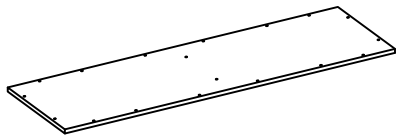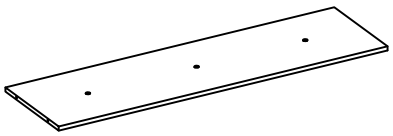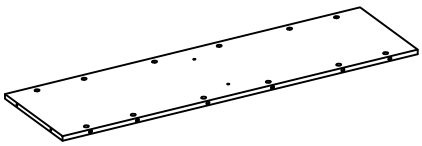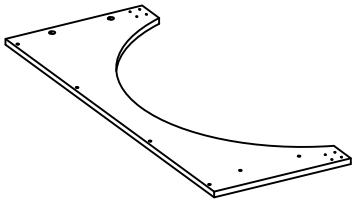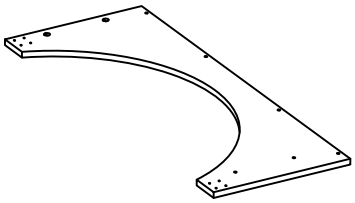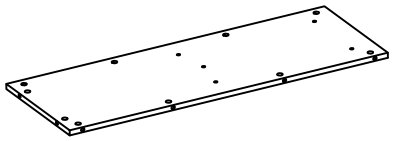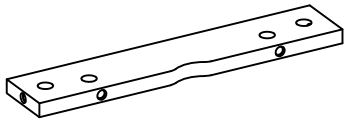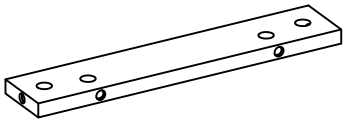A x 1pc 	B x 1pc 	C x 1pc 
D x 2pcs 	E x 2pcs 	F x 2pcs 
G x 2pcs 	H x 2pcs 	I x 1pc 
J x 1pc 	K x 1pc 	

Don't worry, feel free to contact us if you need anything.
Go ahead and give it a try!

HARDWARE LIST

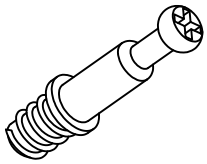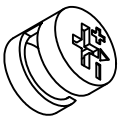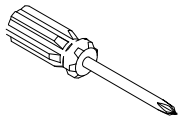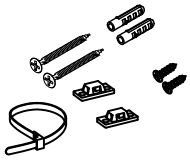
①  M6x27 5 pcs	②  M6x40 8 pcs	③  M6x28 52 pcs
④  Ø12 52 pcs	⑤  8 pcs	⑥  M4x12 64 pcs
⑦  Ø13*3 6 pcs	⑧  M4 1 pc	⑨  1 pc
⑩  M3x12 12 pcs	⑪  2 pcs	⑫  8 pcs
⑬  80cm 1 pc	⑭  M4x40*2 M4x14*2 1 pc	

Please count and verify all parts before assembly .


How to install Camlocks

Connect the male camlock as directed in the assembly instructions with a screwdriver.

DO NOT OVER TIGHTEN!

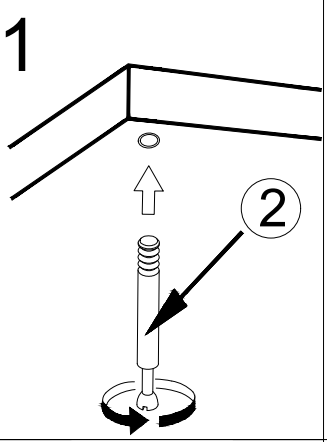


Put the male camlock into the entry hole.

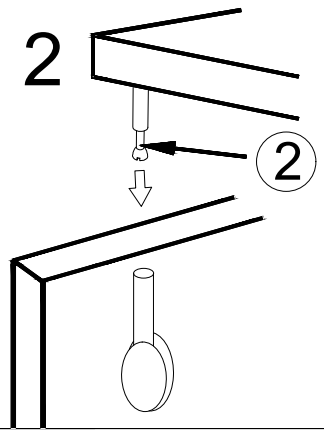

Insert the female camlock as shown in the instruction.


Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

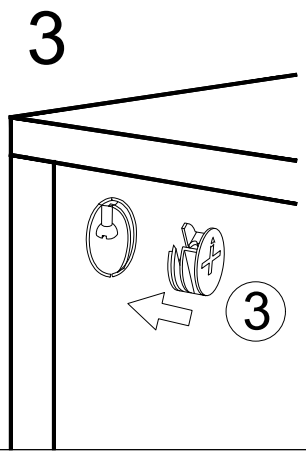


Screw the female camlock clockwise with a screwdriver.

You will feel a click when the camlock is locked in place.


The camlock is now completed.

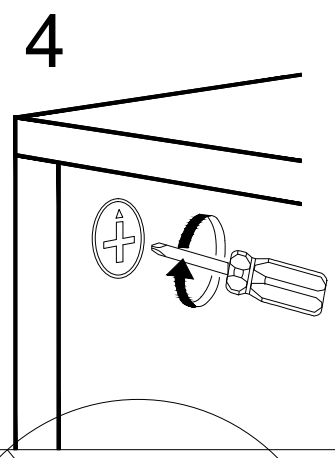

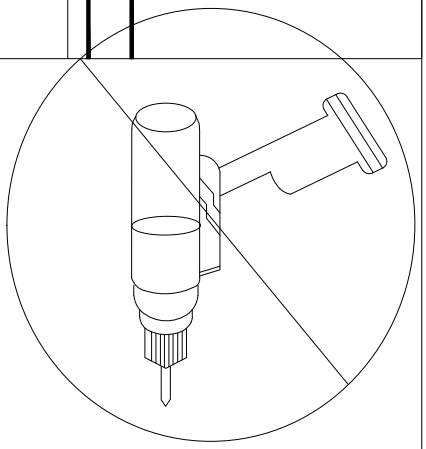


Great job! Now that you have gotten through the initial phase, you're ready to move on to the next steps.


STEP 1

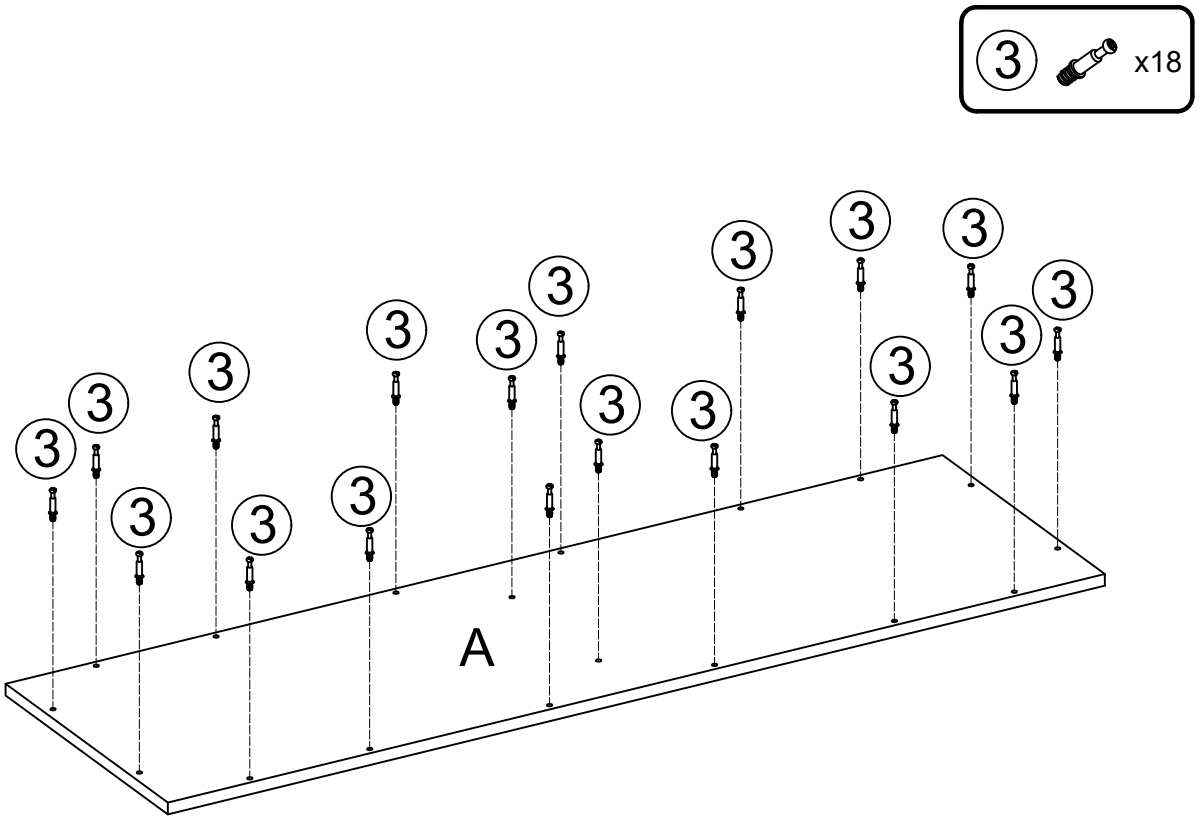


STEP 2

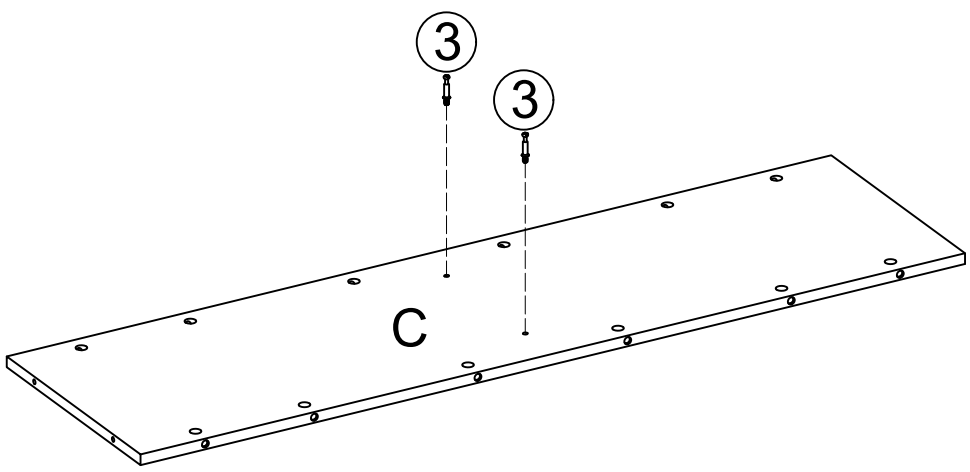


STEP 3

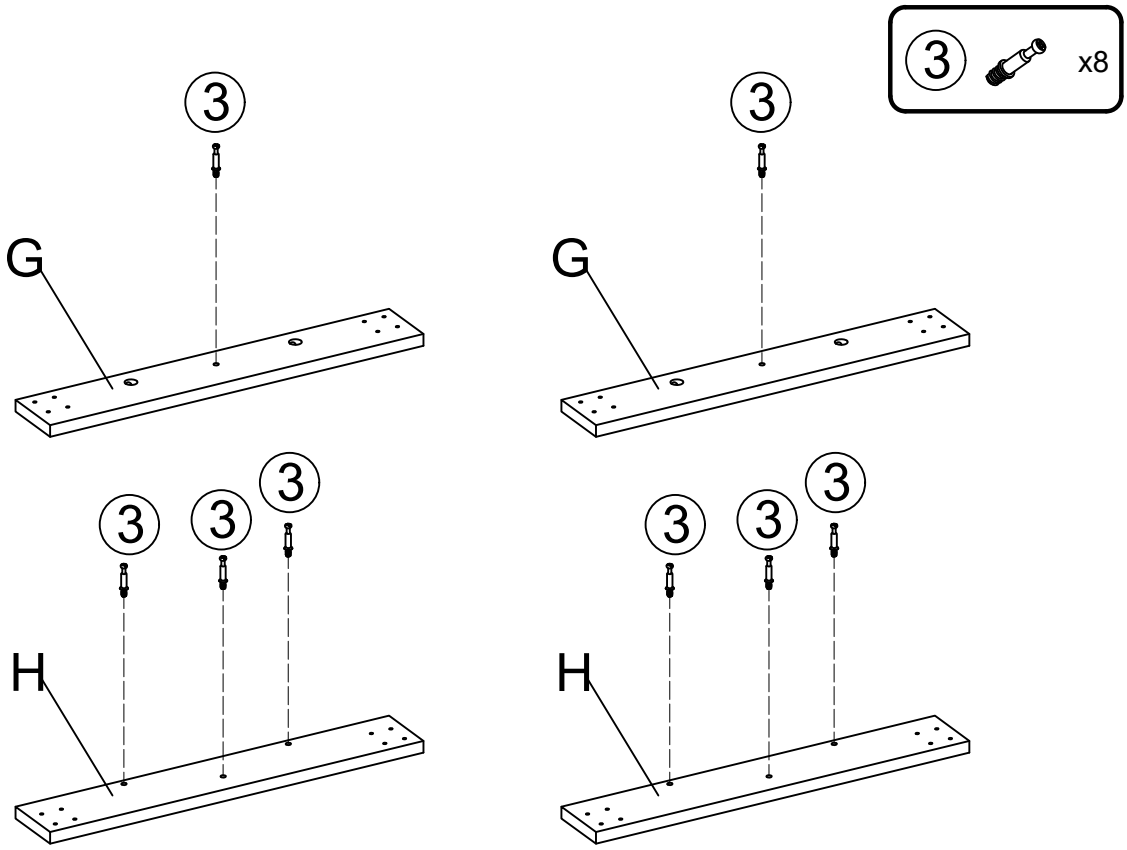

STEP 4

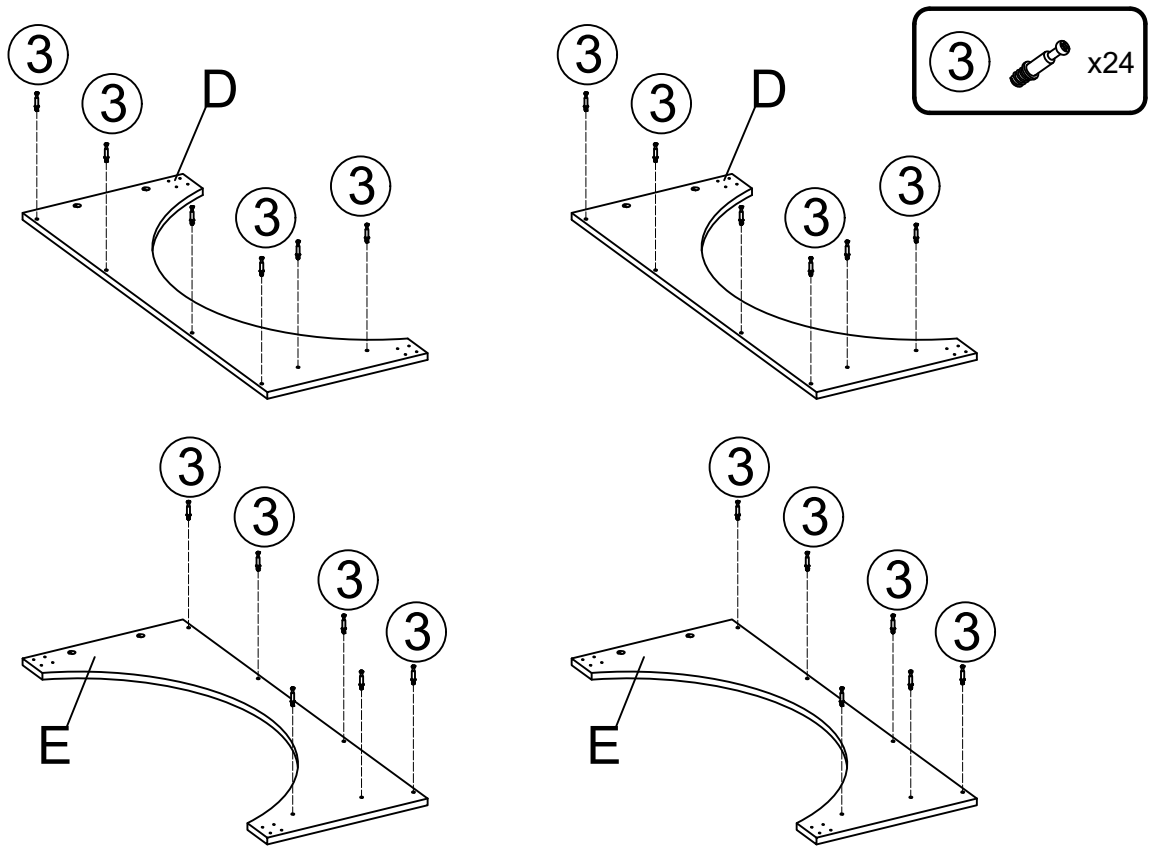


STEP 5

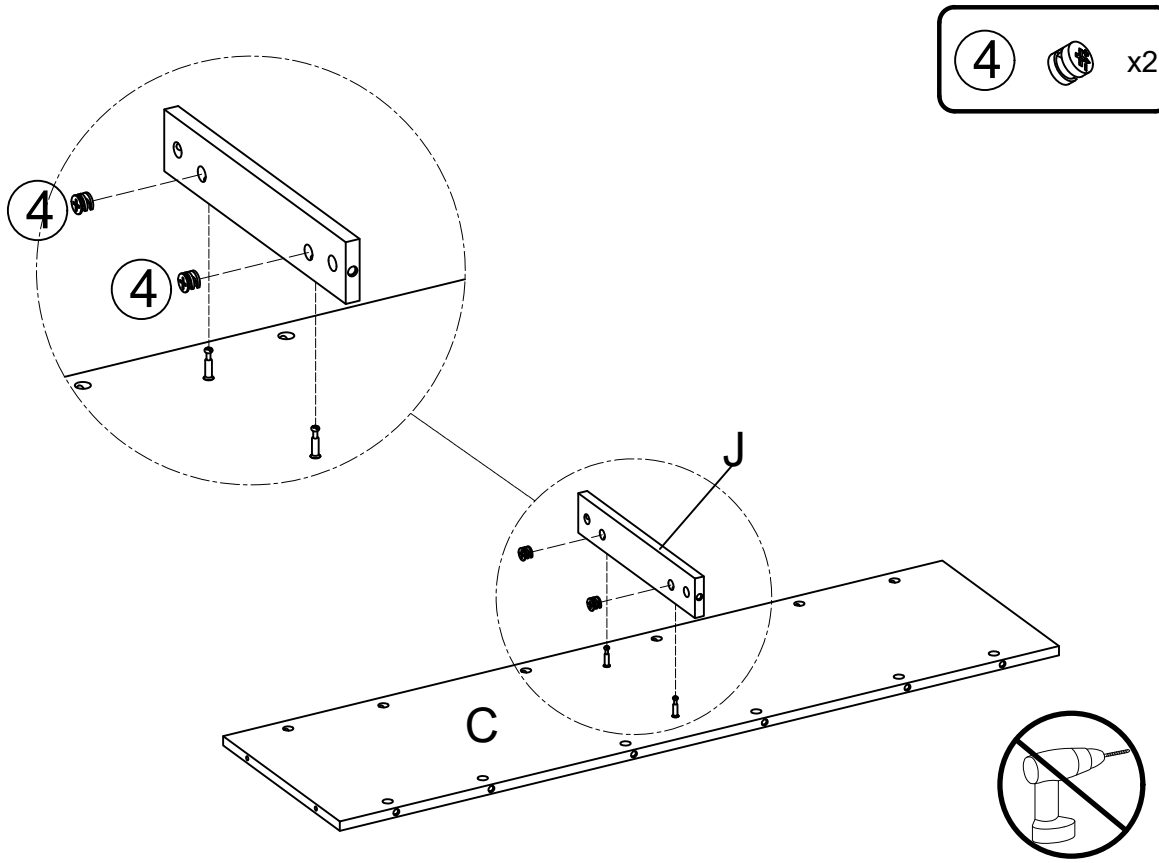


STEP 6


Come on, we can do this! Take a deep breath, and let's tackle it step by step.

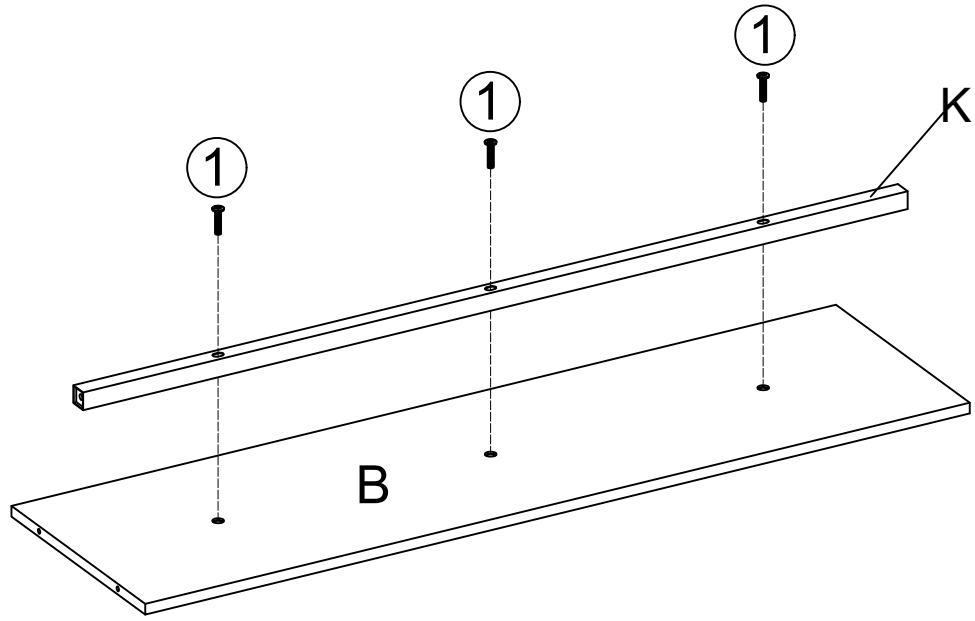

STEP 7

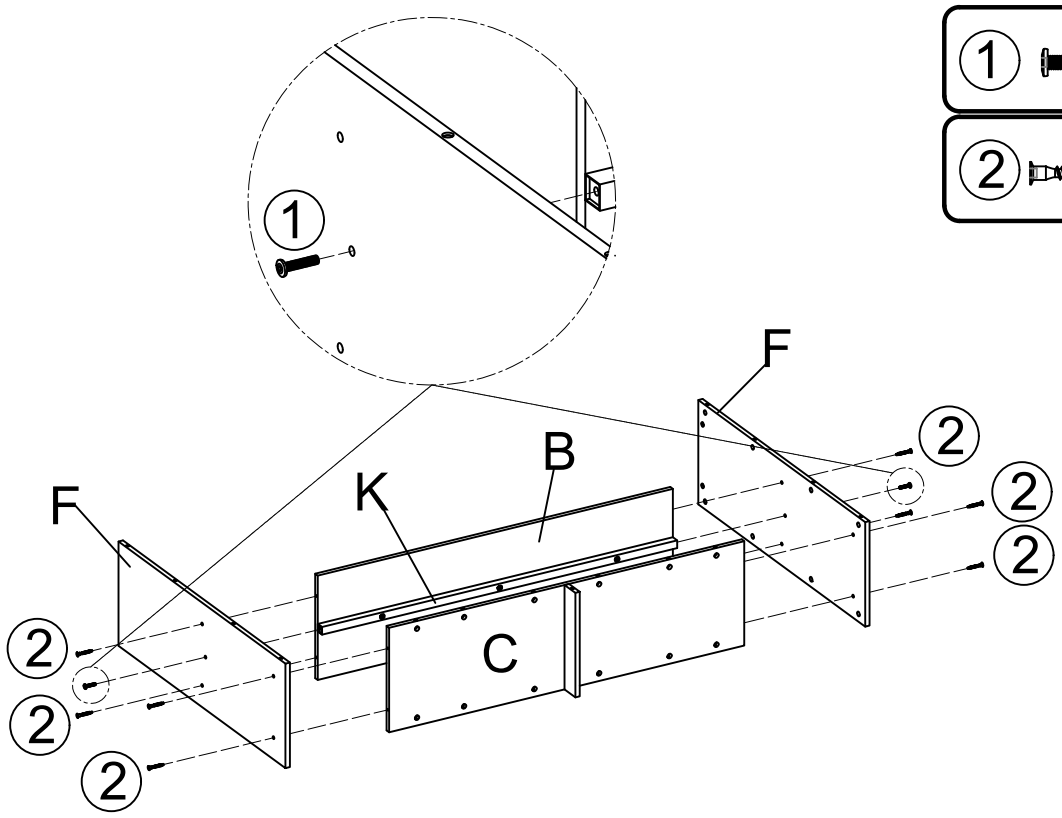



STEP 8

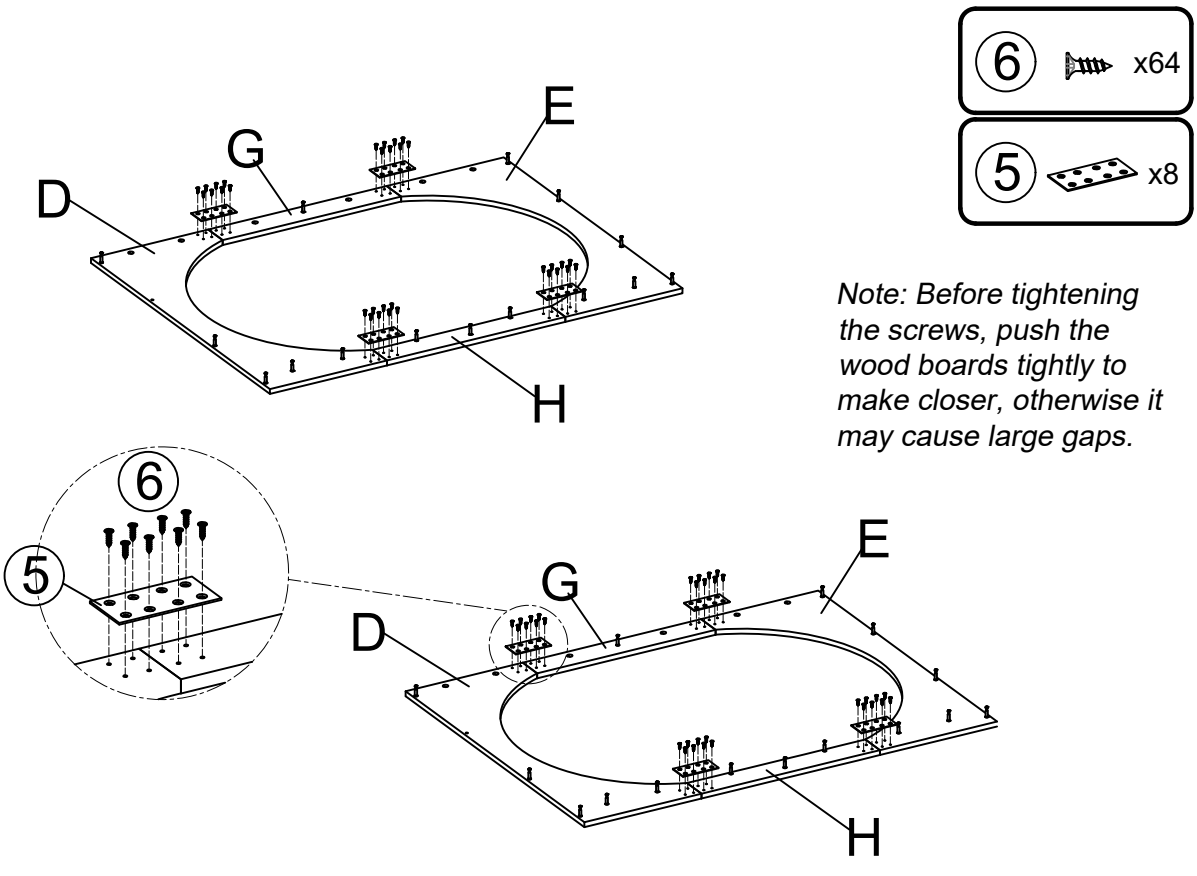


Note: Before tightening the screws, push the wood boards tightly to make closer, otherwise it may cause large gaps.


STEP 9



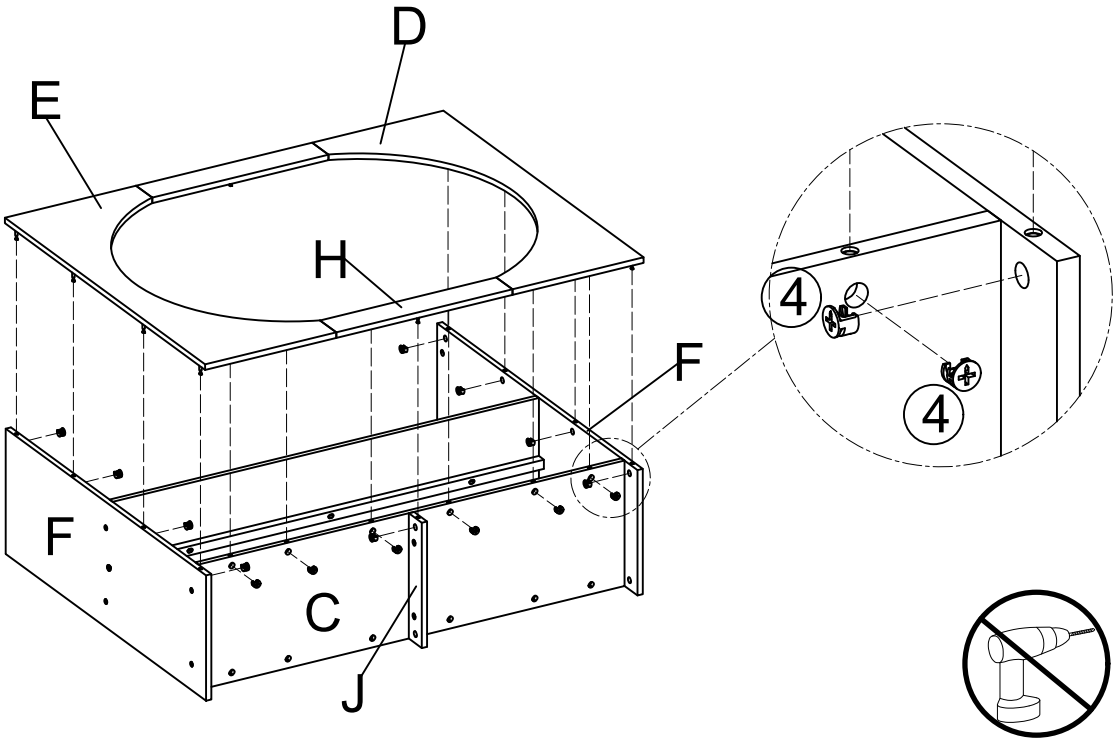

STEP 10



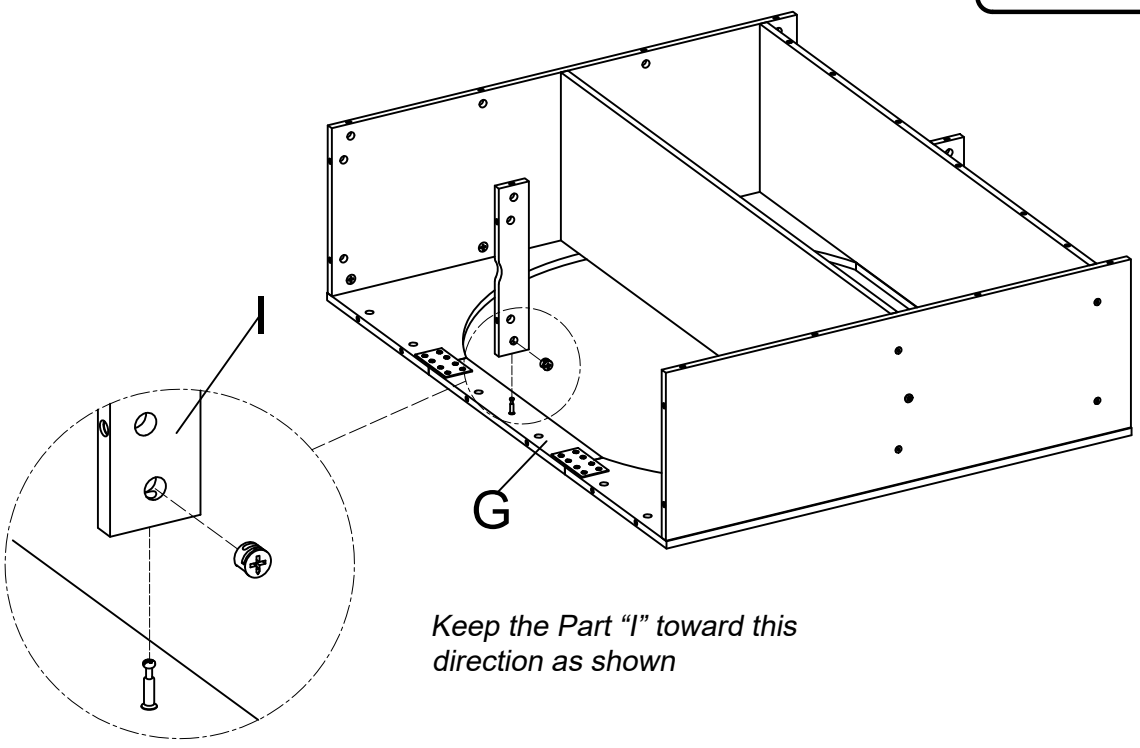


Keep the Part "I" toward this direction as shown

STEP 11


Almost finished! Imagine it sitting in your living room—how perfect!
Keep going, you're so close to success!

4 x16

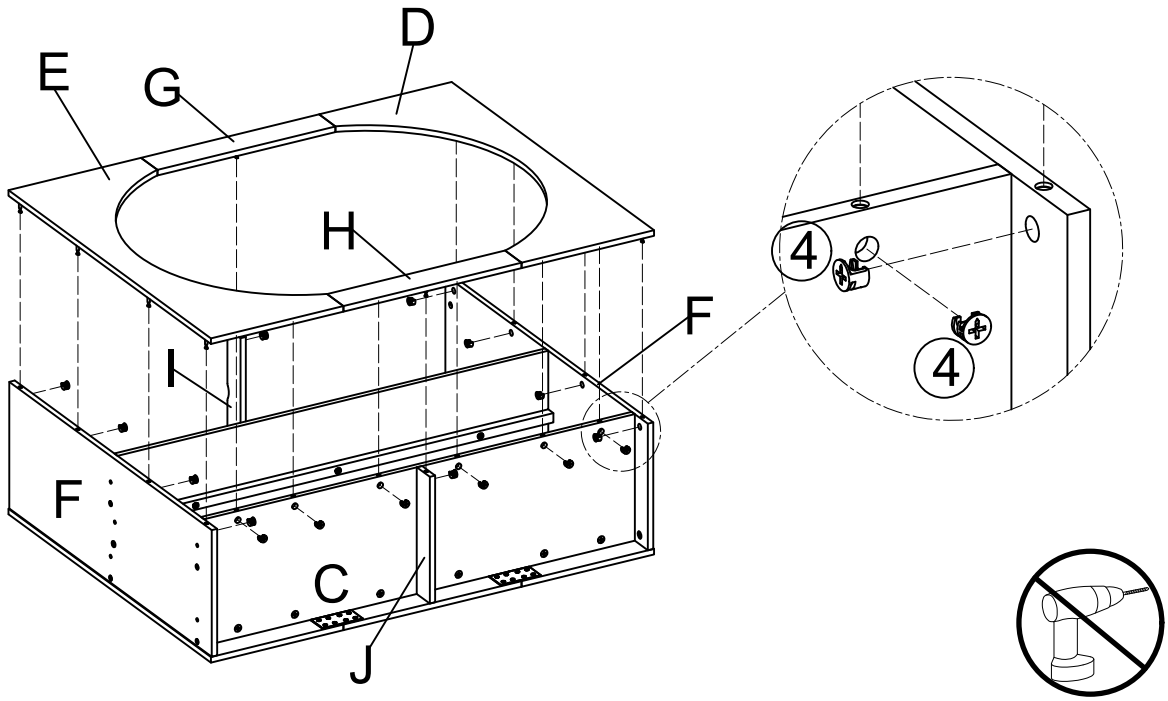

STEP 12


4 x18

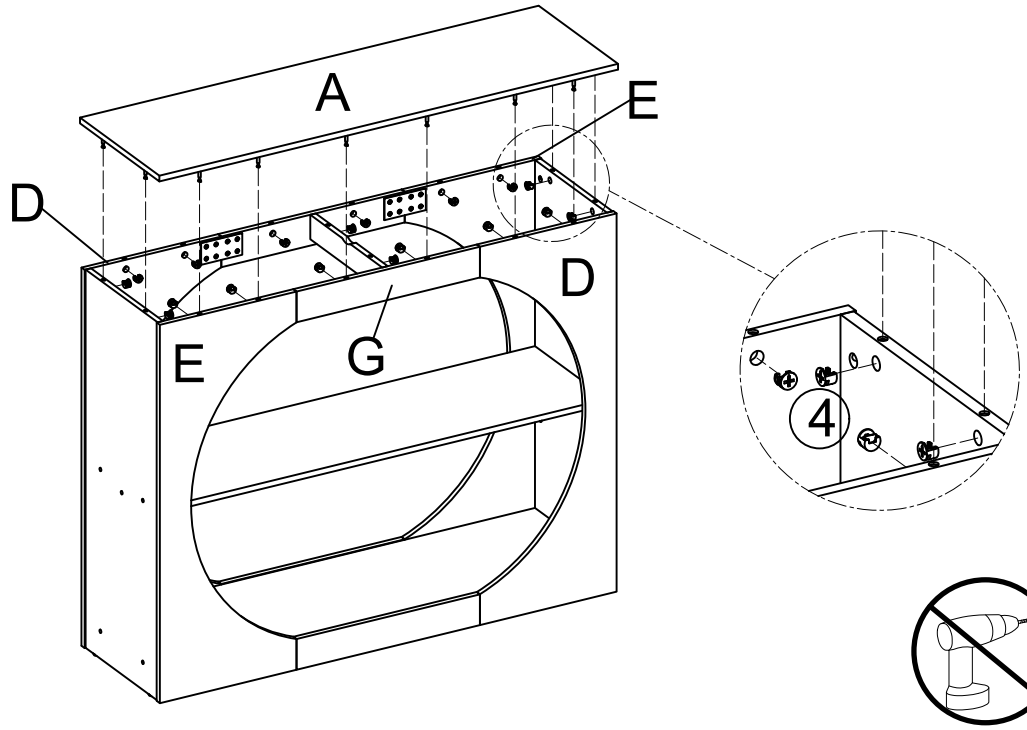

STEP 13

7 x6


Gently tap the Floor Protectors (7) at the bottom of side panels avoiding crack or damage of side panel.

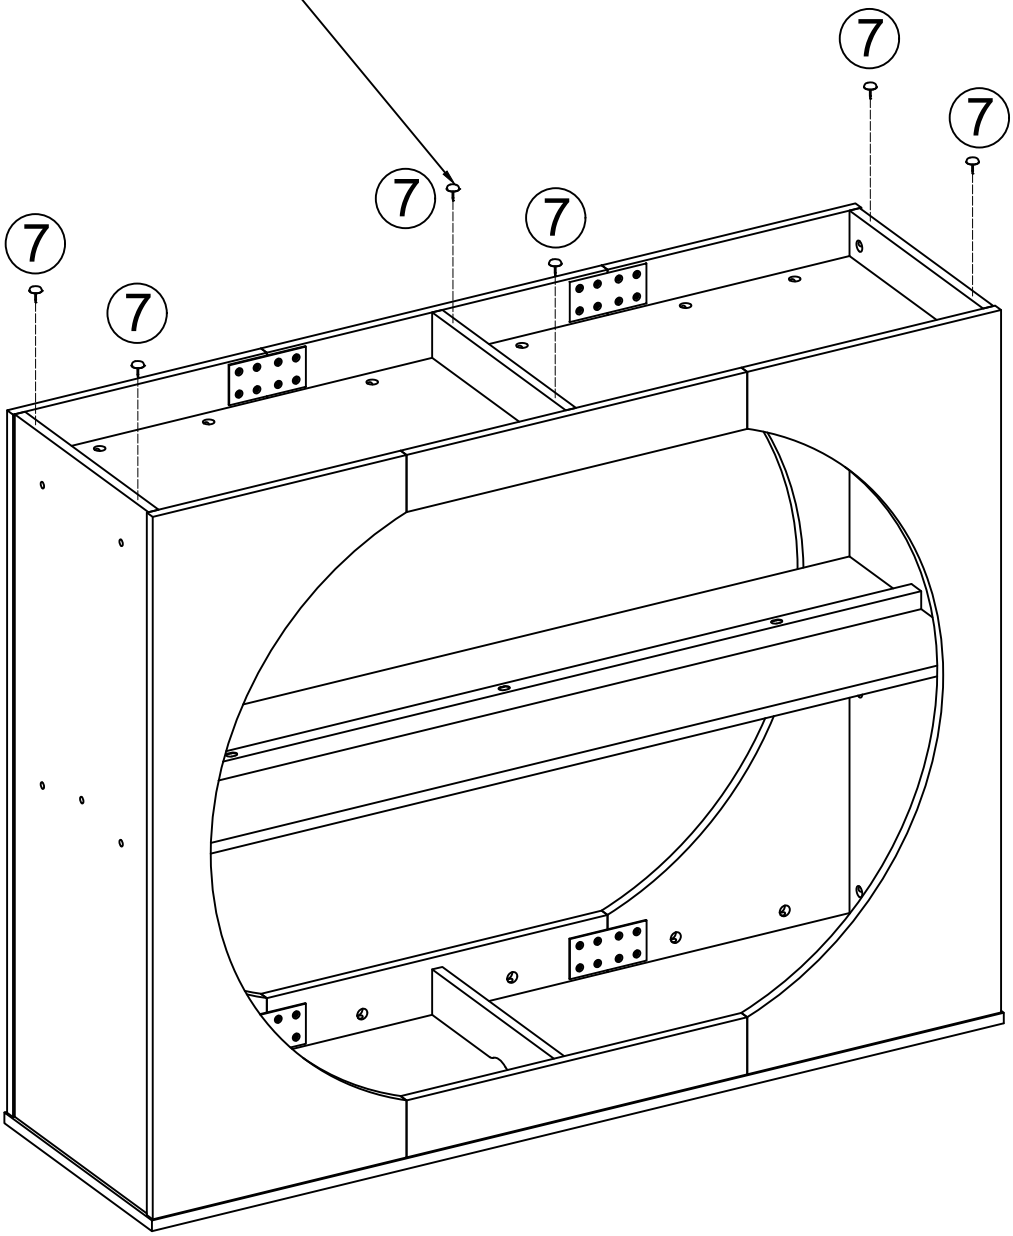



Alright! Give yourself a pat on the back— now step back and take in your master piece!


STEP 14

Tear off the tape of the LED strip, stick the LED strip roughly in the center of the bottom of shelf panel (A).Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

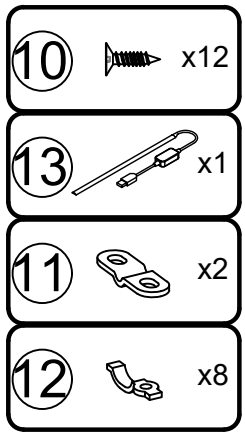

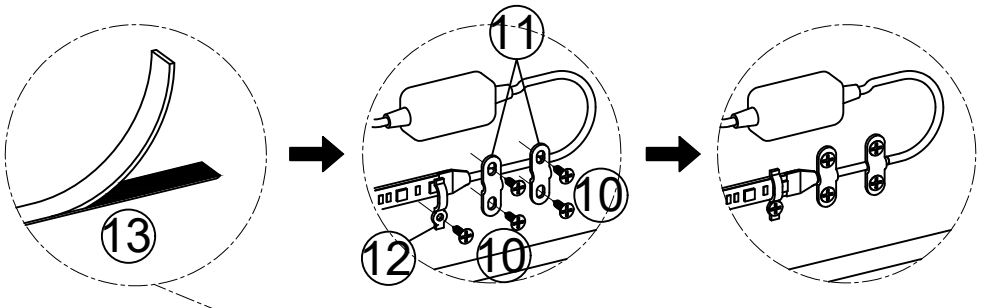


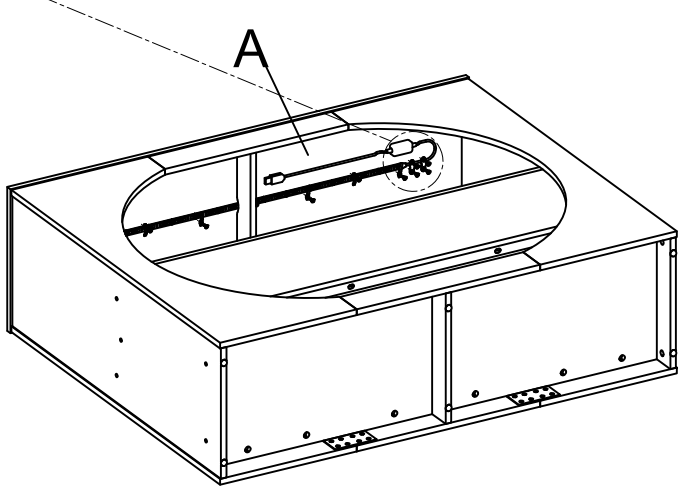


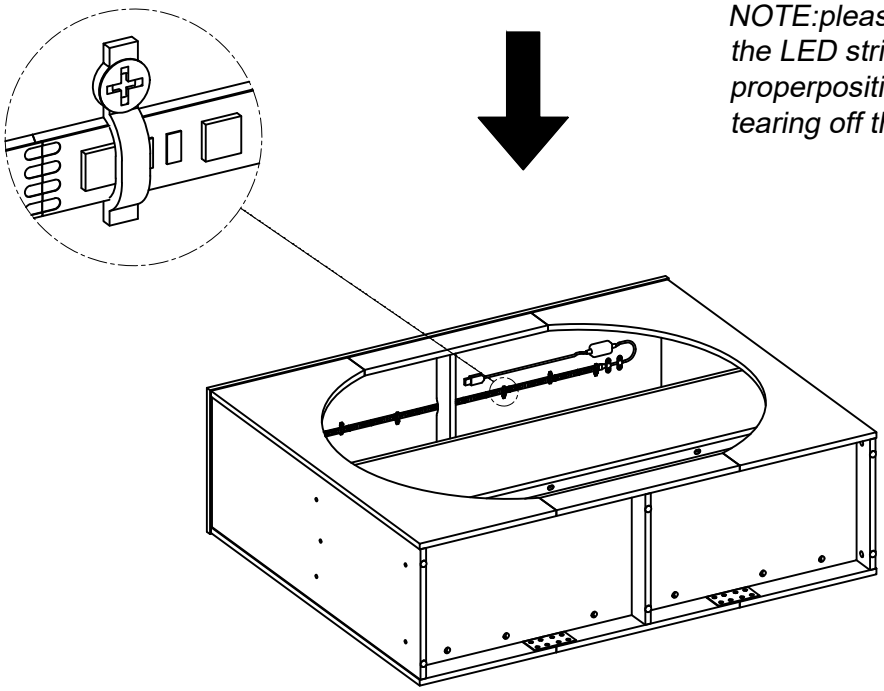

NOTE:please make sure the LED strip is in properposition first before tearing off the tape.

STEP 15



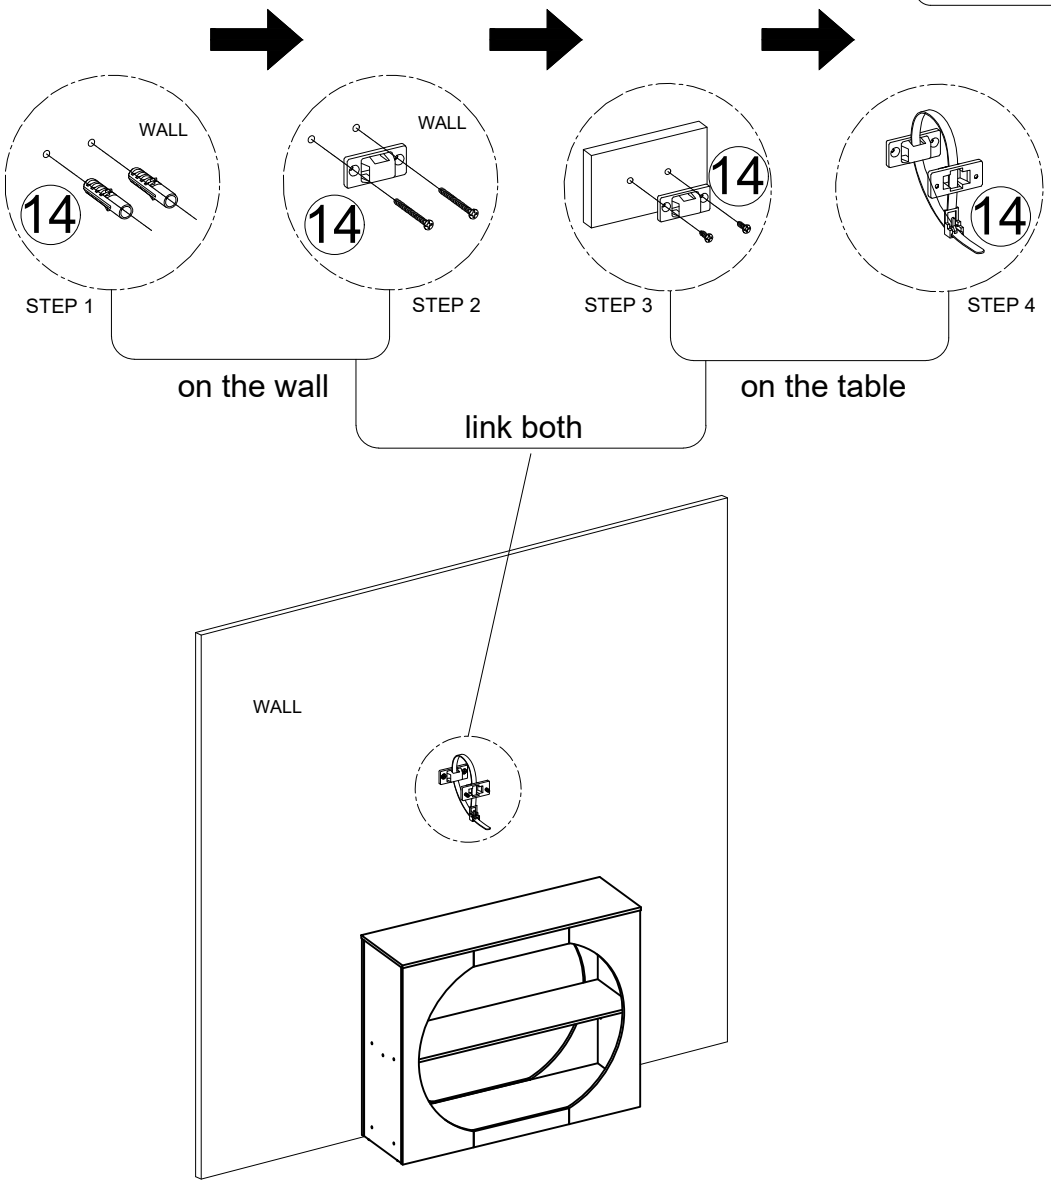

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt into the hole.
Installation Steps:
2. Secure one bracket into the expansion bolt using the screw.
3. Position the furniture in place. Attach another bracket (aligns with the bracket on the wall)to the back edge of unit top using the screw
4. Thread the male end of the steel cable through both brackets. Securely join the ends by turning the female connector clockwise.

Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.
For a concrete wall, ensure there are no steel reinforcements inside the wall.
（Anti-tipping accessories are not mandatory. You can consider whether to install them according to your home decoration）