
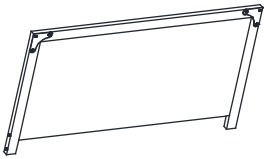
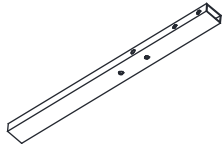
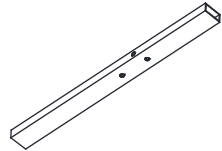
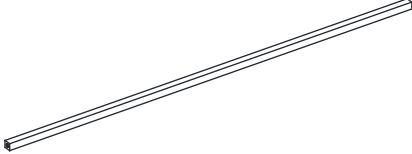
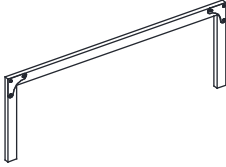
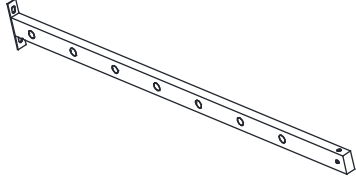


ASSEMBLY INSTRUCTION


WF198610

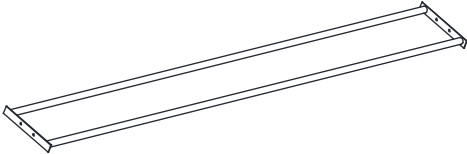

PARTS AND HARDWARE LIST

A		1PC	N	 M6*50mm	4PCS
B		1PC	O	 M6*40mm	2PCS
C		1PC	P	 M6*25mm	4PCS
D		2PCS	Q	 M6*12mm	20PCS
E		1PC	R	 M6	4PCS
F		1PC	S	 M6	1PC
G		4PCS	T		1PC
H		1PC			
I		2PCS			
J		12PCS			
K		1PC			
L		2PCS			
M	 M6*60mm	2PCS			


STEP 1

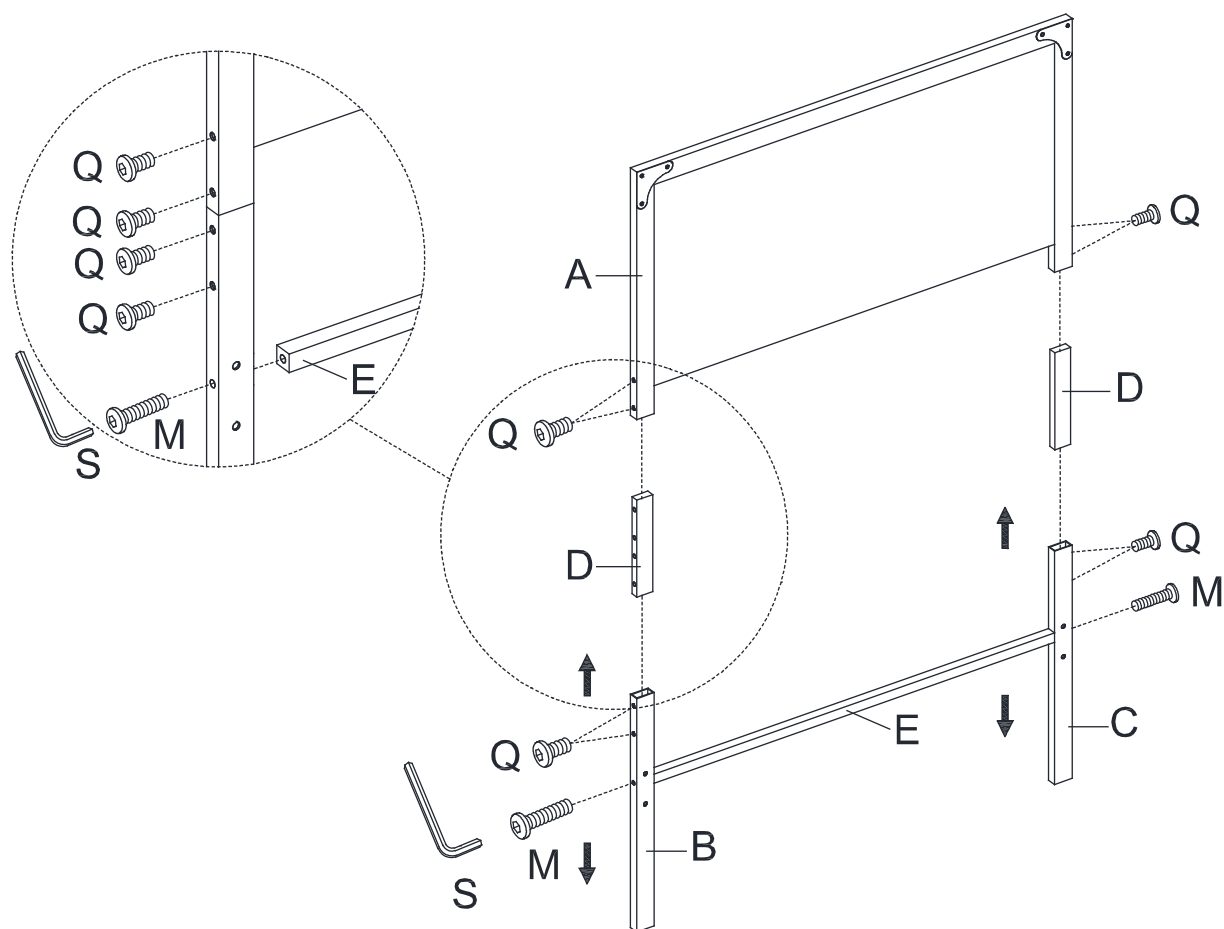

Insert D*2 into A*1, B*1 and C*1, then using Alley Key S to tighten them with bolts Q*8.


Attach E*1 to B*1, C*1 with bolts M*2 and then tighten them with Alley Key S.

STEP 2

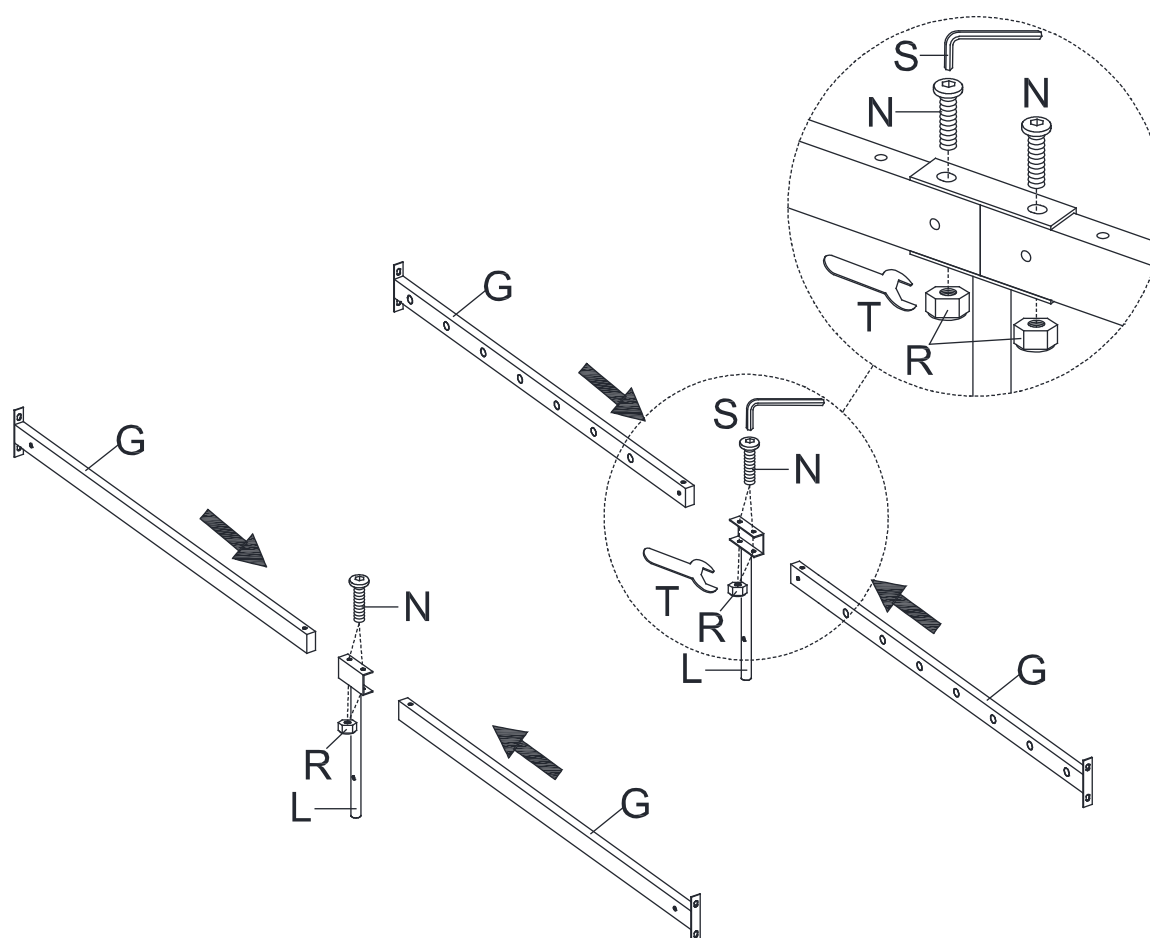

Attach G*2 to L*1 with bolts N*2, nuts R*2, and then tighten them with Spanner T and Alley Key S. The other side to the same.

STEP 3

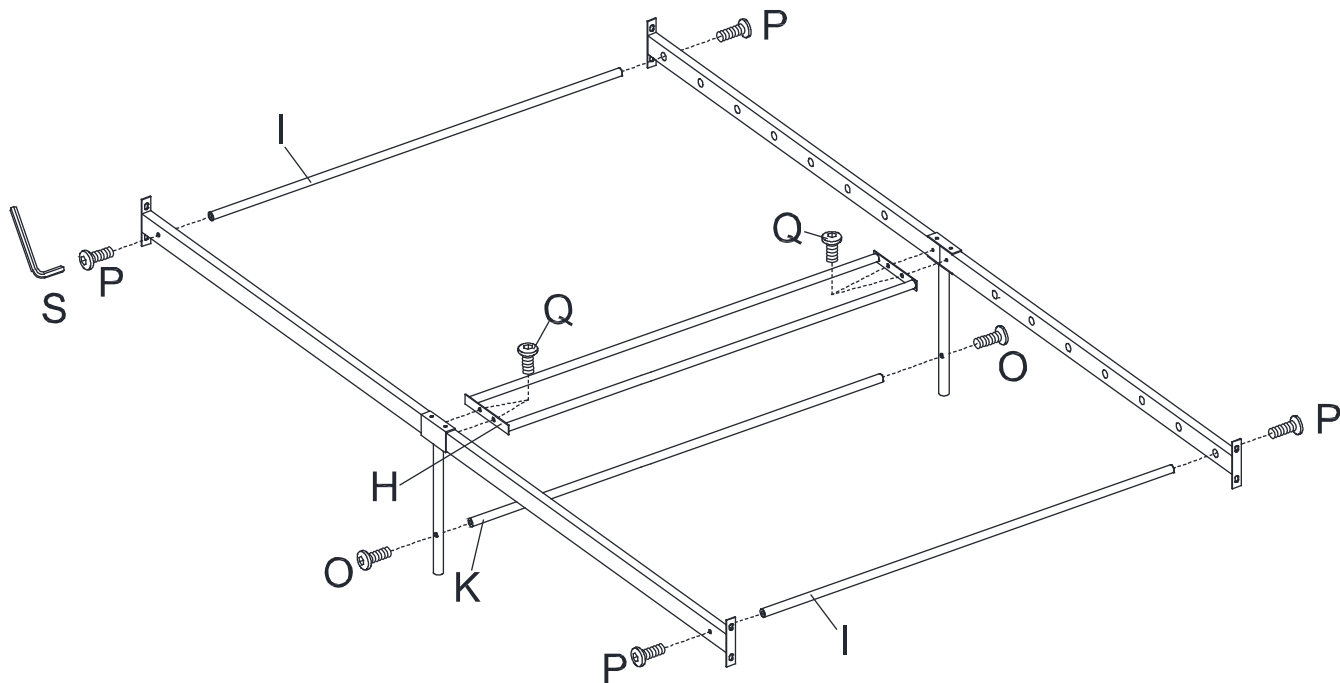


Attach I*2 to the first and the last hole on side rails (G), and tighten them with bolts P*4.

Attach H*1 to the EIGHTH and the NINTH holes on side rails (G), and tighten them with bolts Q*4.

Attach K*1 to the middle support legs (L) with bolts O*2, then tighten them with Allen Key S.

DO NOT TIGHTEN THE BOLTS TOTALLY.


STEP 4

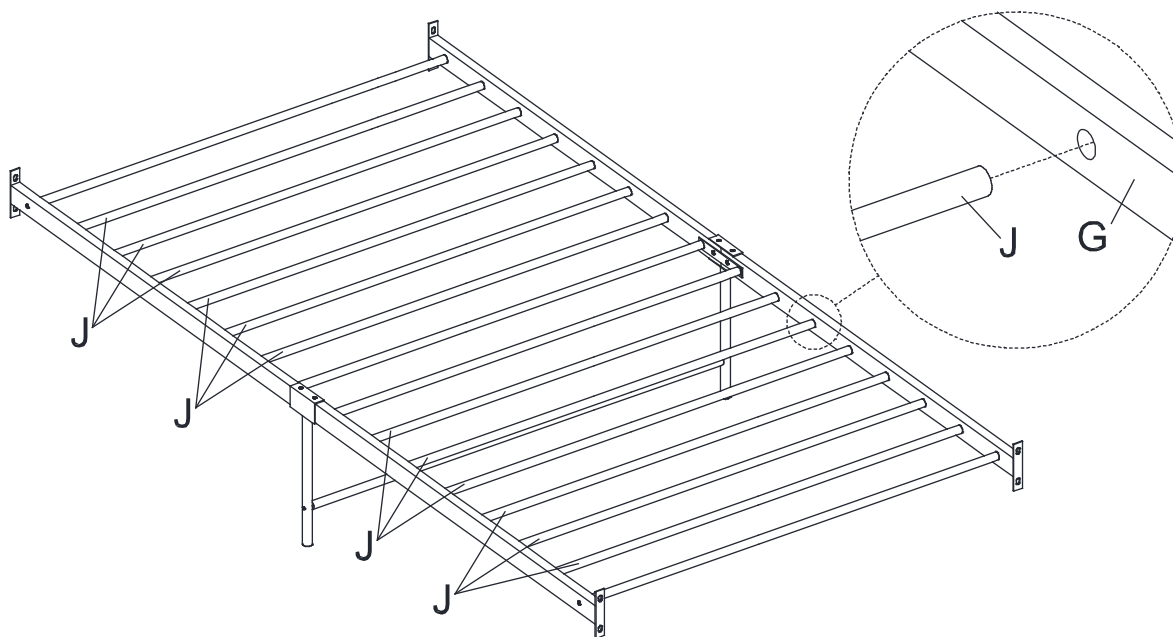

Insert J*12 into the remaining holes on the side rails (G).

Note: When you find that you cannot align the holes accurately, please adjust the tightness of the screws.

STEP 5

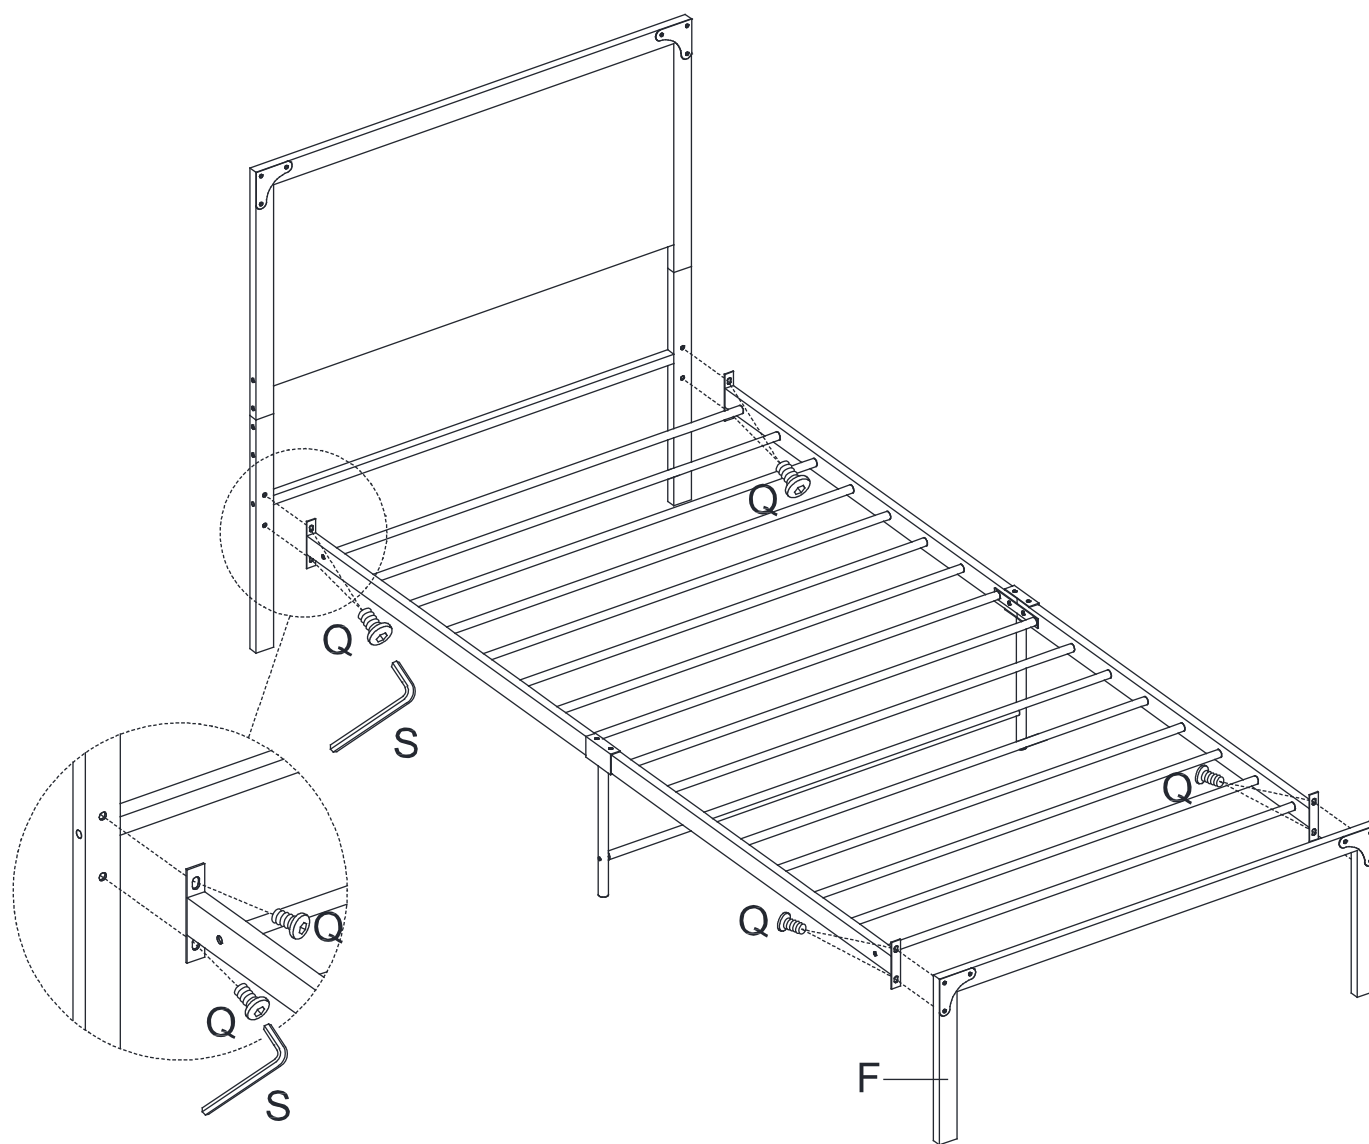

Attach headboard (A+B+C), footboard F*1 to the assembled bed board with bolts Q*8, and then tighten them with Alley Key S. NOW YOU CAN TIGHTEN ALL THE BOLTS.