



drawer chest

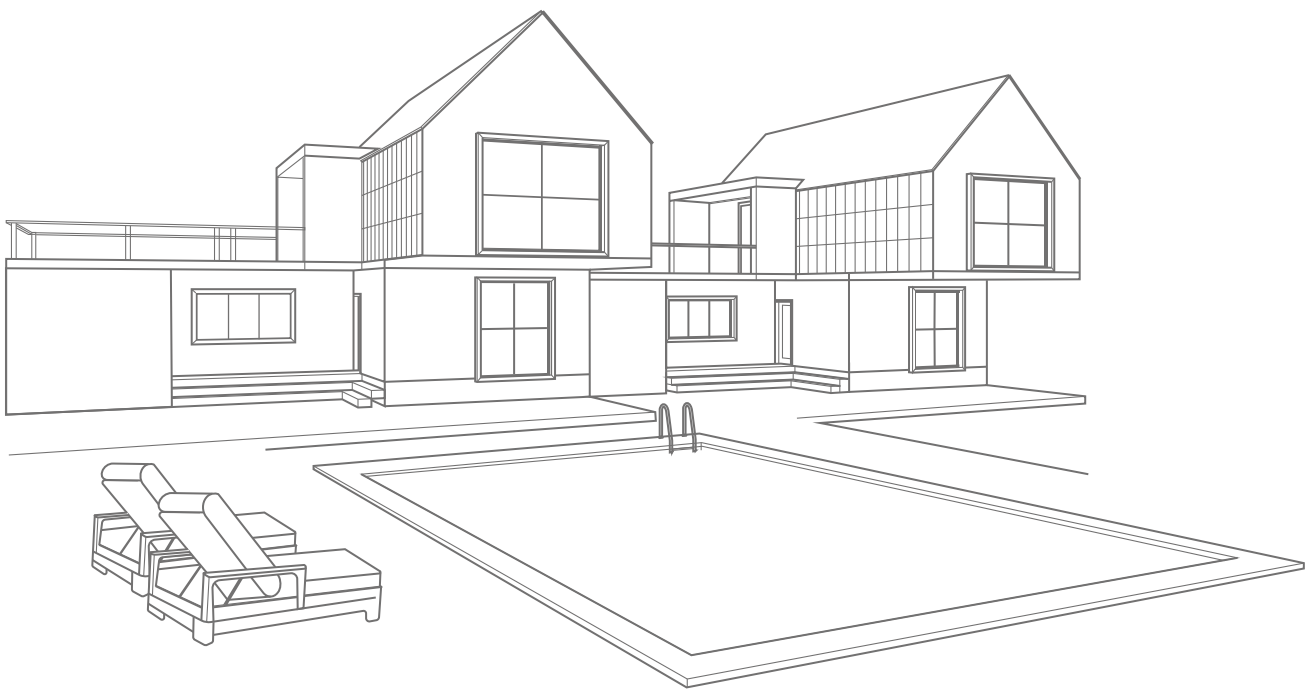


INSTALLATION INSTRUCTION













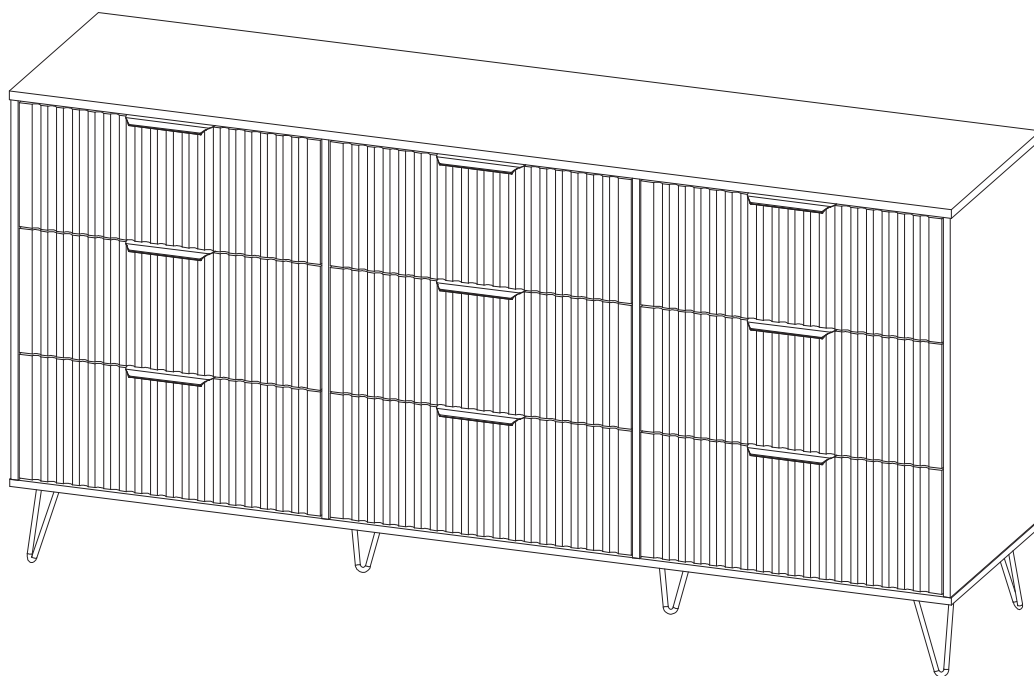


Thank you for purchasing our products. Please contact us if you have difficulty with assembly or need replacement parts. Our customer service is here to assist you.

BOARD IDENTIFICATION

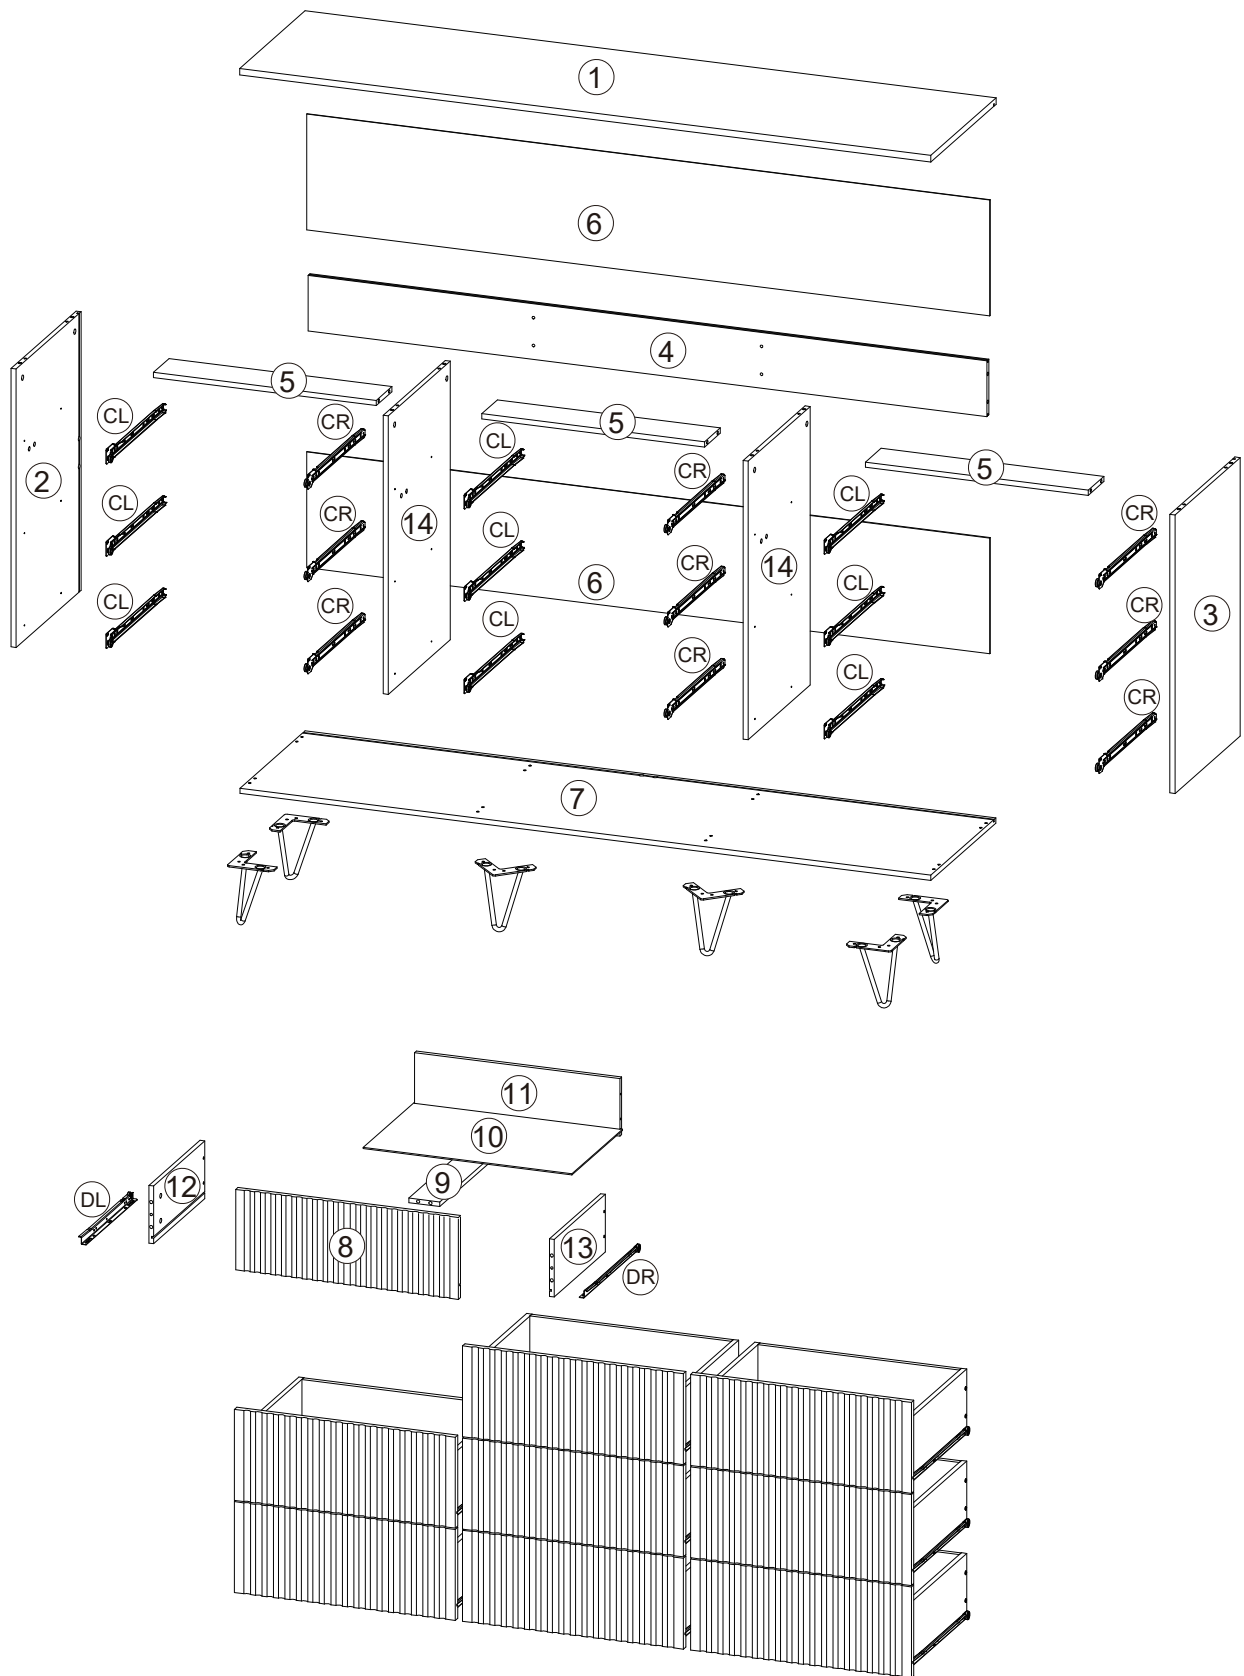


BOARD IDENTIFICATION

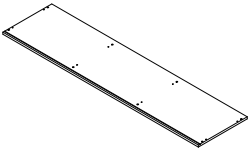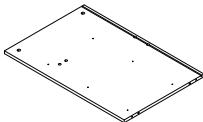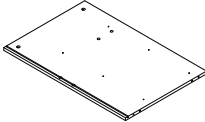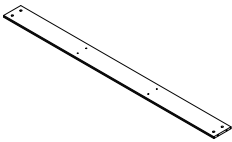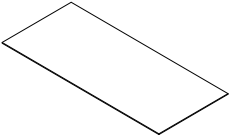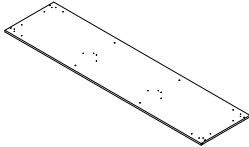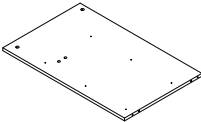				
1 × 1	2 × 1	3 × 1	4 × 1	5 × 3
				
6 × 2	7 × 1	8 × 9	9 × 9	10 × 9
				
11 × 9	12 × 9	13 × 9	14 × 2	

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

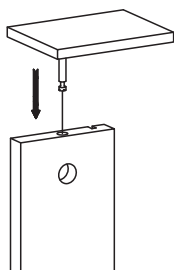


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

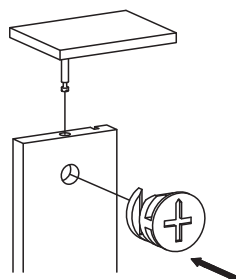


Stuff the camlock into the round hole. The arrowpoints to the cambolt.

3

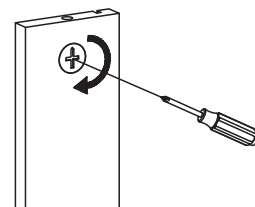


Turn clockwise about 180° to lock the plate.

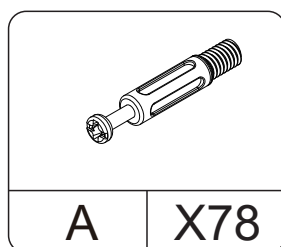

A X78

Cam bolt
Φ6×40

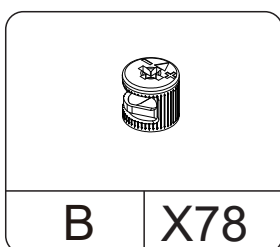


B X78

Cam lock
Φ12×10

14inch

x9

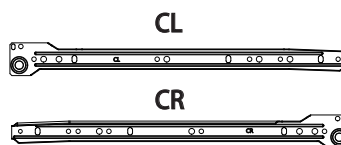

CL



DR




CR




DL

▲ Before installing the rails, please note the differences and installation directions of the four rails.

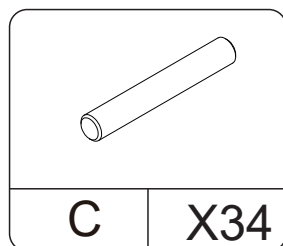


C X34

Wood dowel
Φ6×40

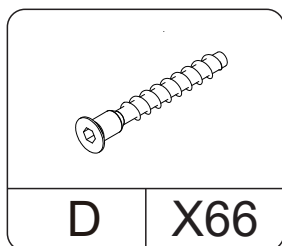


D X66

Screws
M5×40

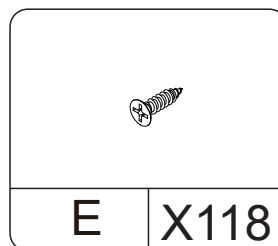


E X118


Screws
M3.5×12

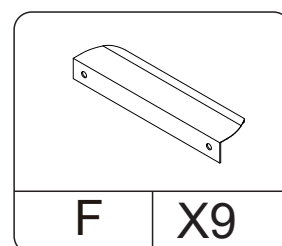


F X9

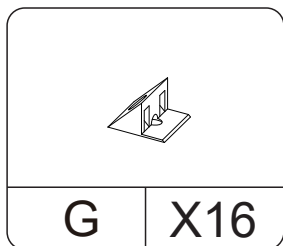


G X16

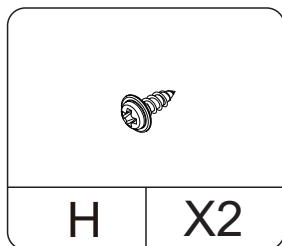


H X2

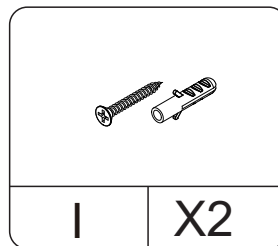


I X2

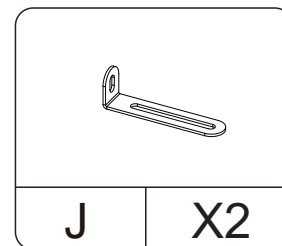



J X2

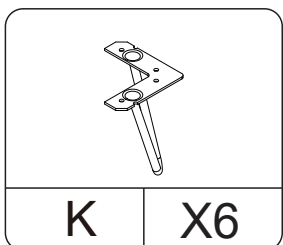

K X6




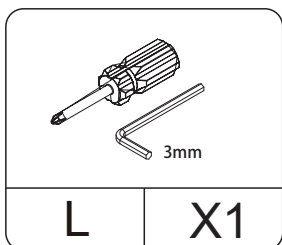


L X1



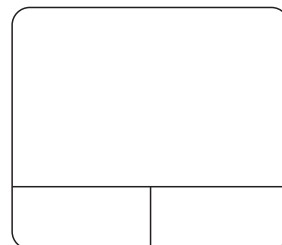
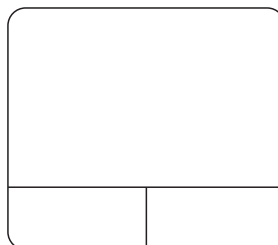


INSTALLATION STEPS

STEP1:




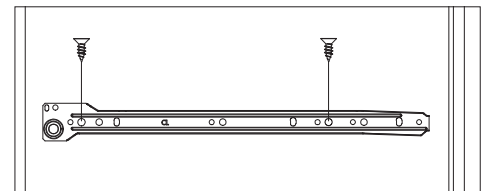
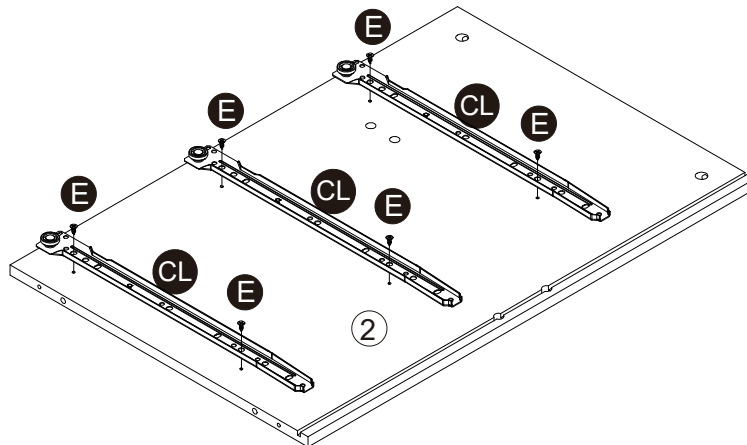
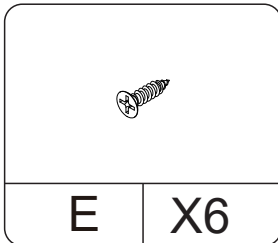
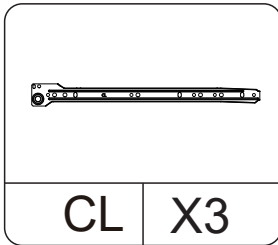


STEP2:

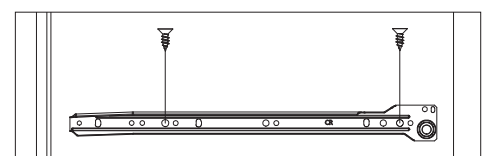
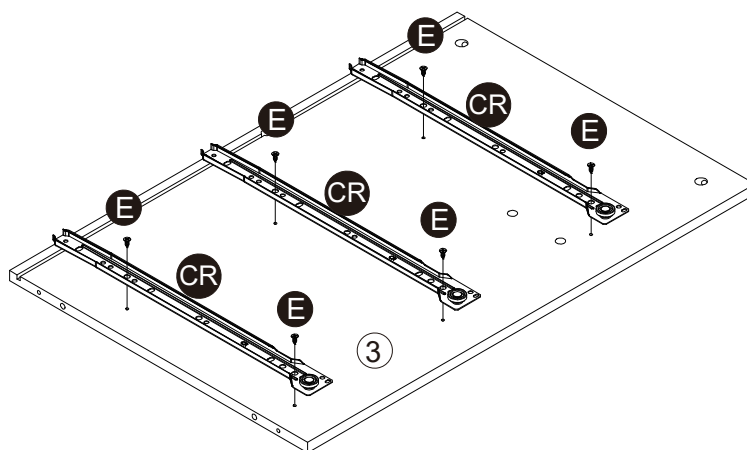
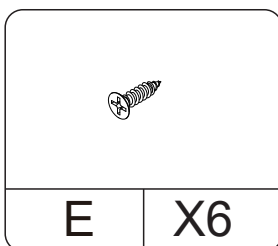
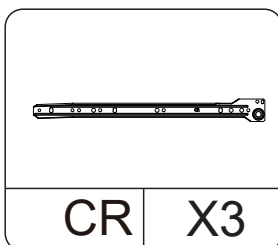


INSTALLATION STEPS

STEP3:

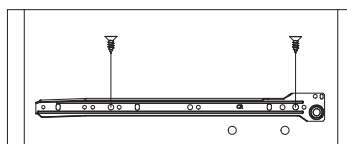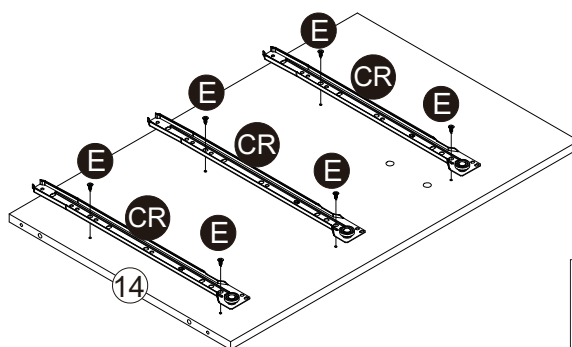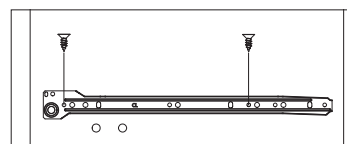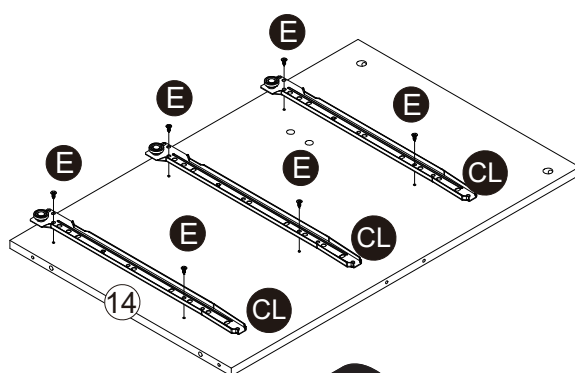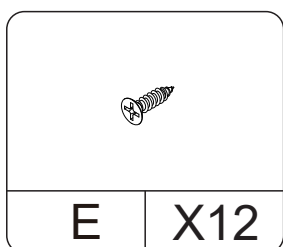
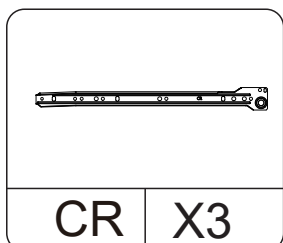
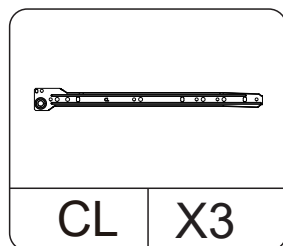


STEP4:

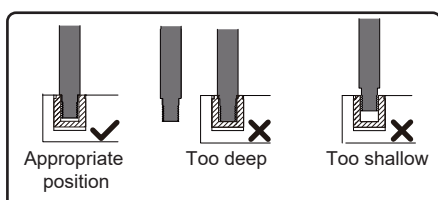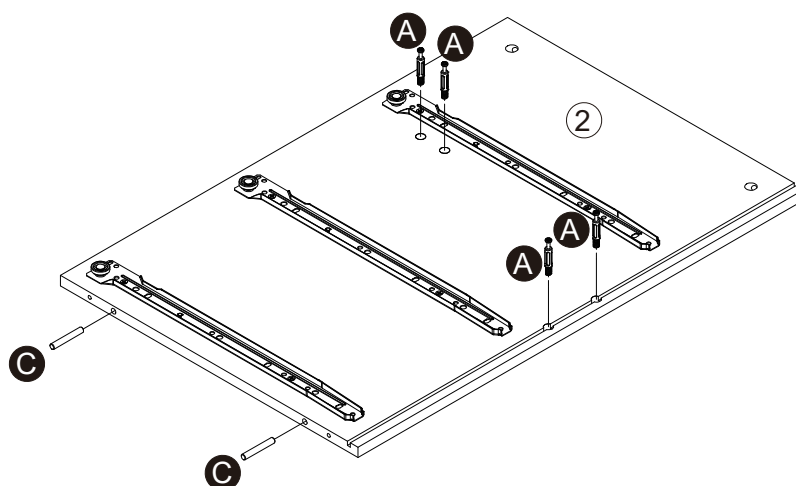
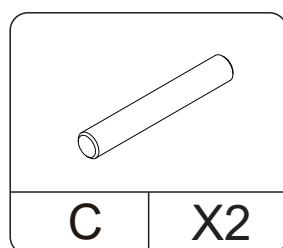
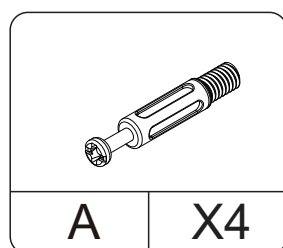


INSTALLATION STEPS

STEP5:

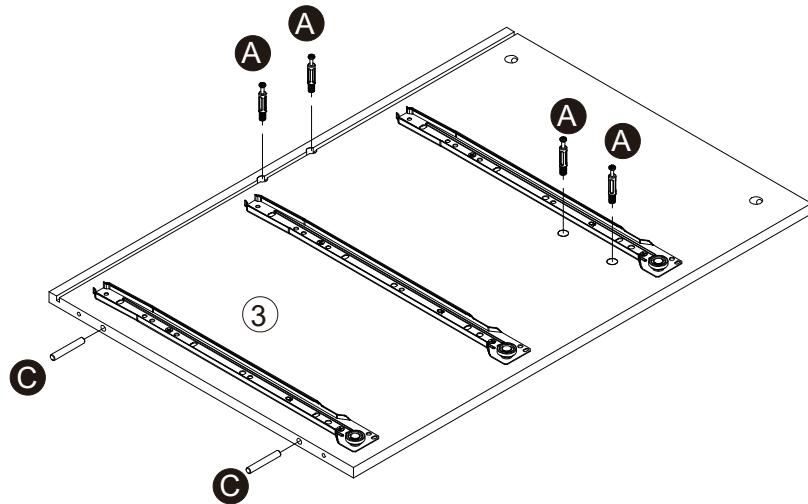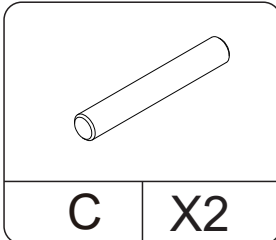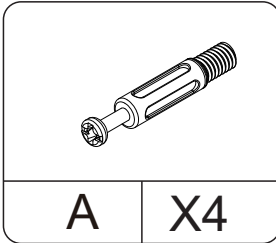

STEP6:

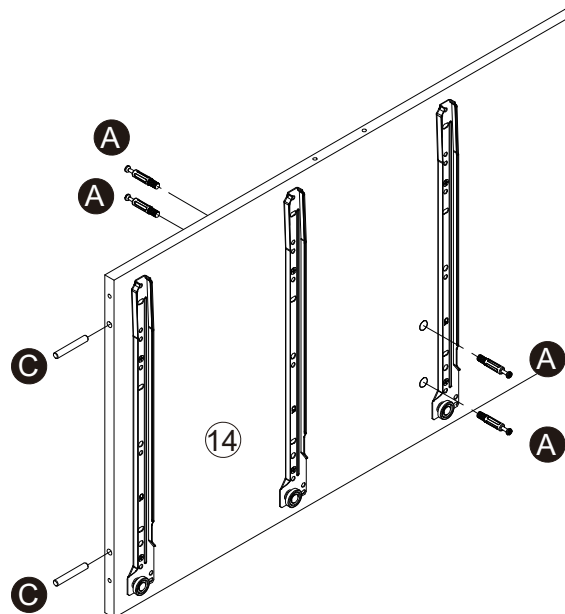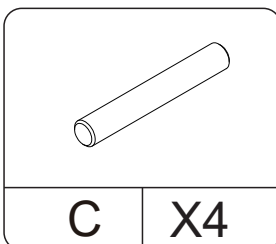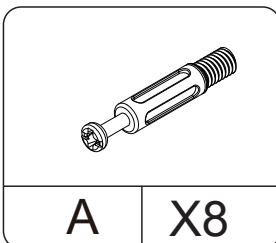

x2


INSTALLATION STEPS

STEP7:




B

X4

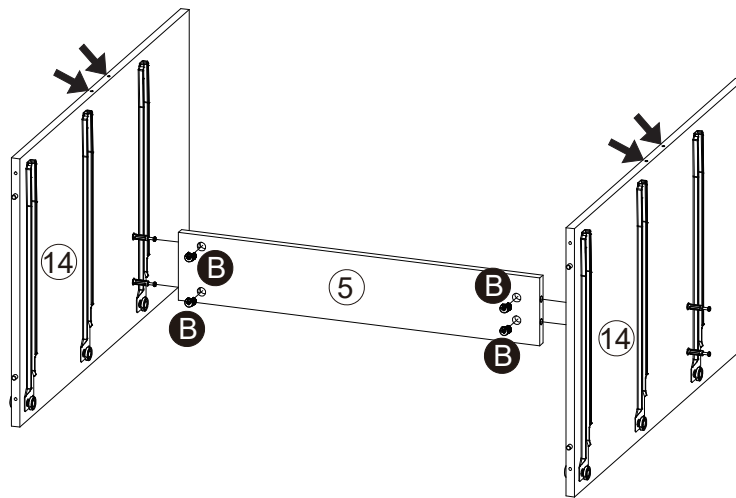


STEP8:





D

X4


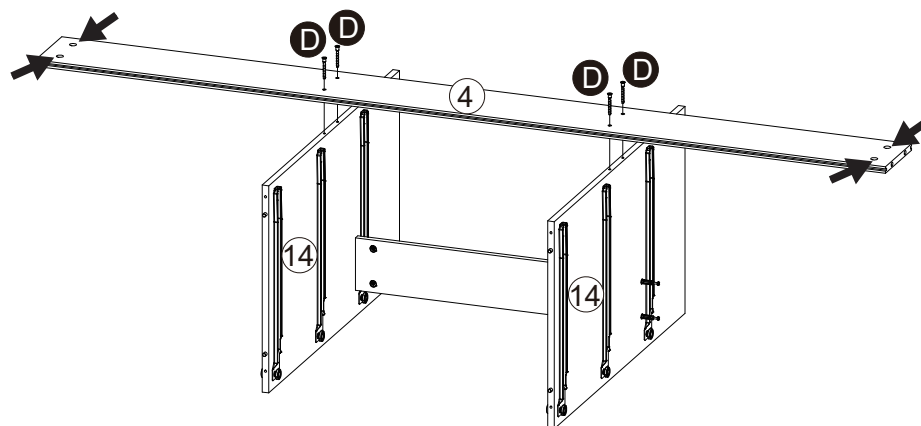


INSTALLATION STEPS

STEP9:

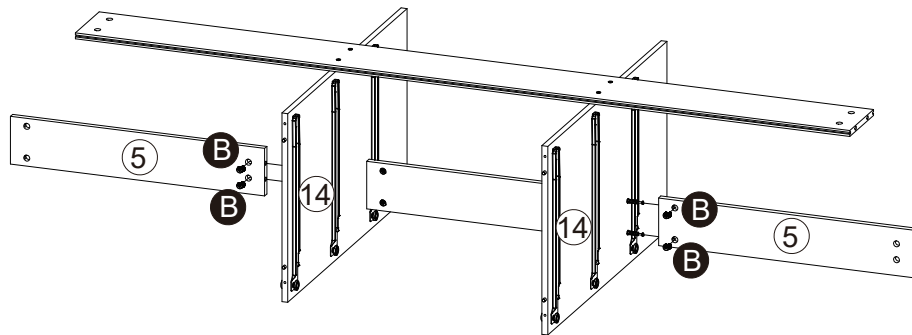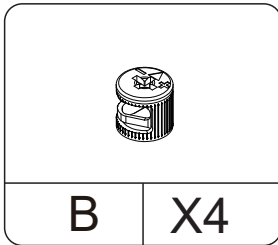


STEP10:

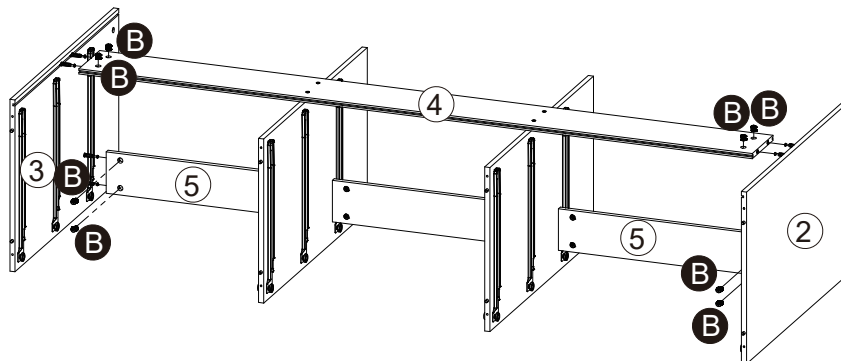
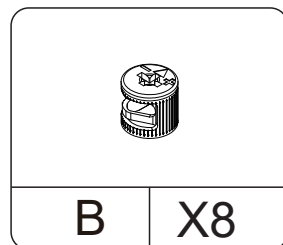


INSTALLATION STEPS

STEP11:

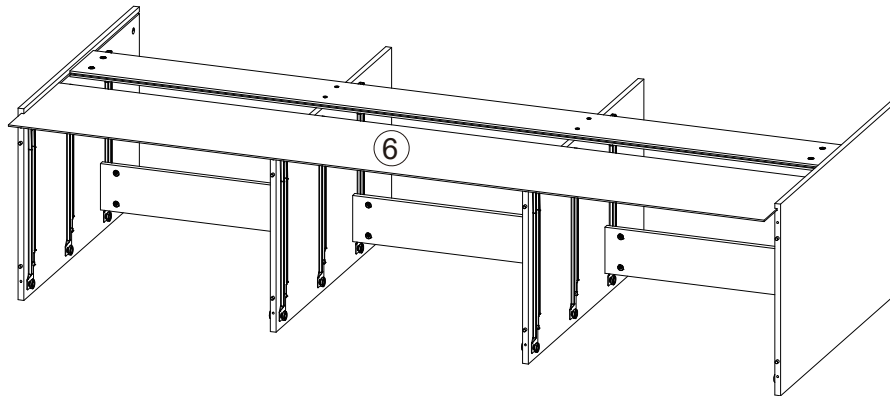


STEP12:

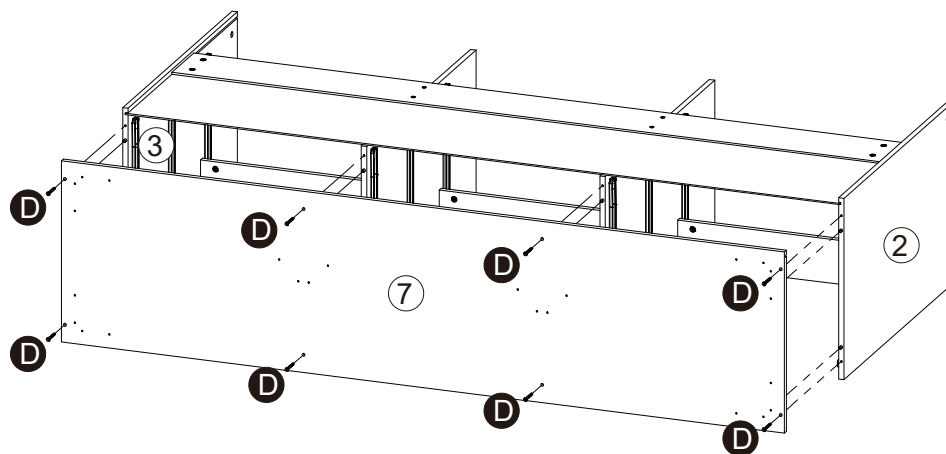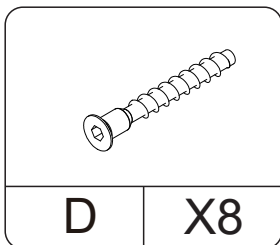


INSTALLATION STEPS


STEP13:

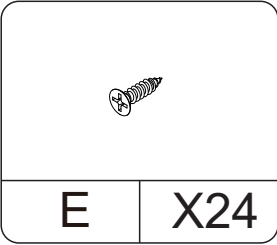


X24

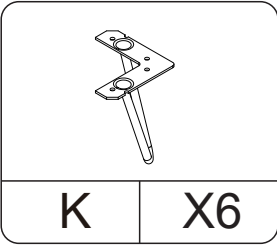

X6


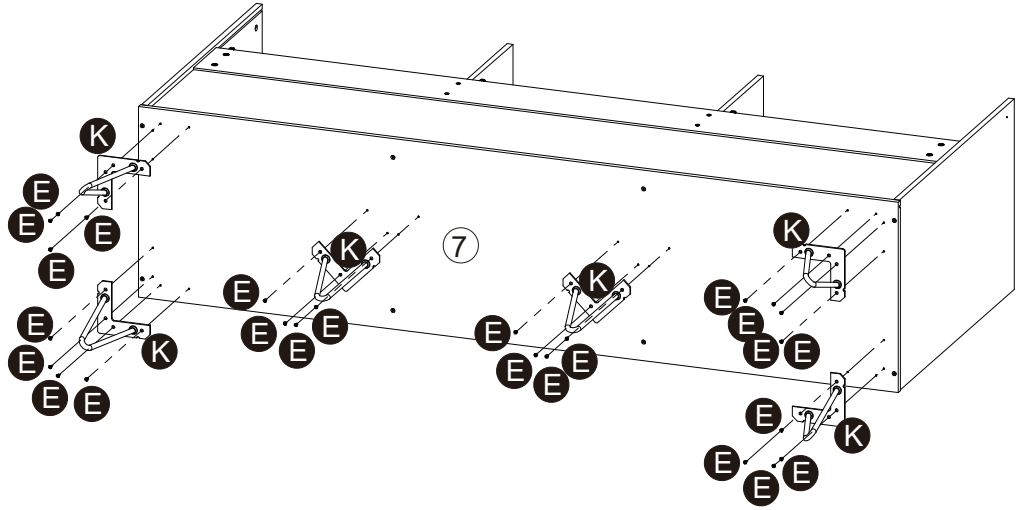


STEP14:


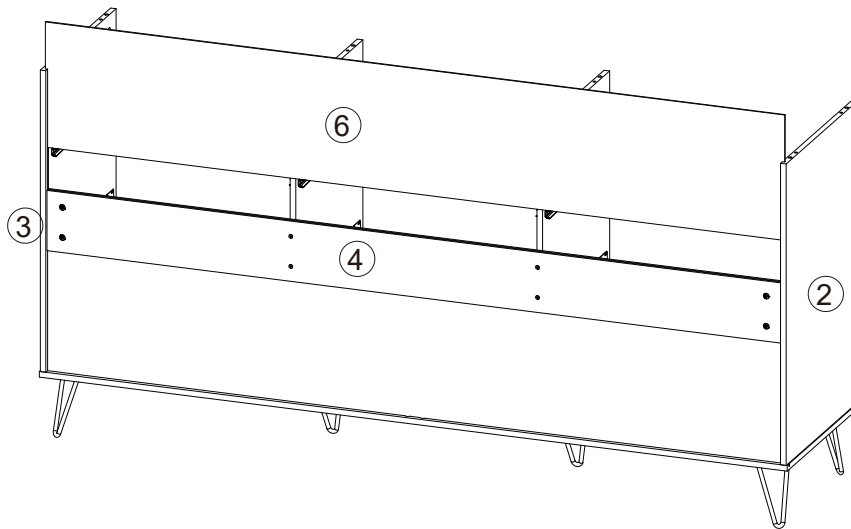


INSTALLATION STEPS

STEP15:

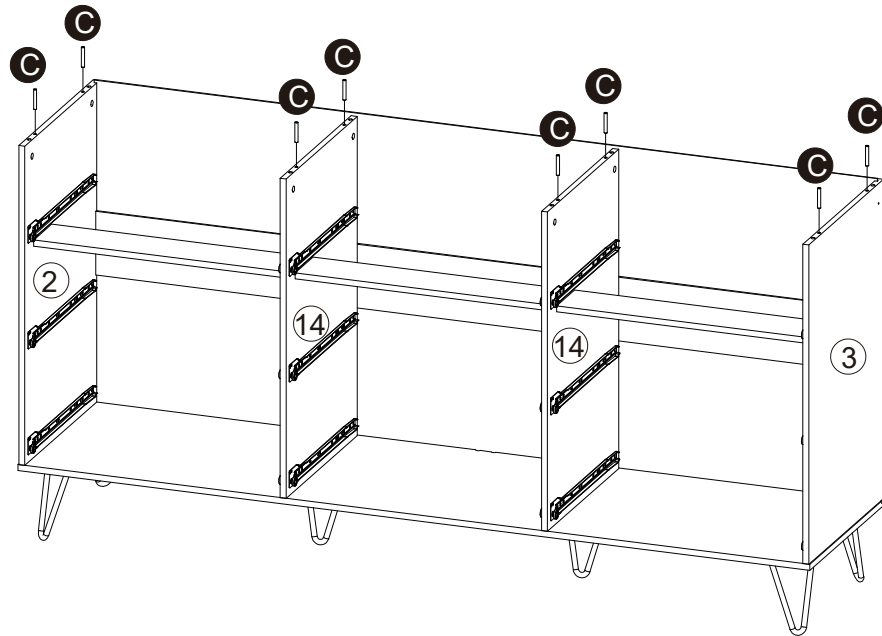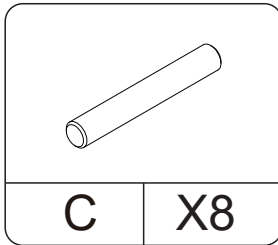

STEP16:

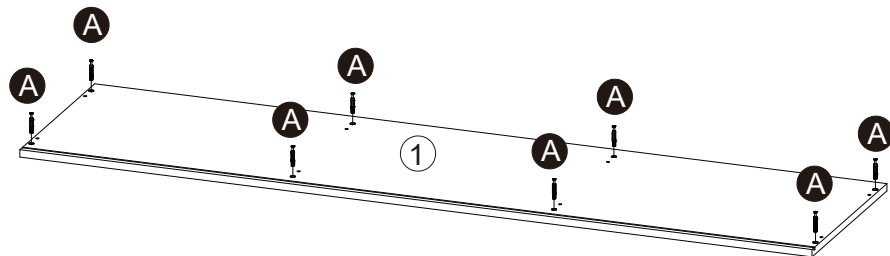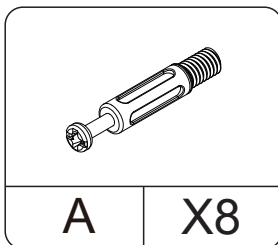


INSTALLATION STEPS

STEP17:



B

X8

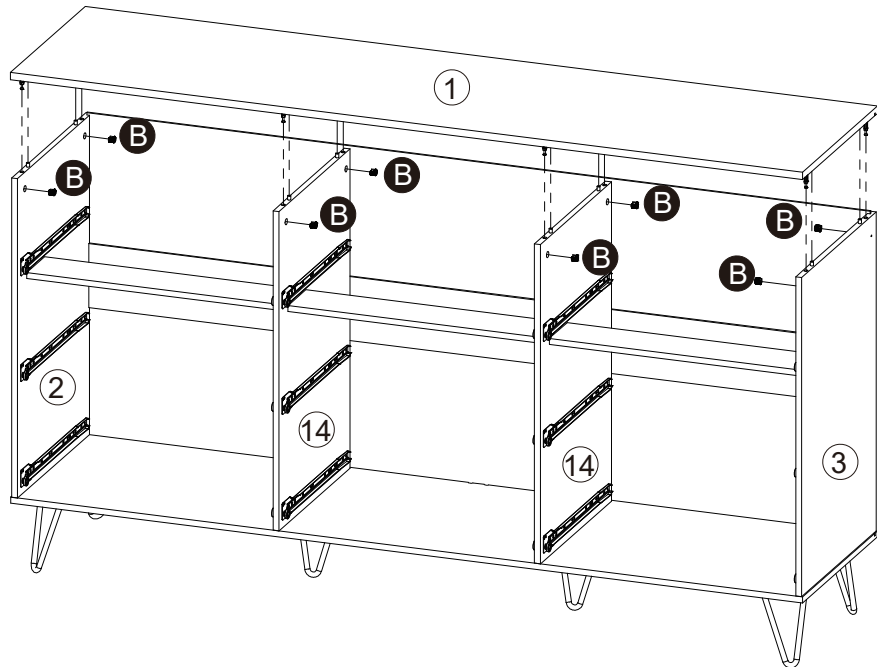

STEP18:




E

X16






G

X16

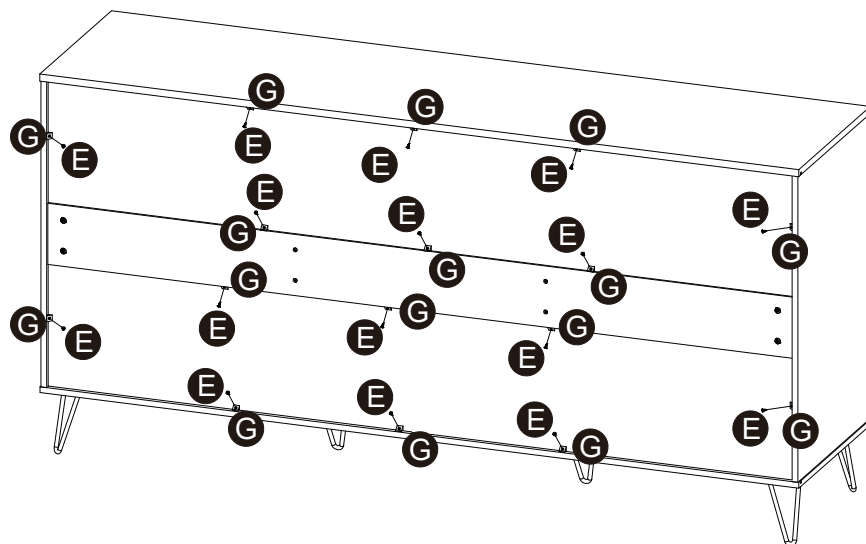



INSTALLATION STEPS

STEP19:

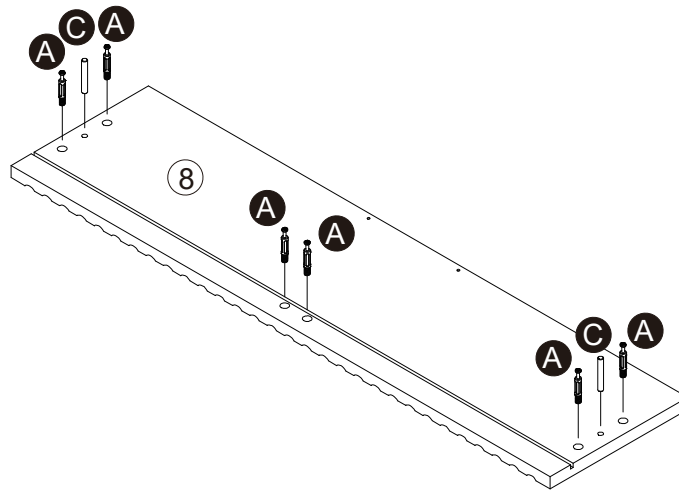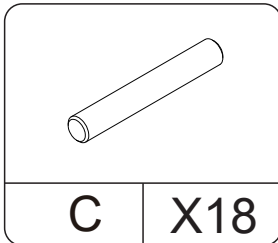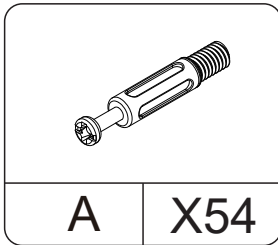

x9


STEP20:

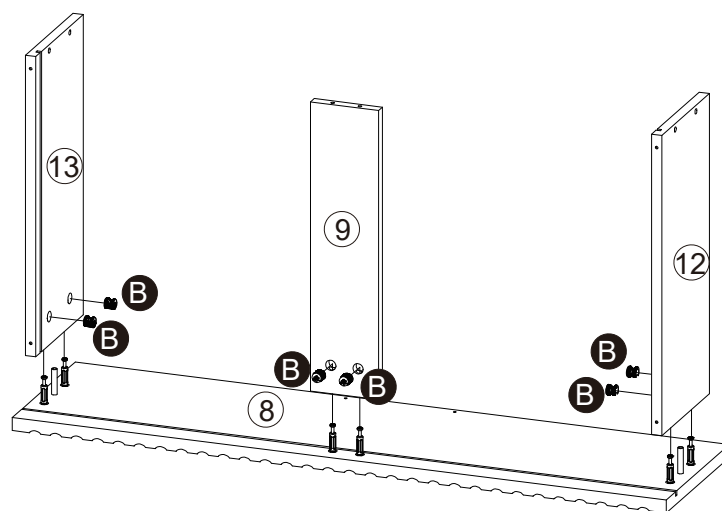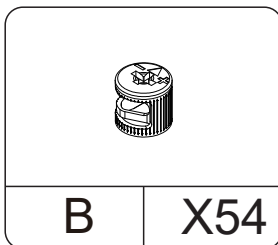

x9


INSTALLATION STEPS

STEP21:

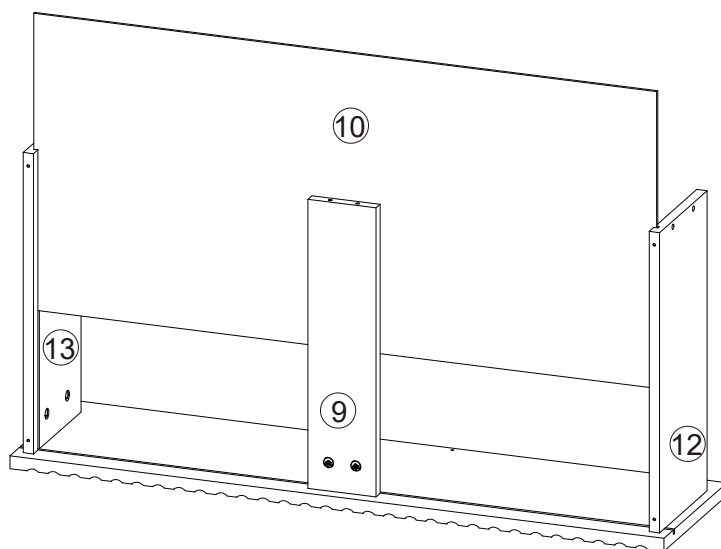


x9

STEP22:

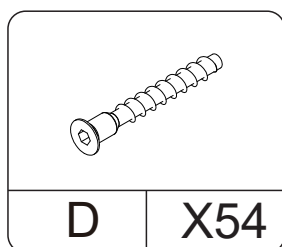

D





X54

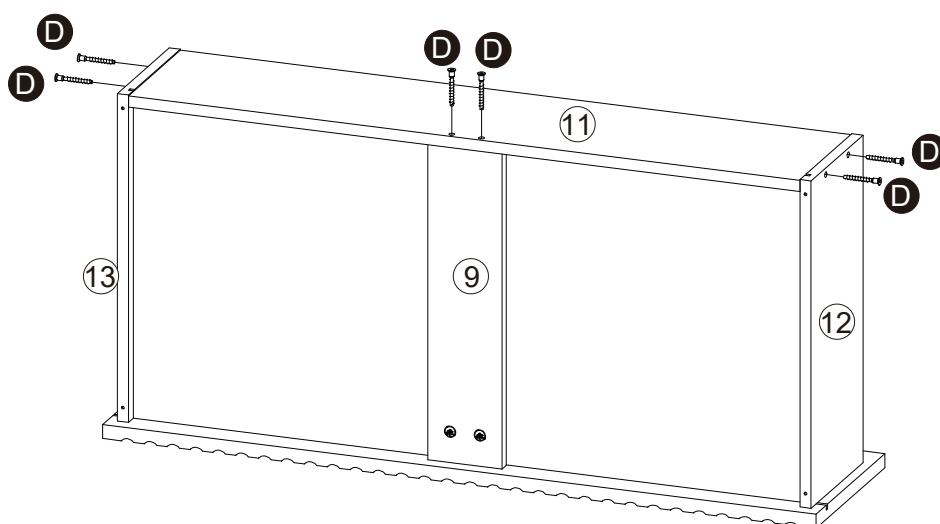

x9




INSTALLATION STEPS

STEP23:

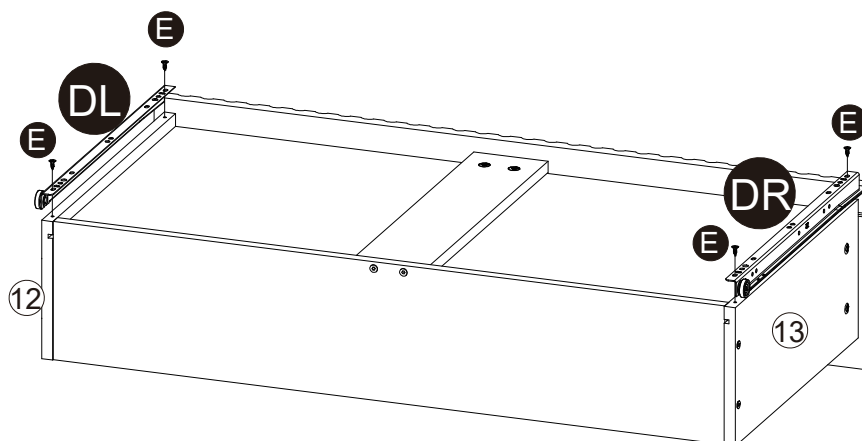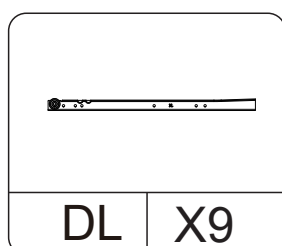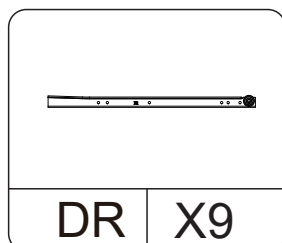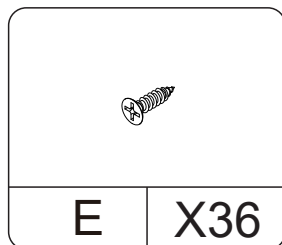

x9


STEP24:

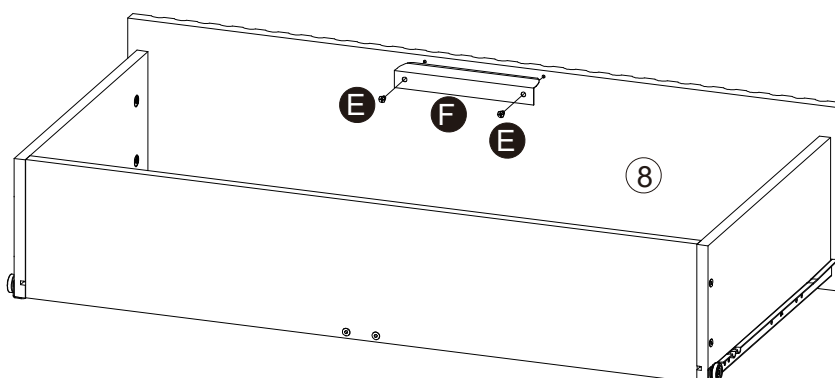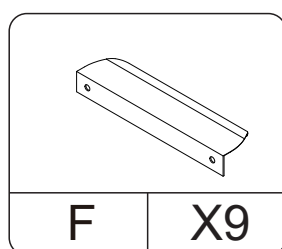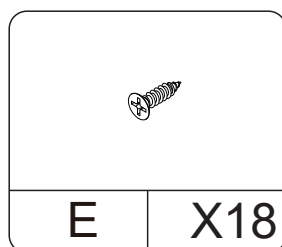

x9

INSTALLATION STEPS

STEP25:

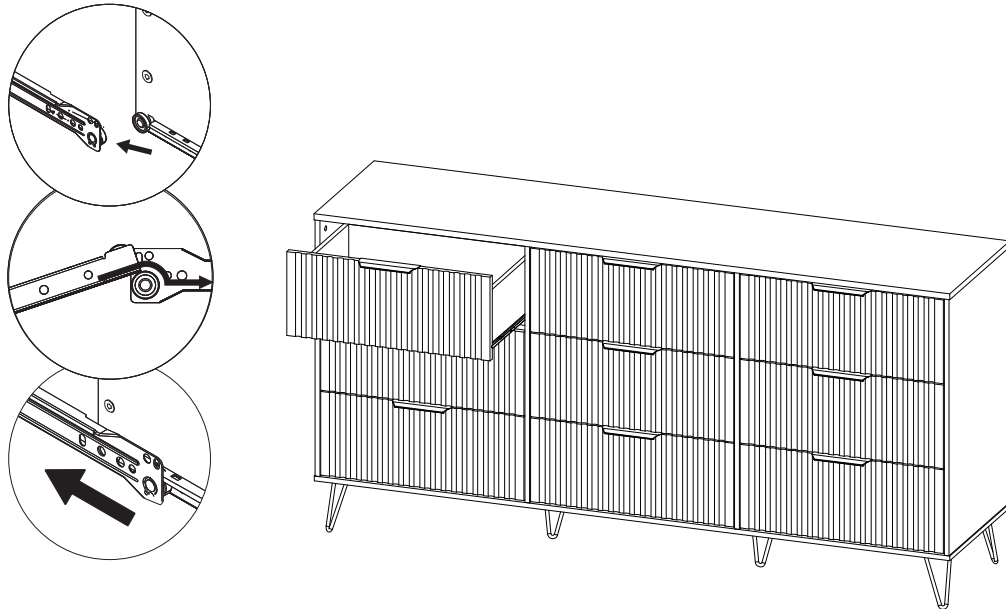

STEP26:

