


OWNER MANUAL

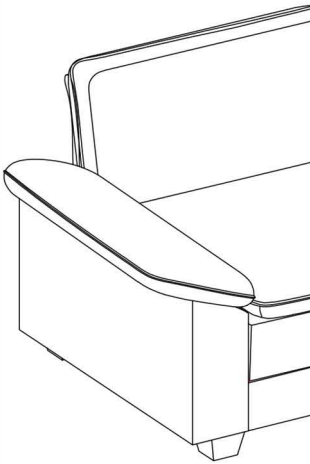

WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.



MAINTENANCE AND WARNING

Please read the manual thoroughly
before you start installing.

Please keep the product away from
sharp object.

Packaging and small parts may have
chocking hazard, please keep them away
from children and pets.

Please clean the product according to each
clean code, check the product description
for more information.

Please keep the product away from
fire.


If you have any other questions, please
contact us, we will be glad to help you out.

If the product is placed under direct
sunlight, the pattern or color might fade
away overtime.

Check the product periodically to make
sure everything is secured and tightened.

Always use proper tools for installation.

Do not jump on the product.

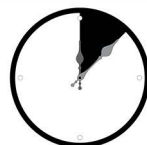

Around 25 min

PRODUCT DESCRIPTION

Premium Corduroy

Upholstery-Crafted with soft, ribbed corduroy, the fabric delivers warm texture, skin-friendly comfort, and elevated abrasion resistance for long-term use.

Flexible Modular

Architecture-Includes left-arm, right-arm, armless pieces, an ottoman, and a dual-arm single seat, enabling custom layouts for various room sizes.

Ergonomic Sloped Arms + Secured Arm Pillows-Angled armrests support natural posture, while the arm pillows connect via zipper and Velcro to prevent shifting.

Reinforced Wood-and-Metal


Frame-A solid wood core paired with a durable metal back frame ensures stability, reduced noise, and long operational life.

Multi-Layer Seating System-A wide seat base integrates pillow-top foam, high-resilience foam, pocket coils, and serpentine springs; Velcro under cushions and pillows prevents displacement.

EXPLODED VIEW




The product's left and right are determined by sitting posture

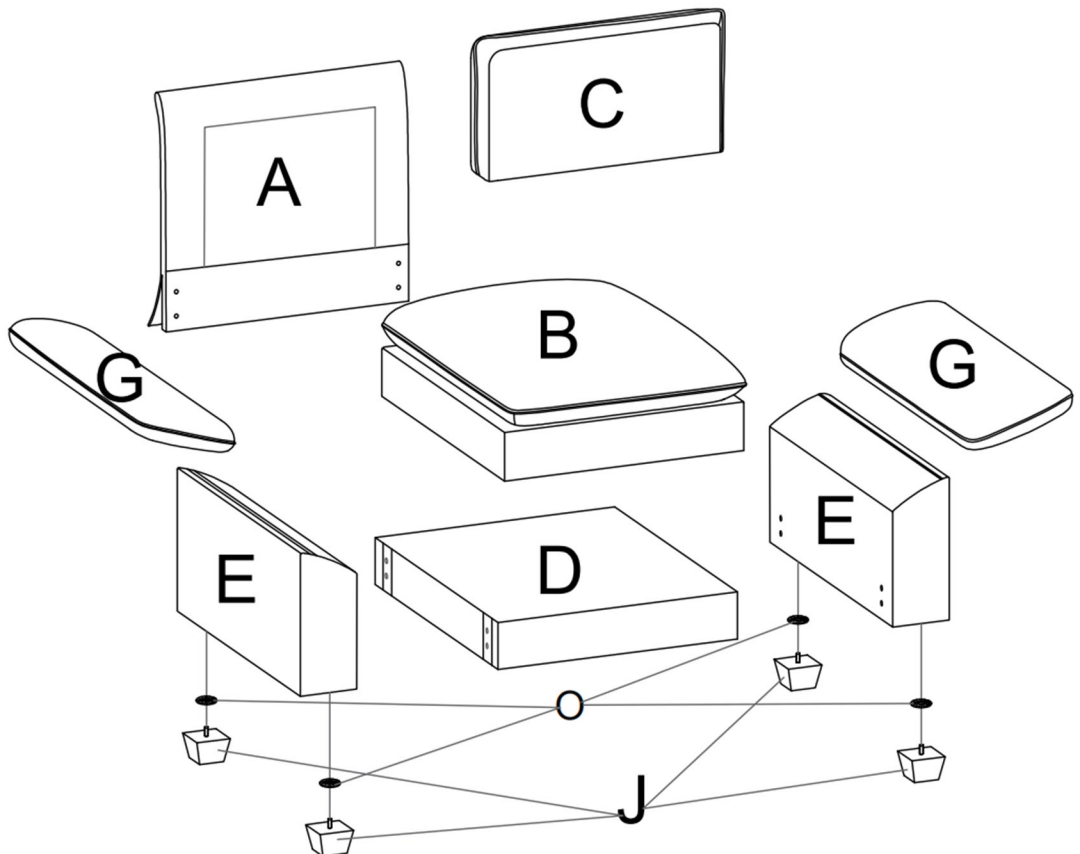


PARTS

A*1

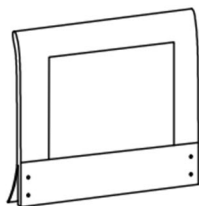

Backrest

B*1

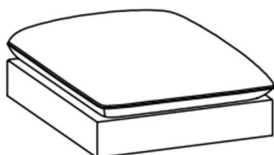


Seat cushion

C*1




Back cushion

D*1

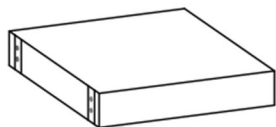

Seat frame

E*2

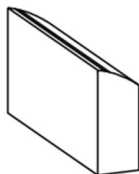

Armrest

G*2



Arm pillow

J*4




Legs

HARDWARE

TOOL LIST

NOTE: Designated with (★) We provide additional spare parts in the hardware package

①*12+2

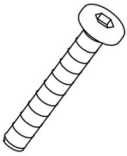

★ Legs

②*12+2



★ Flat washer

③*1



Allen key

O*4+1



Plastic washer

Please make sure all hardware&packing material fitting the list.
Especially some small accessories may be missing during transportation. Please contact us if you have any question.

step 1 ---Cut the plastic air compression bags


Cut the plastic air compression bags, and take out cushions (B) ,(C)and (G). Place them on the side for recover to their original shape, the whole process might take up to 48 hours, you may gently slap on them to speed up the process.





Use care when opening the bag to avoid injury from sudden expansion. Keep away from face and body while cutting.



Please exercise caution when opening the packaging to avoid injury or damage to the product.

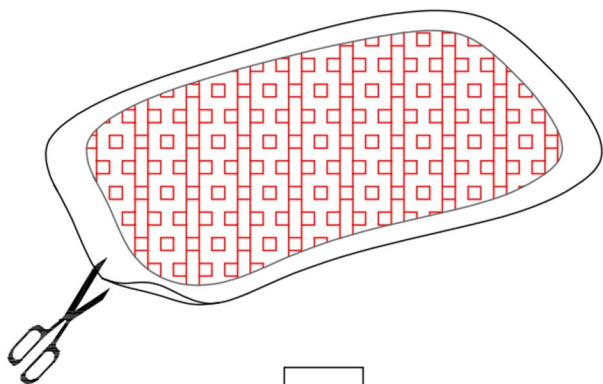


G*2

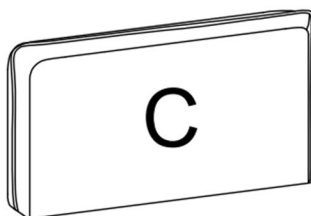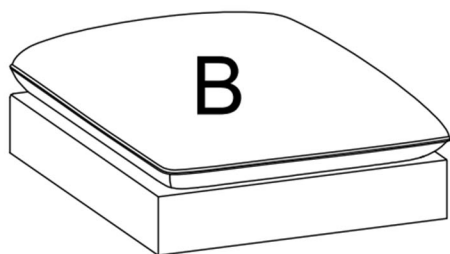

step 2 ---Lift the fabric strips upward

Pull up the hook-and-loop fabric strips surrounding the base frame from underneath per illustration.

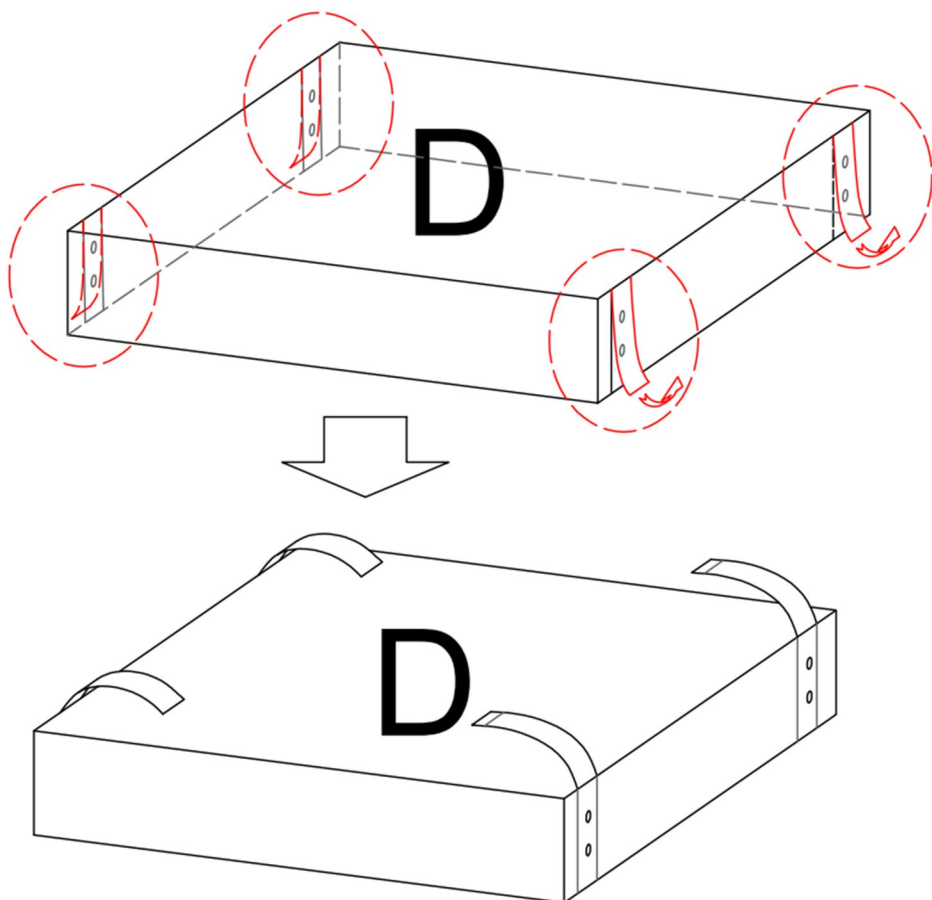


step 3---Install the Armrest

Place the Armrest (E) on a flat surface as shown, then place the Seat Frame on top of the Armrest, place one bolt (1) and one flat washer (2) through the pre-drilled hole on both Seat Frame and Armrest, use the allen wrench (3) provided to tighten all the bolts.





First add one flat washer on each bolt as shown, use the allen wrench provided to tighten all the bolts by 30-50% first, make sure that all bolts are aligned correctly before fully tightening.

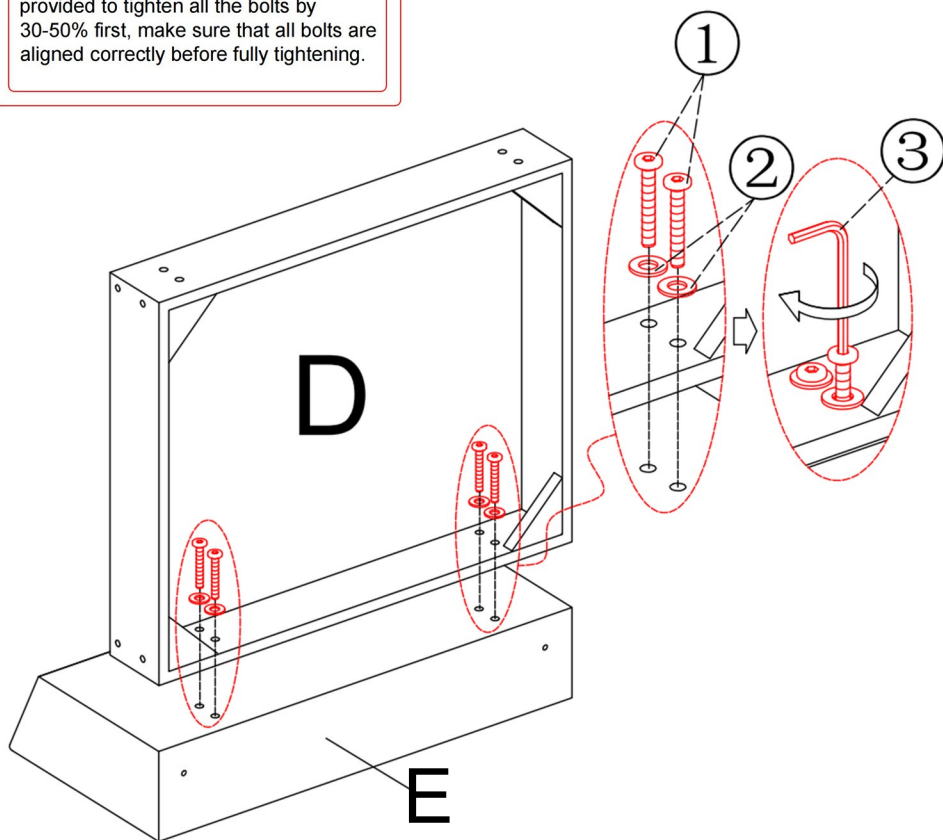


step 4 ---Install the other Armrest

Place the Armrest on a flat surface as shown, then place the assembled parts on top of the Armrest, place one bolt (1) and one flat washer (2) through the pre-drilled hole on both Seat Frame and Armrest, use the Allen wrench (3) provided to tighten all the bolts.

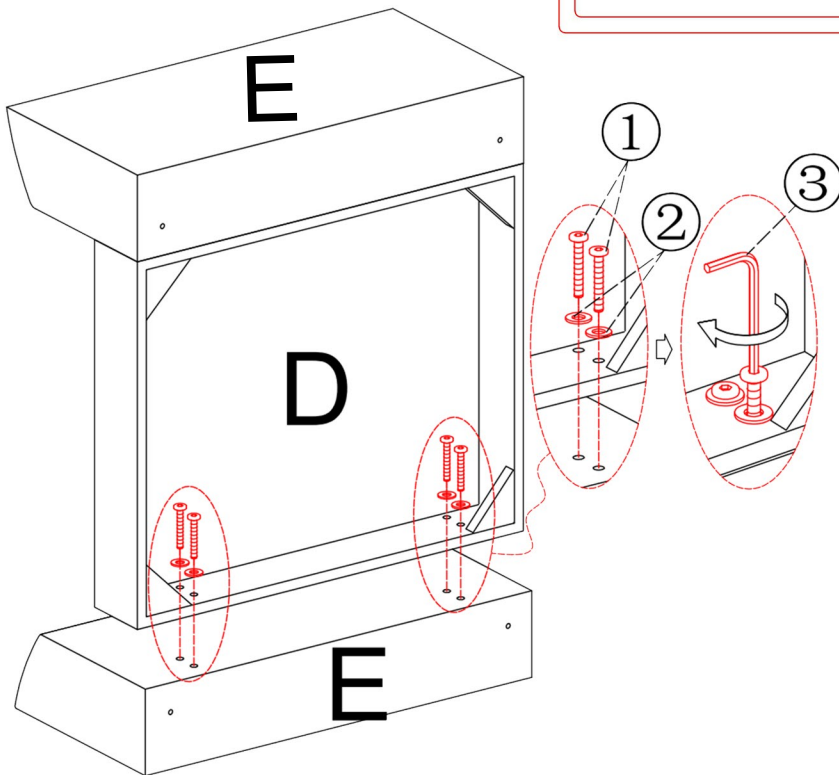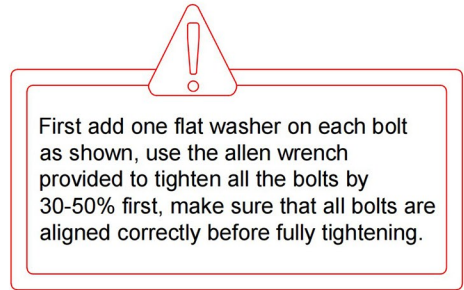

step 5 ---Sofa legs

Place the assembled parts upside down as shown, then twist the Sofa Legs into each corner of the Armrest as shown.

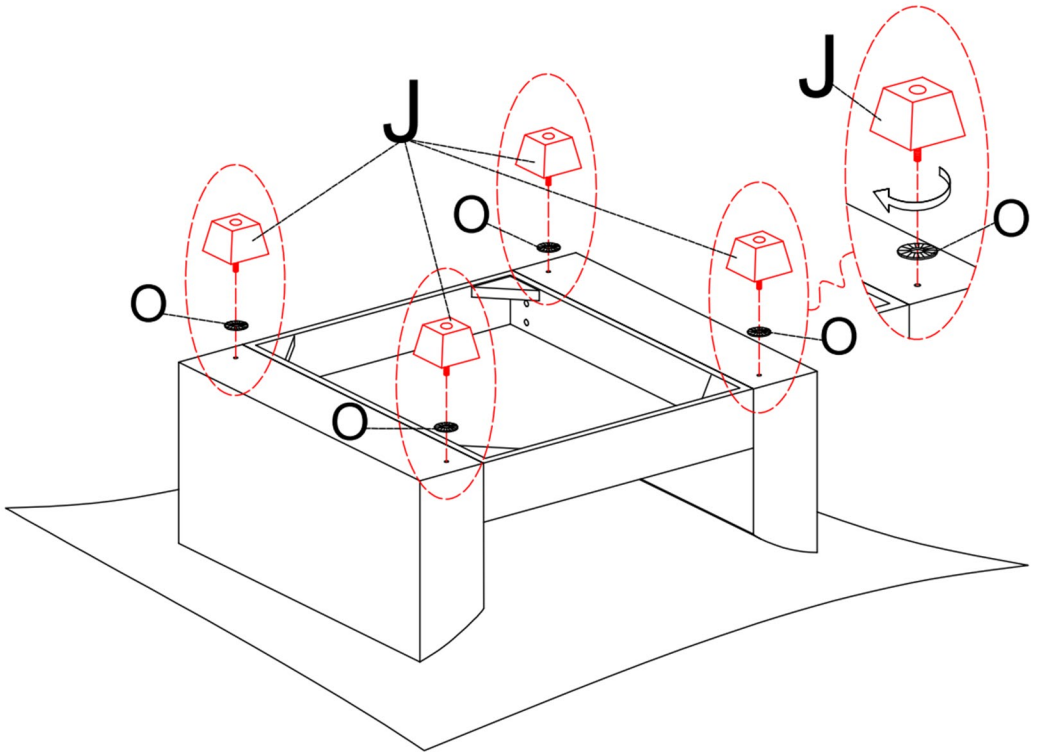


step 6 ---Install the Backrest

Place the Backrest as near to the assembled parts as possible, make sure the designated holes on both parts are correctly aligned. Use the allen wrench provided to tighten the bolts and washers. After installation, flip down the fabric on the bottom of the Backrest, and tape the Velcro strip to cover the bolt holes.




First add one flat washer on each bolt as shown, use the allen wrench provided to tighten all the bolts by 30-50% first, make sure that all bolts are aligned correctly before fully tightening.

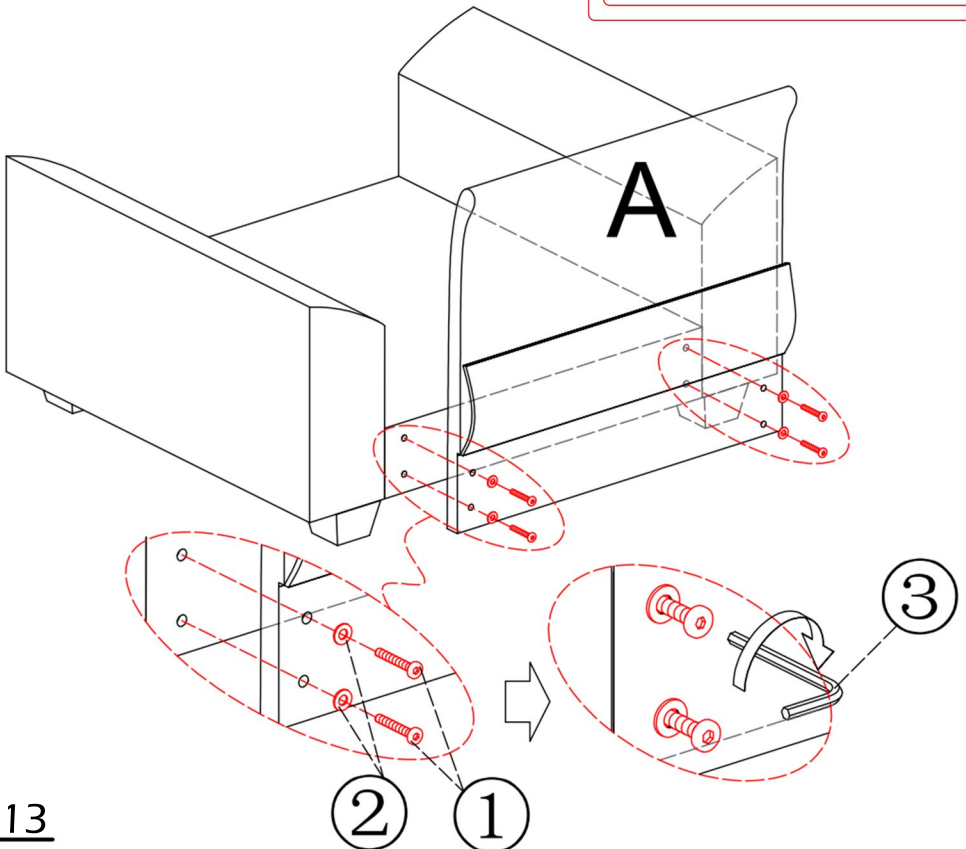

step 7 ---Install the Armrest pillows (G)


Then flip the Pillows (G) on the Armrest (E) and fix it with the Velcro underneath.

Note:Please note the fabric orientation when fitting armrest covers. If fabric shows color variation, rotate 180° and reattach.

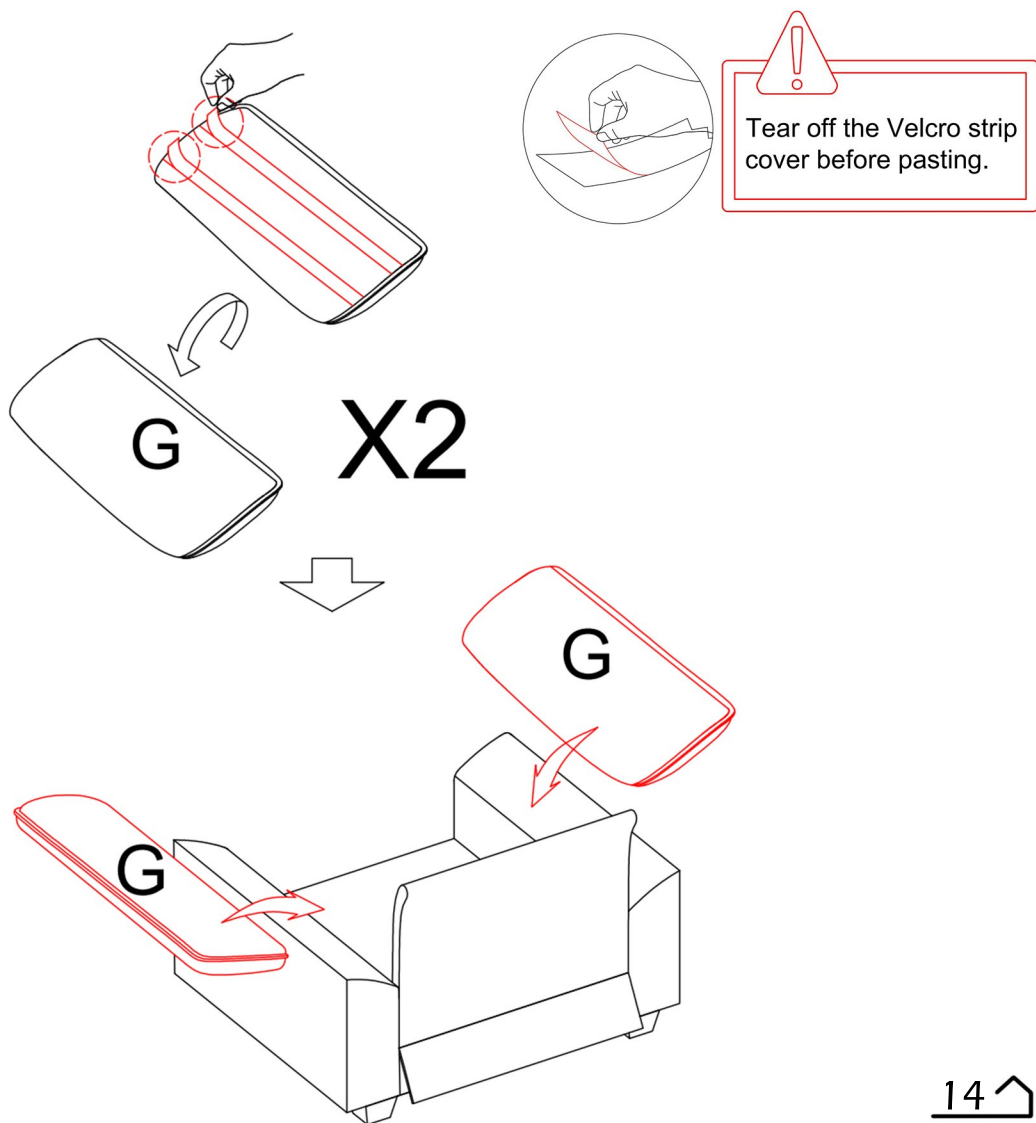


step 8 ---Place the Seat cushion

Place the Seat Cushion (B) onto the chair as illustrated.

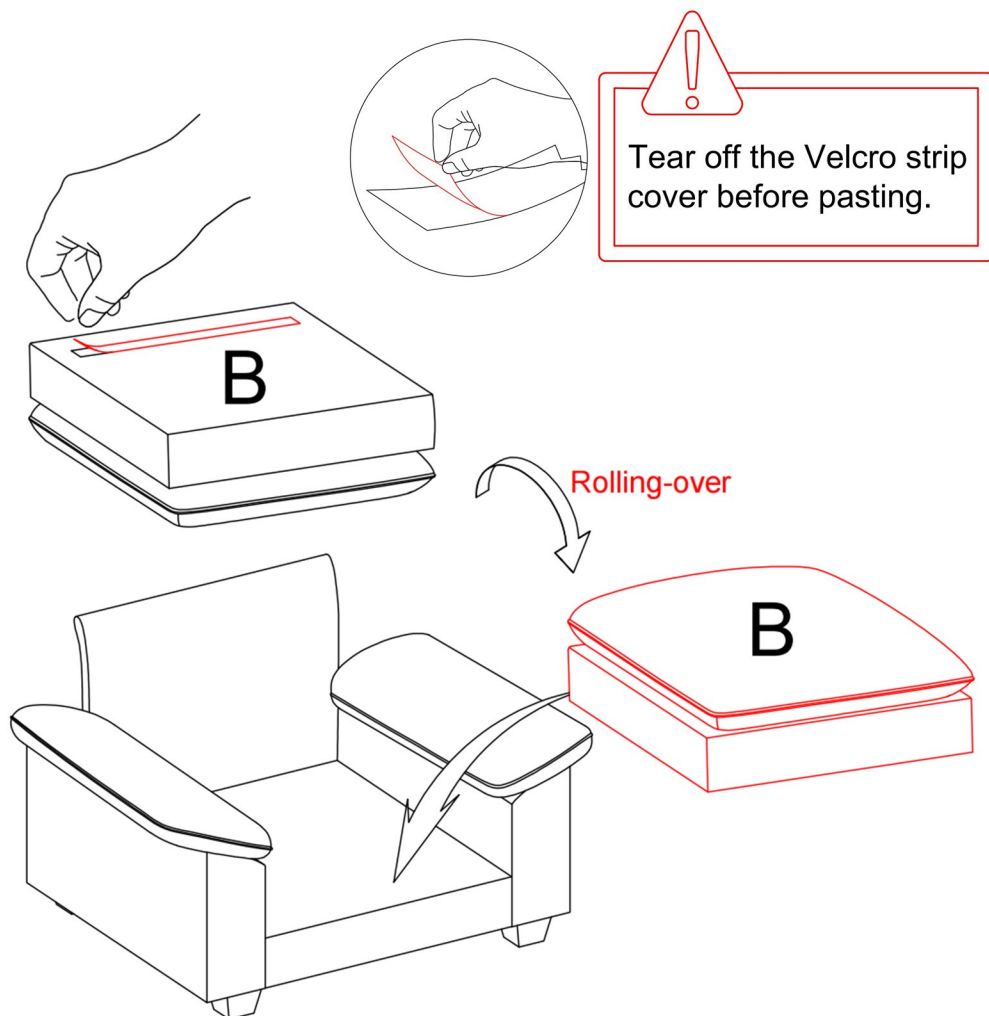


step 9 ---Place the Back cushion

Place the Back Cushion (C) onto the chair as illustrated.

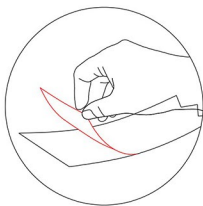


Tear off the Velcro strip
cover before pasting.

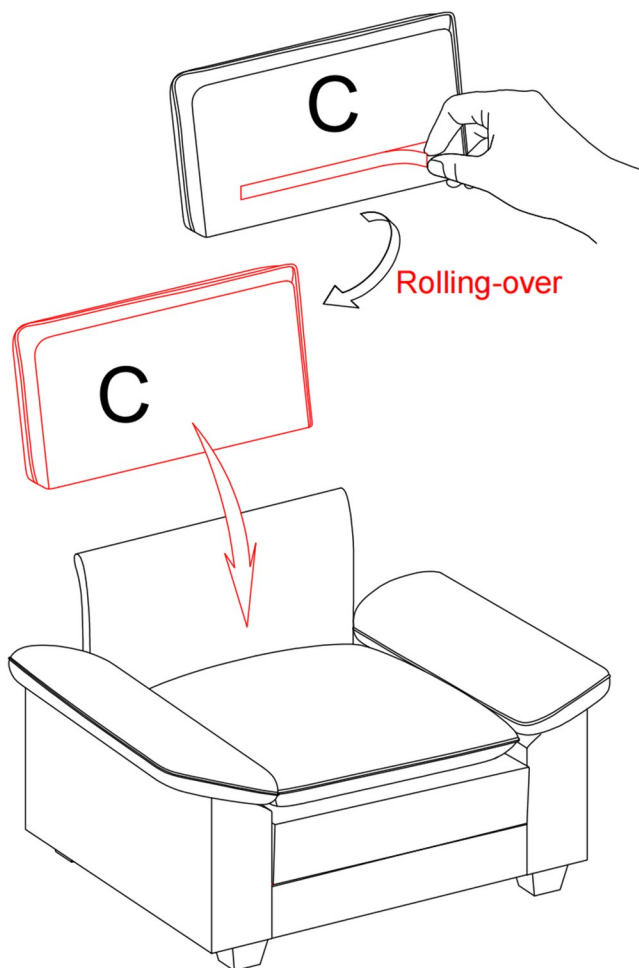

step 10 ---Assemble complete

Assemble complete! Thank you for choosing our product!
Please enjoy!

