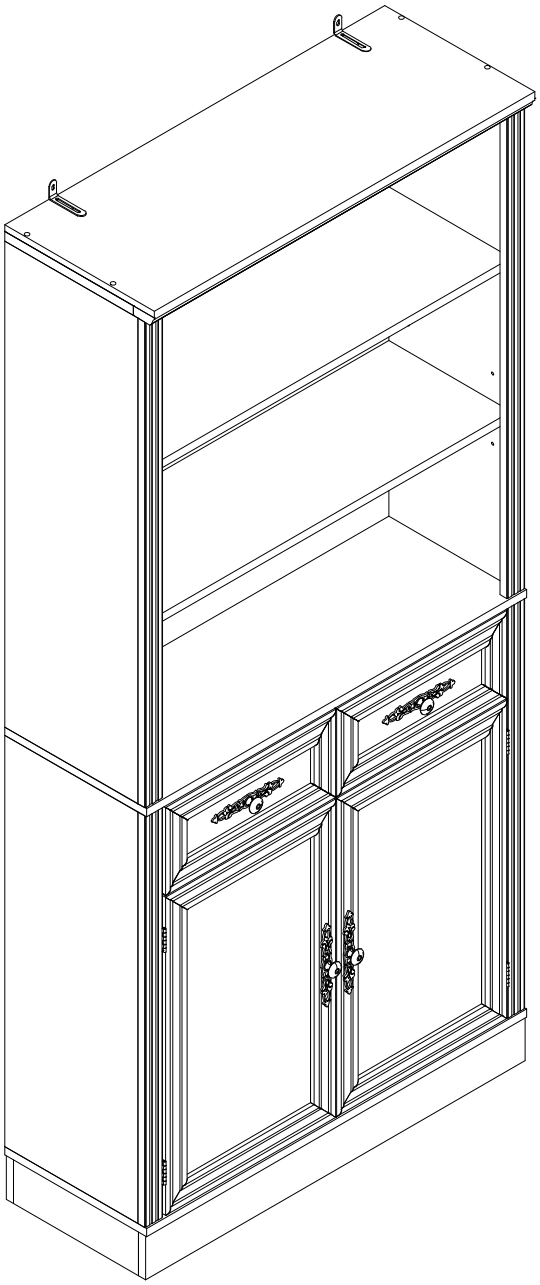
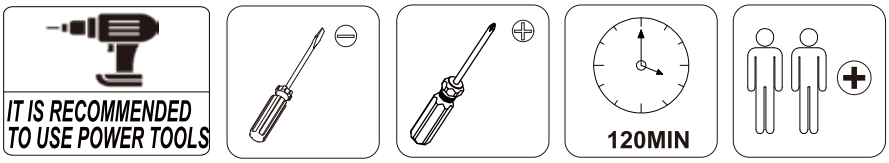
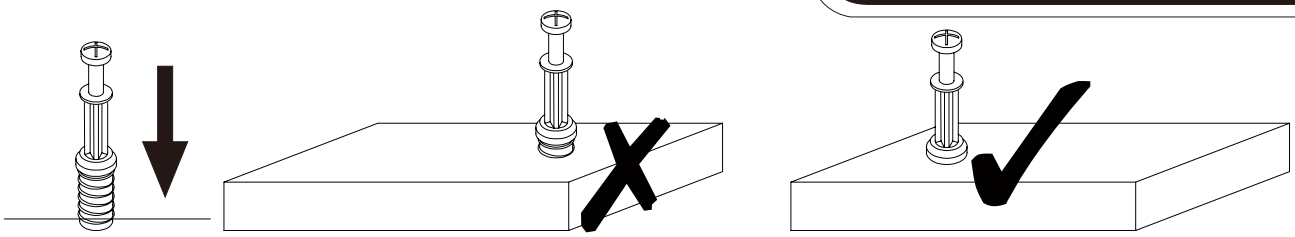
HLG076

Version:1.0

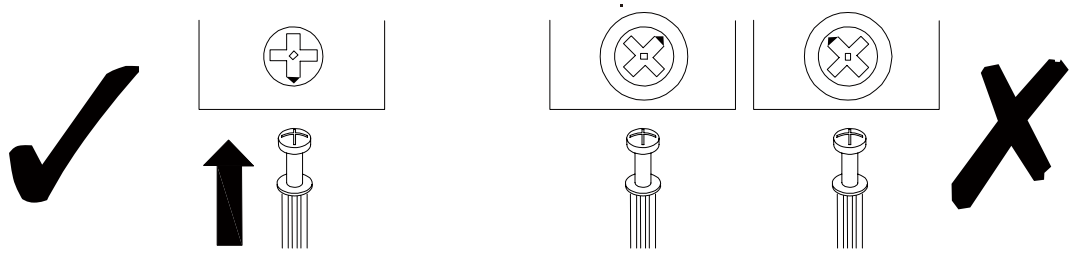




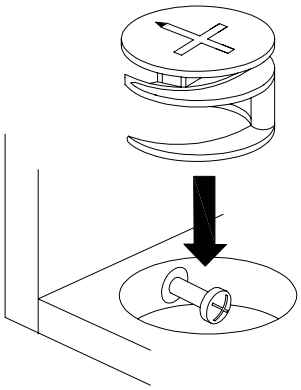
***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**



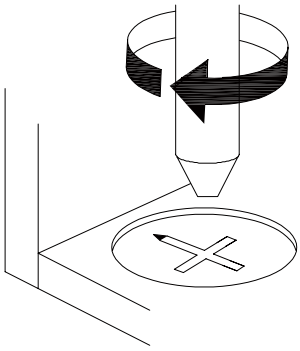
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



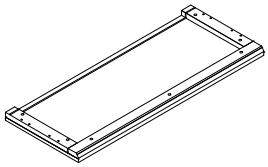
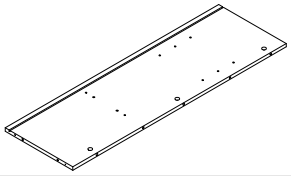
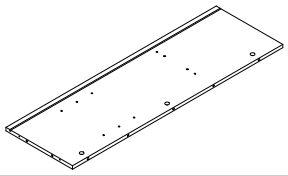
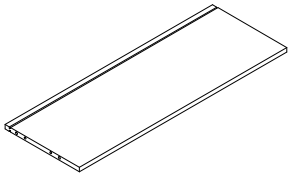
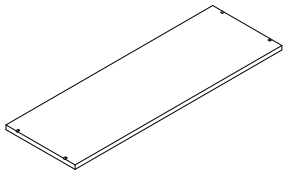
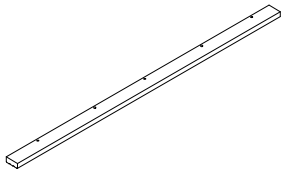
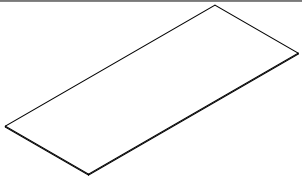
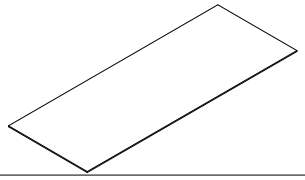
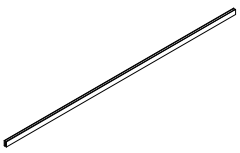
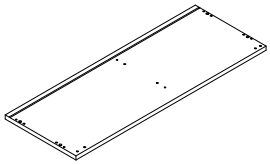
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

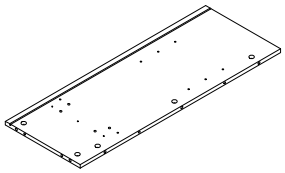
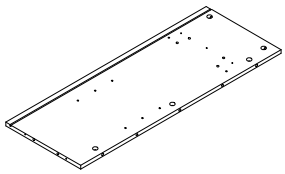
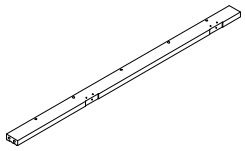
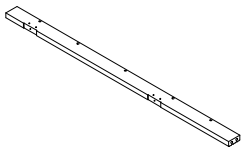
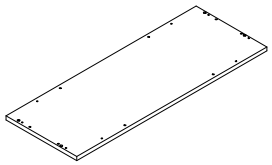
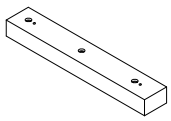

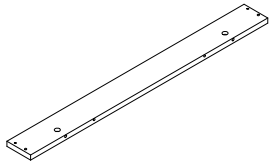
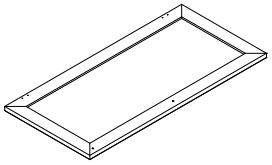
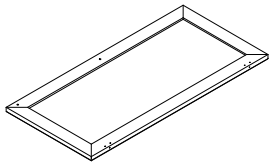


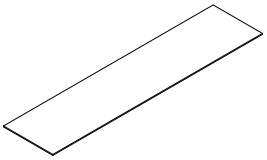
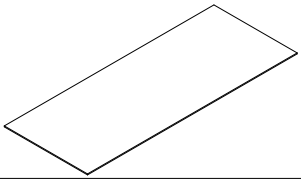
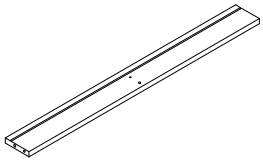
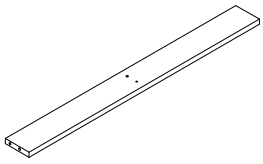
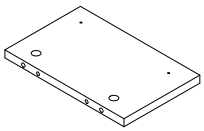
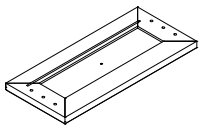
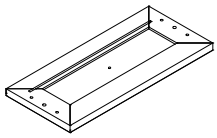


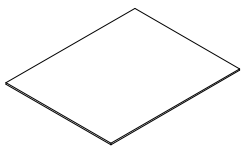
EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.





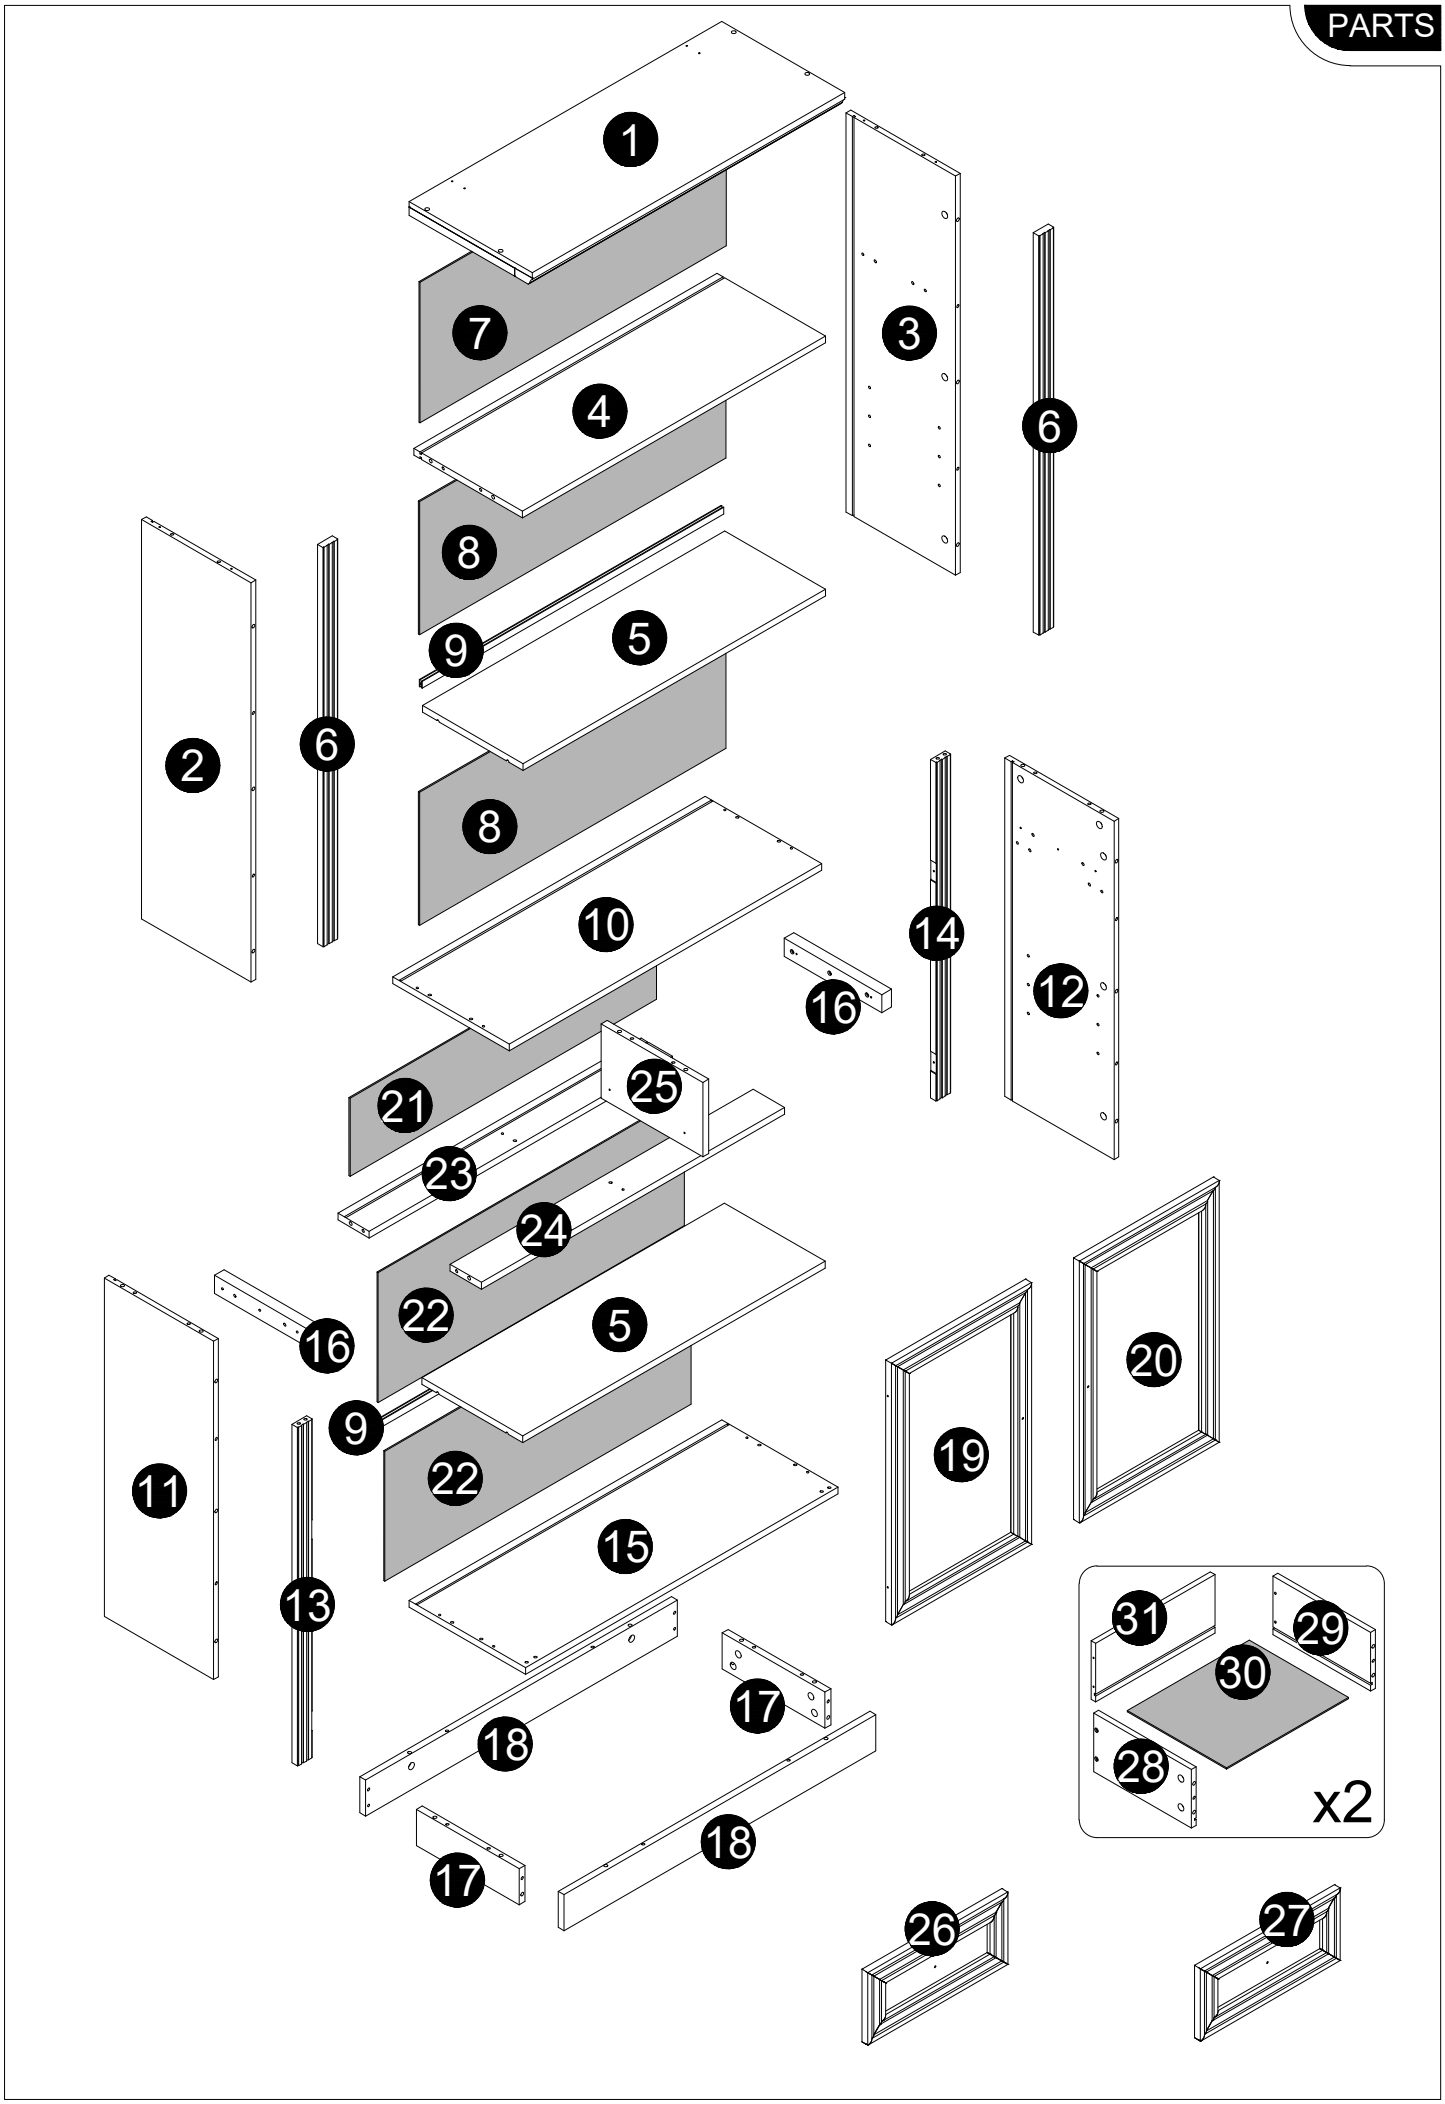
EN_ Turn cam lock clockwise to tighten.

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x1	

NO.	PARTS	QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x2	
⑰		x2	
⑱		x2	
⑲		x1	
⑳		x1	

NO.	PARTS	QTY	SPARE
㉑		x1	
㉒		x2	
㉓		x1	
㉔		x1	
㉕		x1	
㉖		x1	
㉗		x1	
㉘		x2	
㉙		x2	
㉚		x2	

NO.	PARTS	QTY	SPARE
㉛		x2	
	 Hardware Kit		

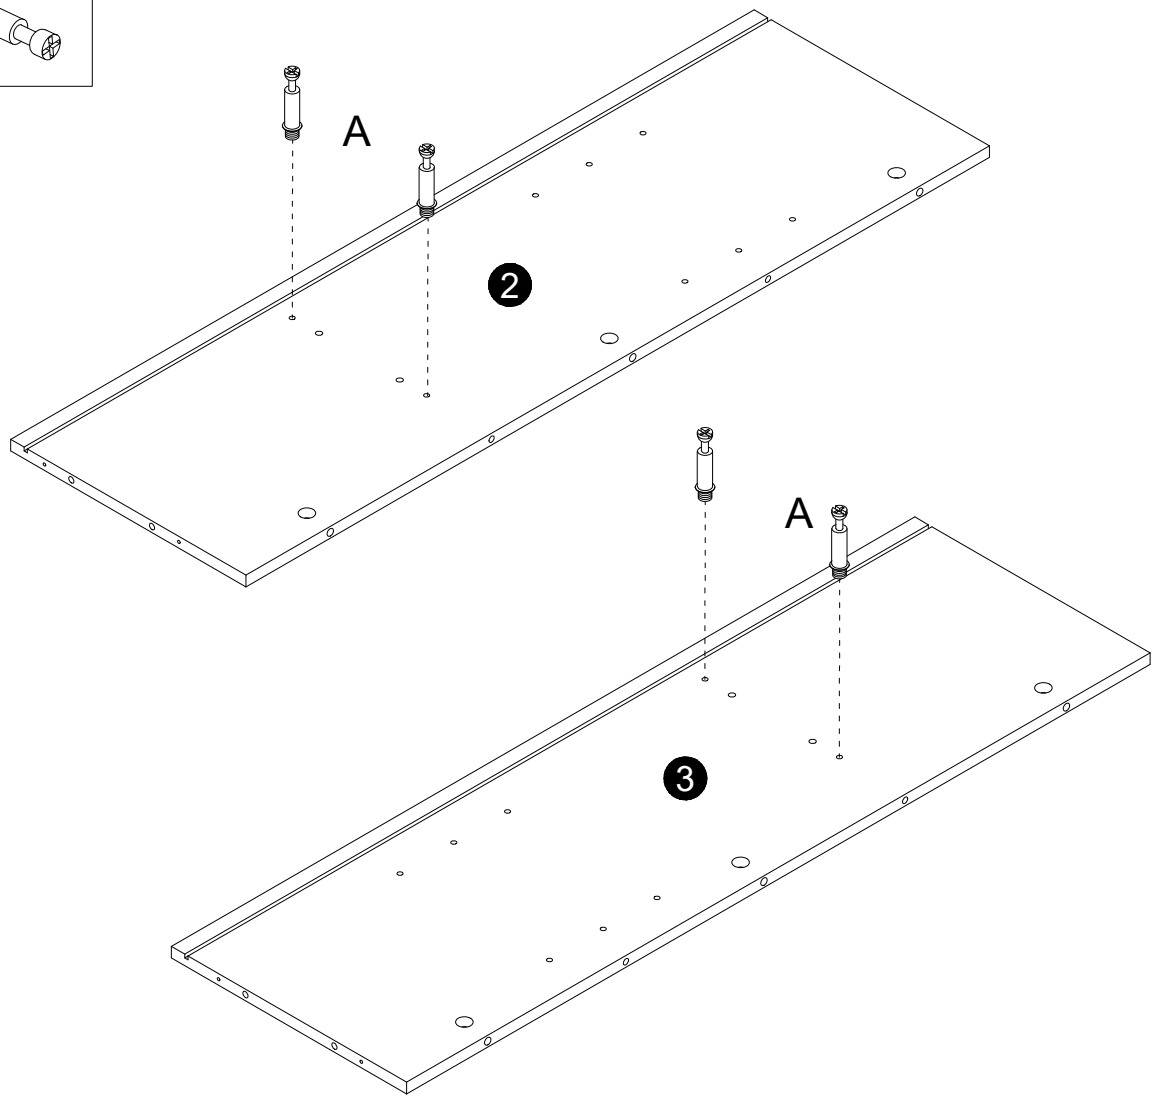

1
7
3
6
4
8
9
5
2
6
8
10
14
16
12
21
25
23
24
22
5
16
11
9
22
20
19
13
15
31
29
30
28
x2
17
18
17
18
26
27

HARDWARE

A x46 Ø6x35mm +2(spare)	B x46 Ø15x10mm +2(spare)	C x64 Ø6x30mm +3(spare)	D x18 Ø4x35mm +1(spare)	E x40 Ø3.5x12mm +2(spare)	F x2 F-1 F-2 F-3
G x16 Ø3x14mm +1(spare) G-1 G-2	H x4 Ø5x50mm	I x4	J x2 Ø4x12mm J-1 J-2	K x2 K-1 K-2	L x33 Ø20mm +2(spare)
M x8	N x1 N-1 N-2	O x2 O-1 O-2	P x6 Ø4x30mm	Q x2 Q-1 Q-2 Q-3	
CL x2 L250mm	CR x2 L250mm	DL x2 L250mm	DR x2 L250mm		


01

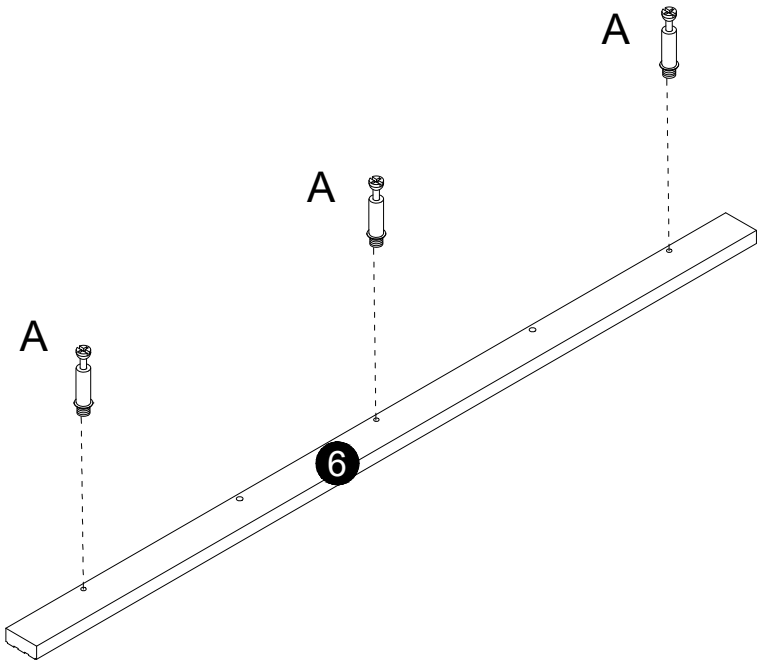
A x4



02

A x6






x2

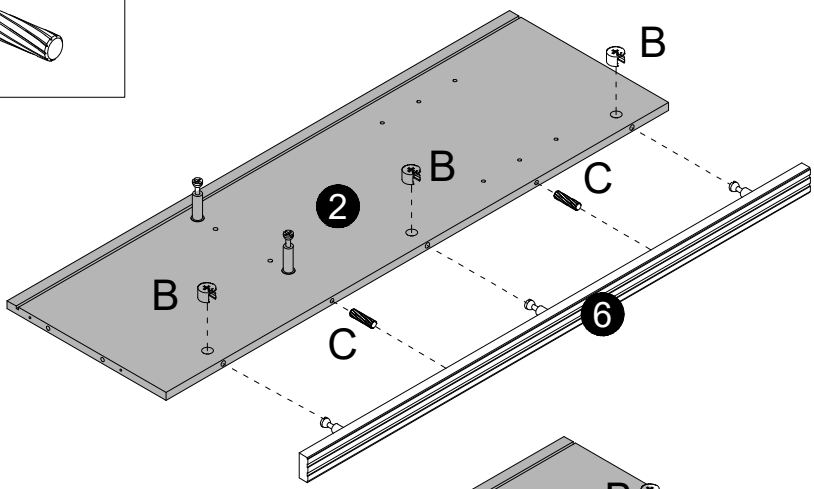
03

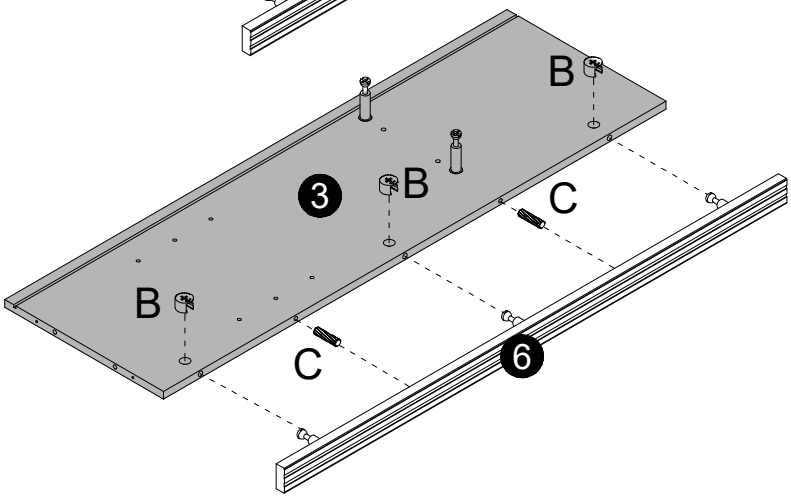
B x6

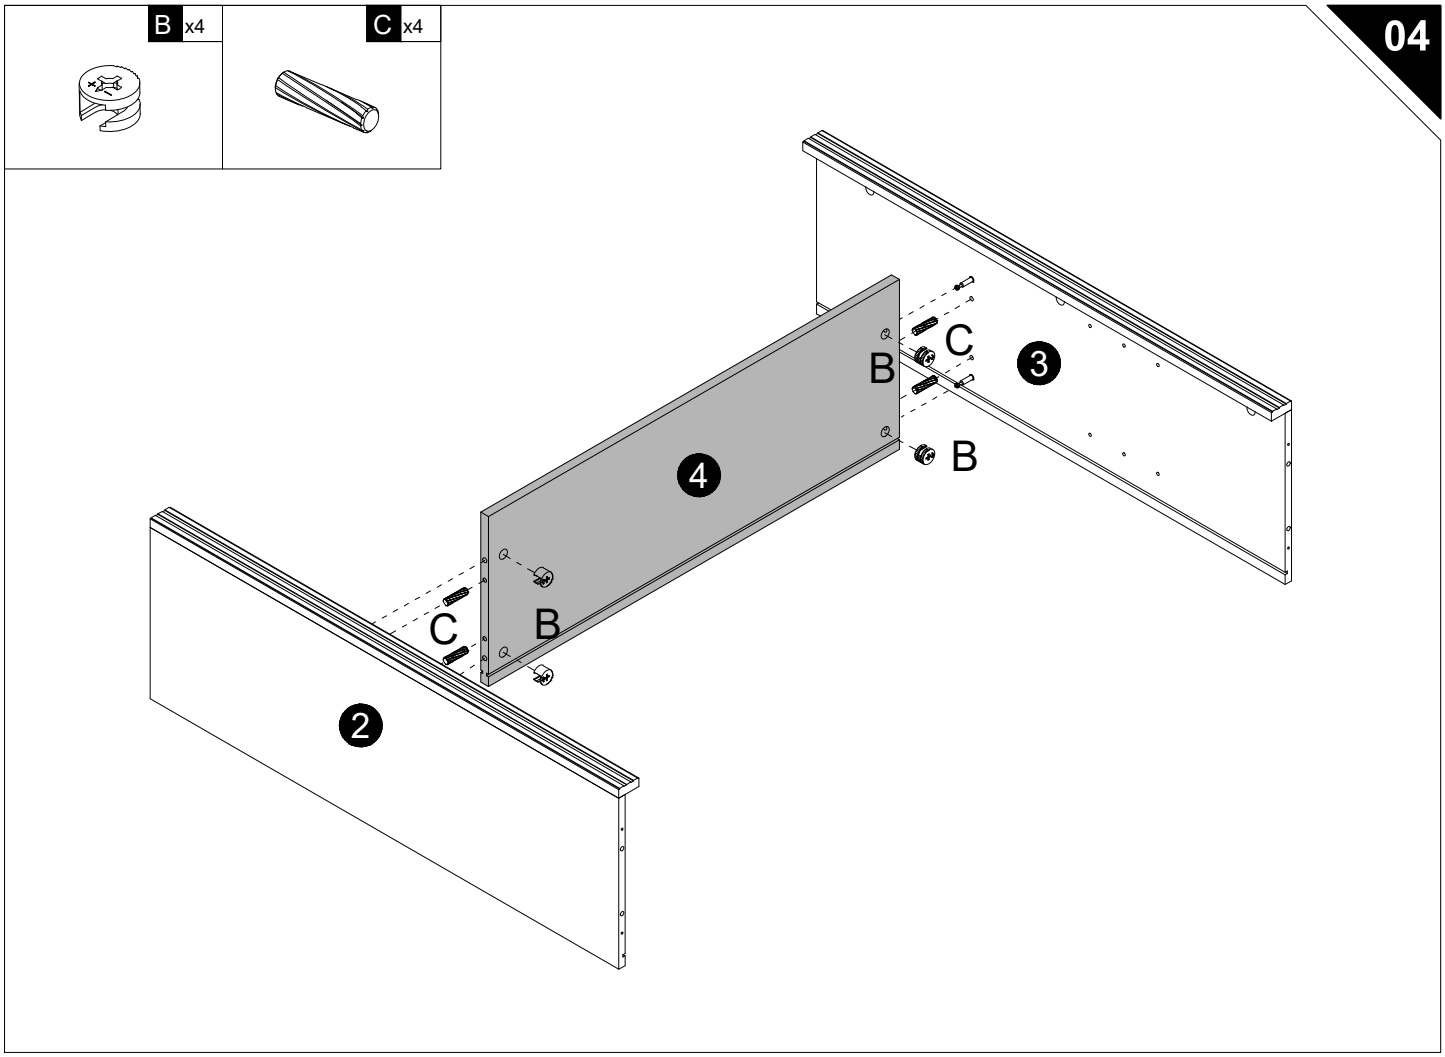


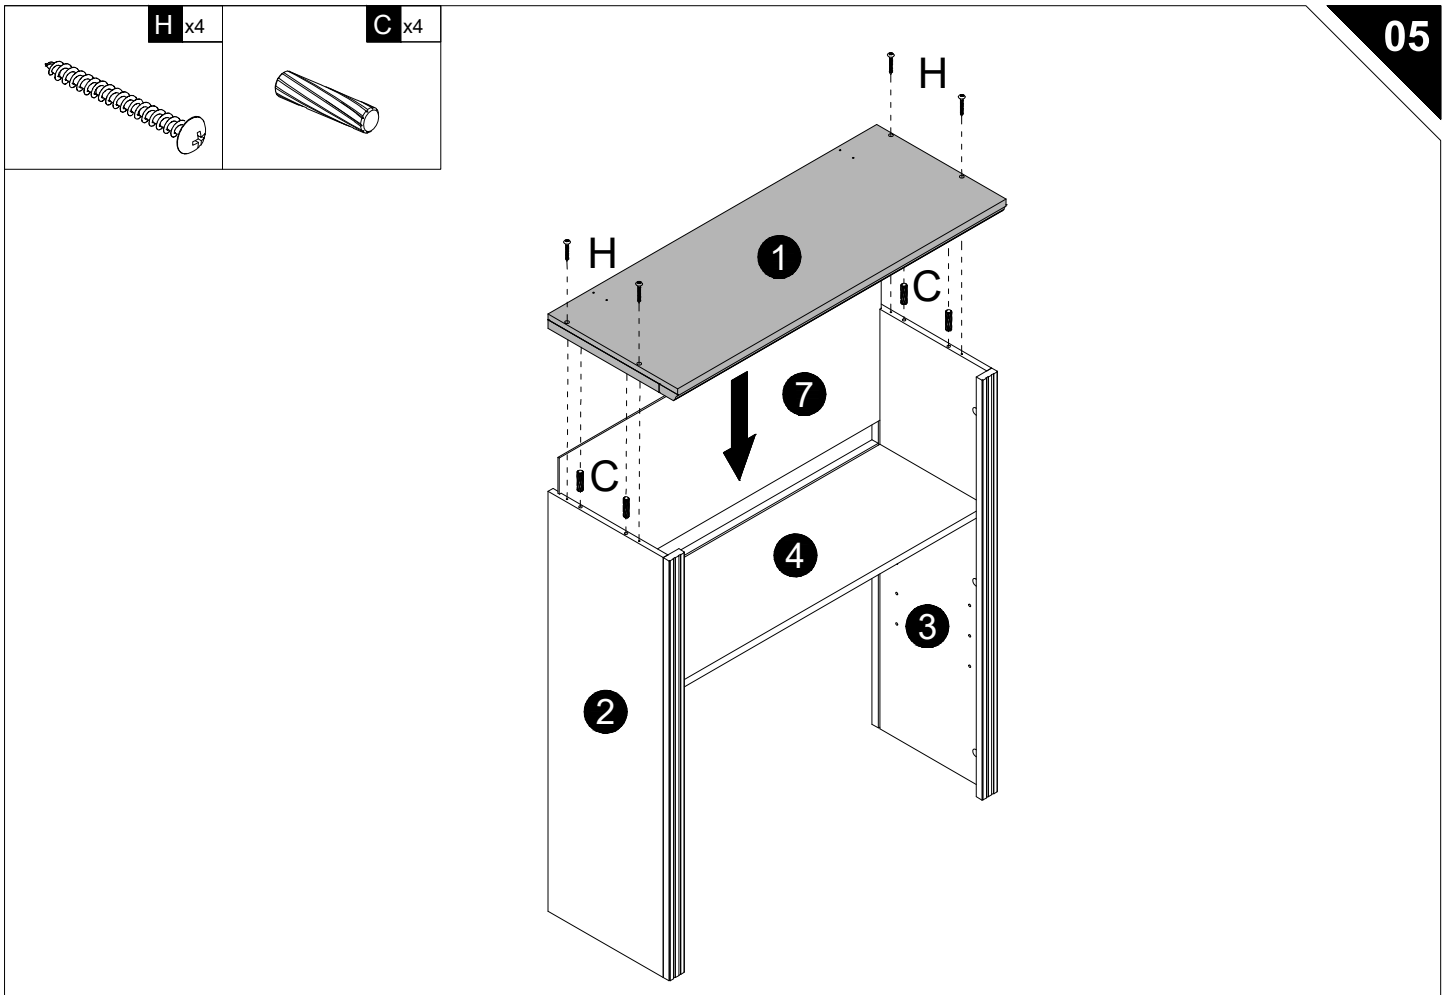
C x4



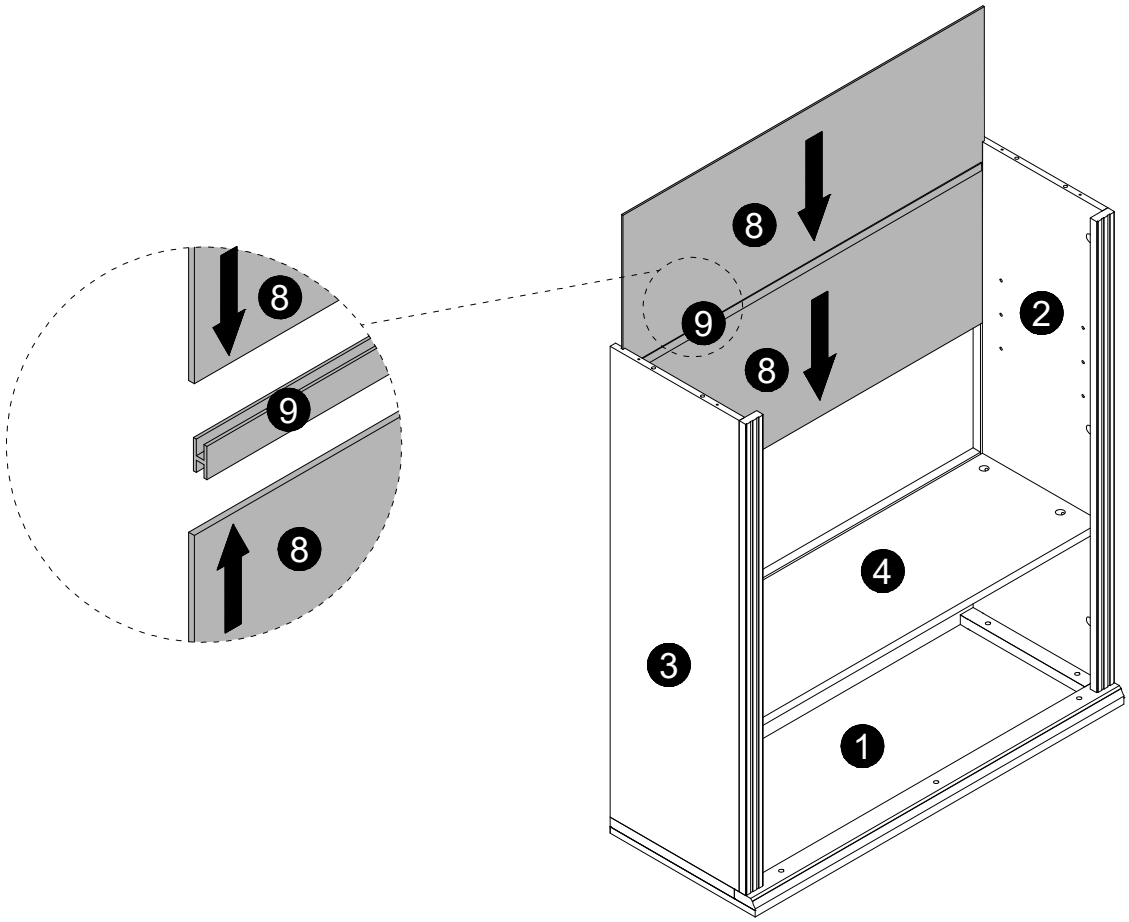




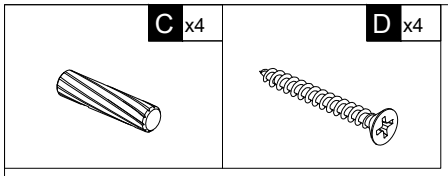

B x4
C x4
C
B
3
B
4
C
B
2

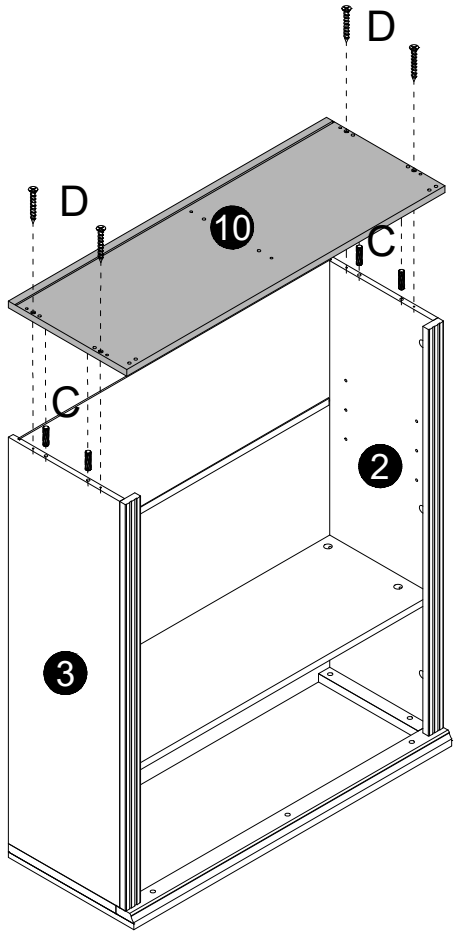

H x4
C x4
H
H
1
C
7
C
4
3
2

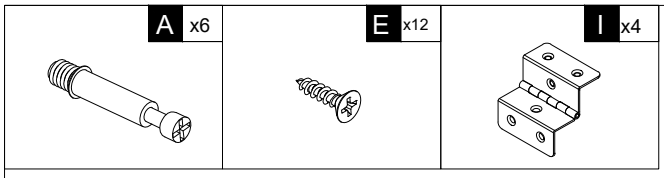
06



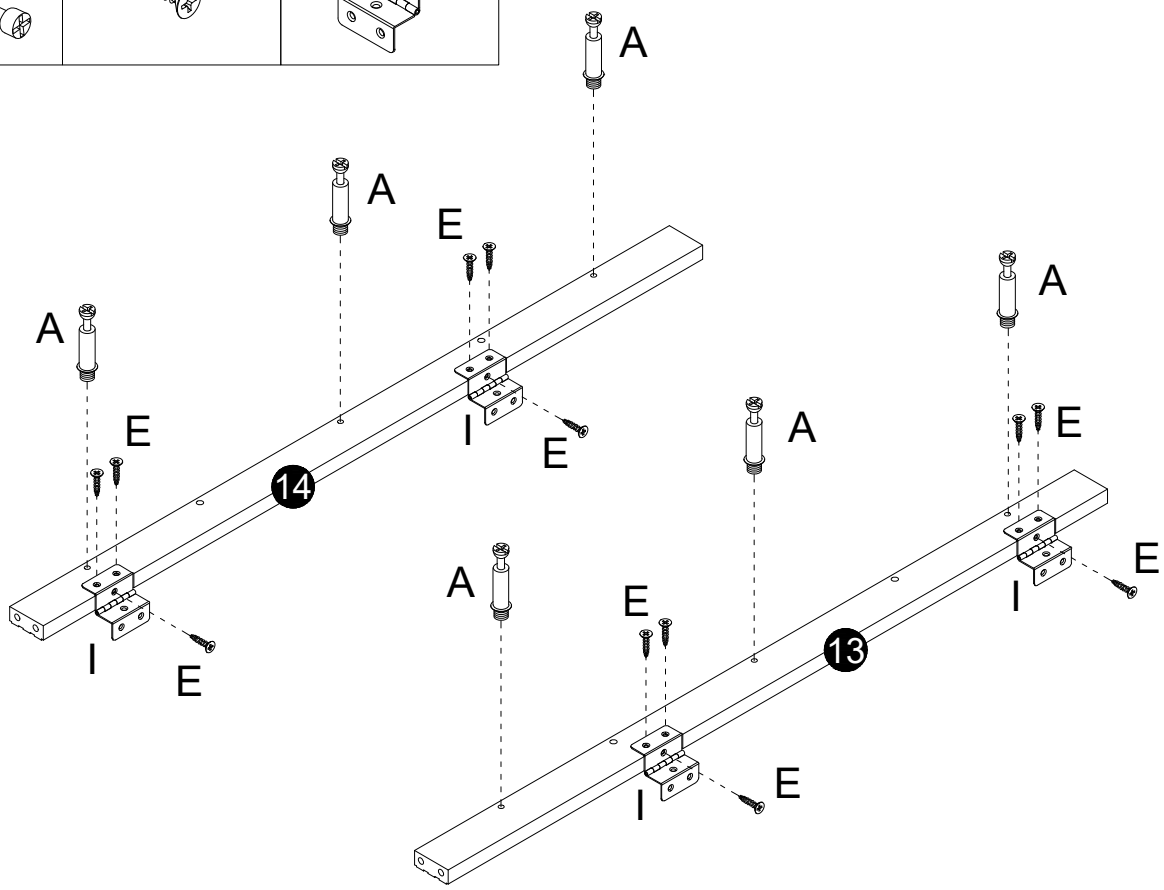
07

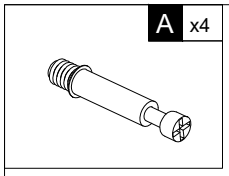




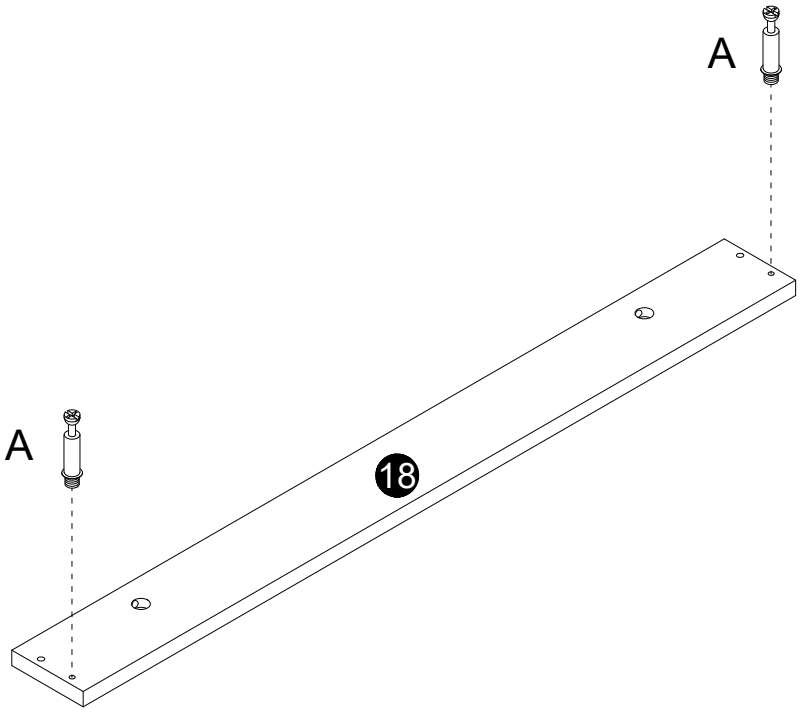


08

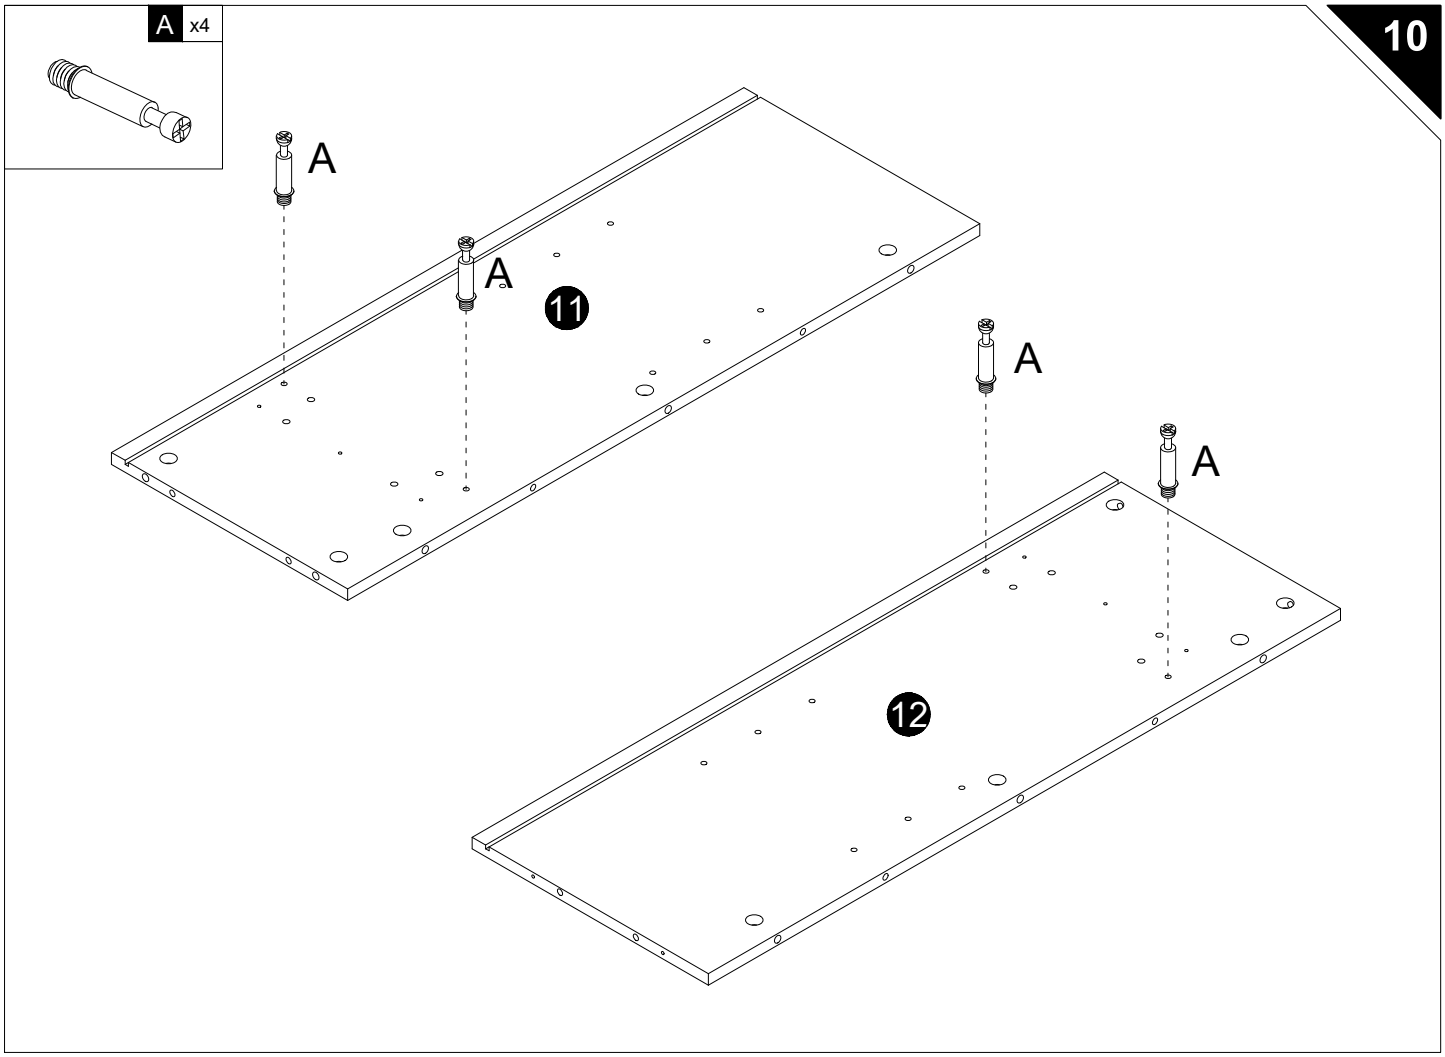


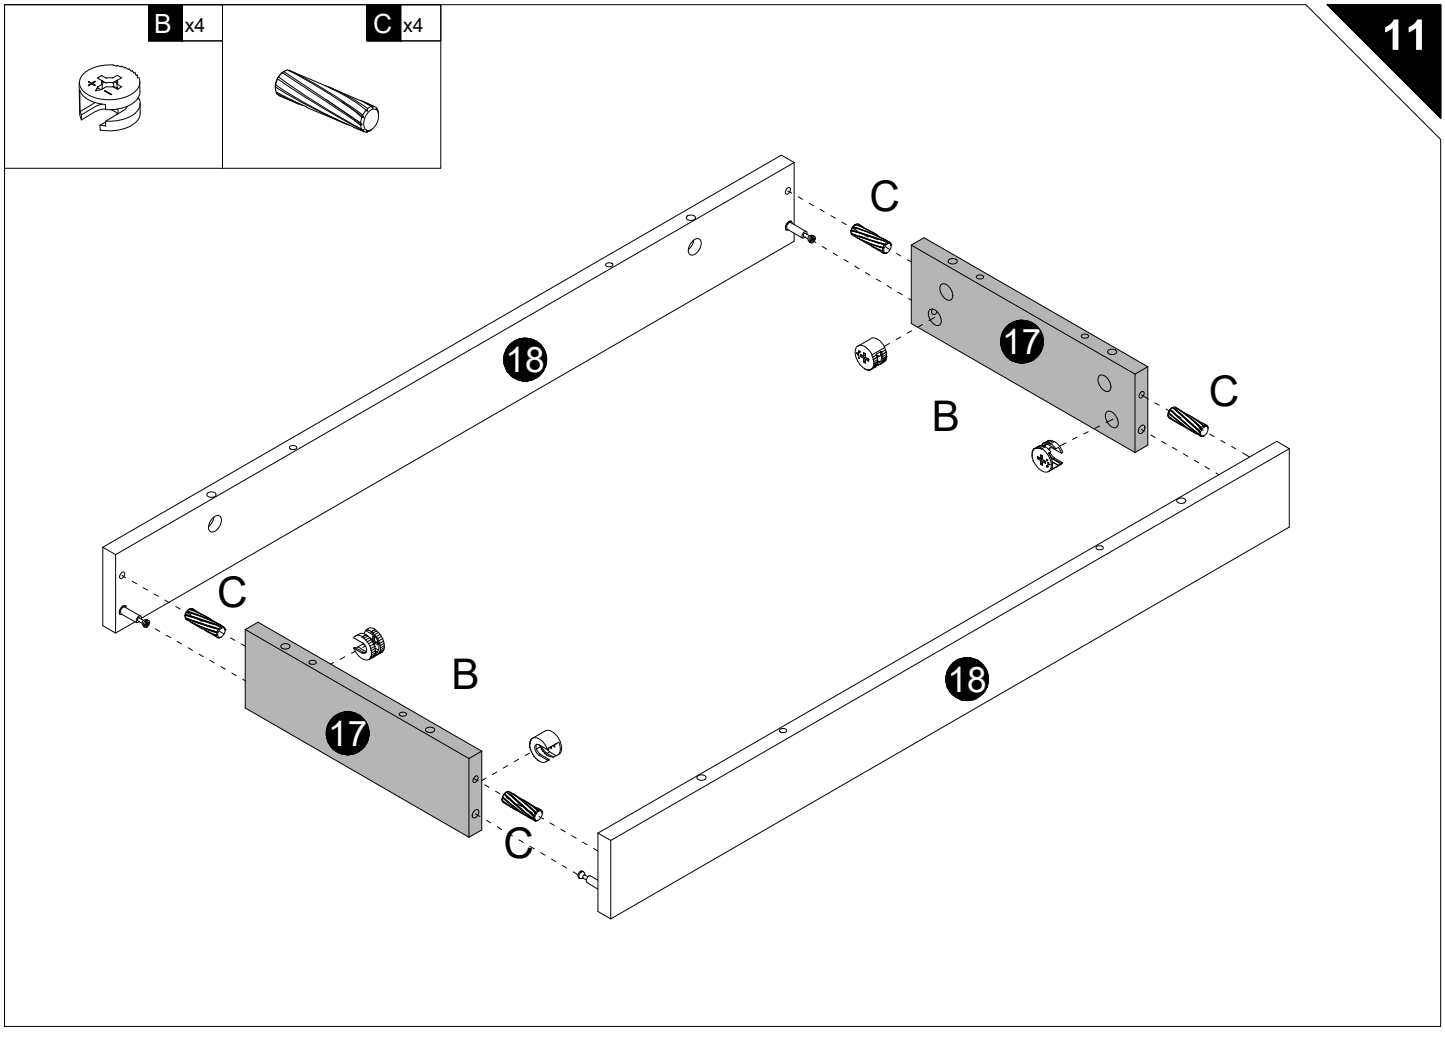


09




x2

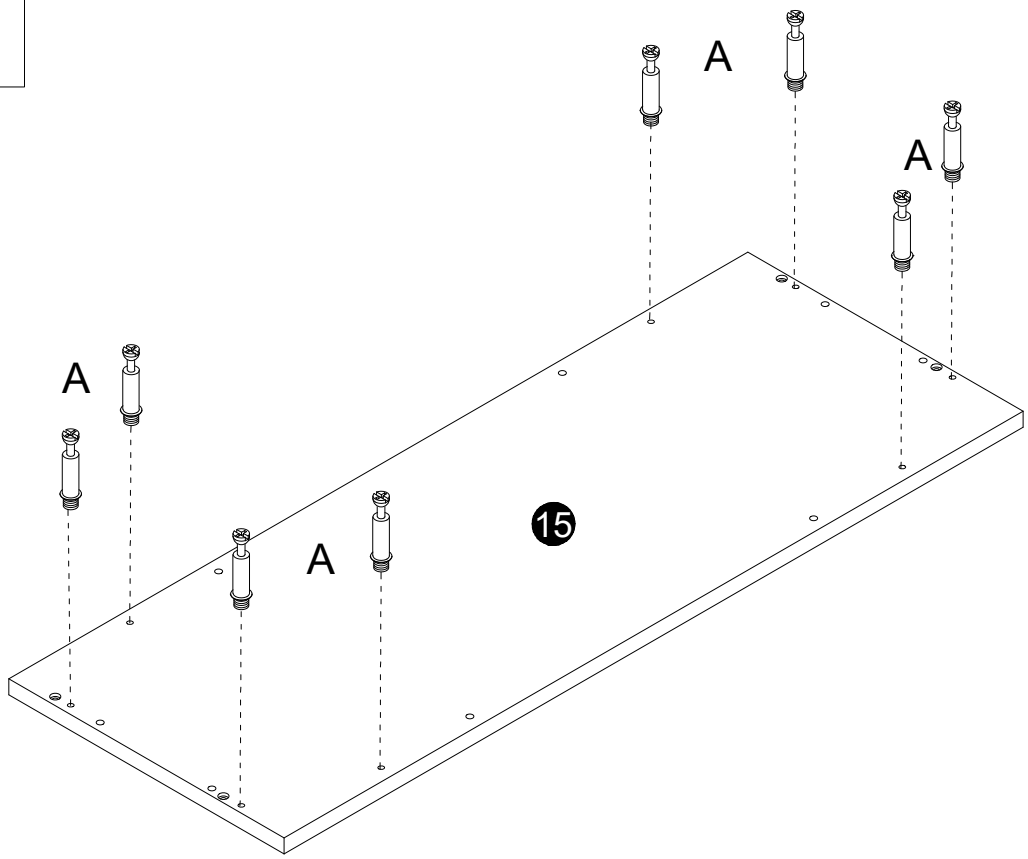

A x4
A
A
11
A
A
12


B x4
C x4
C
18
17
B
C
C
B
17
18
C

12

A x8






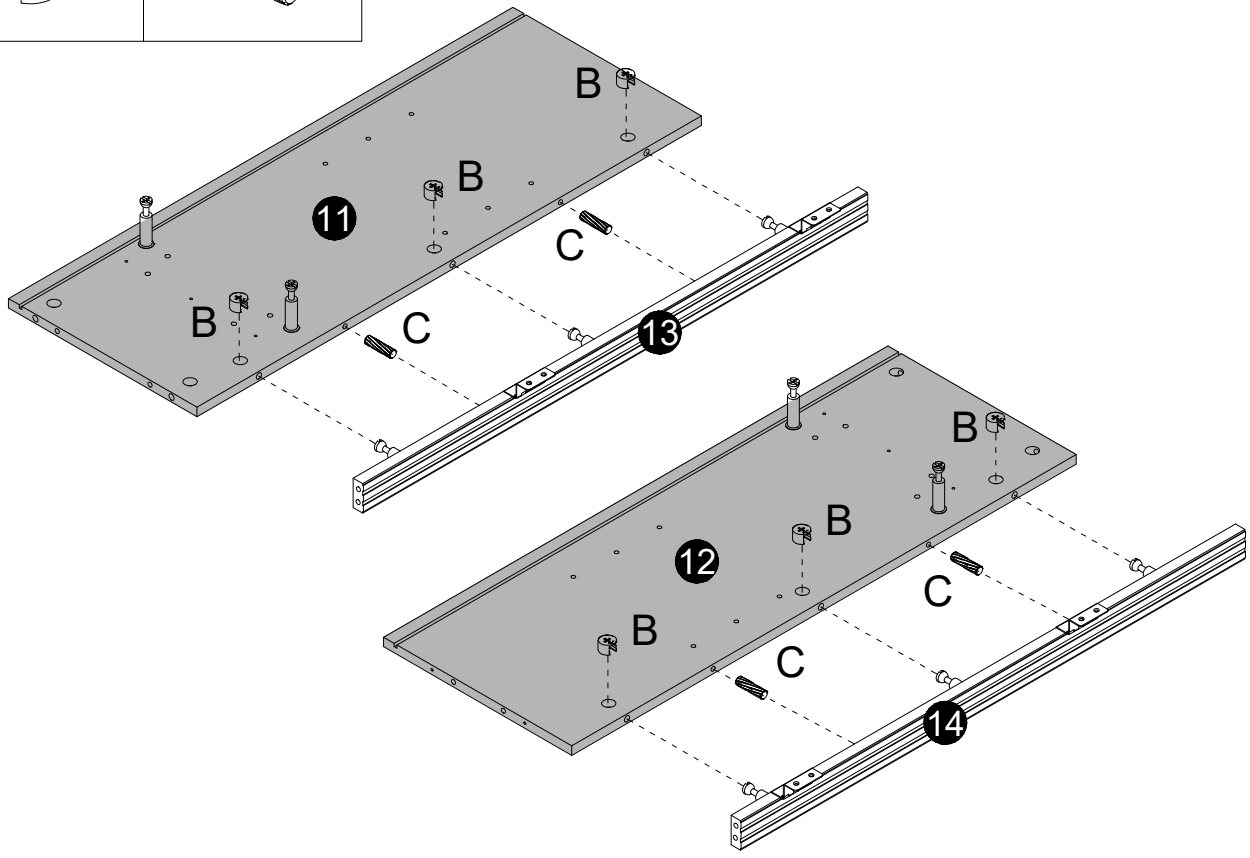
13

B x6

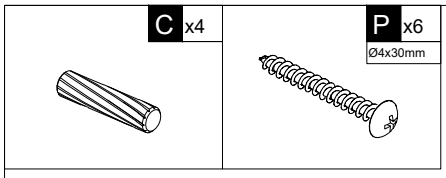


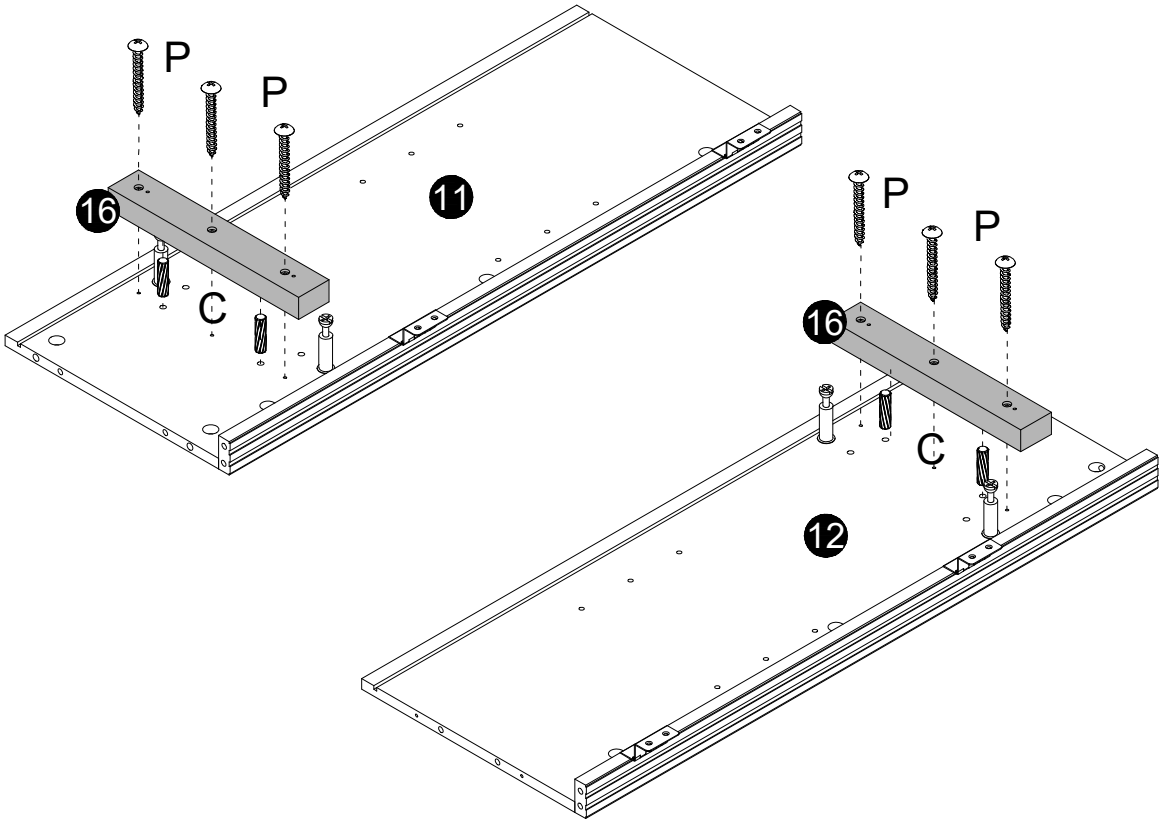
C x4



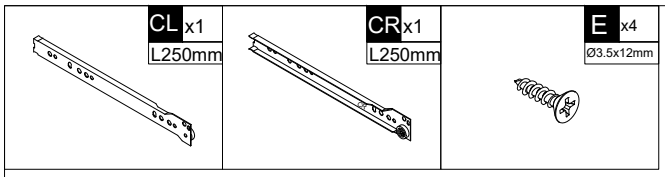


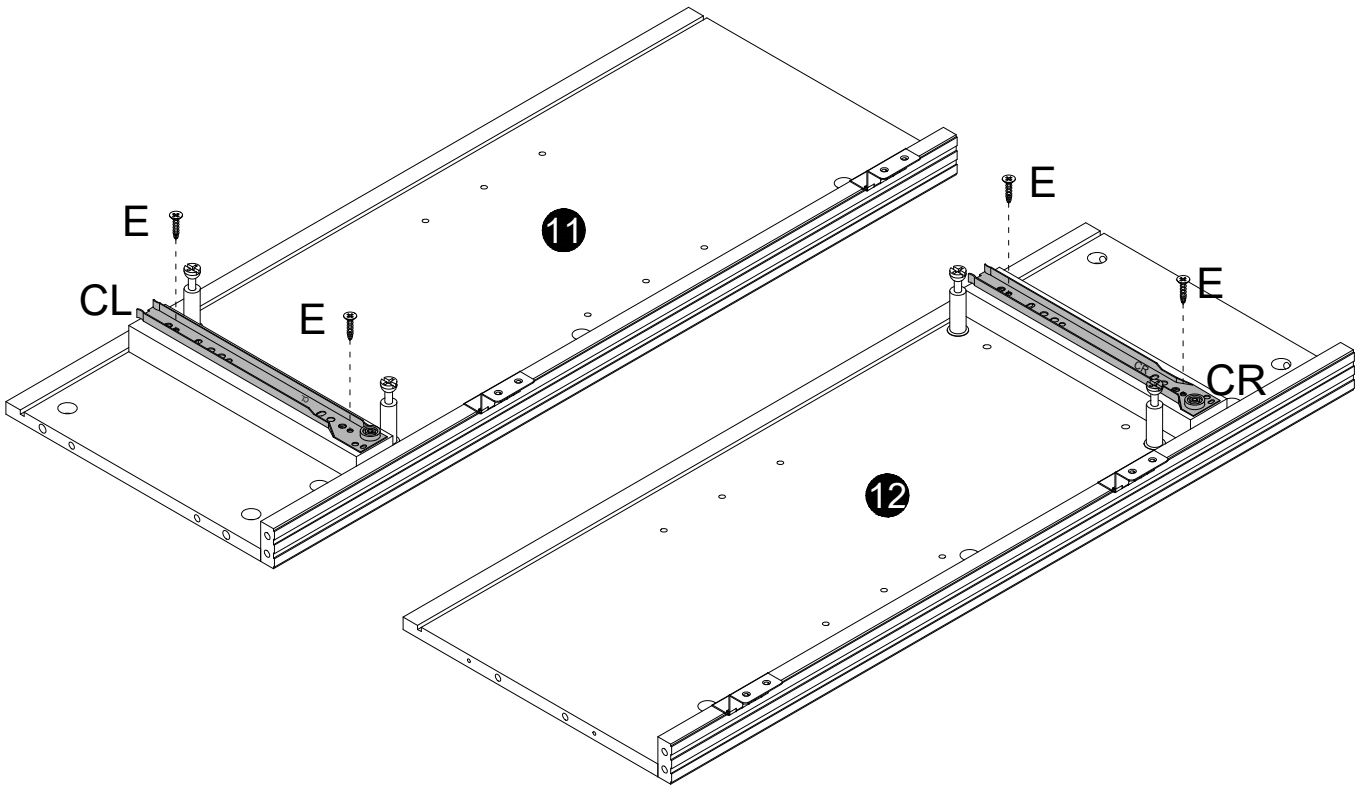
14

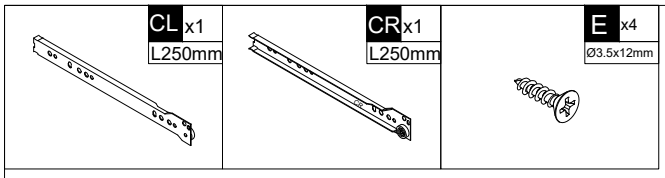

C x4
P x6
Ø4x30mm

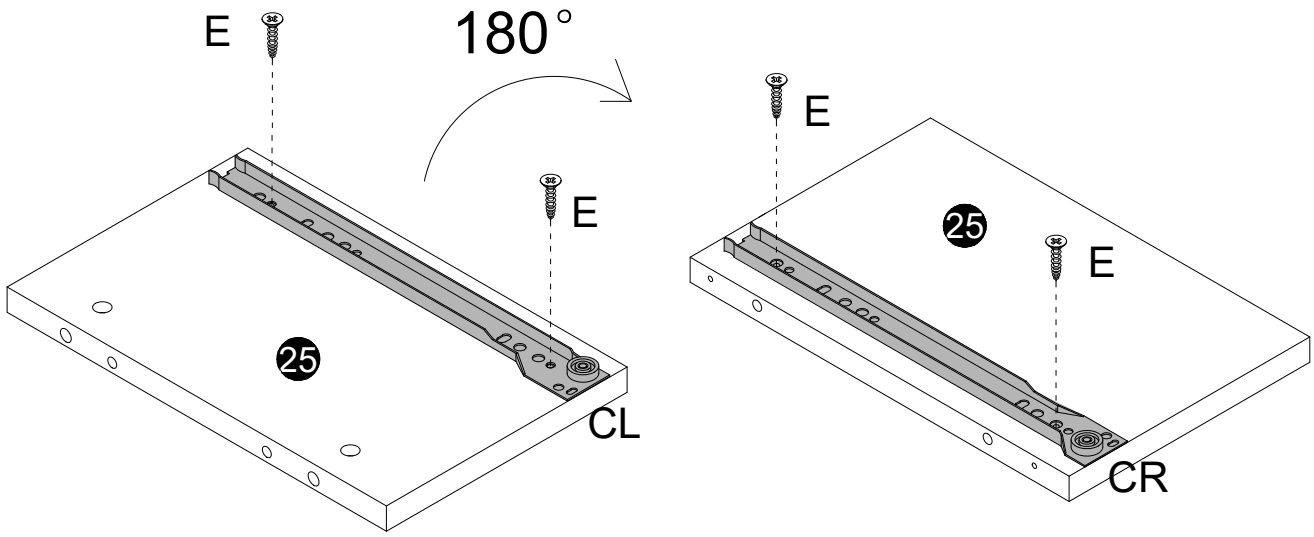

P
P
16
11
C
P
P
16
C
12

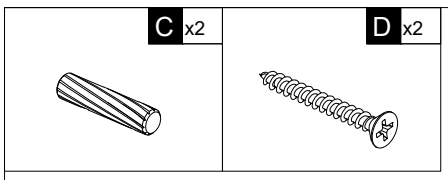
15

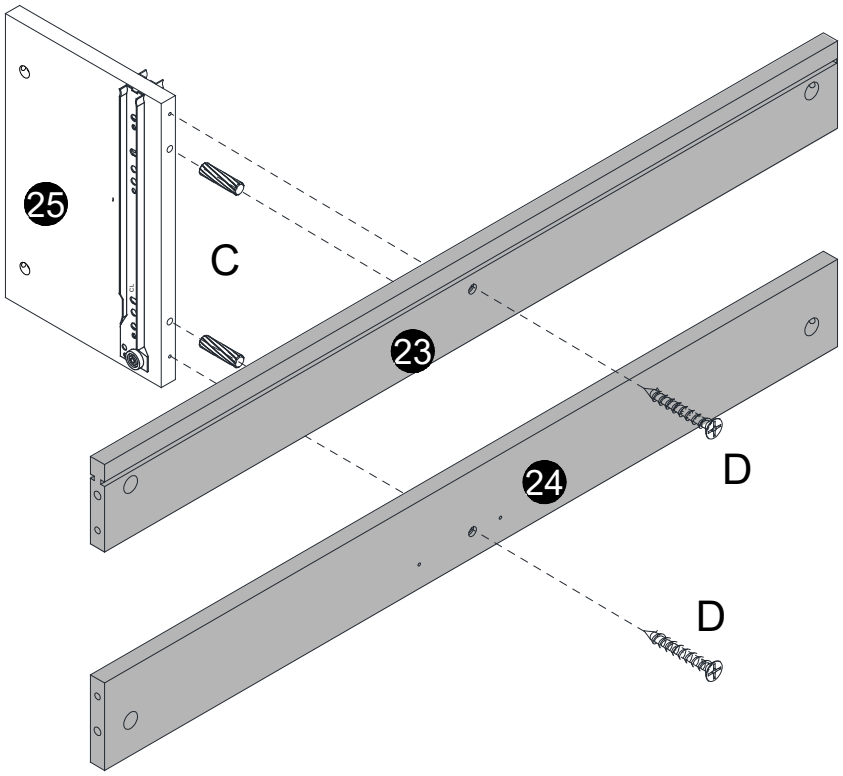

CL x1
L250mm
CR x1
L250mm
E x4
Ø3.5x12mm

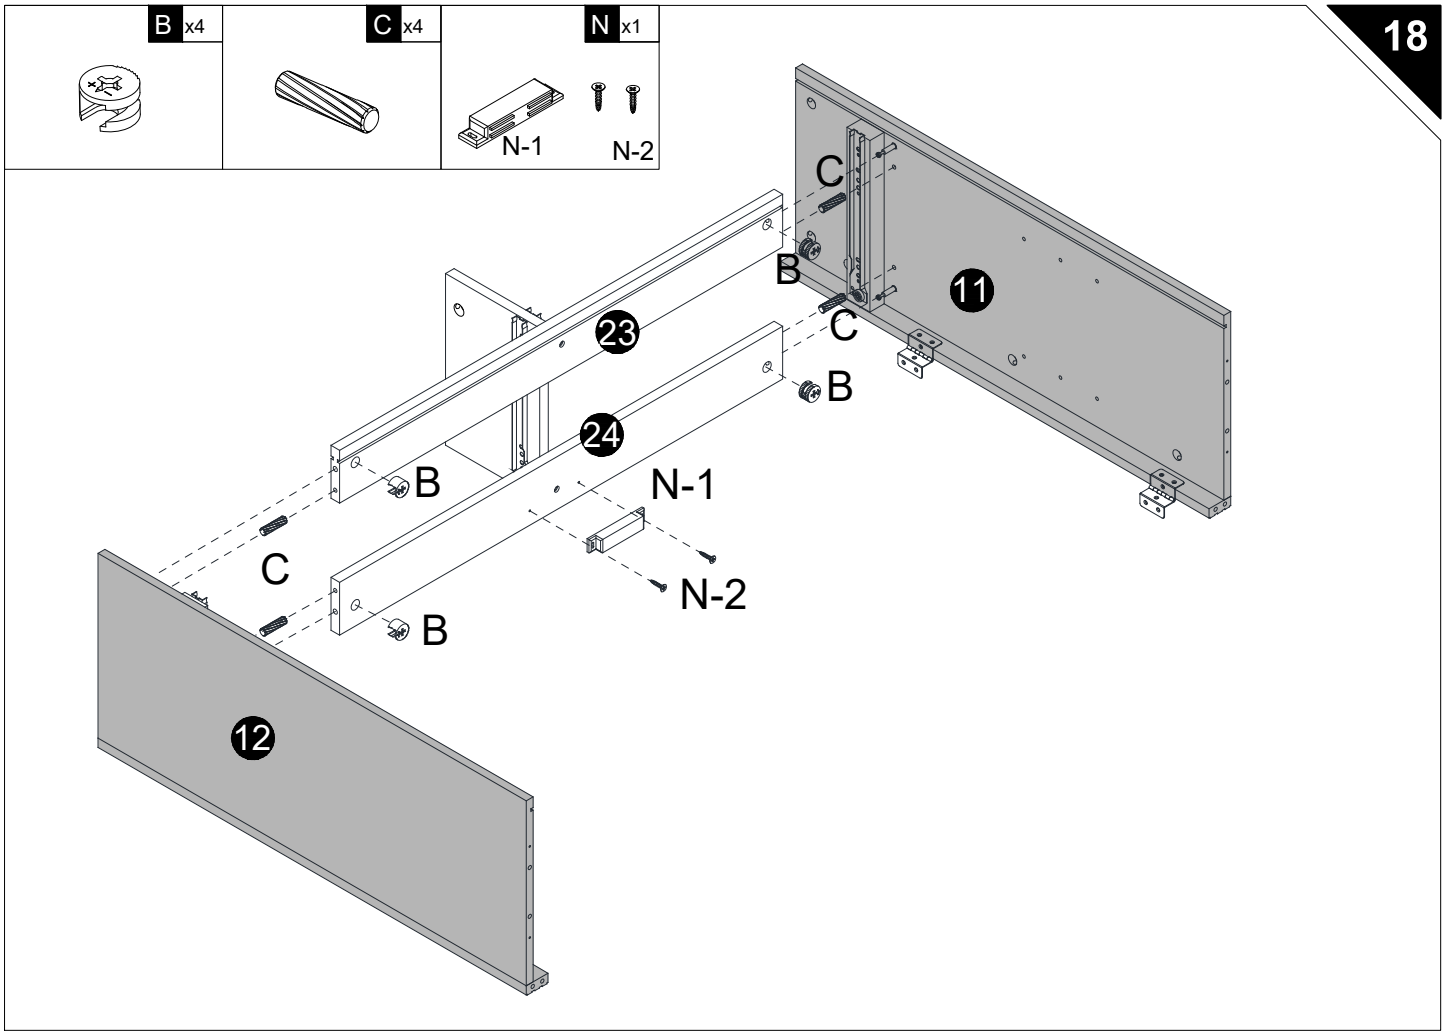

E
11
CL
E
E
E
CR
12

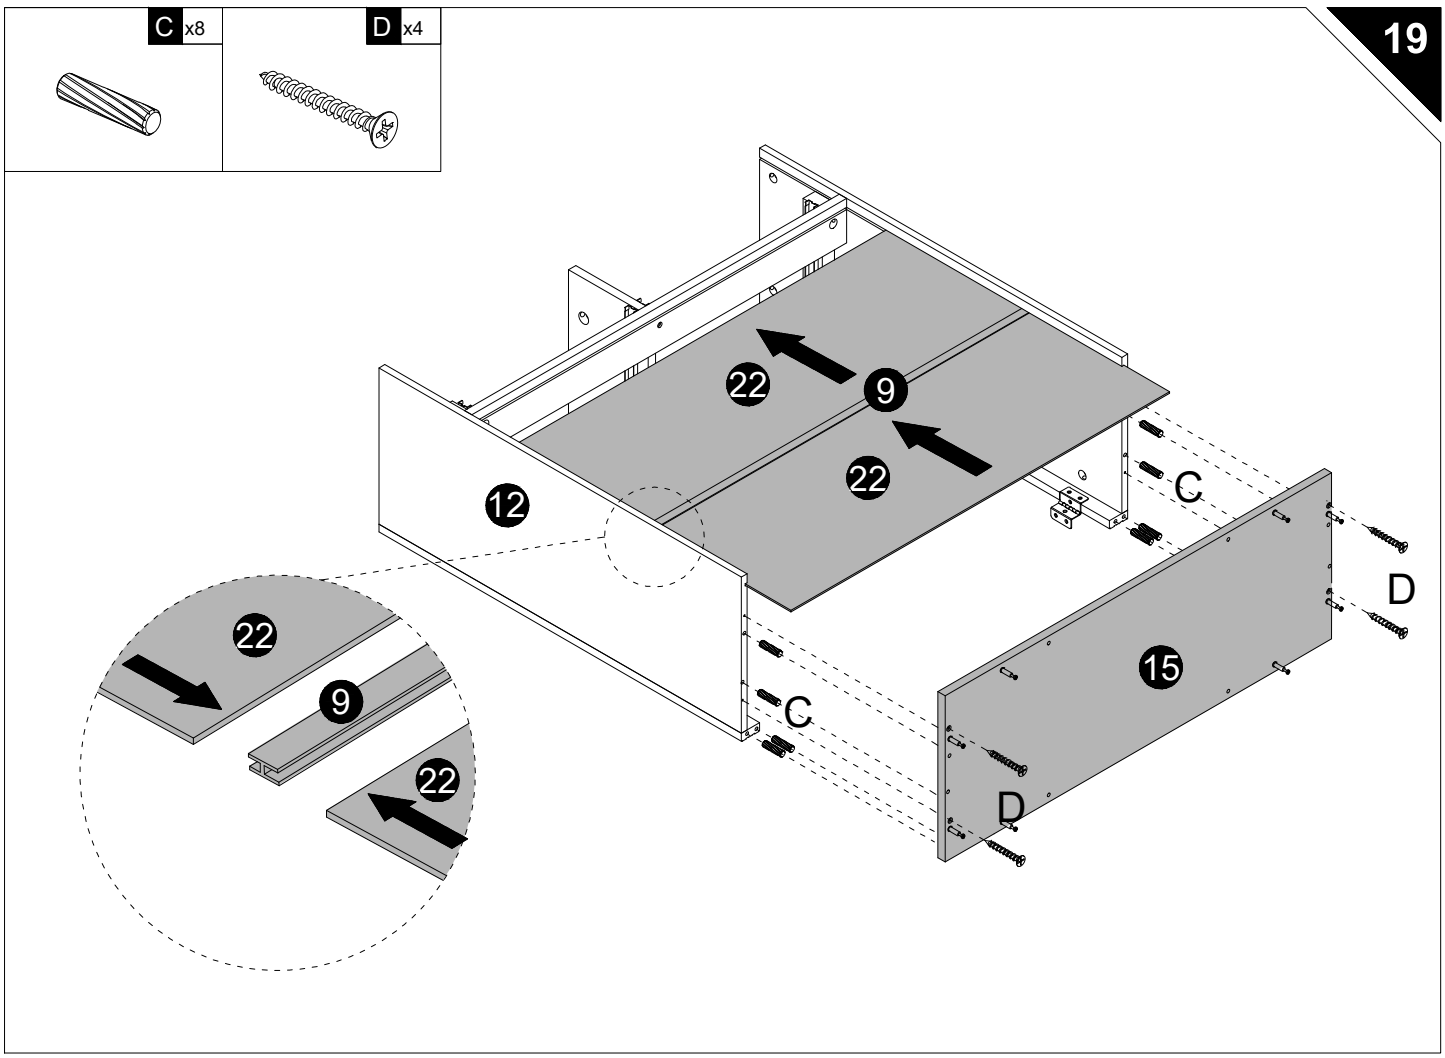

CL x1
L250mm
CR x1
L250mm
E x4
Ø3.5x12mm

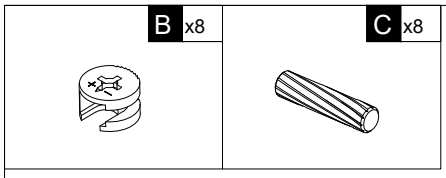

E
180°
E
25
CL
E
E
25
CR

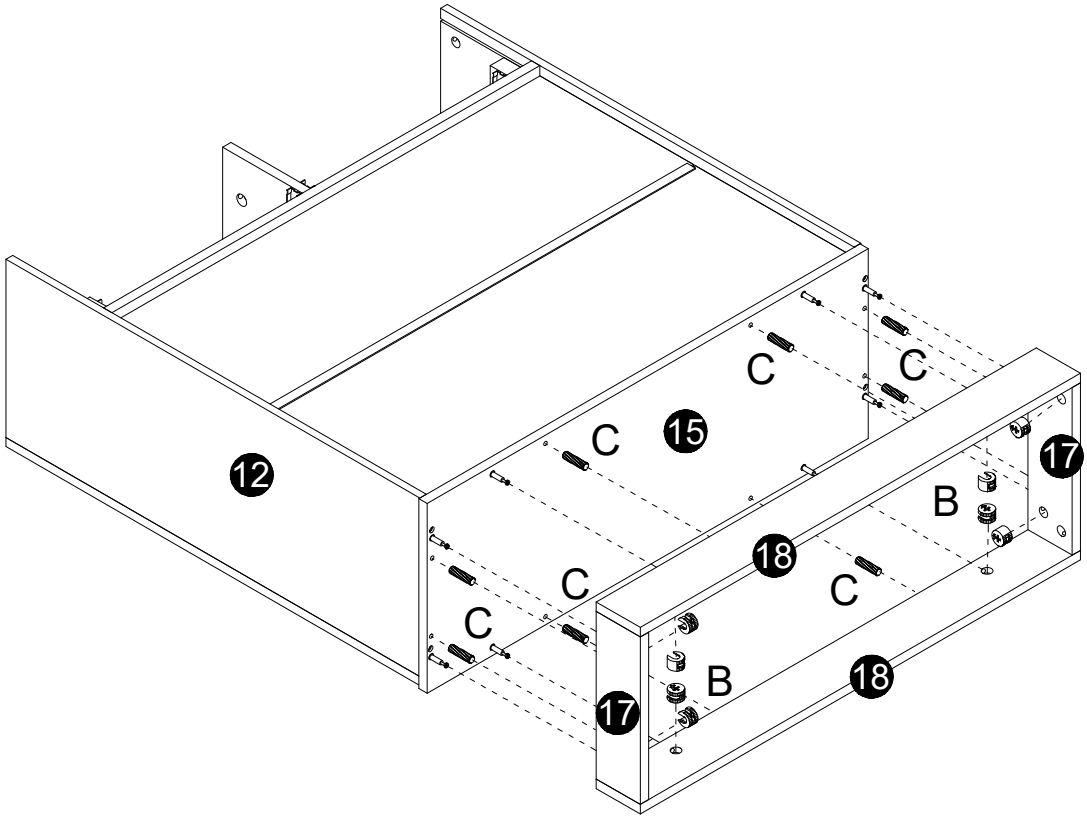

C x2
D x2

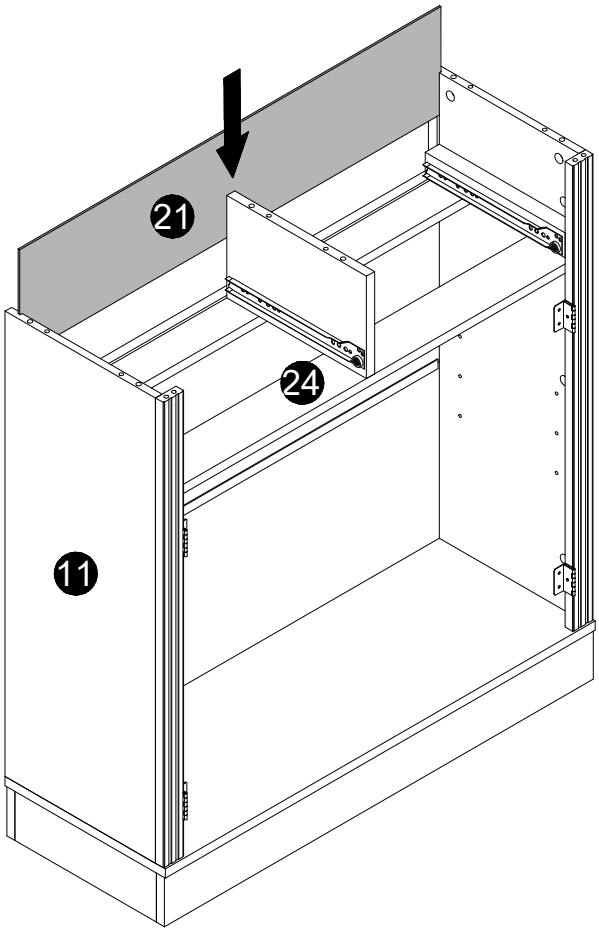

25
C
23
D
24
D

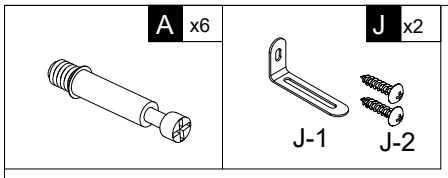

B x4
C x4
N x1
N-1
N-2
C
B
C
B
23
24
11
B
N-1
C
N-2
B
12

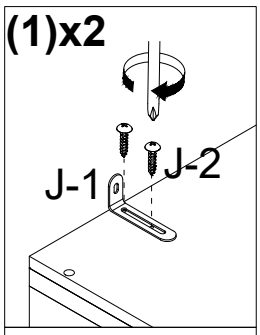

C x8
D x4
22
9
22
12
C
D
22
9
22
C
15
D


B x8
C x8

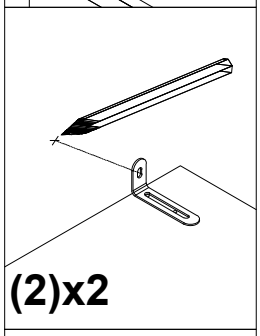

C
C
C
15
17
B
12
18
C
C
B
17
18


21
24
11

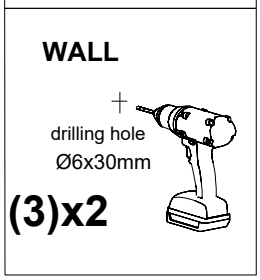




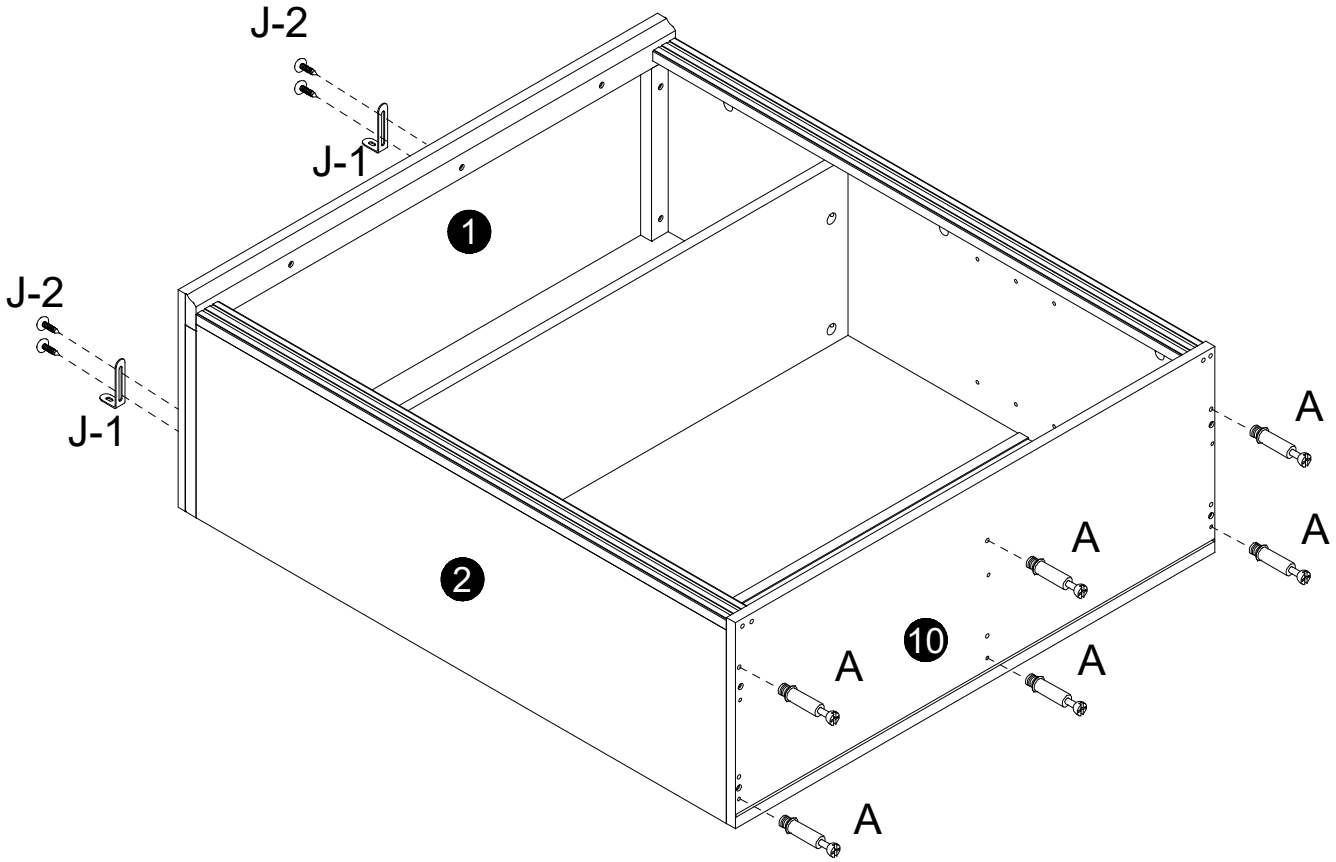
First fix the anti-rewind screw in the reserved hole of the product.



then, use a ruler to measure the approximate height of the product on the wall, and then mark it witha pen.




Then use a tape drill to make holes in the wall that are suitable for the product screws.

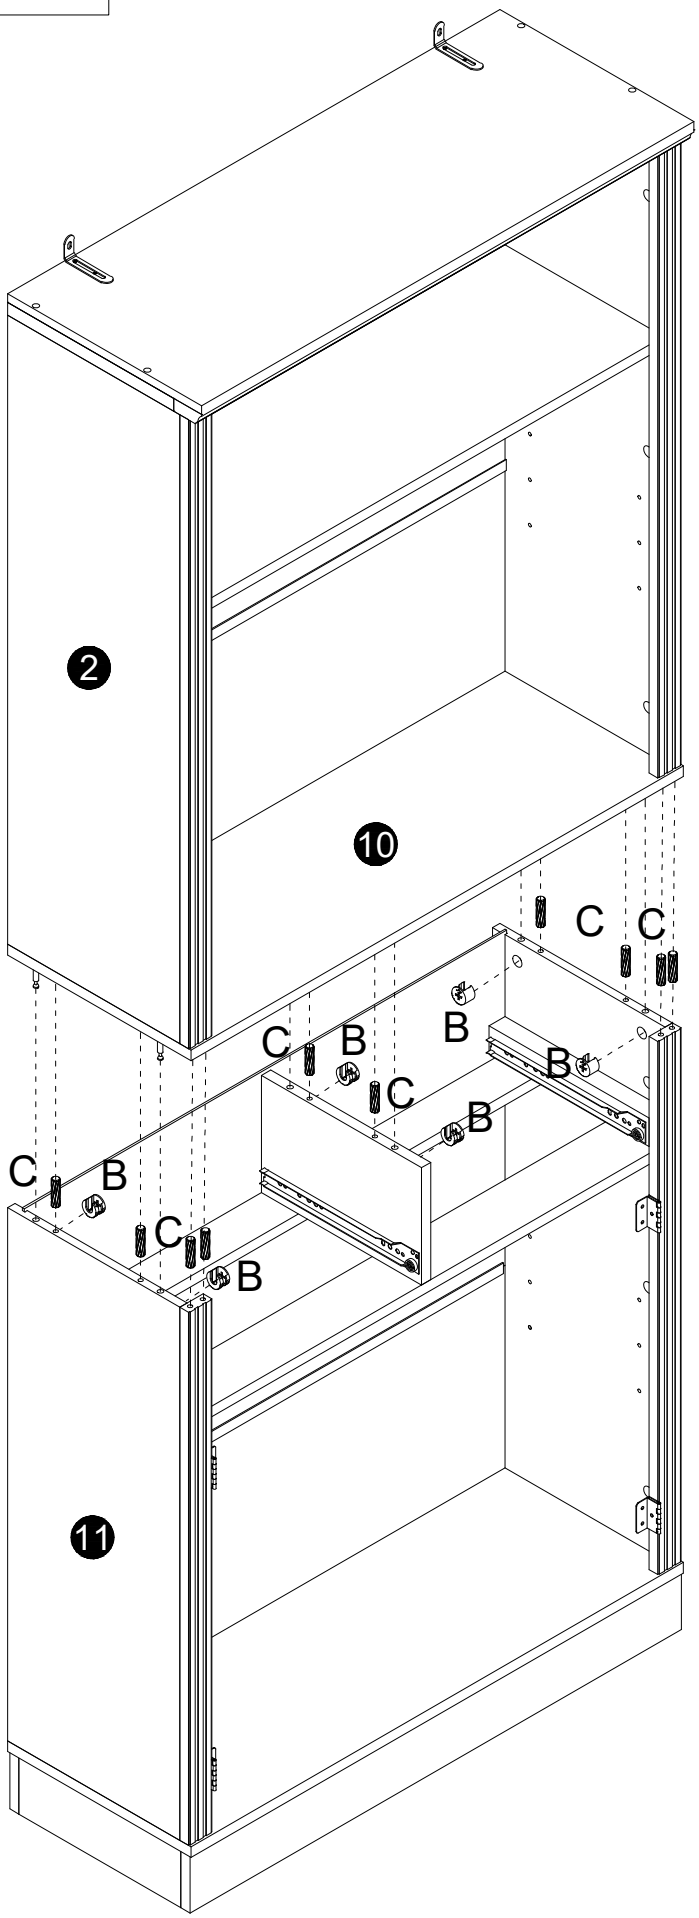


B x6




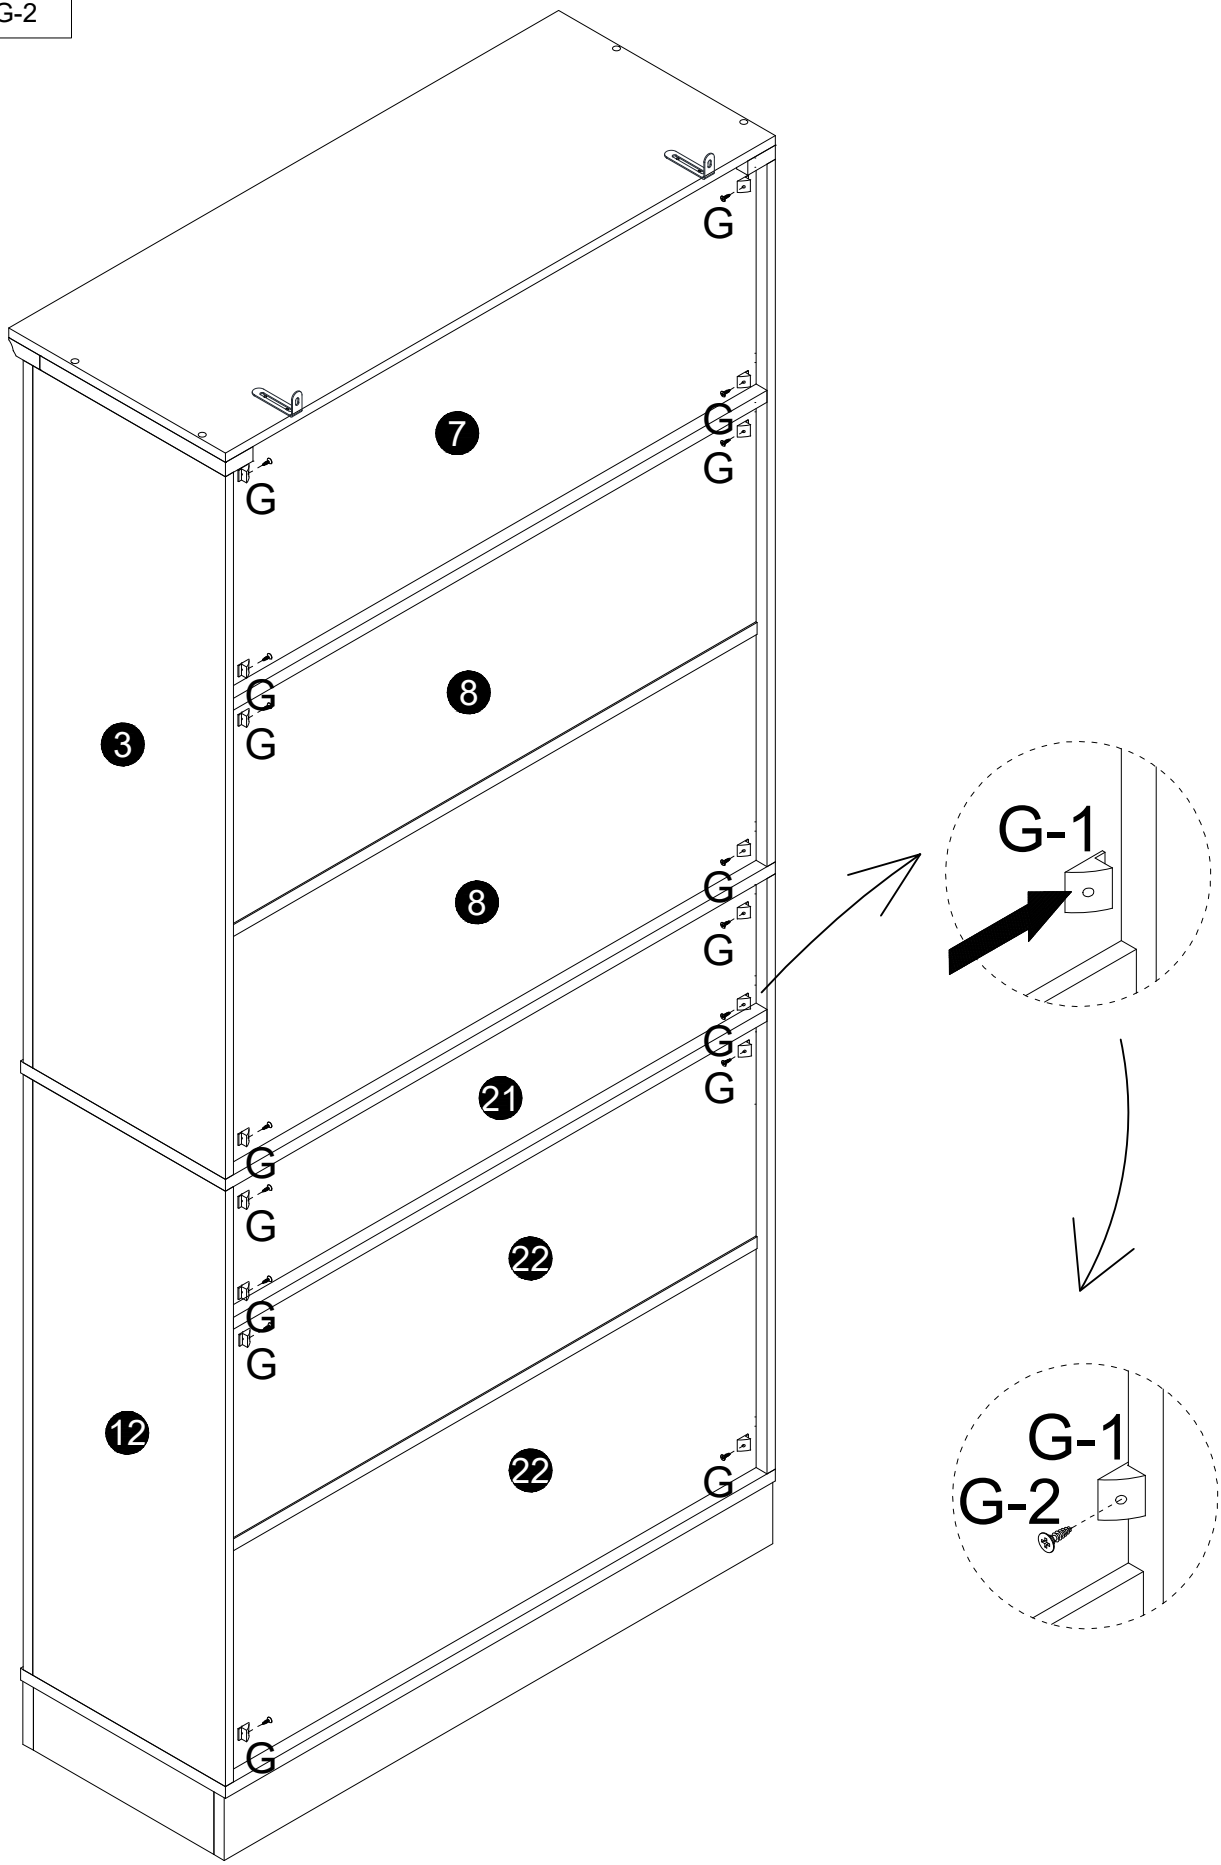
C x10



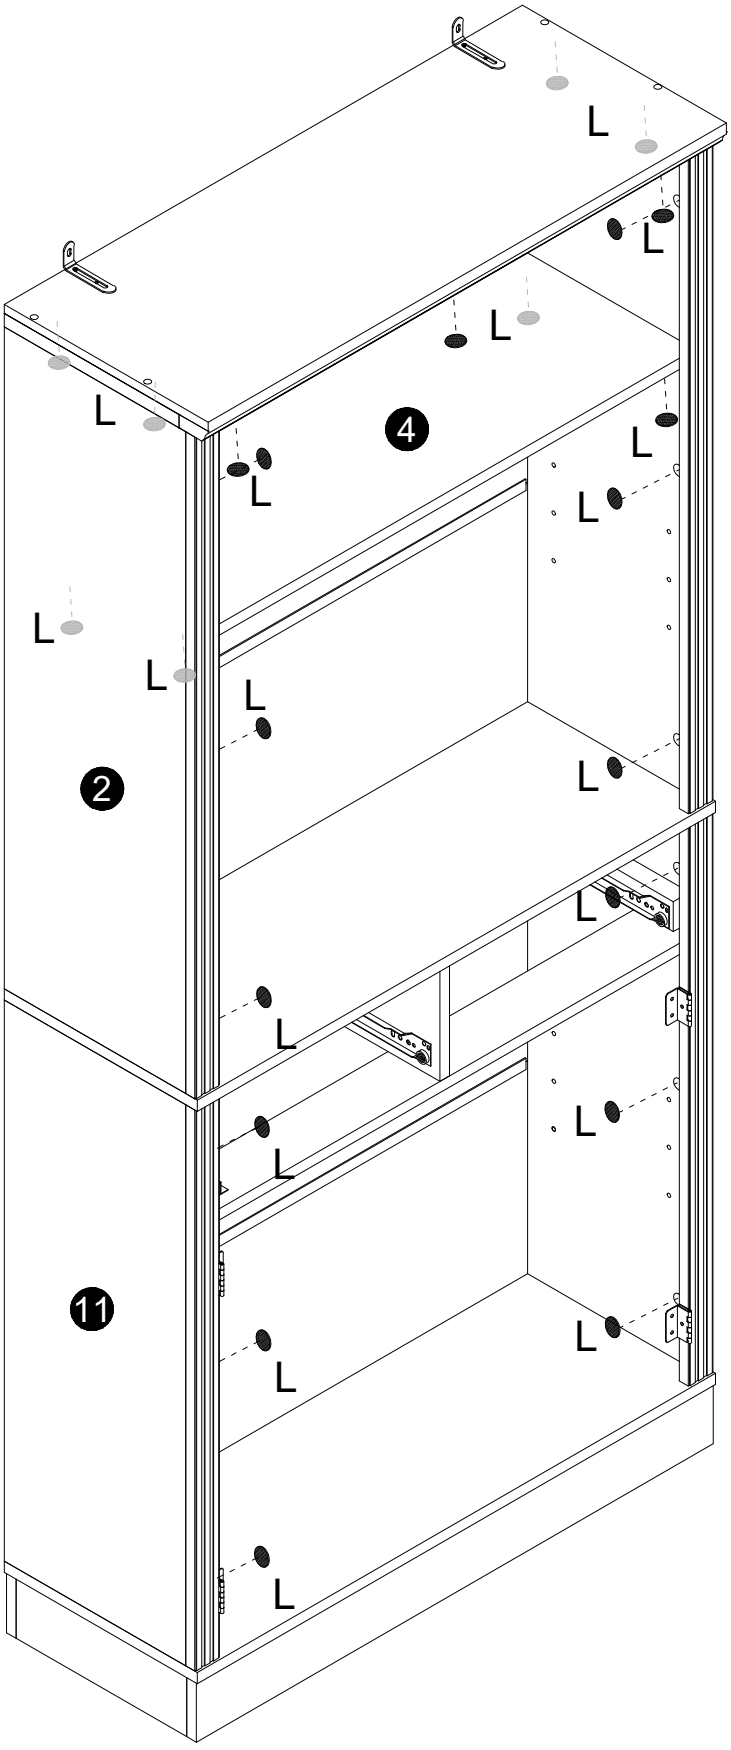


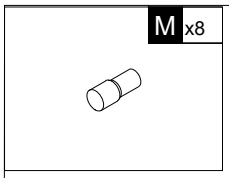
G x16

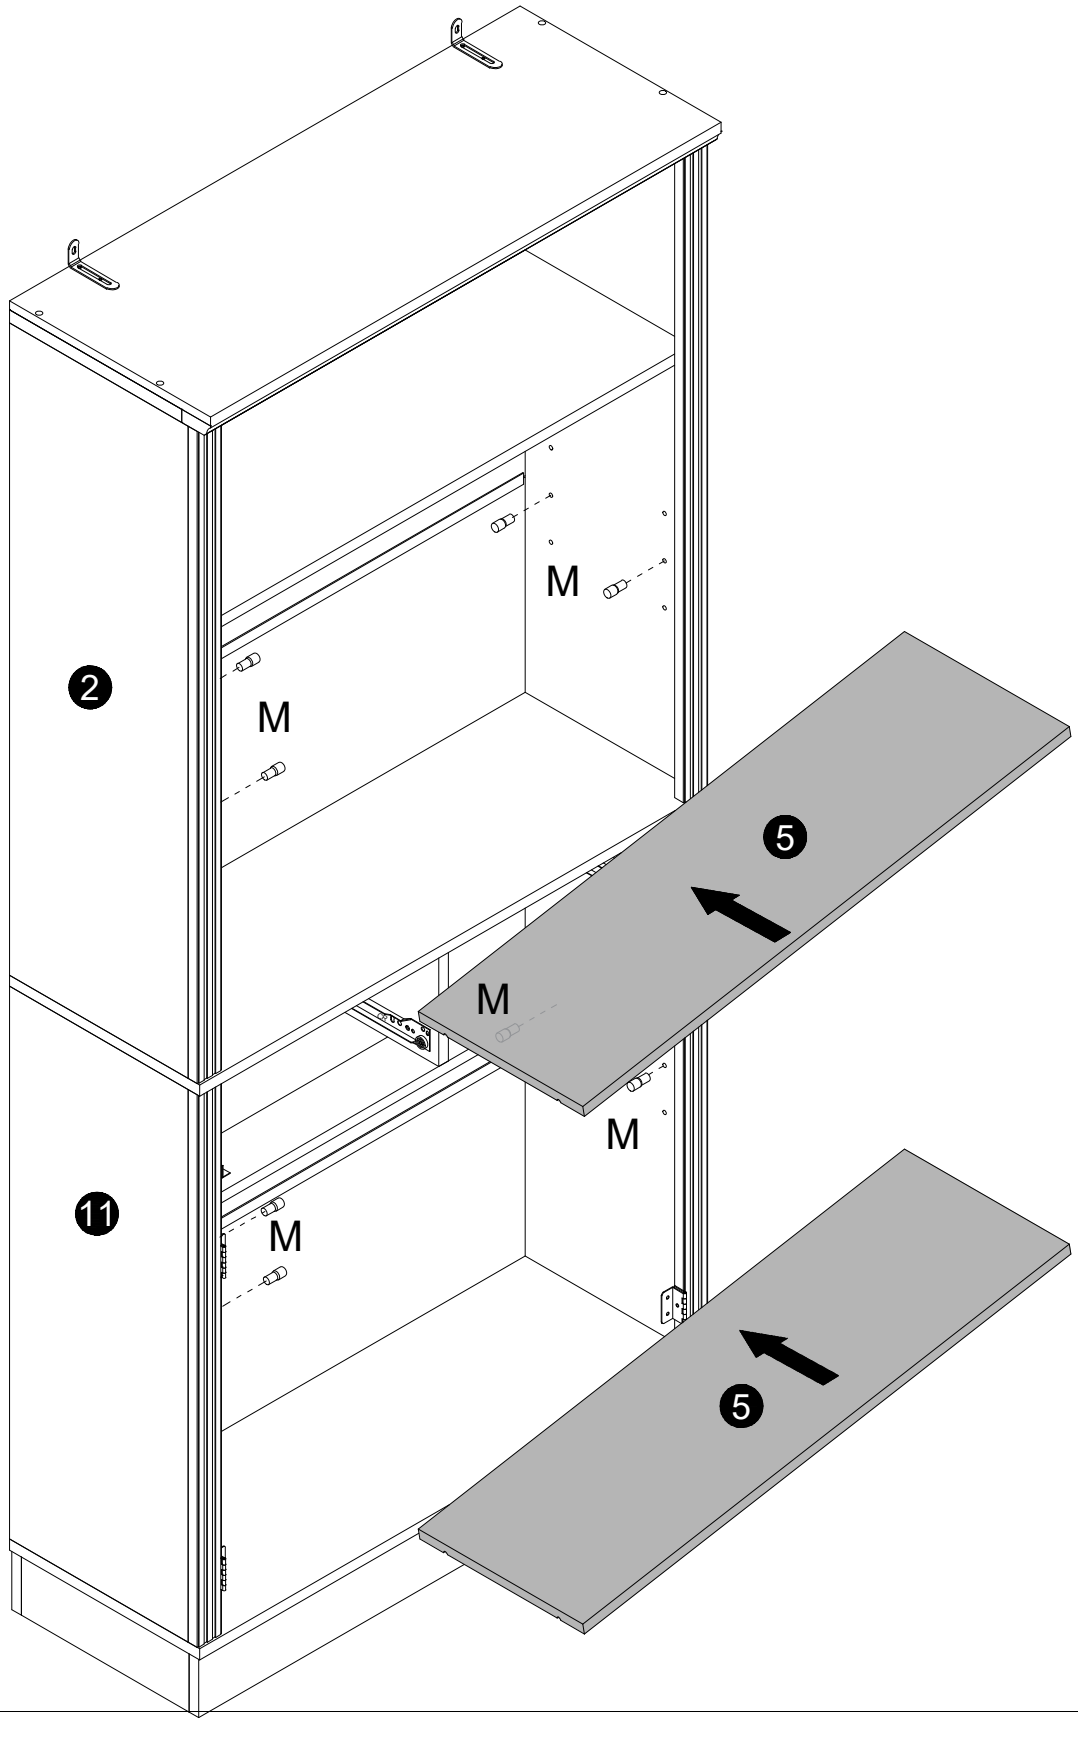


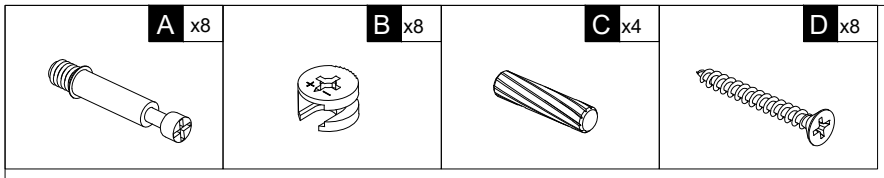


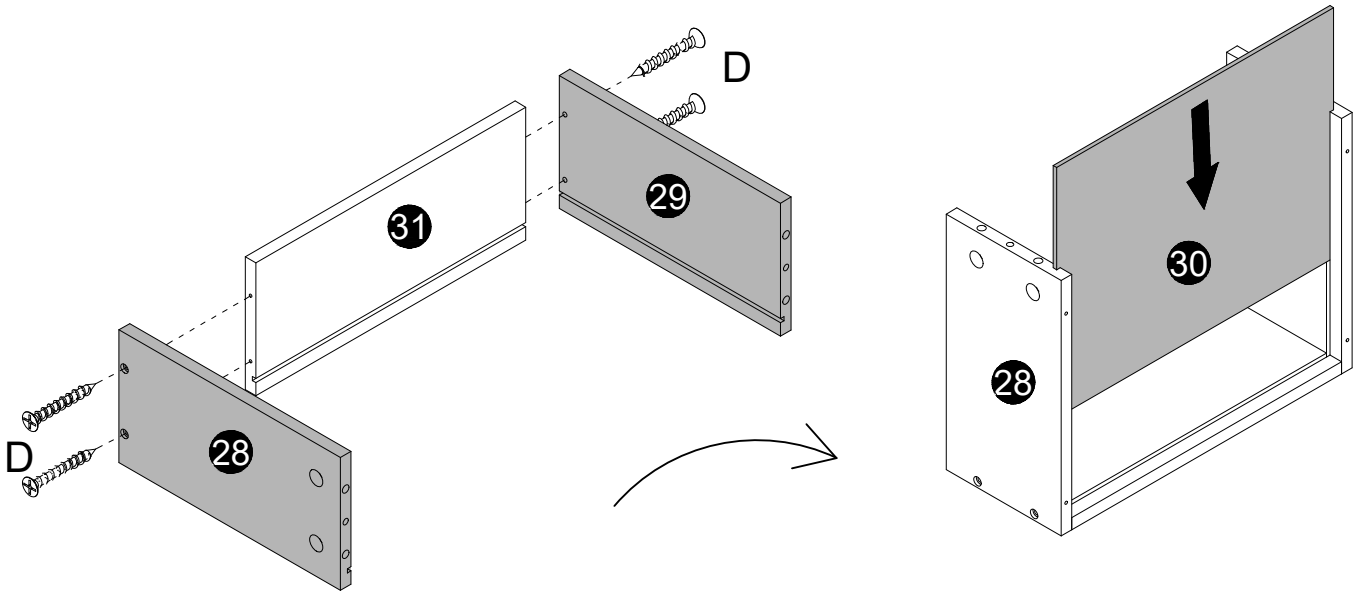
L x33

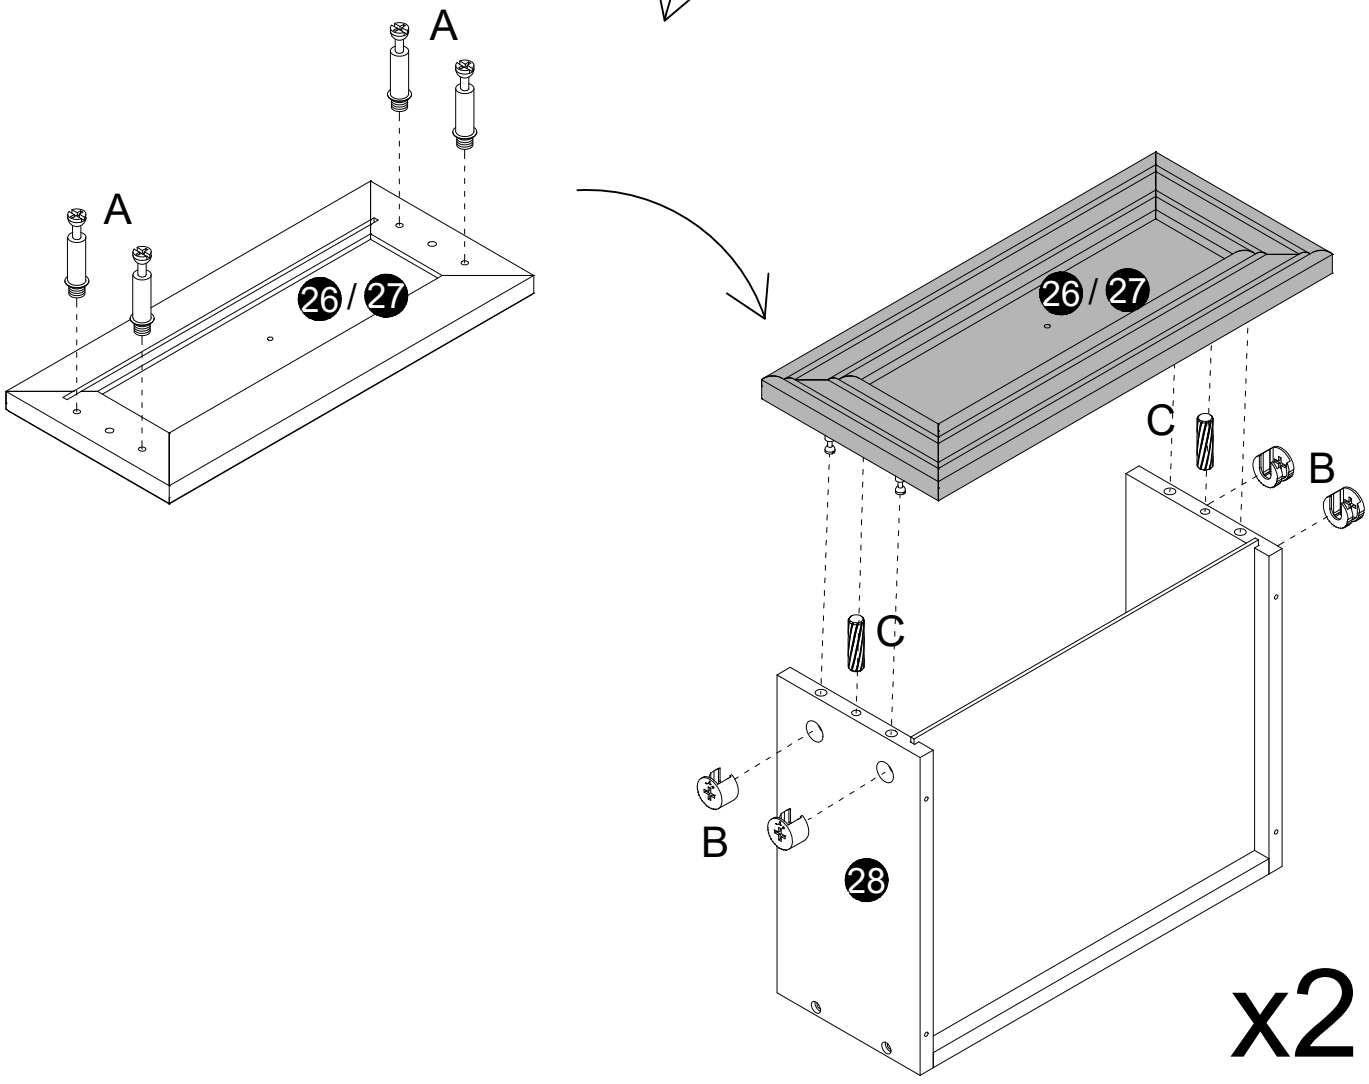


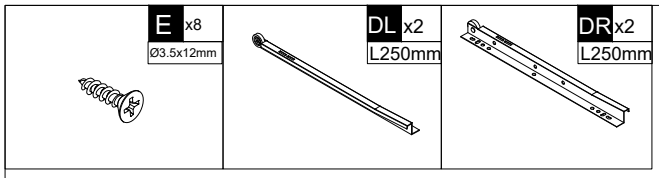

M x8

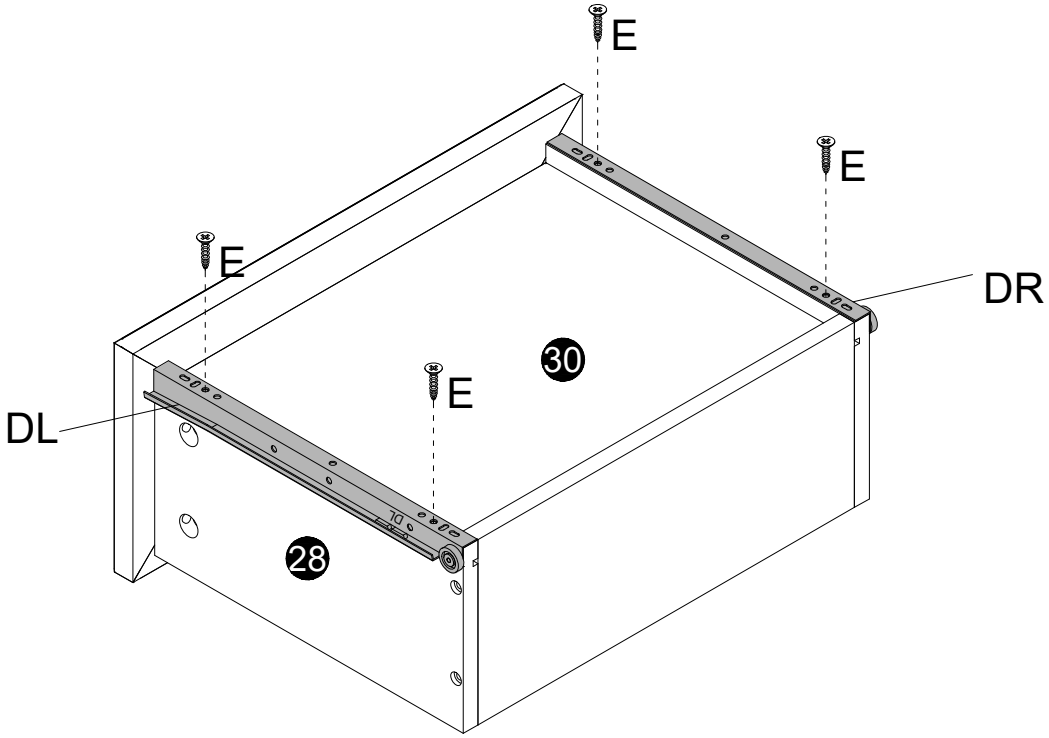

M
2
M
5
M
M
11
M
5


A x8
B x8
C x4
D x8

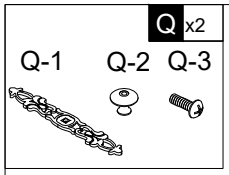

D
29
31
28
D
30
28

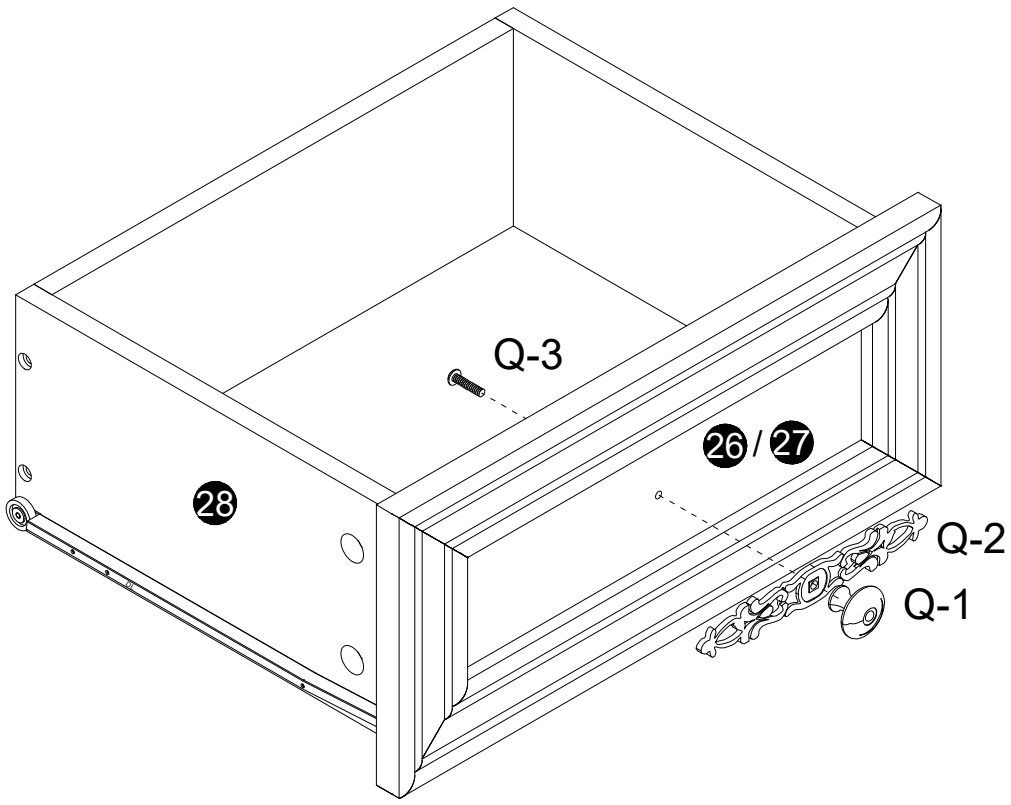

A
A
26 / 27
26 / 27
C
B
C
B
28
x2


E x8
Ø3.5x12mm
DL x2
L250mm
DR x2
L250mm

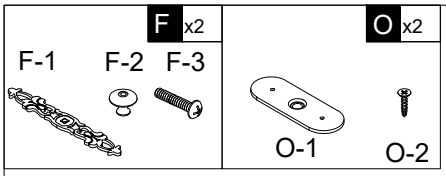

E
E
E
E
DR
DL
30
28

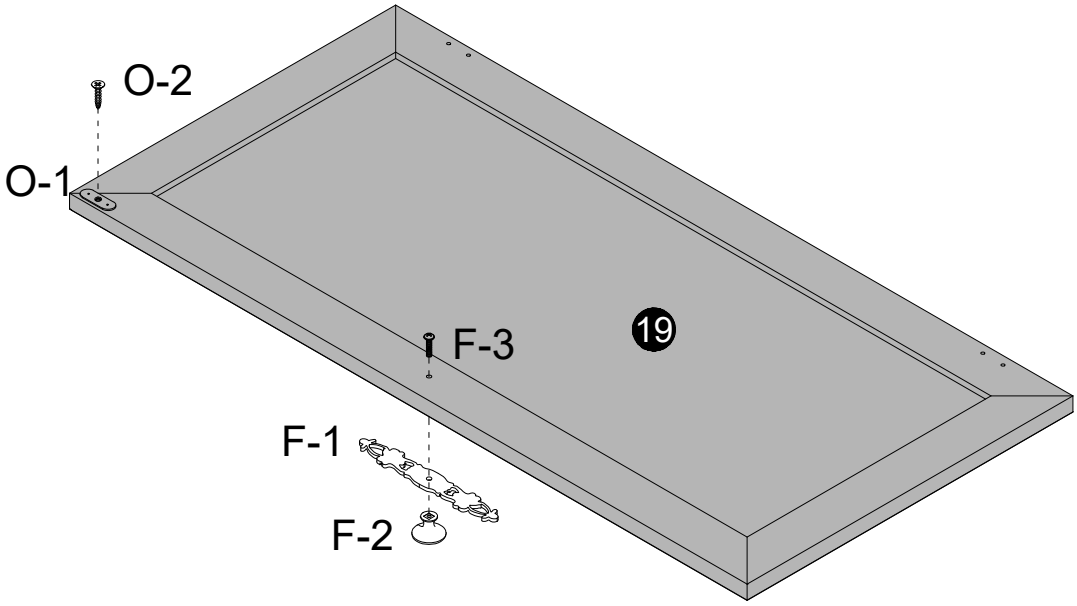
x2

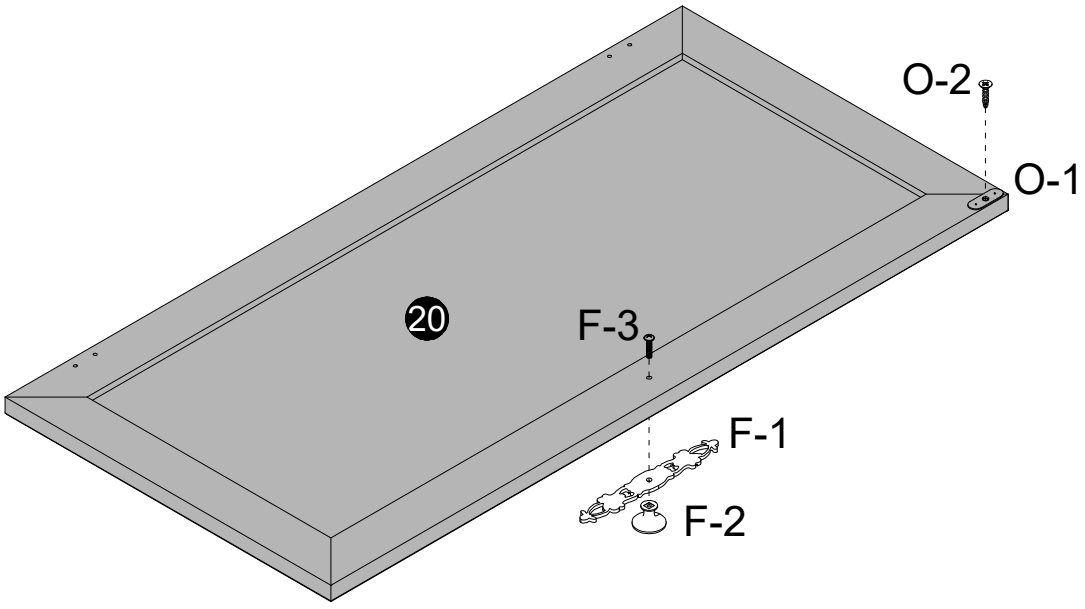

Q x2
Q-1
Q-2
Q-3


Q-3
26 / 27
28
Q-2
Q-1

x2

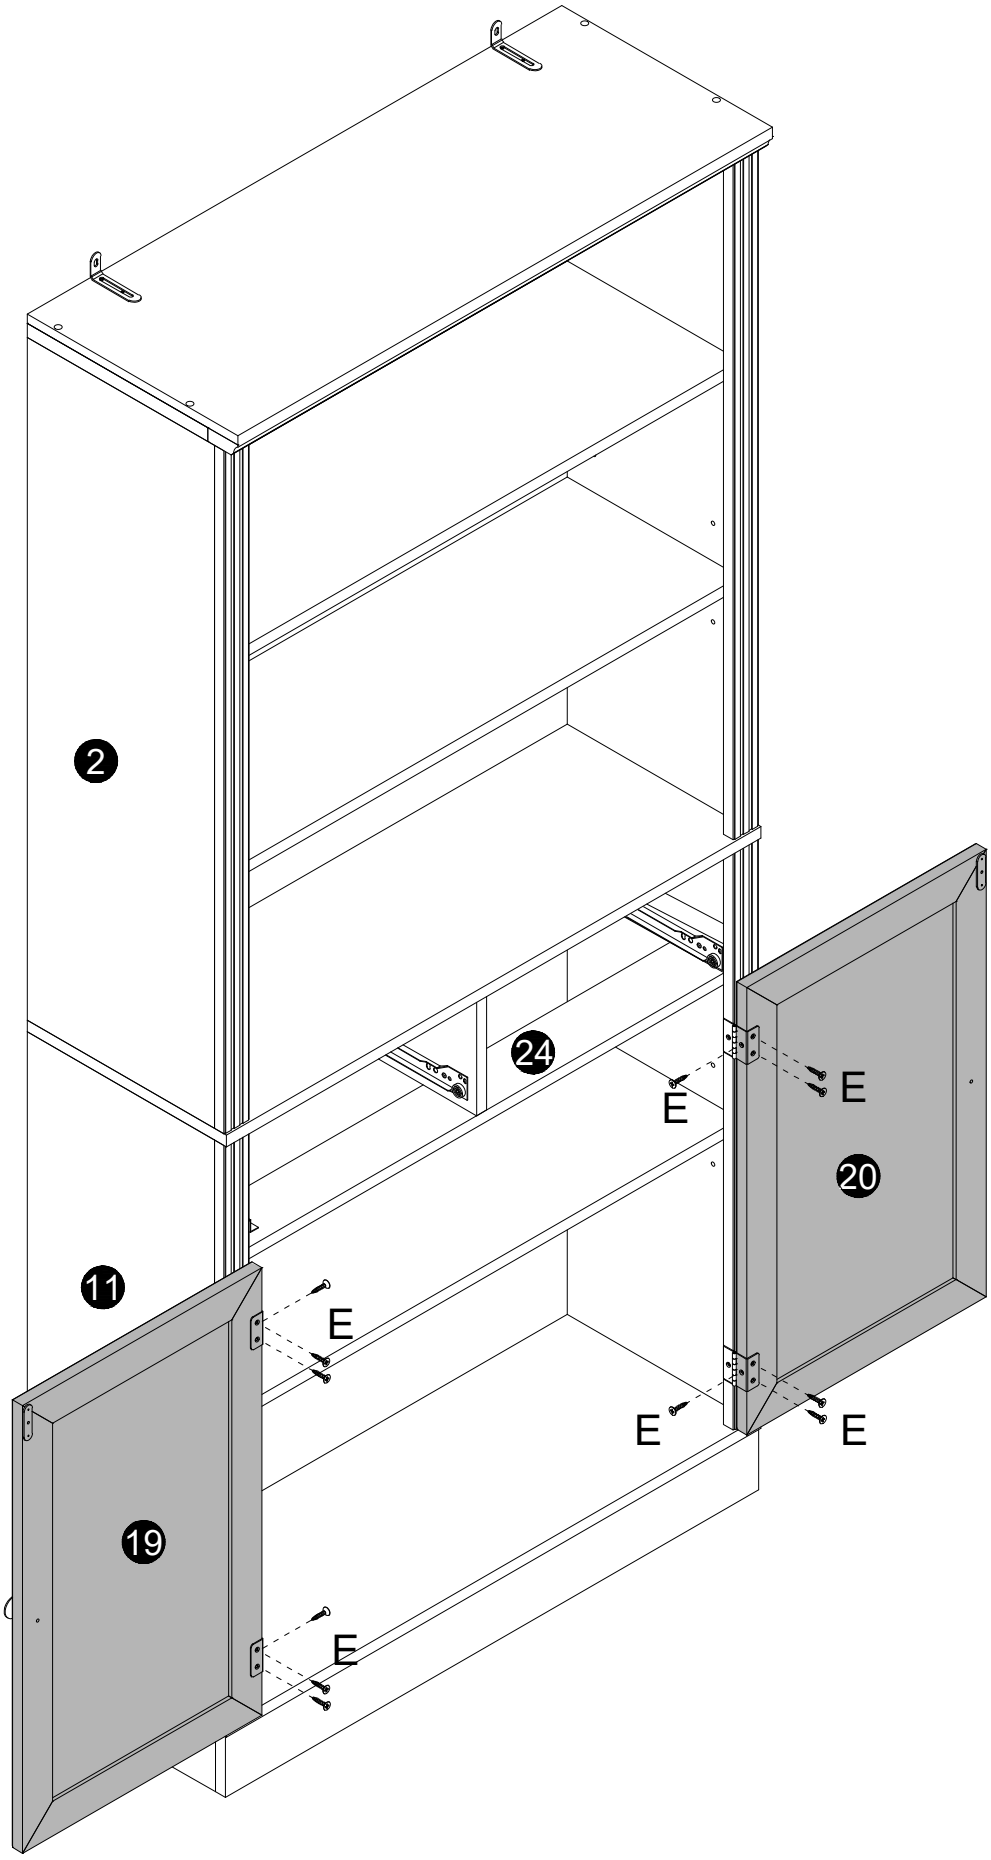

F x2
F-1
F-2
F-3
O x2
O-1
O-2

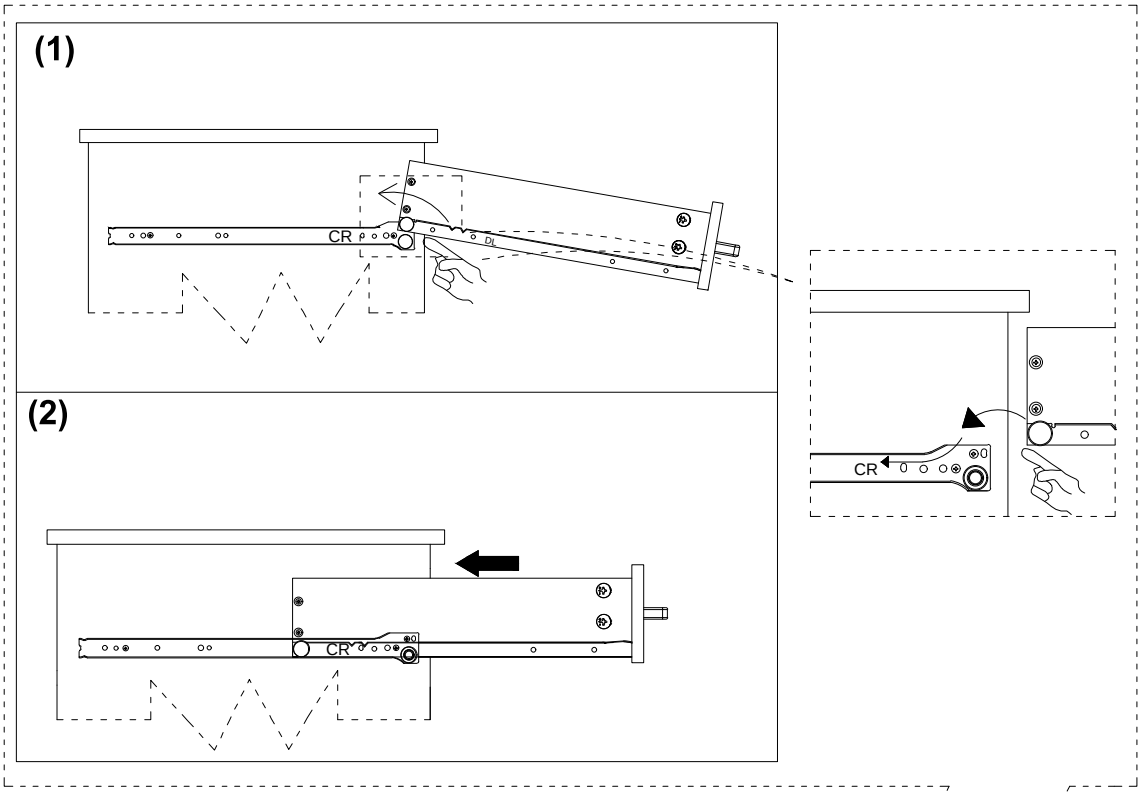

O-2
O-1
F-3
19
F-1
F-2

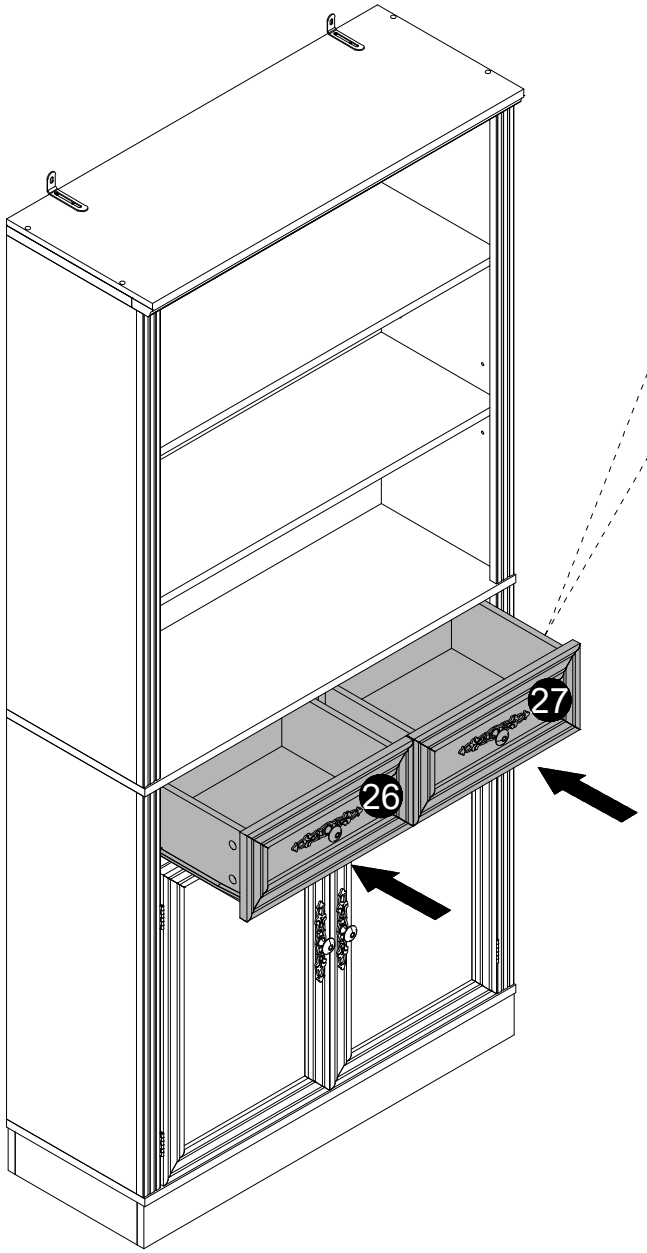

O-2
O-1
20
F-3
F-1
F-2

E x12
Ø3.5x12mm






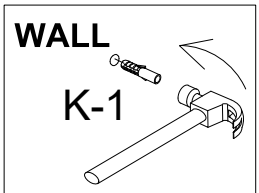

(1)
CR
DL
CR
(2)
CR


27
26

Done

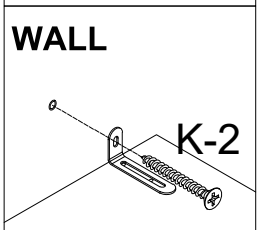
K x2





(4)x2

Then,put the expansion bolt into the hole



(5)x2

Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

