


Farmhouse Cabinet

HE-NCFBG_V1.0

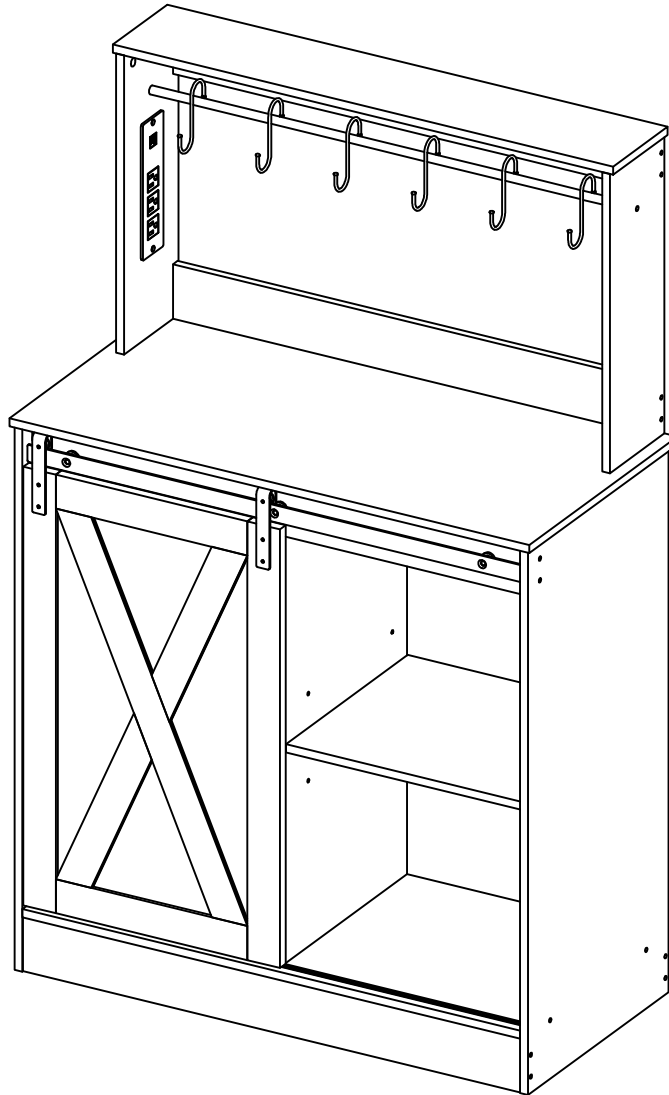

Assembly Manual

Thank you for your purchase at our store.

Please contact us directly if you have difficulty with assembly or need replacement parts. Professional customer service is here to assist you.

Email: support@homieasy.com


Please call for replacement parts or assistance: 1-478-666-6611. Mon-Fri 9am-5pm (PST)

Please attach your order ID or some photos related so that we could help you better.

Two people are recommended to install, which will greatly improve your installation efficiency.

Tips Before Assembly


1. Read through each step carefully and follow the proper order.
2. Identify, sort and count all the parts with tags.
3. To avoid any scratching, putting a soft blanket on the floor is suggested.
4. If using a power drill or power screwdriver for the screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.
5. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing.

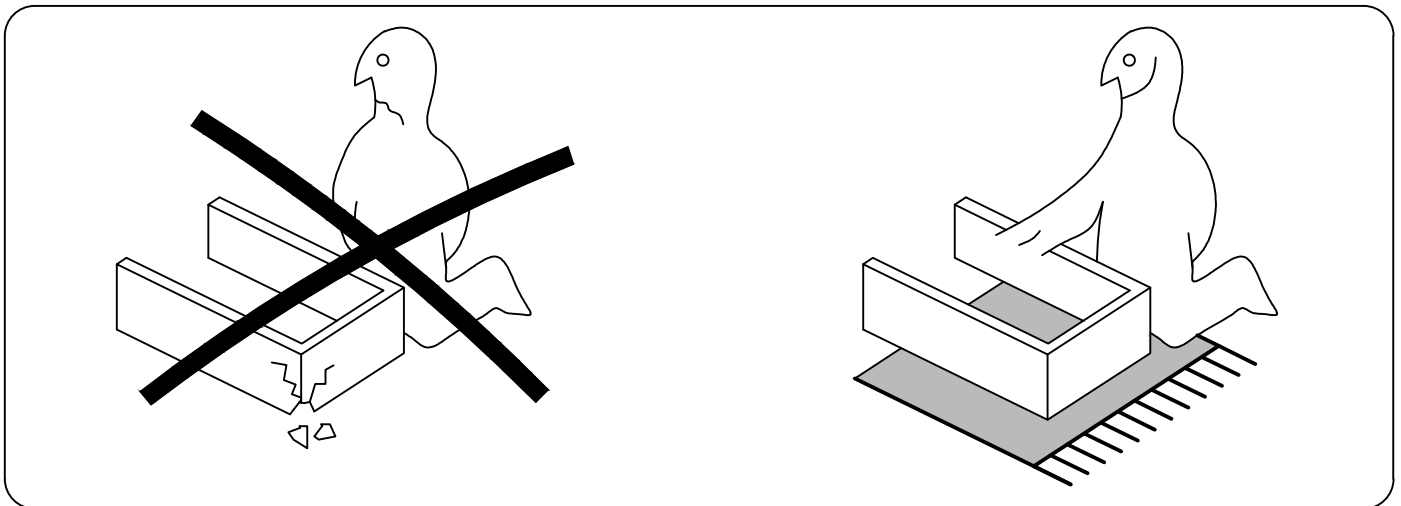

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

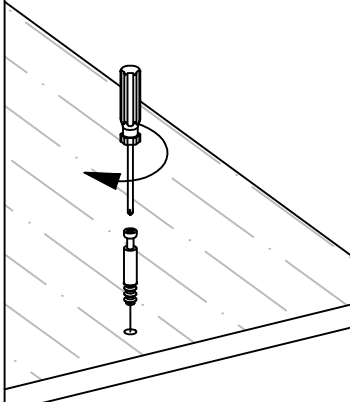

Push the male camlock into the entry hole.


2

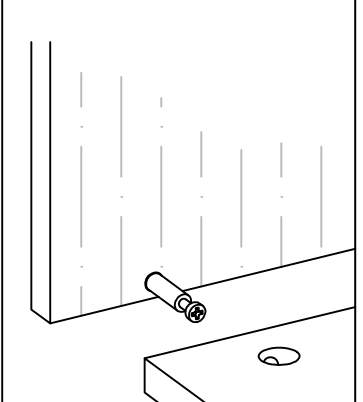

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

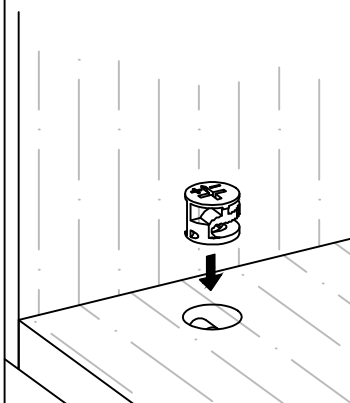



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

















The joint is now secure.

4













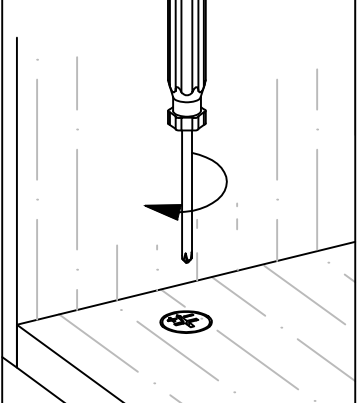


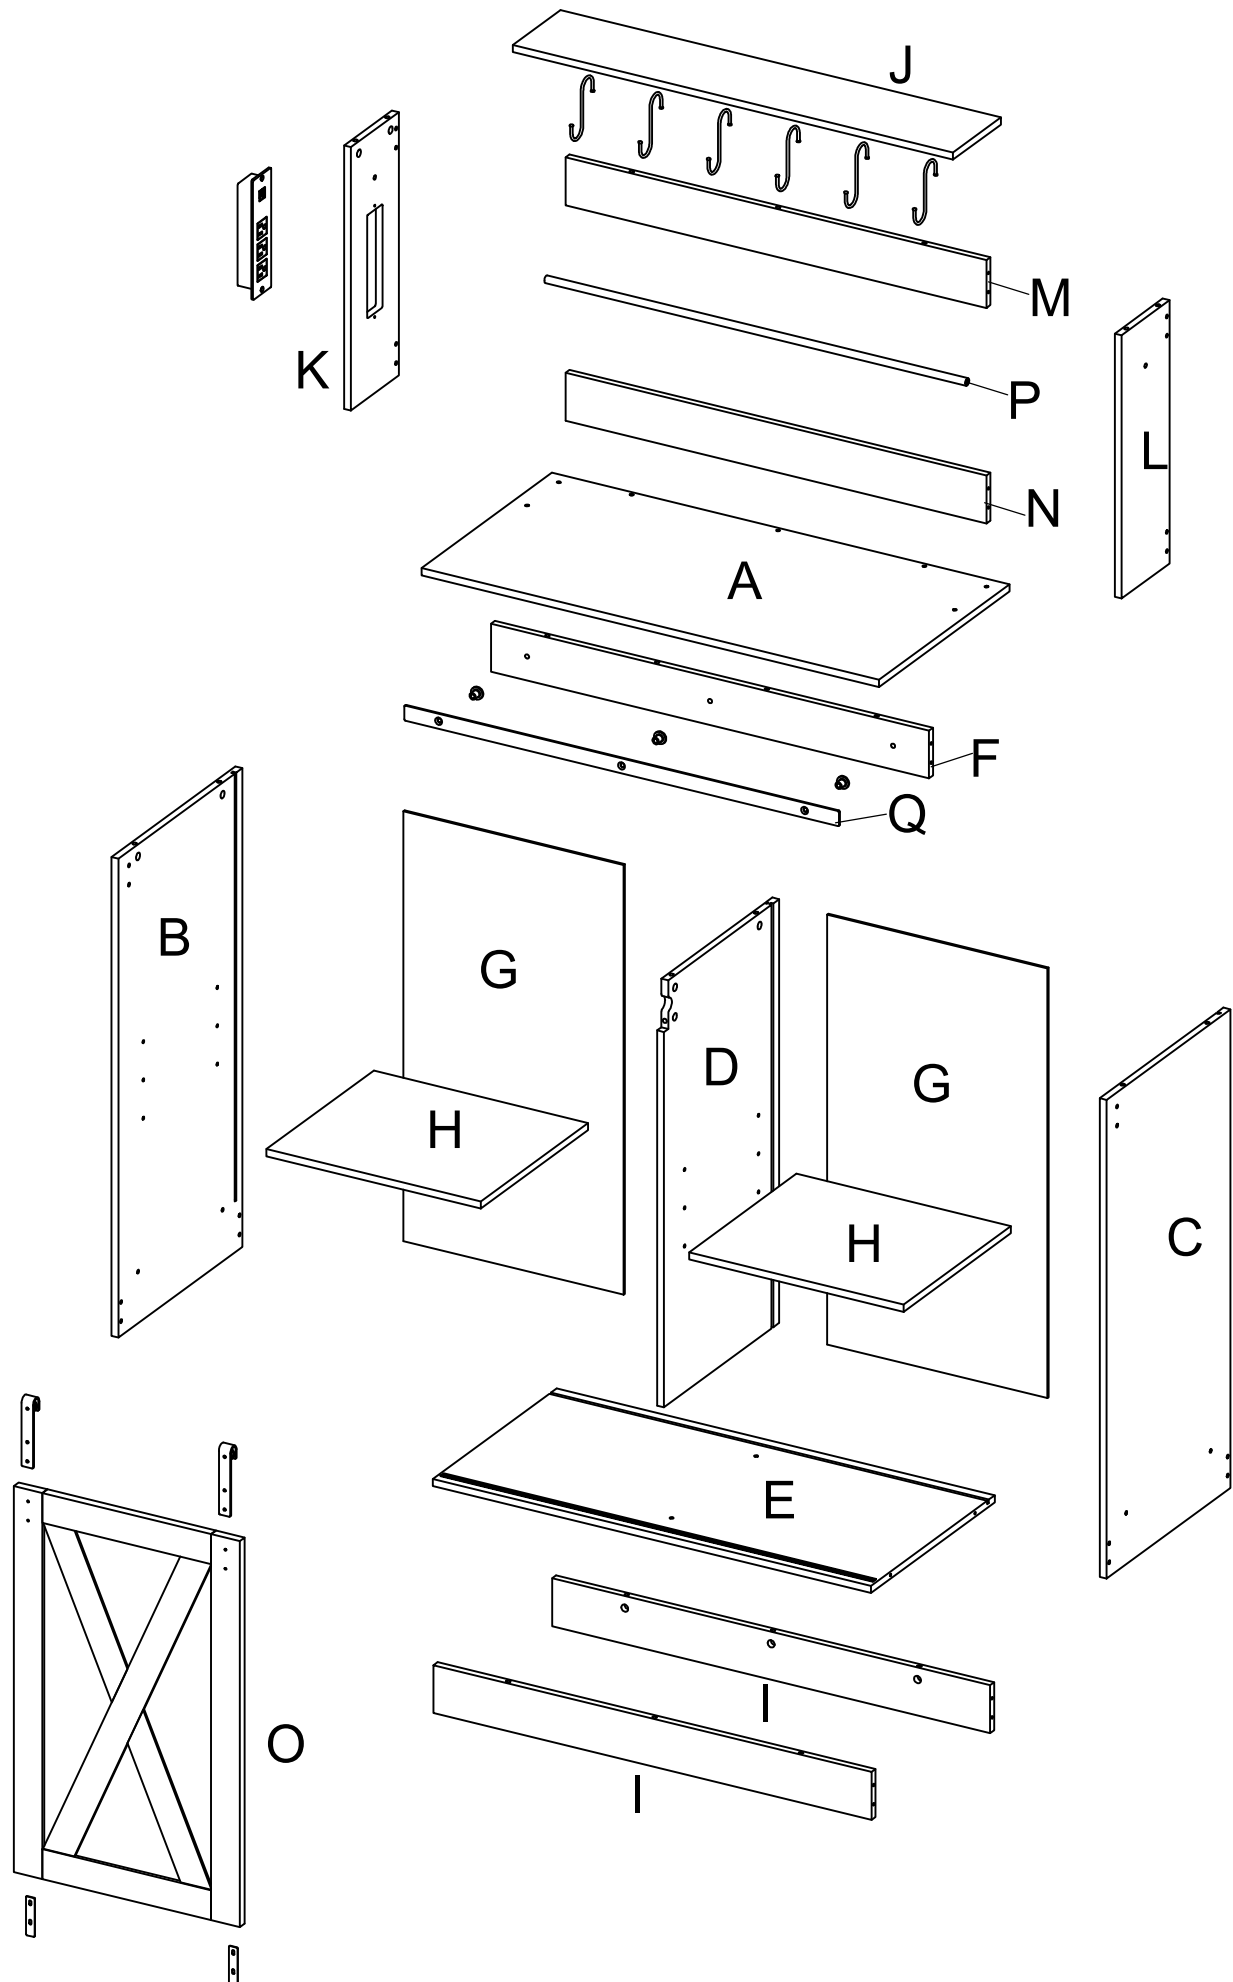



PART LIST

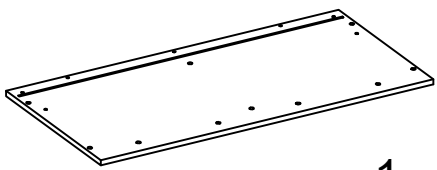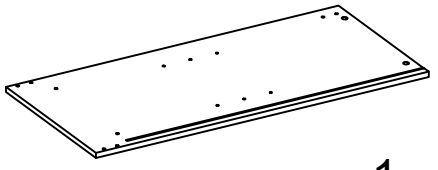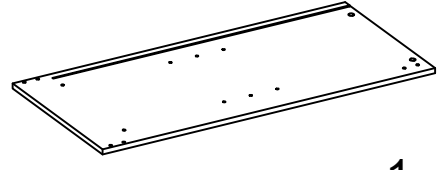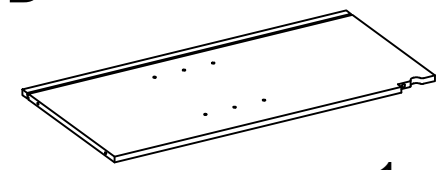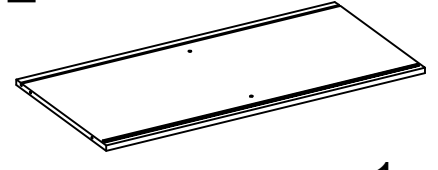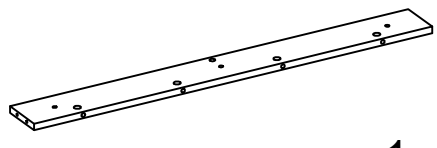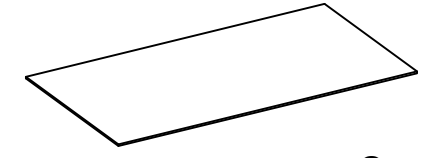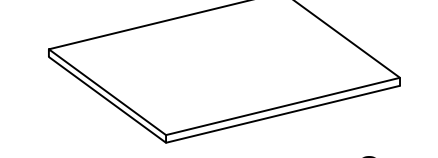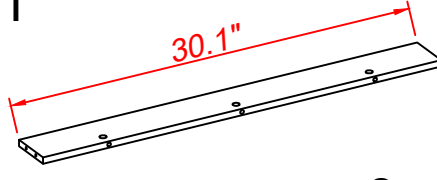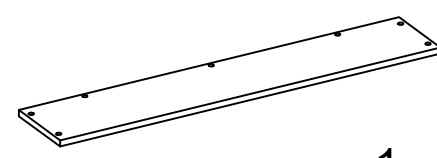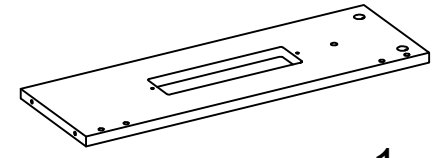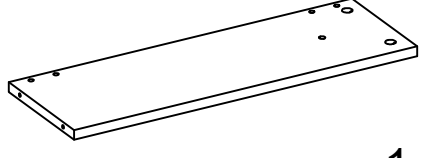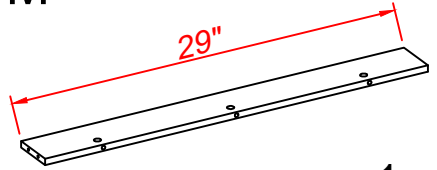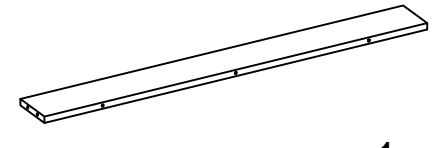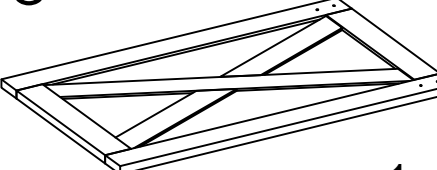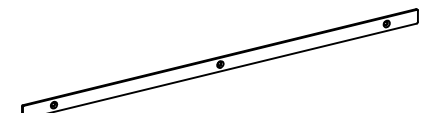A  1 pc	B  1 pc	C  1 pc
D  1 pc	E  1 pc	F  1 pc
G  2 pcs	H  2 pcs	I  L1893 2 pcs
J  1 pc	K  1 pc	L  1 pc
M  1 pc	N  1 pc	O  1 pc
P  Ø12x736 1 pc	Q  L760 1 pc	






HARDWARE LIST

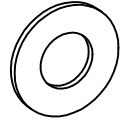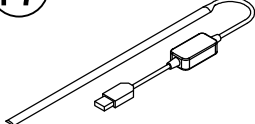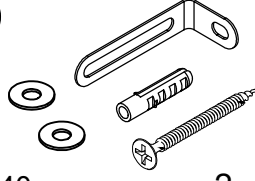①  M5x40 33 pcs	②  6 pcs	③  M6x19 8 pcs	④  M6x16x1.0 3 pcs
⑤  M6 3 pcs	⑥  M6x40 3 pcs	⑦  Ø20x15 3 pcs	⑧  M6x28 24 pcs
⑨  Ø12 24 pcs	⑩  8 pcs	⑪  2 pcs	⑫  65x15x1.5 2 pcs
⑬  M4x14 8 pcs	⑭  M6x27 2 pcs	⑮  1 pc	⑯  M3x12 24 pcs
⑰  60cm 1 pc	⑱  3 pcs	⑲  4 pcs	⑳  RF Remote Control 1 pc
㉑  12 pcs	㉒  Ø10 4 pcs	㉓  M4x40 2 pcs	㉔  M4 1 pc
㉕  M3 1 pc	㉖  10mm 1 pc	㉗  1 pc	



STEP 1

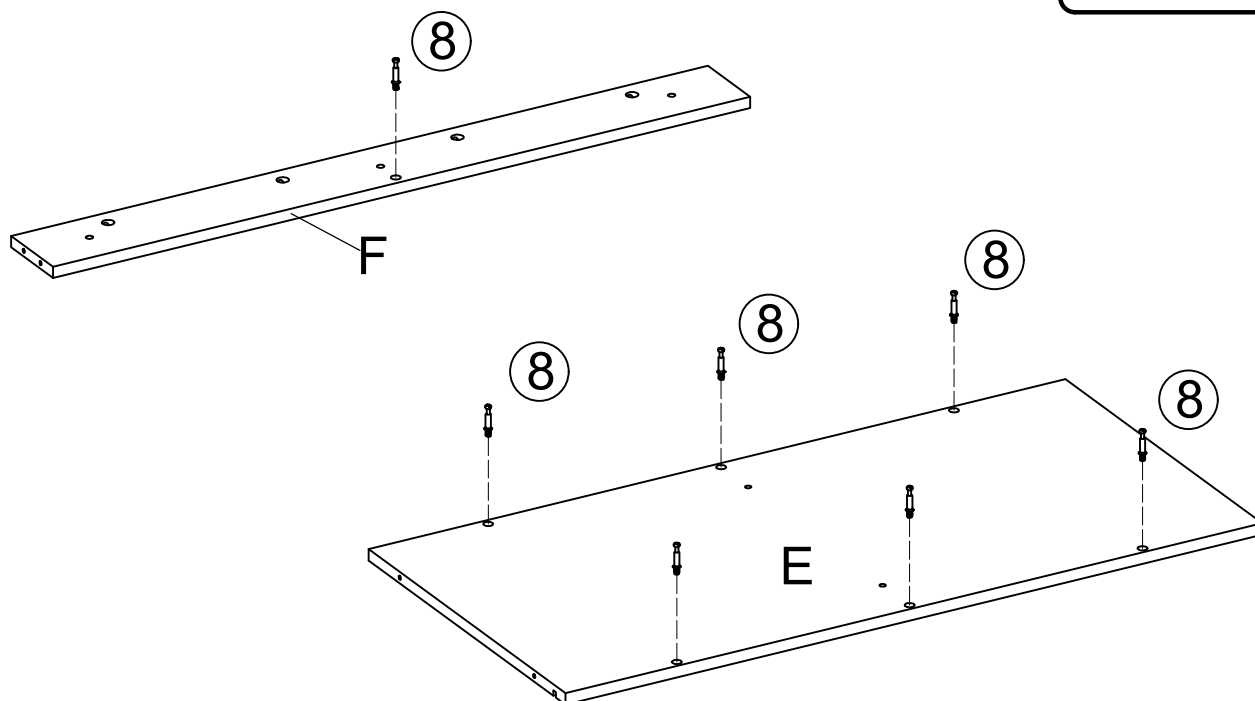

STEP 2

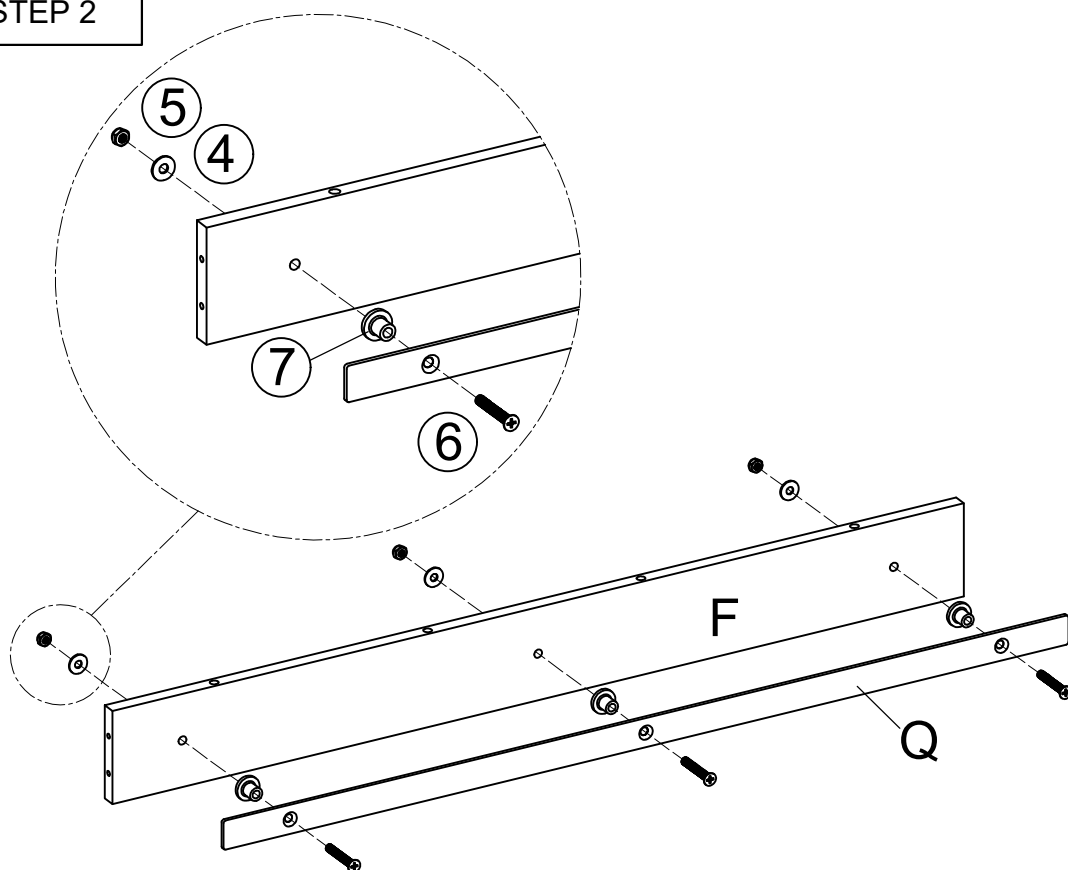


STEP 3

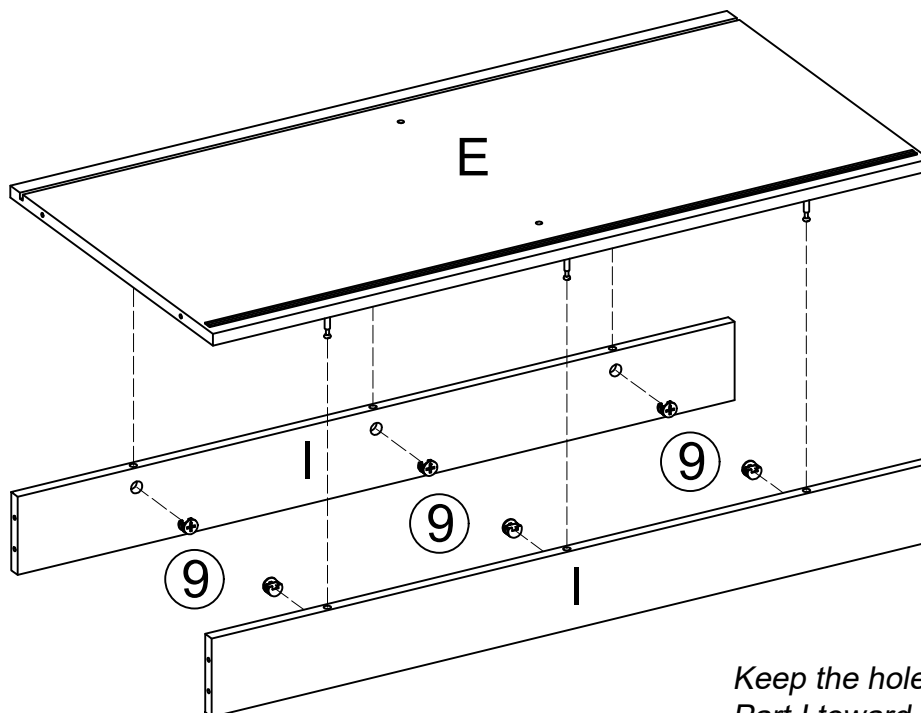


Keep the holes of the Part I toward this direction as shown



STEP 4





Keep the holes of the Part D and Part E toward this direction as shown

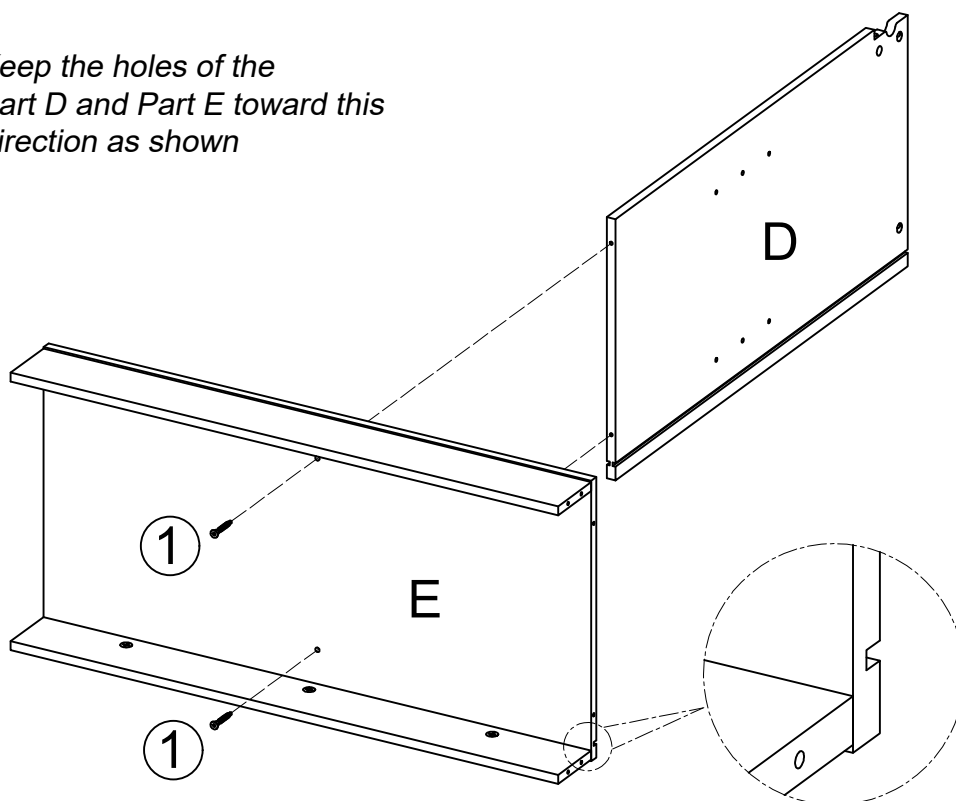

STEP 5

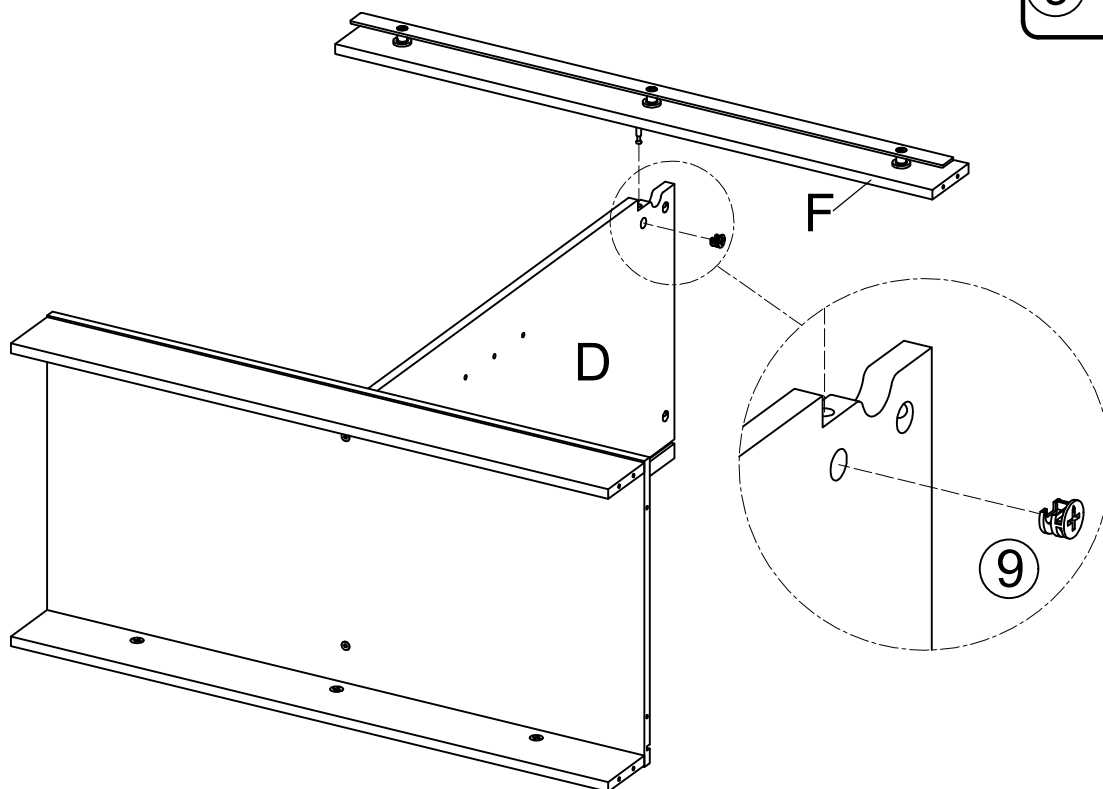



STEP 6

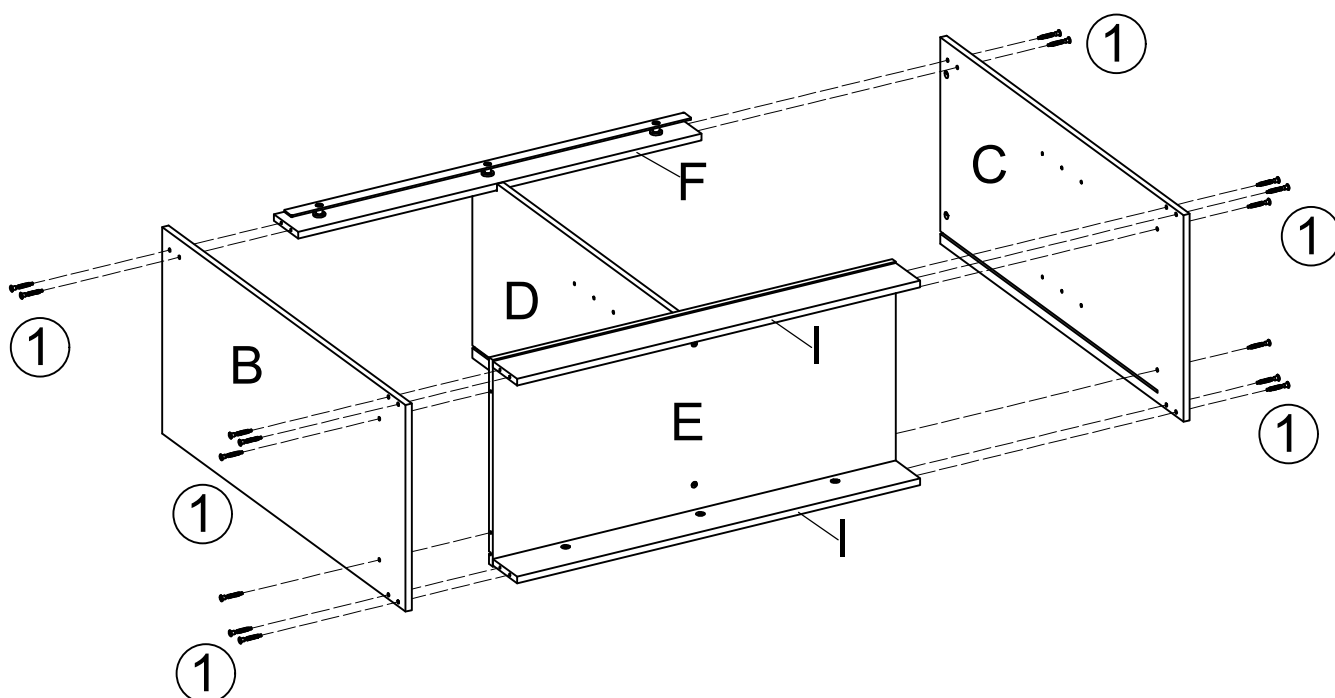

STEP 7


Tear off the tape of the LED strip, stick the LED strip roughly in the center of the bottom of top panel (J). (Between the seven holes).
Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

- 16  x10
- 17  x1
- 18  x3
- 19  x4

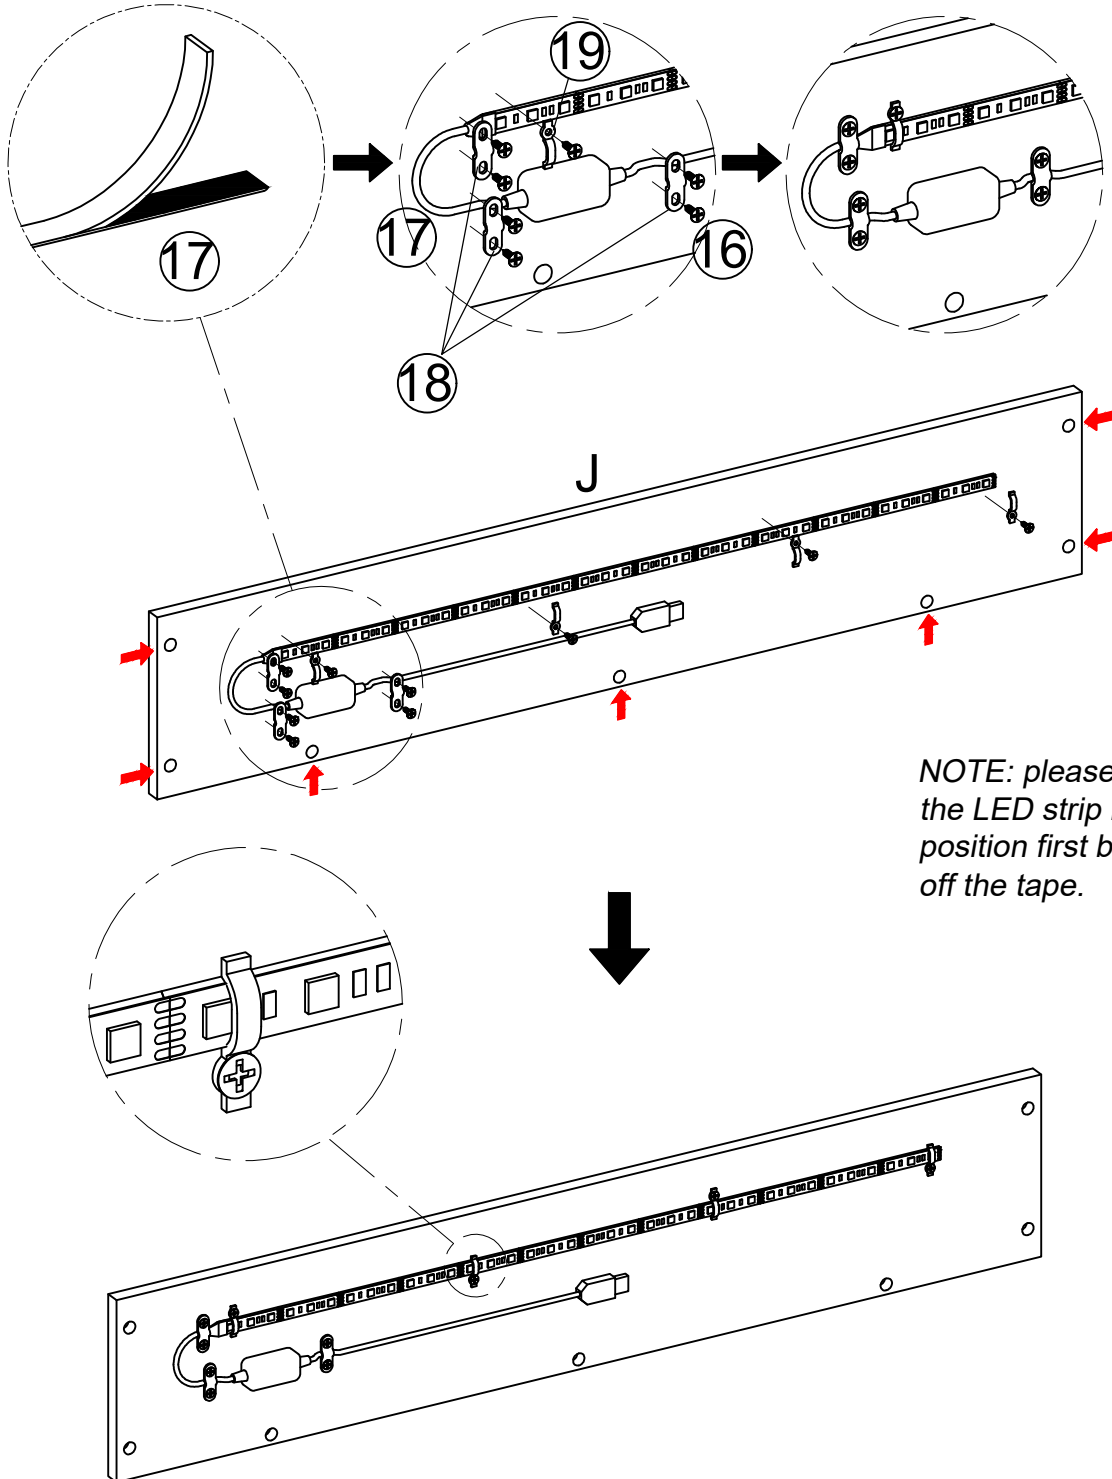


NOTE: please make sure the LED strip is in proper position first before tear off the tape.


STEP 8

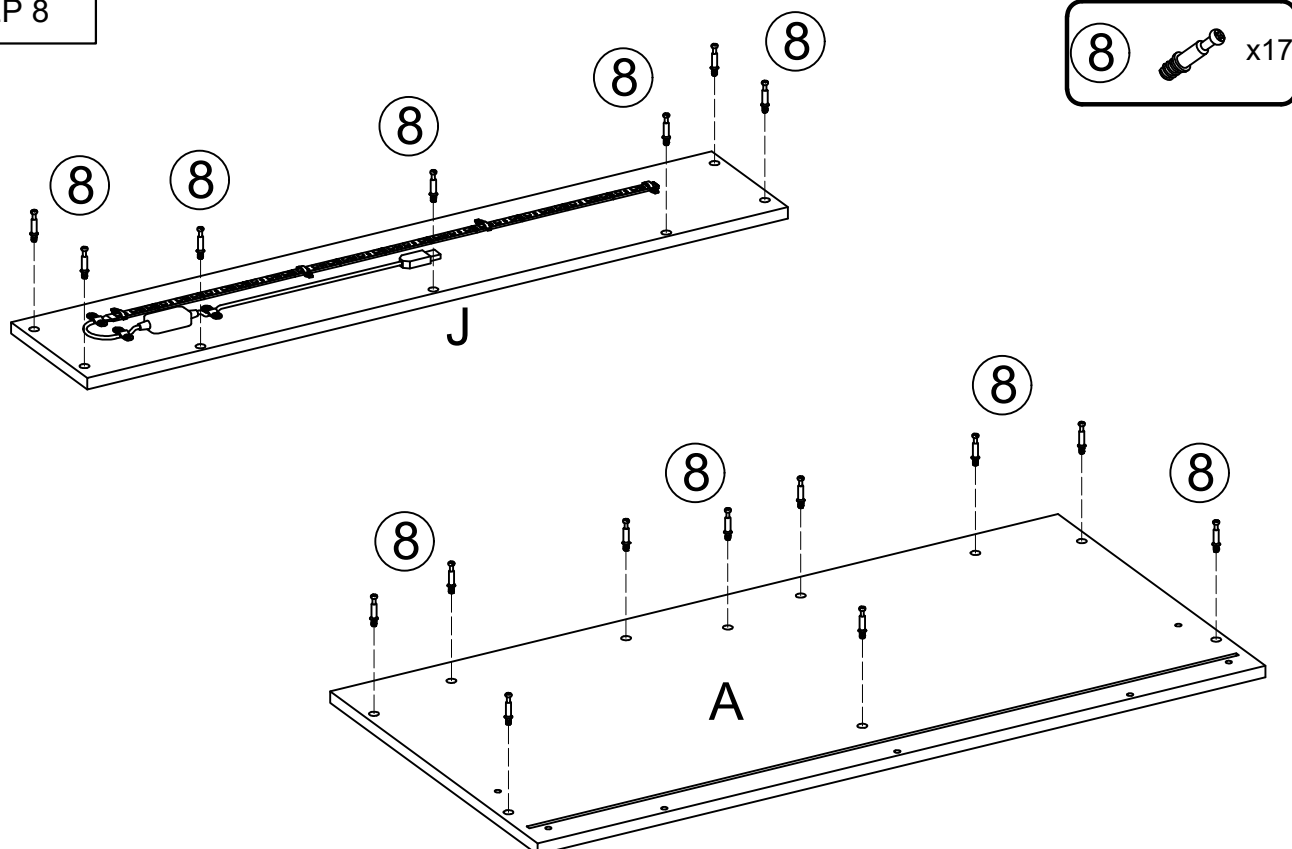


STEP 9

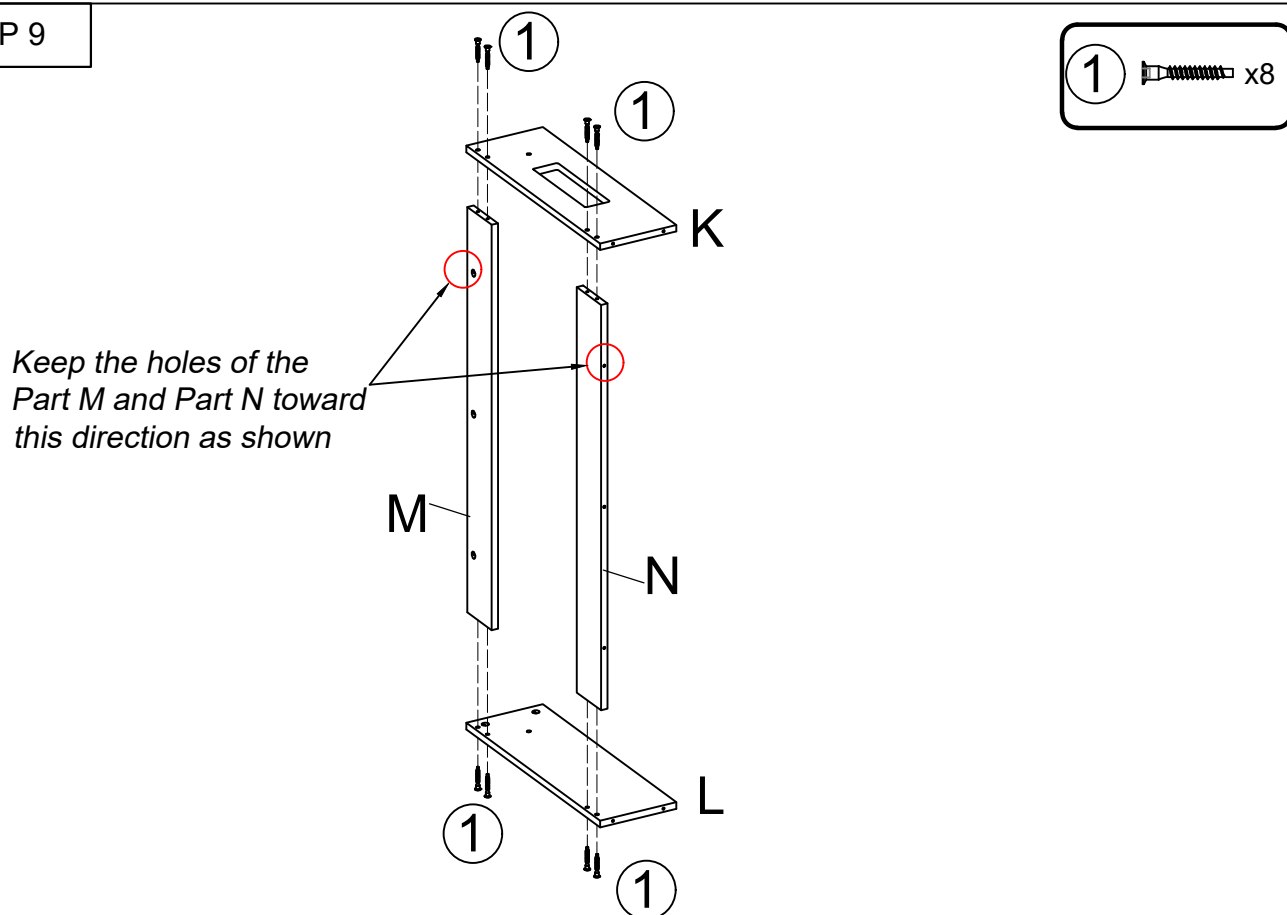



STEP 10

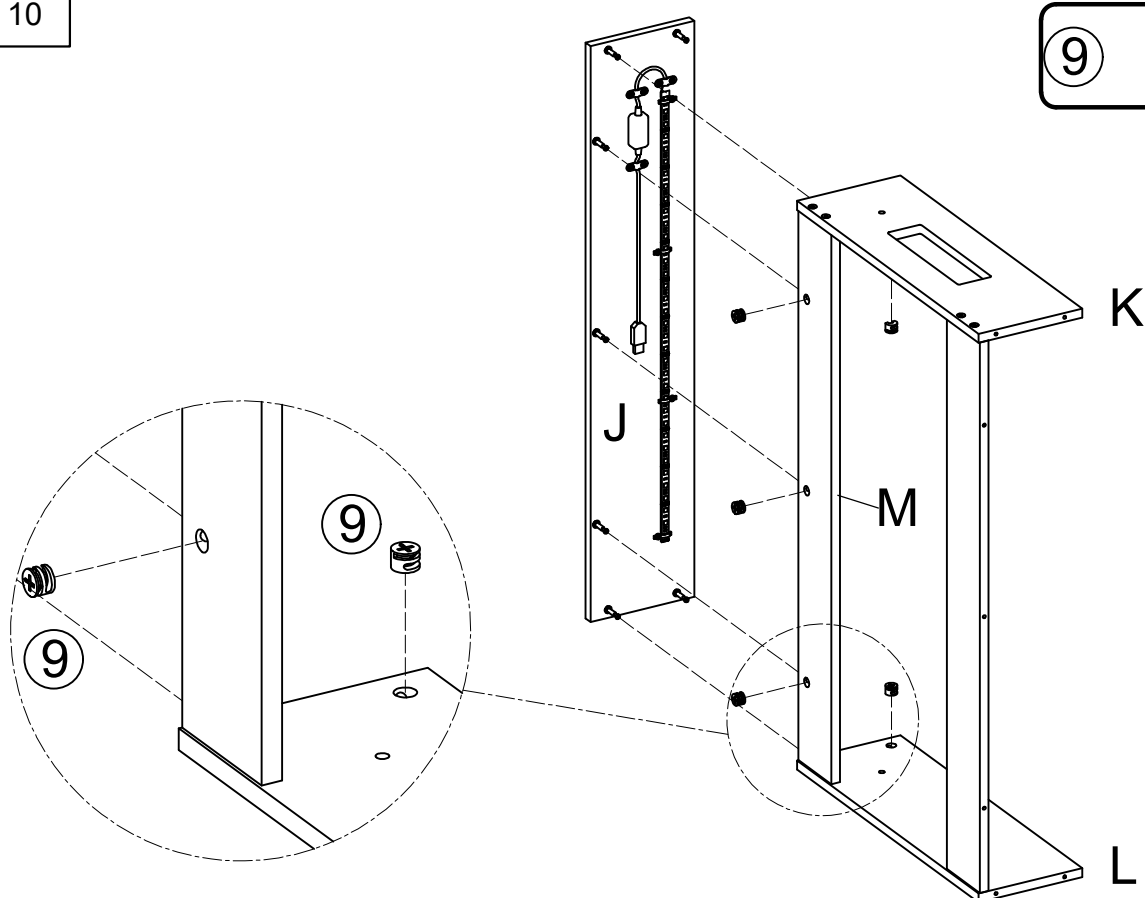


STEP 11

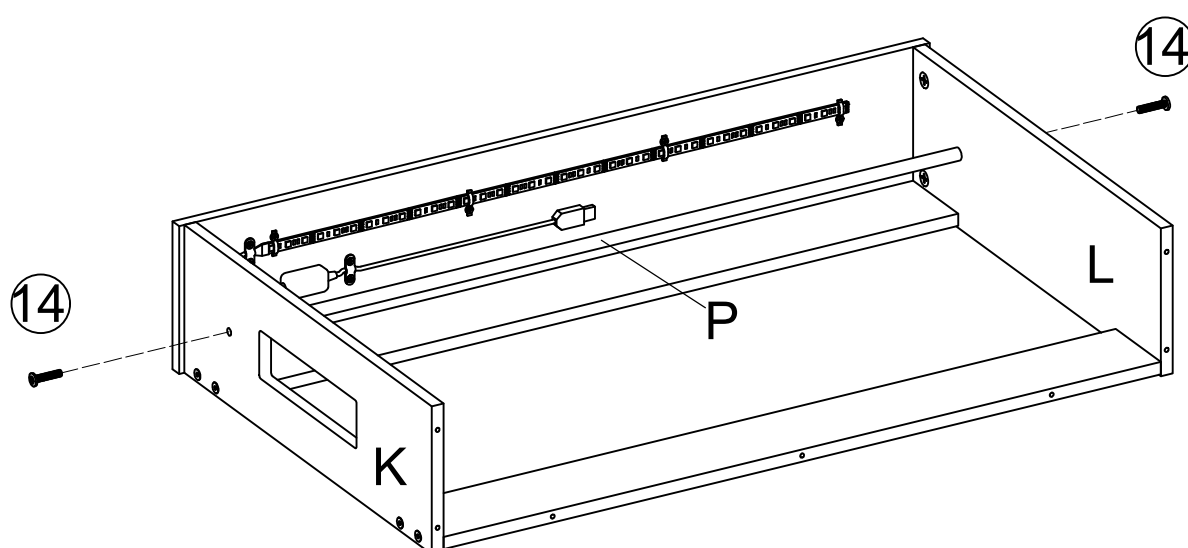



STEP 12

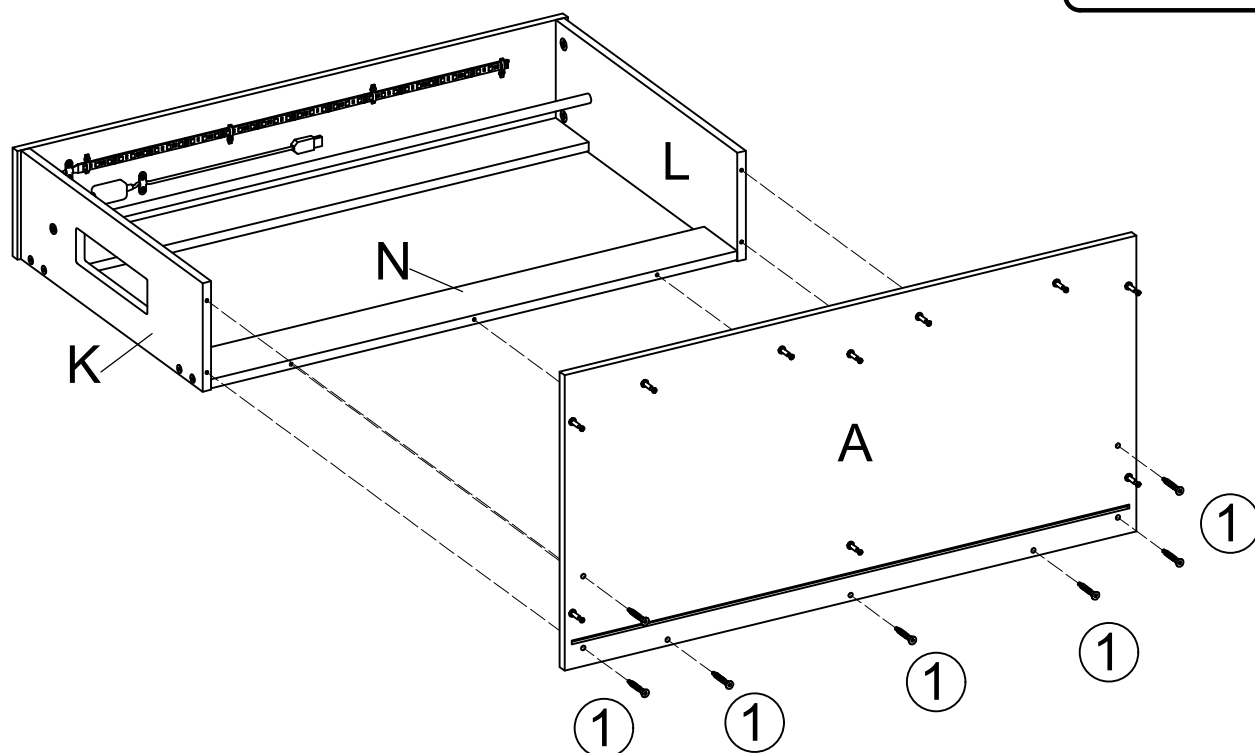


STEP 13

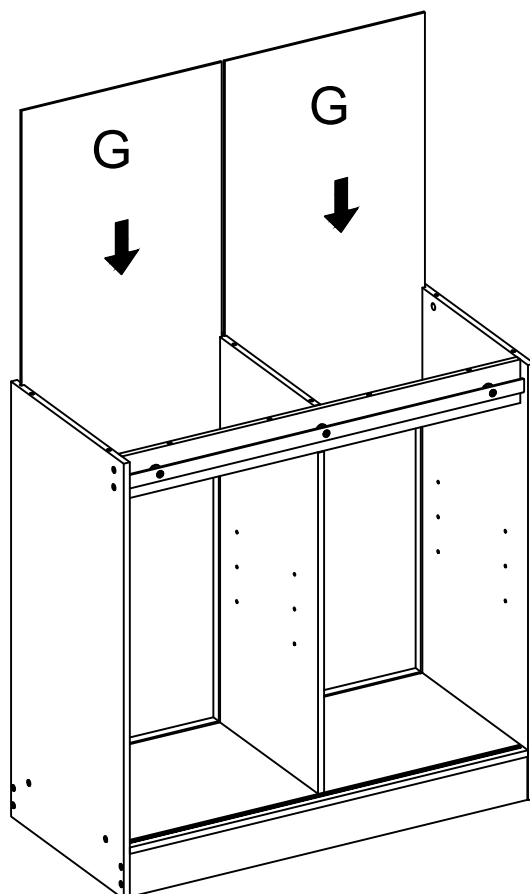


STEP 14

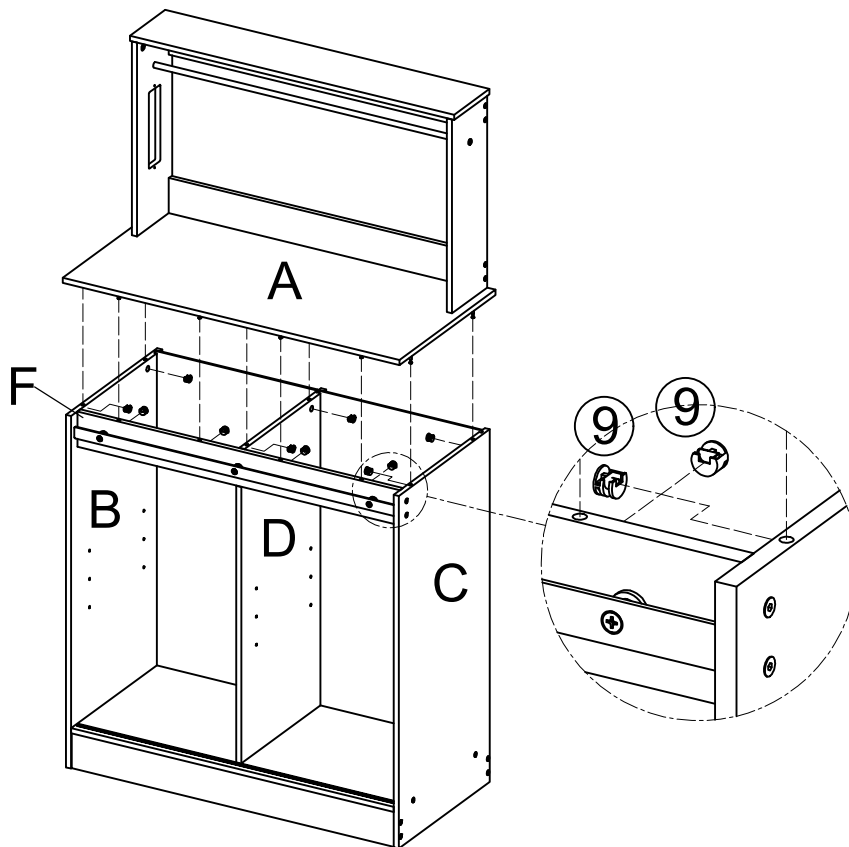



STEP 15




Gently tap the Floor Protectors (10) at the bottom of side panels avoiding crack or damage of side panel.

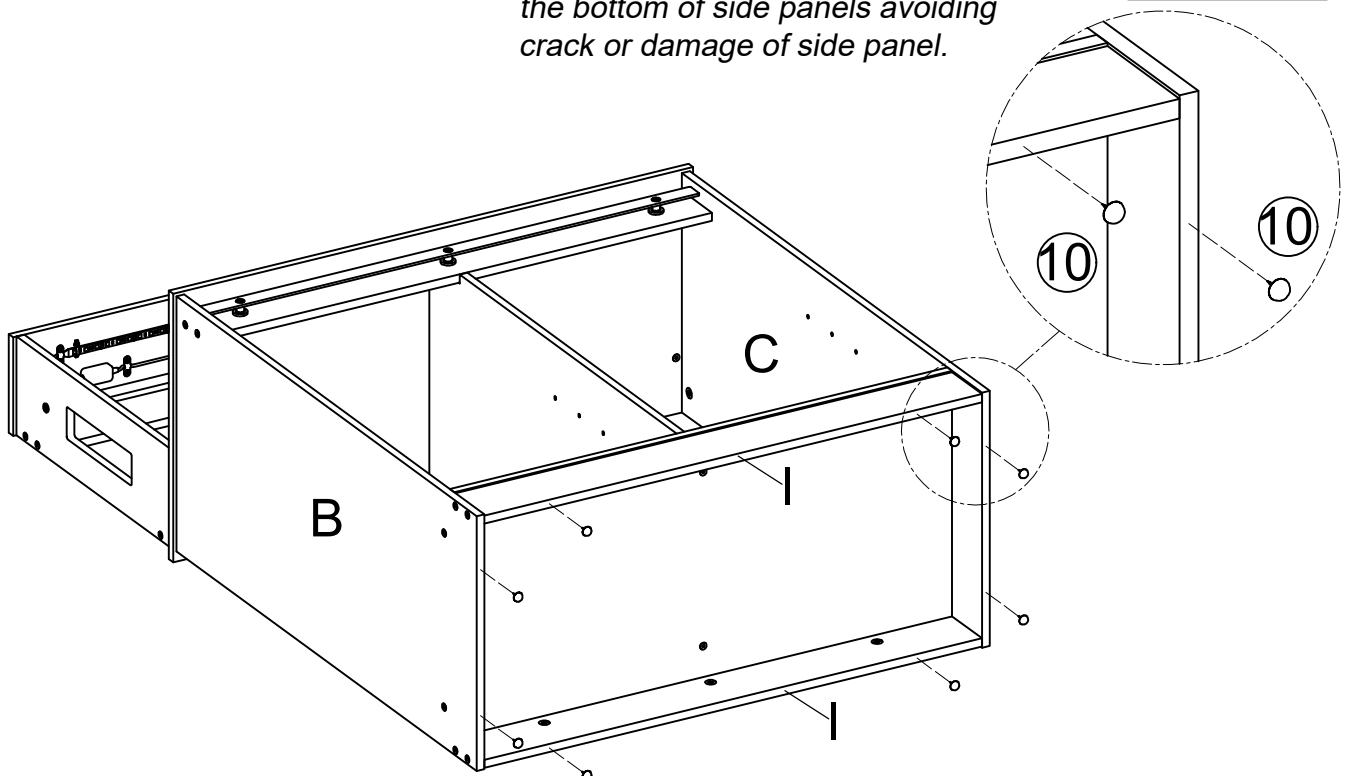




STEP 16

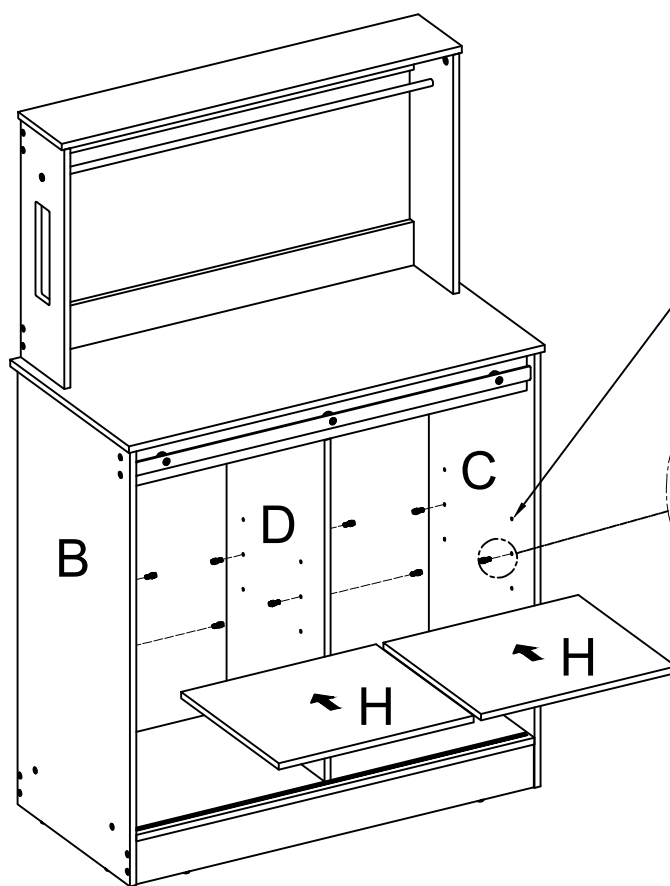


There are 3 heights for the shelf to be adjusted as you need.

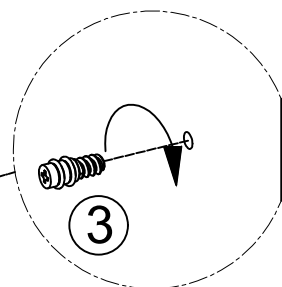

STEP 17

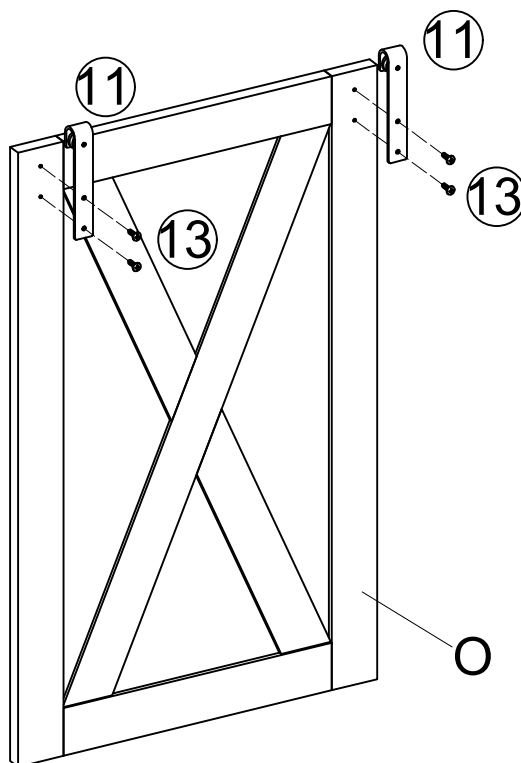


STEP 18

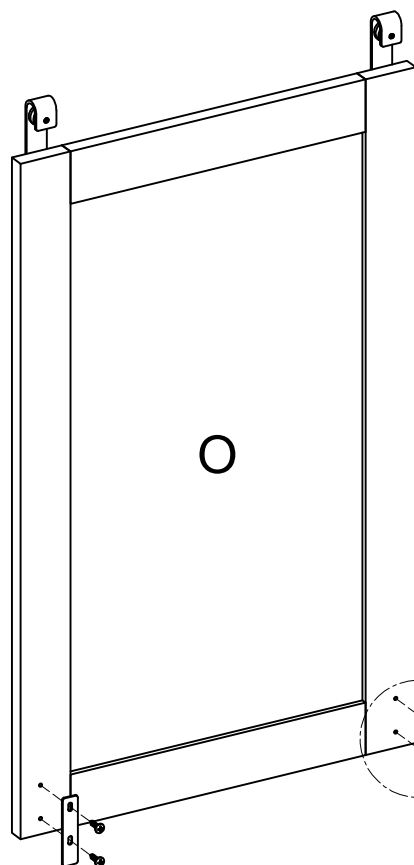


12 x2

13 x4


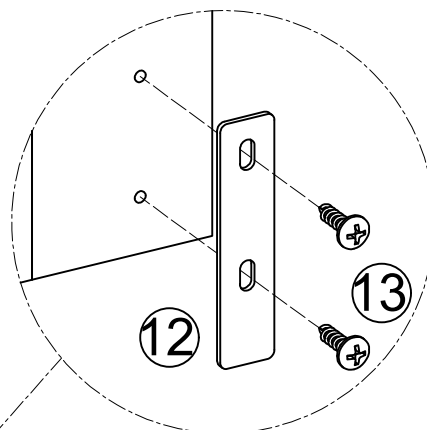


Keep the holes of the Part 12 toward this direction as shown



STEP 19

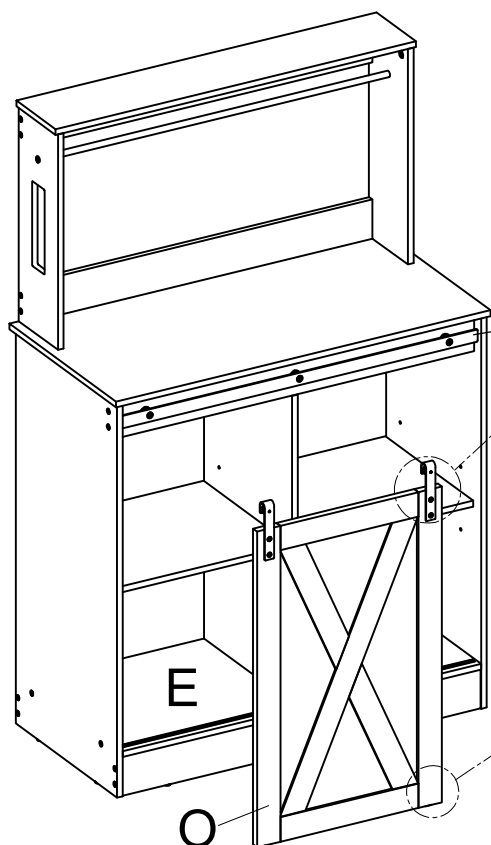



Step 1

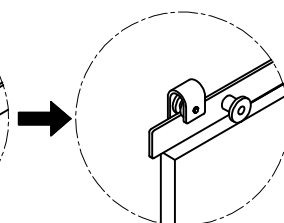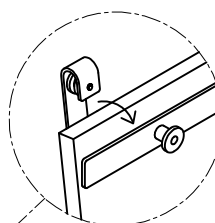


Step 2

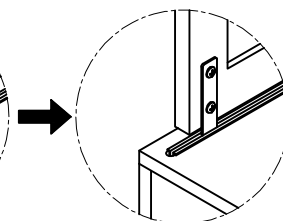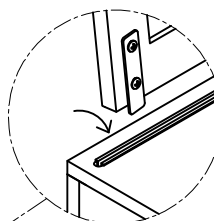





STEP 20

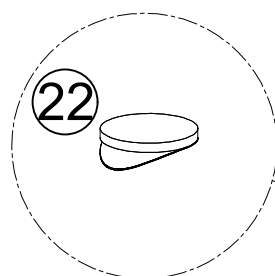

Shock-absorbing
Plastic Pad



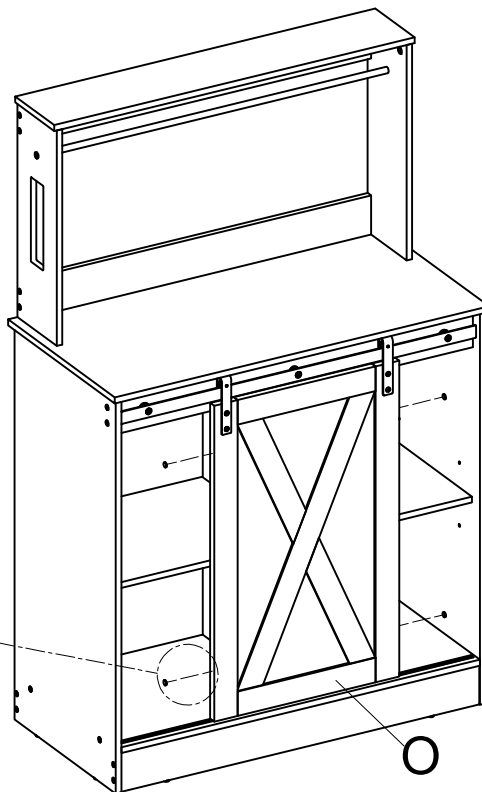


STEP 21

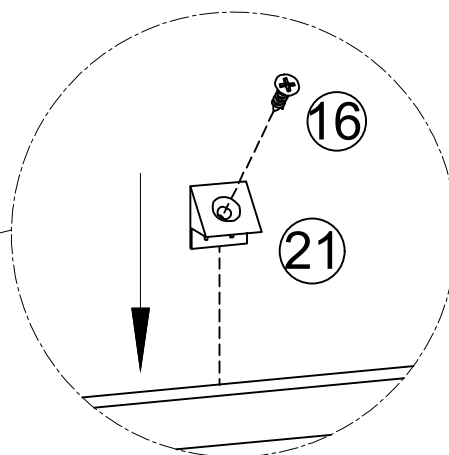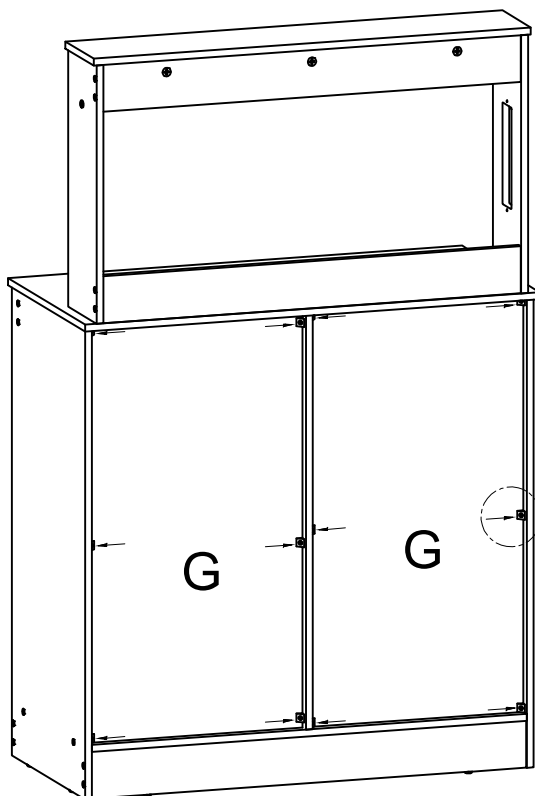




Use the buckles to reinforce
the back panel.


STEP 22

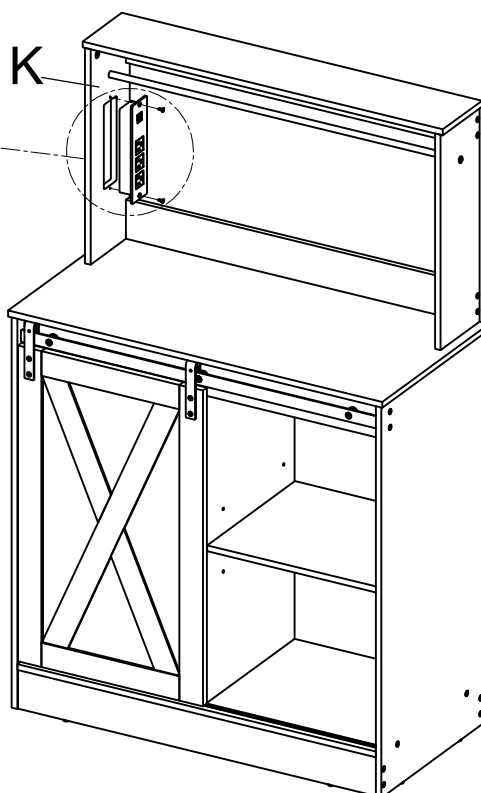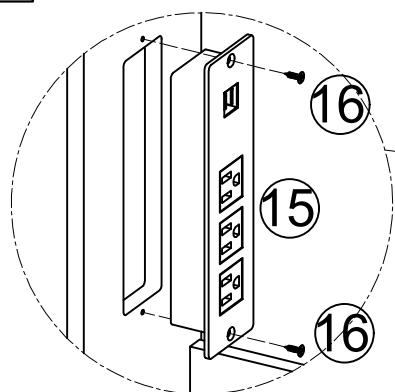

STEP 23

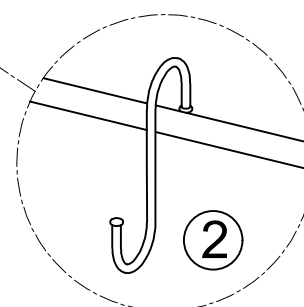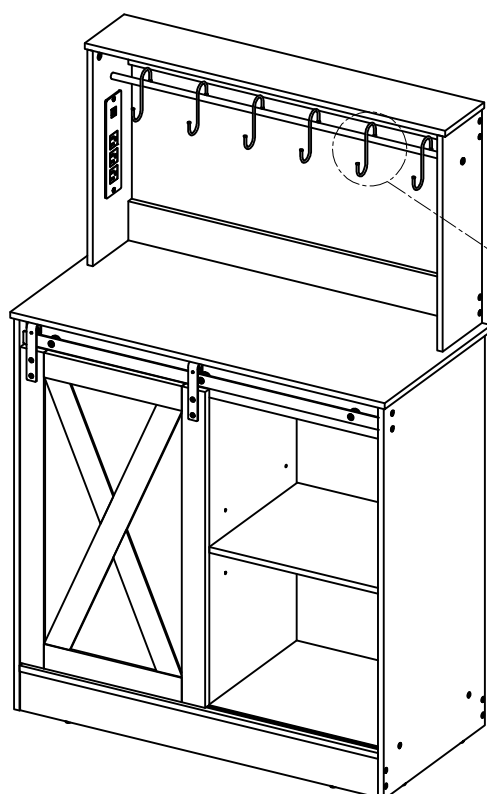

STEP 24



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

