

## SYZ84-K Stand

Thank you for purchasing AVFI's SYZ84 Stand

This product is design for free standing mounting of SMART kapp 84®

VESA pattern 600mm x 600mm, 600mm X 400mm ONLY


Confirm all hardware is included before you begin assembly.

Read these instructions start to finish before beginning installation.

Have at least 3 people mount the display.


Note: If you cannot understand these instructions or are concerned about safety of the installation contact a qualified contractor or contact AVFI at 1-877-834-3876

### Supplied Parts

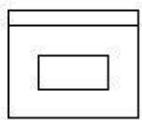

- Kit S84-K
- Kit Grommet

Hardware Bag  
(2)

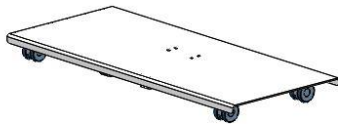

Base with wheels  
(1)



Structural Tube  
(1)



Back Plate  
(1)

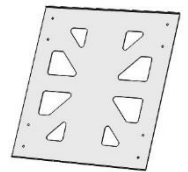


Plate  
(1)

### Supplied Hardware Kit S84-K



M10 X 35  
(4)



M6 X 25  
(10)



M8 X 30  
(6)



Black Spacer  
(4)




M6 Nut  
(6)



M6 Washer  
(6)

### Supplied Kit Grommet

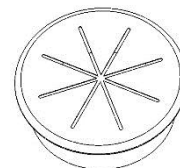

Grommet  
(2)

### Tools supplied



Hex Key 5mm for M6 bolts  
Hex Key 6mm for M8 bolts  
Hex Key 8mm for M10 bolts

### Tools required



10mm wrench

Do not use different lengths fasteners

Extra hardware is included, not all hardware supplied will be used.

## SYZ84-K Stand

**1**



Place parts on non abrasive surface; install base to structure tube



M10 X 35  
(4)




Hex Key 8mm for M10 bolts

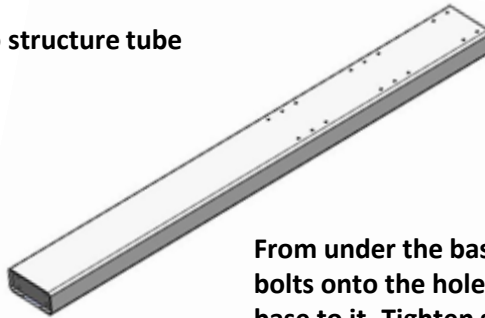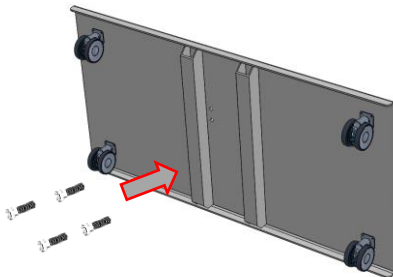

From under the base hand tighten all 4 X M10 bolts onto the holes attaching the structural base to it. Tighten securely with Hex Key


**2**

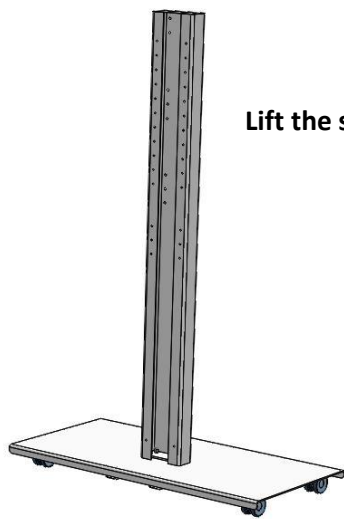


Lift the stand

**3**

For suggested SMART kapp 84® height, the edge pem studs that are closer to the triangle cutouts should go on the top.

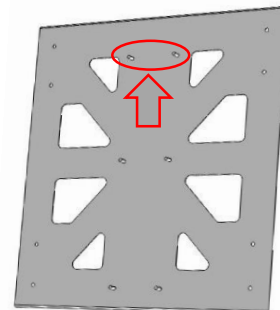

**4**

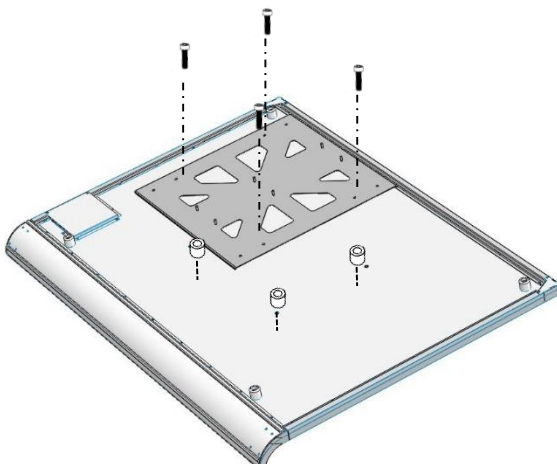

For a SMART kapp 84® insert ( 4 ) M8 X 30 mm into hole of monitor having the spacers in between the monitor and the bracket. Extra hardware is provided.

Use the Hex key to tighten. **DO NOT** substituted or OVERTIGHTEN AS THIS CAN DAMAGE OR PUNCTURE THE MONITOR.




M8 X 30 mm (4)



Black Spacer (4)



## SYZ84-K Stand

5

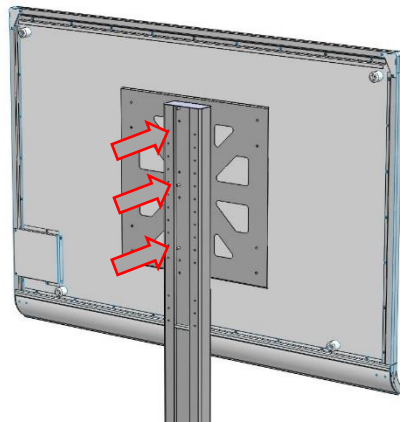


Insert the pem stud of the bracket attached to the SMART kapp84® to the structural tube and place the nut onto each pem stud. Tighten securely with a wrench.

6

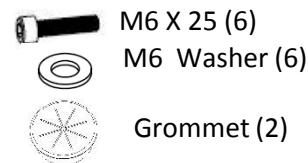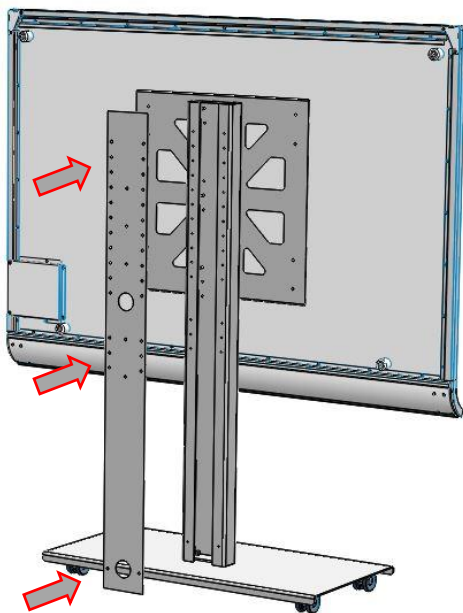


Place back plate onto structural tube and insert M6 Washer (6) with M6 X 25 (6) onto top, middle and bottom to secure the back plate. Use the Hex key to tighten

Insert 2 round grommets onto the plate

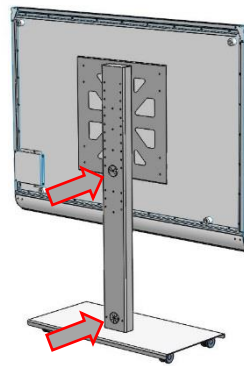

Extra hardware is included, Not all hardware supplied will be used.

7

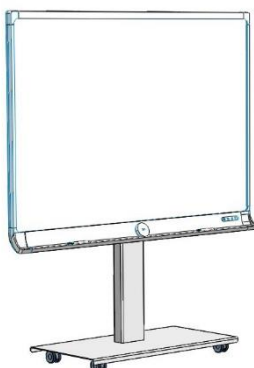

Assembly is complete, enjoy your stand