



63" TABLE

ASSEMBLY INSTRUCTIONS

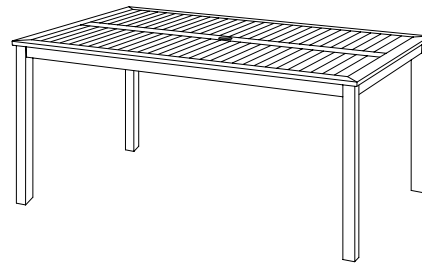


COMPONENTS

- ① Table Top Assembly
Quantity: 1

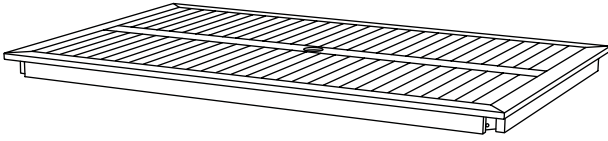


- ② Corner Posts
Quantity: 4

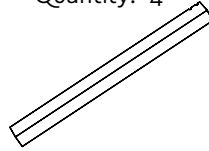

- ③ Parasol Hole Cap
Quantity: 1



- ④ Aluminum Umbrella
Hole Reducer - optional
Quantity: 1



HARDWARE


- A Flat Washer
Quantity: 8



- B Lock Washers
Quantity: 8



- C Bolts
Quantity: 8



- D Allen Wrench
Quantity: 1




NOTE

Table top may vary from illustrations but the assembly is the same for all Travira 63" tables.


INSTRUCTIONS

STEP 1

On a flat surface, lay table ① top upside down.

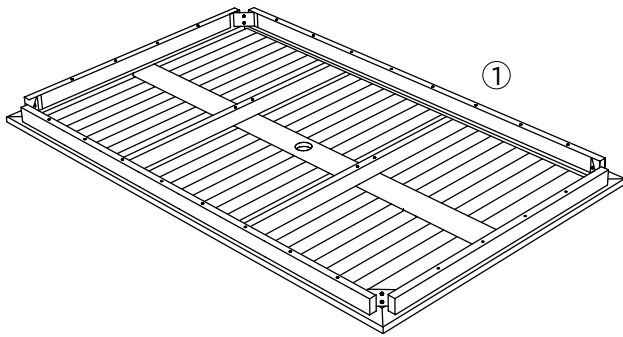


STEP 2 (detail)

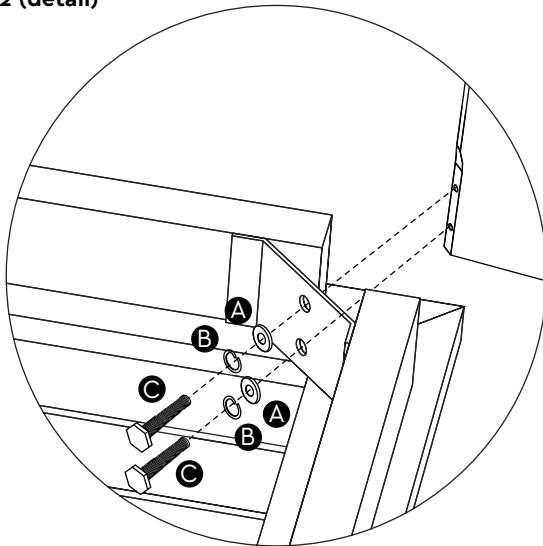


STEP 2

Using the provided wrench, secure corner post to the table top using a metal lock washer, washer (B) and bolt (C). Repeat step 2 for the remaining 3 corner posts.

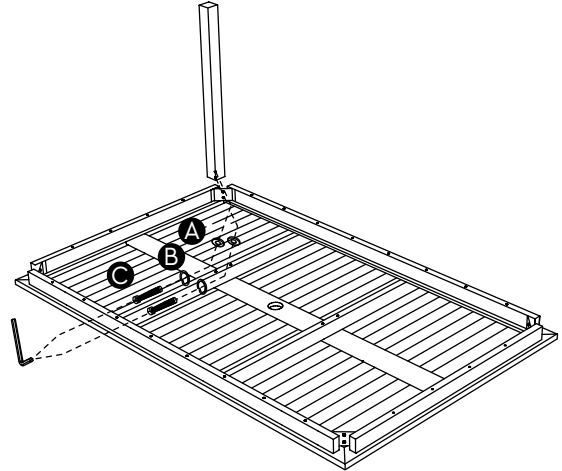


STEP 3

Carefully turn the assembled dining table in an upright position.

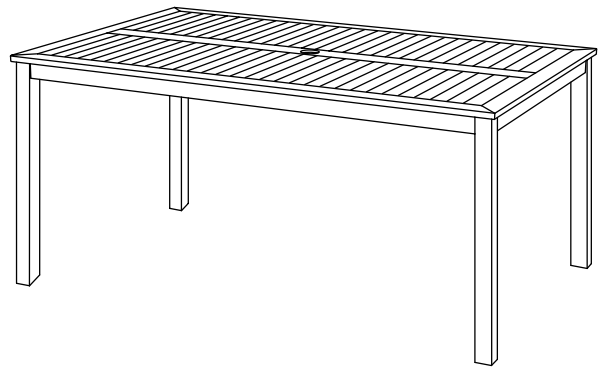


STEP 4 (Optional)

If you have a smaller umbrella pole - use the provided Aluminum Umbrella Hole Reducer (4) to secure umbrella.

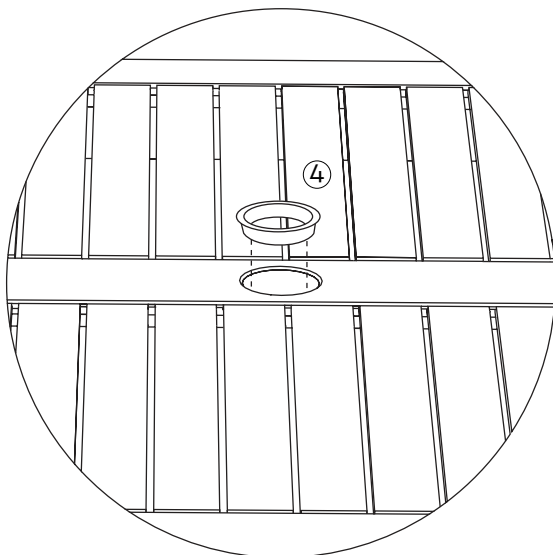


ARM CHAIR

ASSEMBLY INSTRUCTIONS

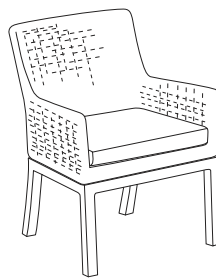


COMPONENTS

① Seat Assembly

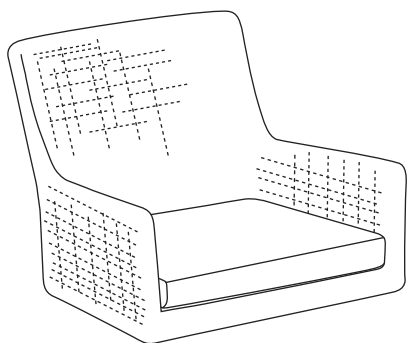

② Leg Assembly

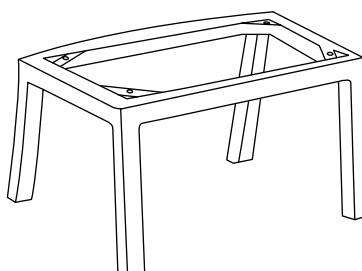

HARDWARE


- A** Short Machine Bolt
Quantity: 4



- B** Flat Washer
Quantity: 4



- C** Allen Wrench
Quantity: 1




INSTRUCTIONS

STEP 1

Place Seat Assembly ① onto its' side. Line up Leg Assembly ② to the pre drilled holes on the seat assembly as shown.


Note: Curved part of leg assembly lines up with the back of the chair.

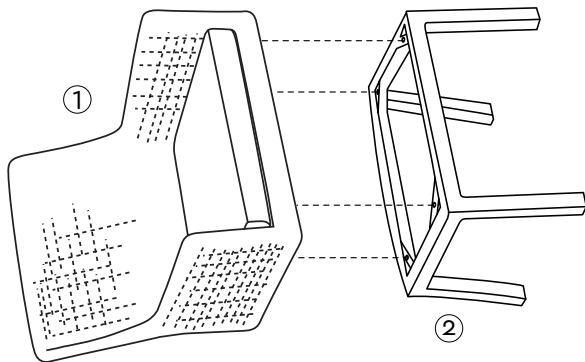

STEP 2


Next, hand thread the bolts A into the pre drilled holes on all four sides, placing the washers first B.

NOTE: Do not tighten in this step.

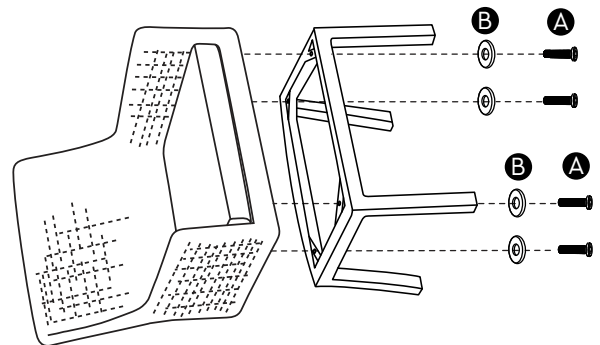


Step 2 Detail

Underside view

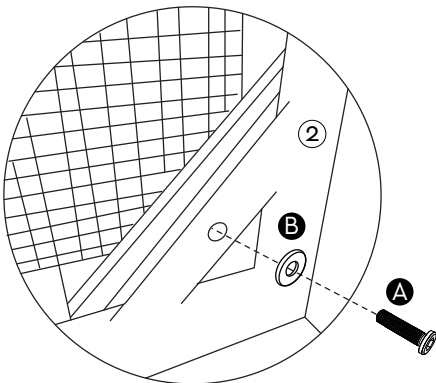

Step 3

Tighten all four bolts with the allen wrench provided.

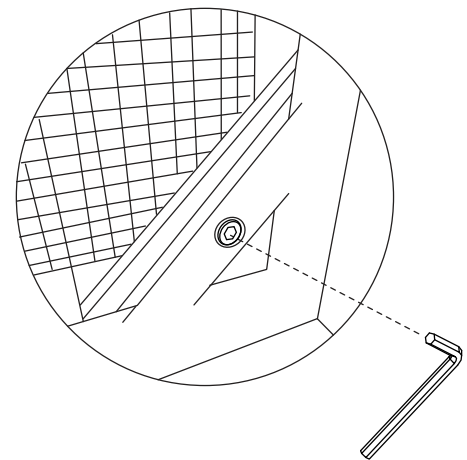

STEP 4

Turn upright and enjoy!

