


## ASSEMBLY INSTRUCTIONS

### \* VERY IMPORTANT

Please read thoroughly. Make sure you properly align poles before you screw them together to avoid damaging the connection threads. Not adhering to this procedure may void your warranty!

1. Carefully unpack and identify all parts.
2. Screw lower pole(B) onto the threaded nipple of base(A).
3. Screw middle pole(C) onto lower pole(B).
4. Screw upper pole(D) onto middle pole(C).
5. Screw upper pole(E) onto middle pole(D).
6. Screw shade(F) onto socket.
7. Screw socket ring(G.H) onto shade(F).
8. Do not use a wattage bulb higher than 100 watts, as noted on socket use 23W CFL type bulb)
9. Connect plug to outlet, turn on lamp and enjoy.

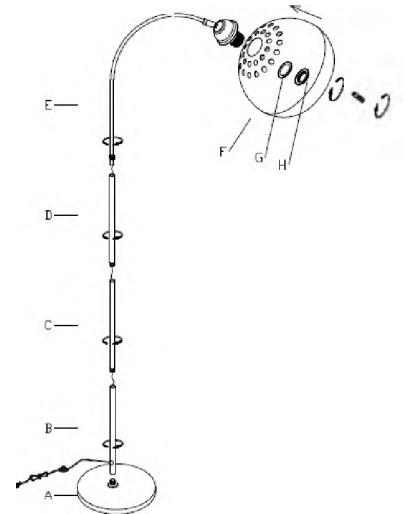

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

## ATTENTION

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES A FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

\* PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

\* SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.