

User Manual

Specification

Load capacity: 66lb / 30kg

Material: Aluminum , ABS

Applicable scenarios: Bedroom, Balcony, Dressing roo



PRODUCT SIZE



Fitting cabinet width:

- Size width 600: 22.2in-24.17in/56.4-61.4cm
- Size width 700: 26.14in-28.11in/66.4-71.4cm

PACKAGING LIST



1 Damping slide rail x2



2 Frame x1



3 Size 600 :Trouser rods x8
Size 700 :Trouser rods x10



4 Size 600 :Trouser rod cover x16
Size 700 :Trouser rod cover x20



5 Door panel clips x4
(2 large and 2 small)



6 screws x3

Installation Precautions

Internal Cabinet Depth > 58cm/22.8in

Internal Cabinet Width Size 600: 22.2in-24.17in/56.4-61.4cm

Internal Cabinet Width Size 700: 26.14in-28.11in/66.4-71.4cm

Reserve height > 6cm/2.36in (Panelless mounting)

Reserved Height $\geq$ 10cm/ 3.94in (Panel mounting)

Note: Installation in the wardrobe does not take into account the installation height; Just reserve space for hanging trousers




① Panel mounting (No panel provided)

Gap 2cm/ 0.19in Panel 8cm/ 3.15in

Reserved Height $\geq$ 10cm/ 3.94in

When customizing the cabinet, please reserve the panels in advance. They should match the color and material of your own cabinet. The panels we provide may not be compatible, so they are not included.

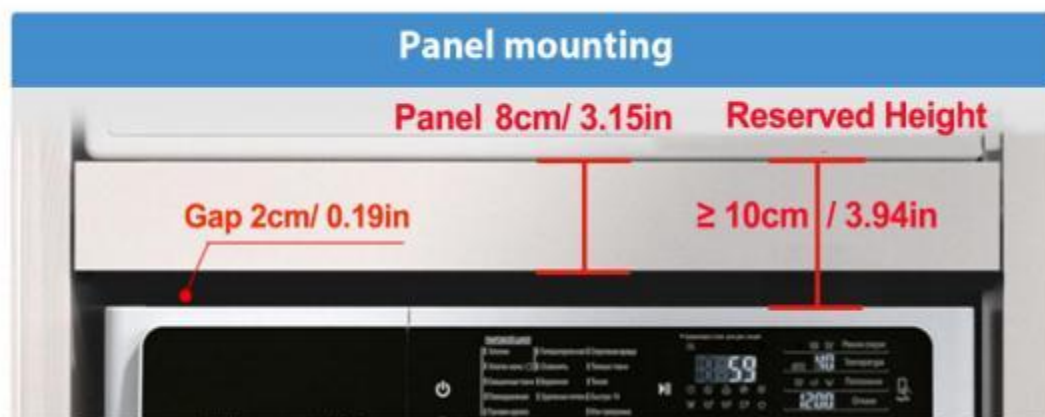

② Panelless mounting

Reserve height > 6cm/2.36in

The product has a simple and elegant appearance and can be used normally without installing the panels.




INSTALLATION STEPS

STEP 1



Screws are installed respectively on Damping slide rail

STEP 2

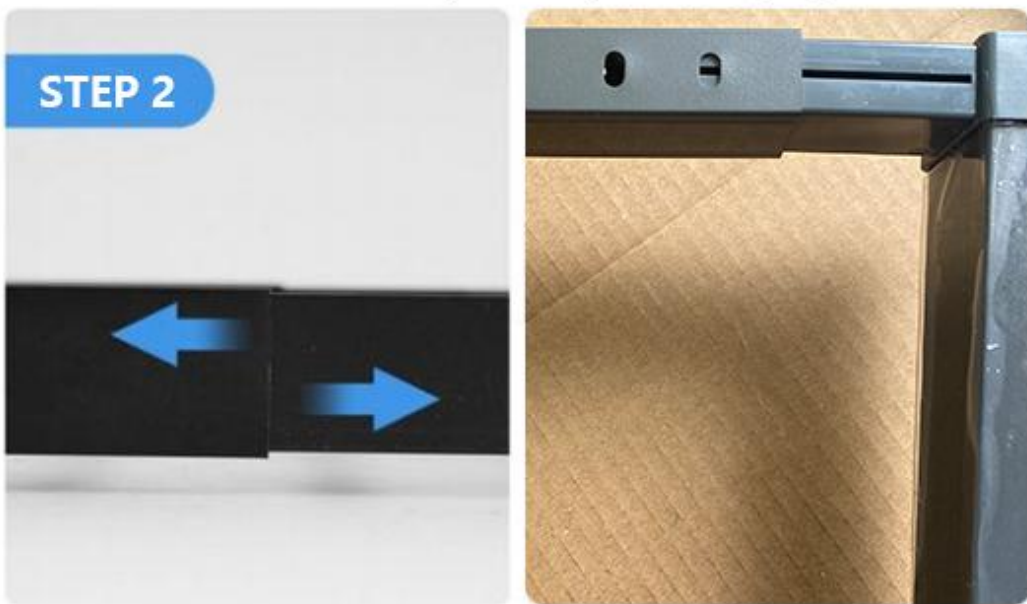

Adjust the frame according to the width of the cabinet

STEP 3



Install the frame on the slide rail base

STEP 4



Assemble the trouser rod cover at both ends of the trouser rod

STEP 5

Behind



Front

Install the assembled trouser rod onto the frame

STEP 6



**install the door panel clips at both ends of the frame
and fix them to the panel with screws**

