


Nesting Box Assembly Instructions

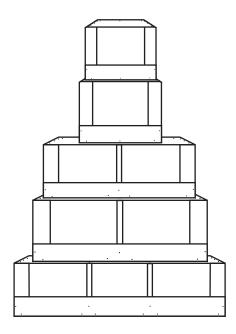


Important Notes:


Lay out all components prior to start of assembly.


Flat level surface recommended for assembly.

If any components are missing or damaged do not return to retailer. Please call Rugged Ranch Products at: 760-734-3748

Please visit our website to see our complete line of Rugged Ranch Products. www.ruggedranch.com

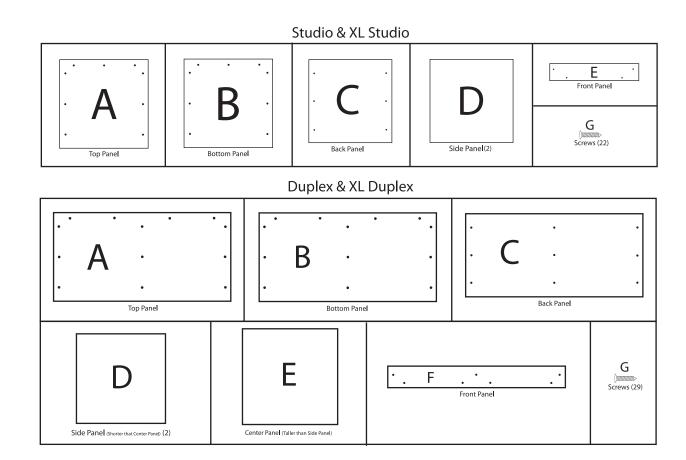


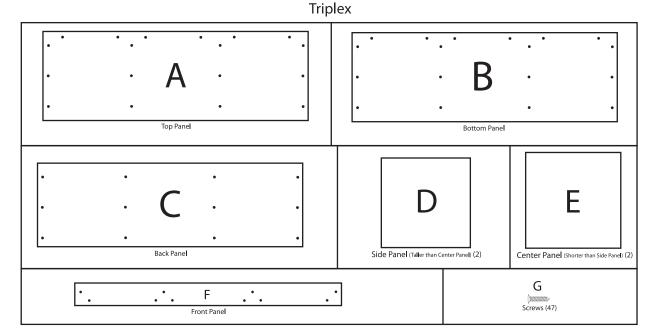

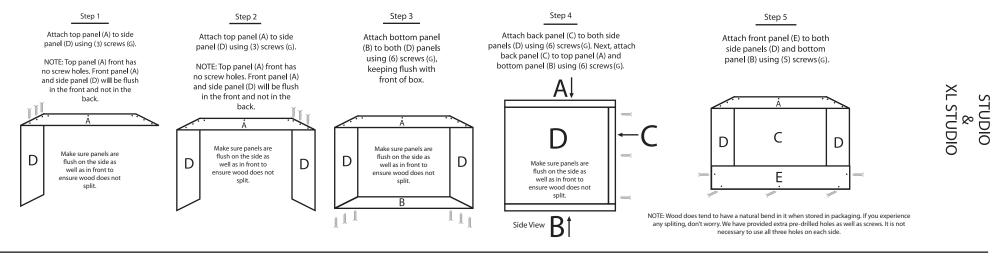

Step 1

Insert center divider panel (E) into the top panel (A) and bottom panel (B) using (3) screws per side. Ensure all panels are flush with front and drilled holes are facing back of box.

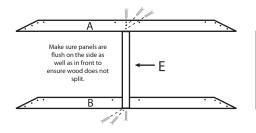


When inserting the center divide for any of the following: Duplex, XL Duplex, or Triplex: Slide Center Panel(s) through grooves to clear any possible debris that may be built up. This ensures the tightest and straightest possible fit.

## Step 2


Attach Top Panel (A) to both Side Panels (D) using (6) screws (G). Attach Bottom Panel (B) to both Side Panels (D) using (6) screws (G).

NOTE: Top Panel (A) and Bottom Panel (B) front has no screw holes. Front Panel (A), Bottom Panel (B), and Side Panel (D) will be flush in the front and not in the back.

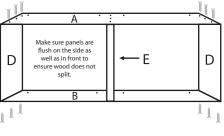

Attach Back Panel (C) to both Side Panels (D) and Center ). Panel (E) using (9) screws (G). Next, attach back panel (C) to Top Panel (A) and Bottom Panel (B) using (8) screws (G).

Step 3

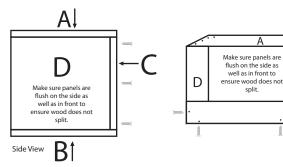


Step 4

Attach Front Panel (F) to both Side Panels (D) and Center Panel (E) using (7) screws (G).



#### Step 1

Insert both middle dividers (E) into the bottom panel (B) and the top panel (A) using (3) screws (G) per side. Ensure all panels are flush with front and drilled holes are facing the back of box.

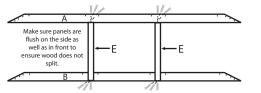


When inserting the center divide for any of the following: Duplex, XL Duplex, or Triplex: Slide Center Panel(s) through proves to clear any possible debris that may be built up. This ensures the tightest and straightest possible fit.

### Step 2


Attach Top Panel (A) to both Side Panels (D) using (6) screws (G). Attach Bottom Panel (B) to both Side Panels (D) using (6) screws (G).

NOTE: Top Panel (A) and Bottom Panel (B) front has no screw holes. Front Panel (A), Bottom Panel (B), and Side Panel (D) will be flush in the front and not in the back.

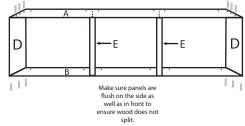

#### Step 3

Attach Back Panel (C) to both Side Panels (D) and Center Panels (E) using (12) screws (G). Next, attach back panel (C) to Top Panel (A) and Bottom Panel (B) using (12) screws (G).

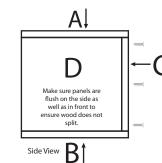

# Step 4

Attach Front Panel (F) to both Side Panels (D) and Center Panels (E) using (10) screws (G).

F

F

Make sure panels are flush on the side as well as in front to ensure wood does not split.

