

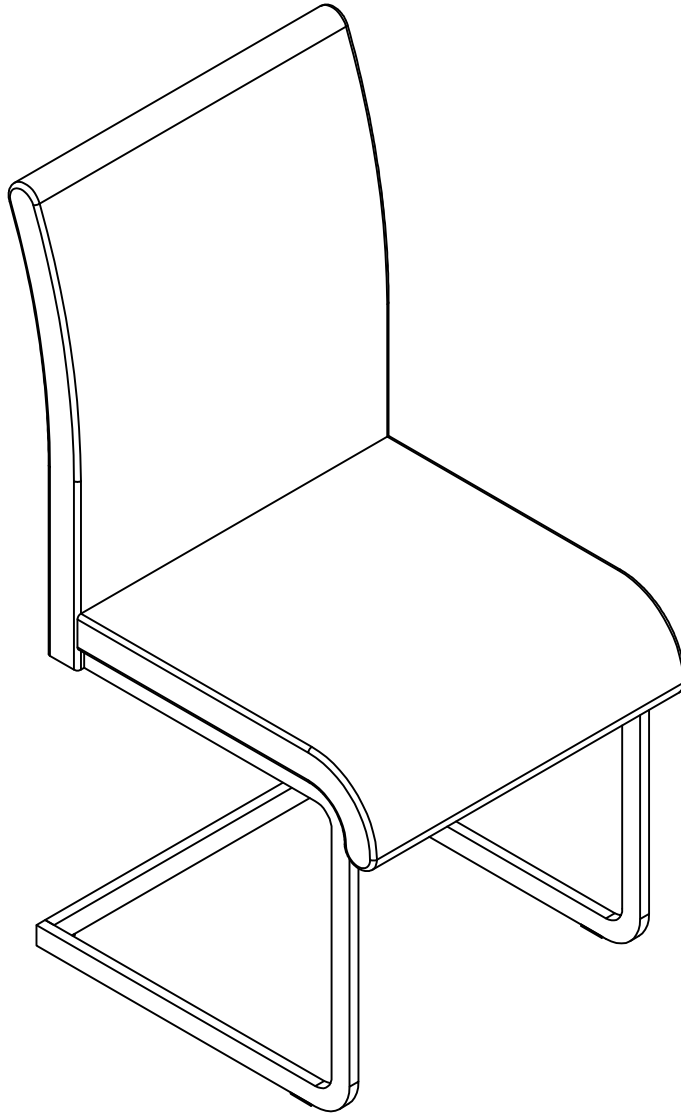
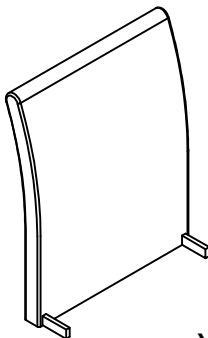
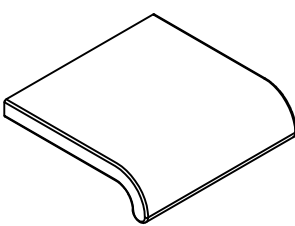
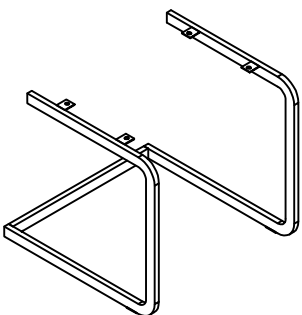



WF313070




①  X 3PCS	②  X 3PCS	③  X 3PCS		
A  M6*15mm X 24PCS	B  Ø18mm X 12PCS	C  Ø13mm X 12PCS	D  X 24PCS	E  M4 X 1PC

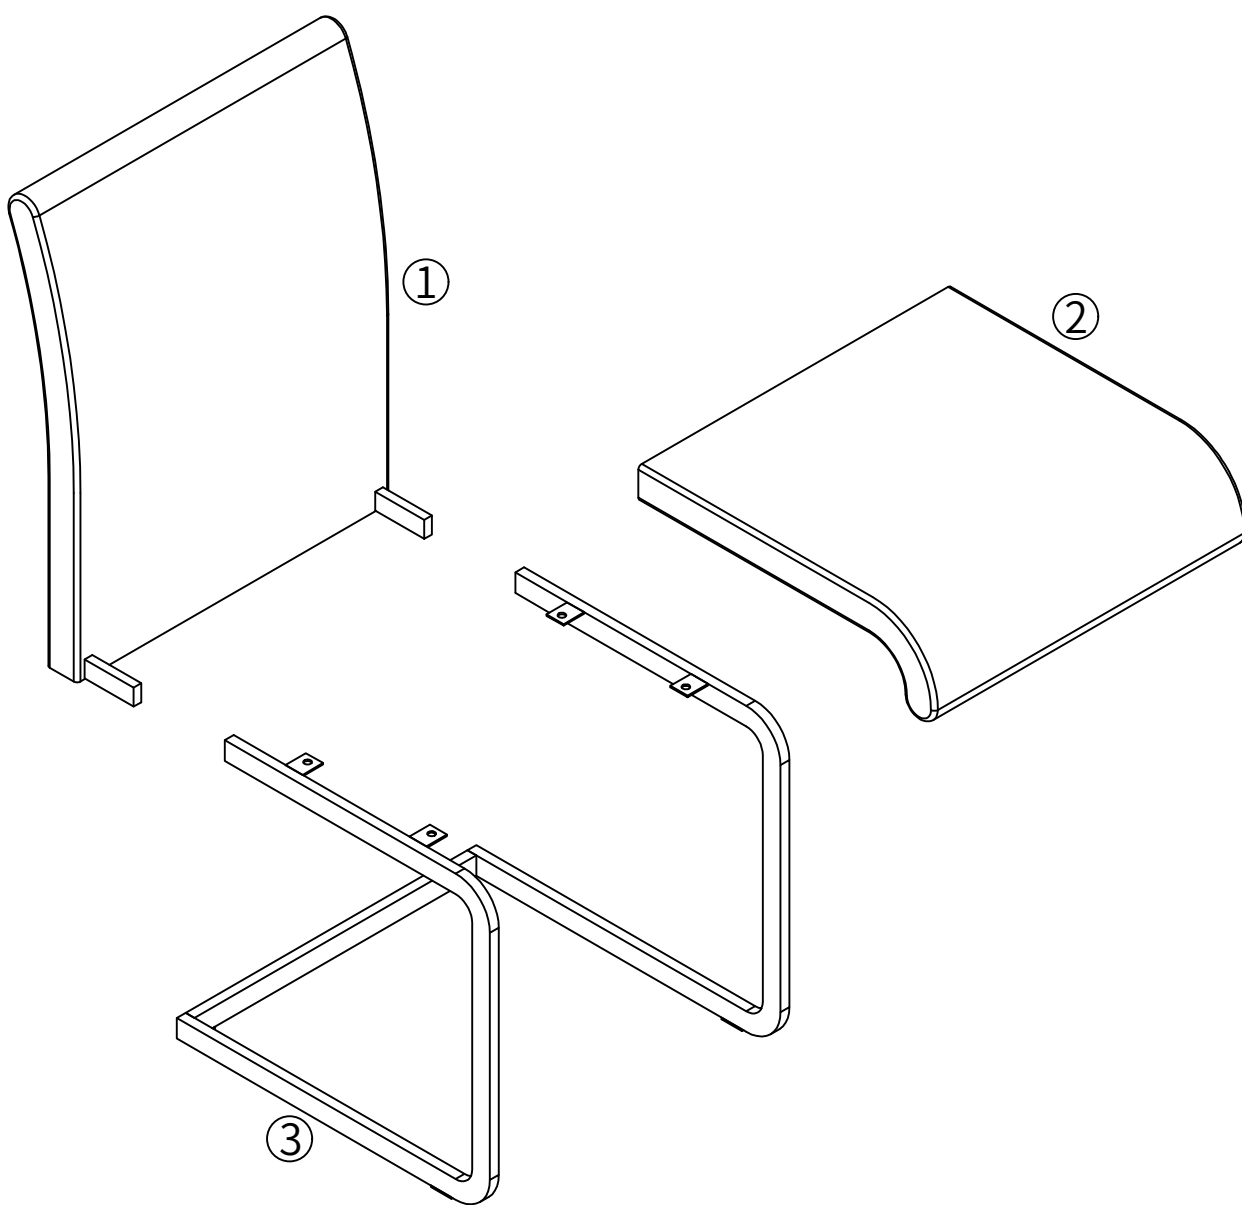

Step 1


NOTE: DO NOT tighten the bolts during this step.

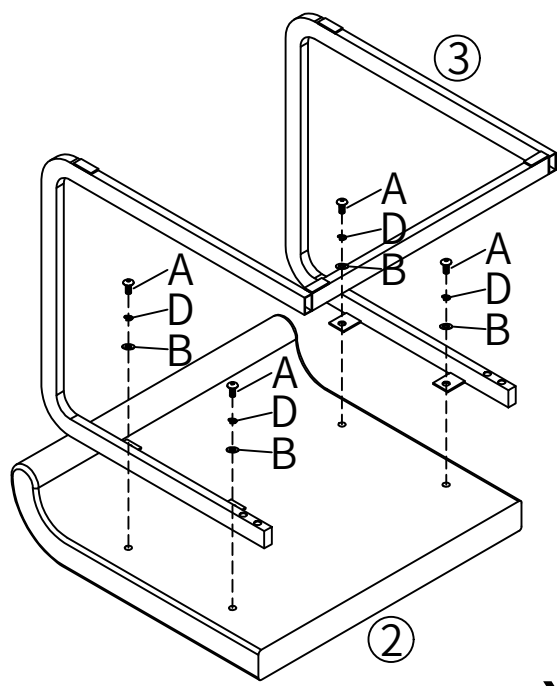

x 3


A		B		D	
	M6 x 15mm x 12		Ø18mm x 12		x 12

Step 2

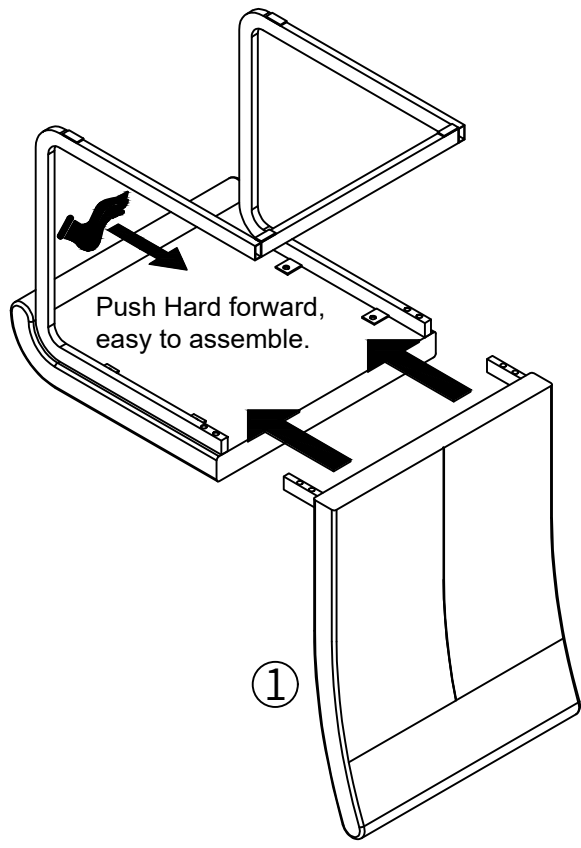

x 3

Step 3

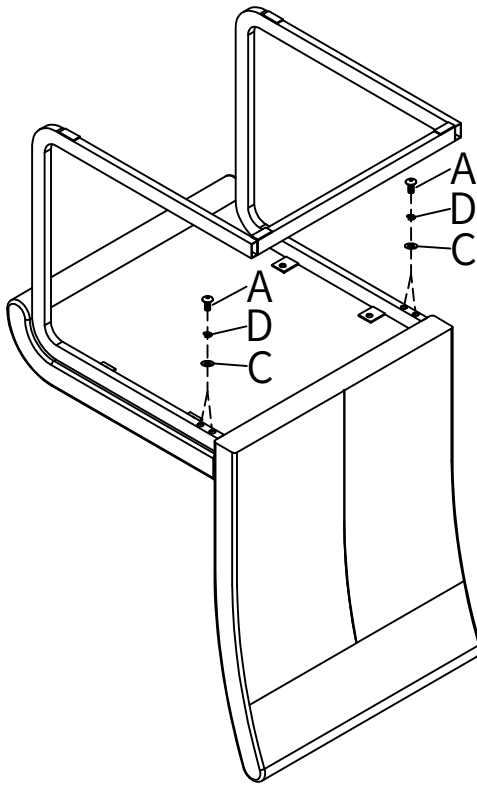


x 3

A		C		D	
	M6 x 15mm x 12		Ø13mm x 12		x 12

Step 4

Tighten all the bolts.

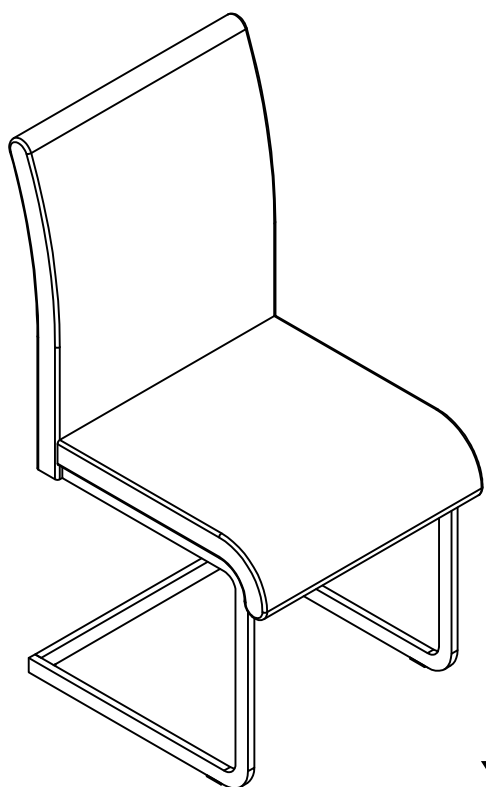

x 3