
# Assembly Instruction

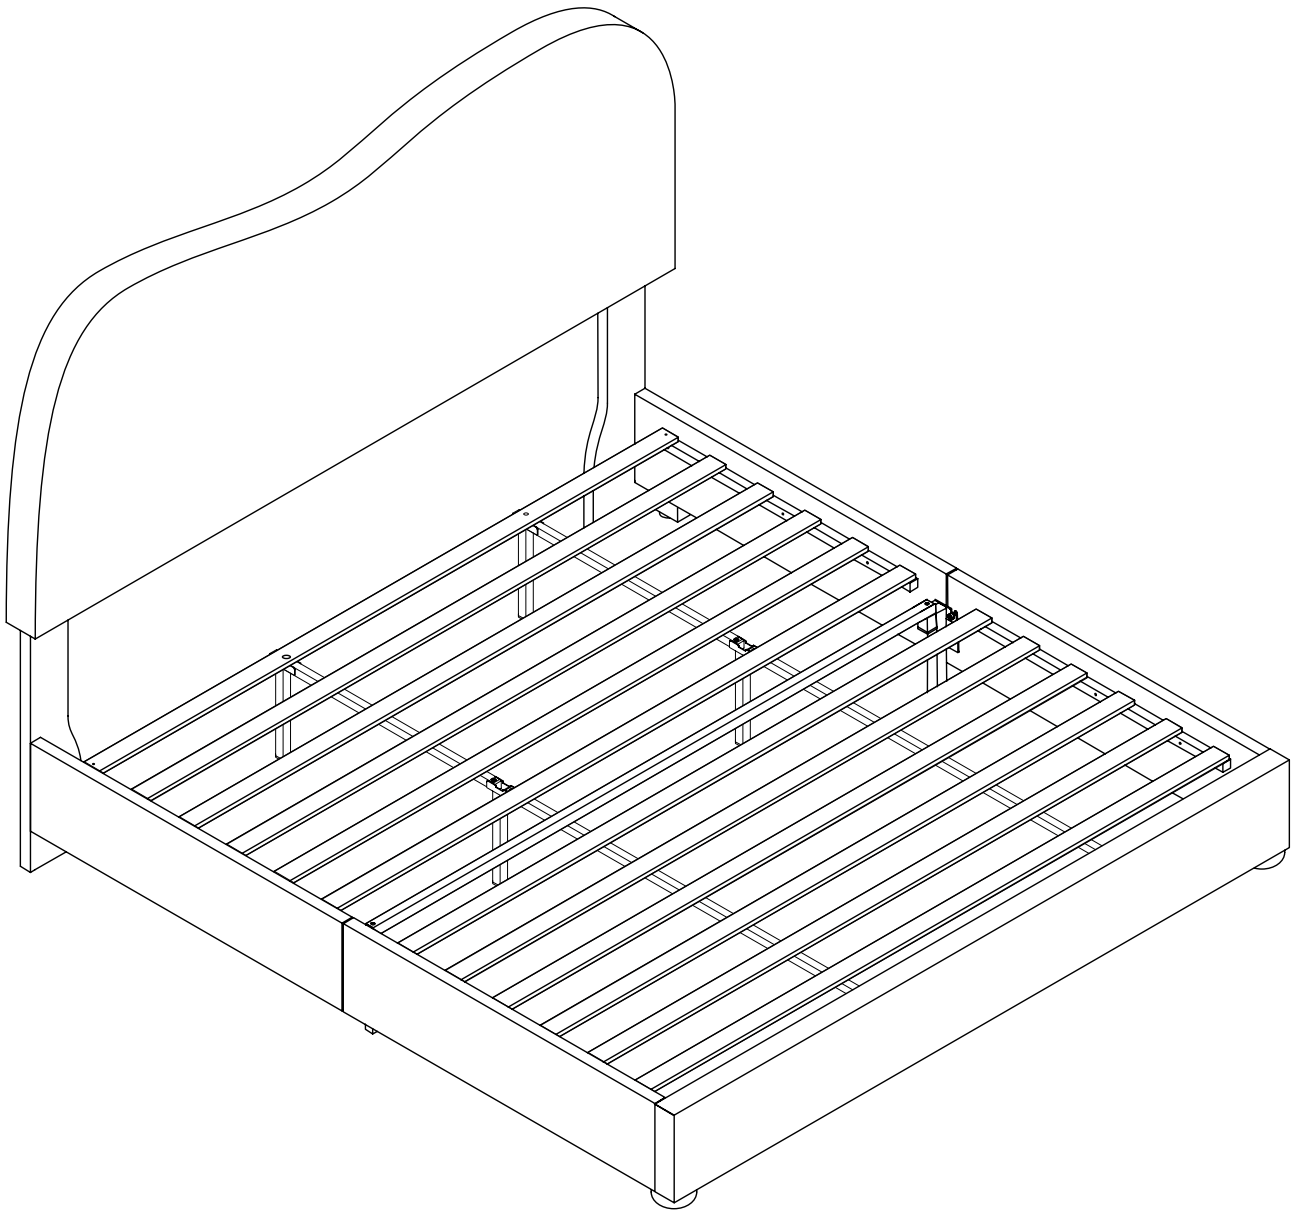



Please check that you have all the parts listed before you start assembling,if you do find that something is missing,do not continue assembly,please contact us immediately.

NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!


# IMPORTANT

**Please follow the instruction manuals and use a pad to protect the product during your assembly.**

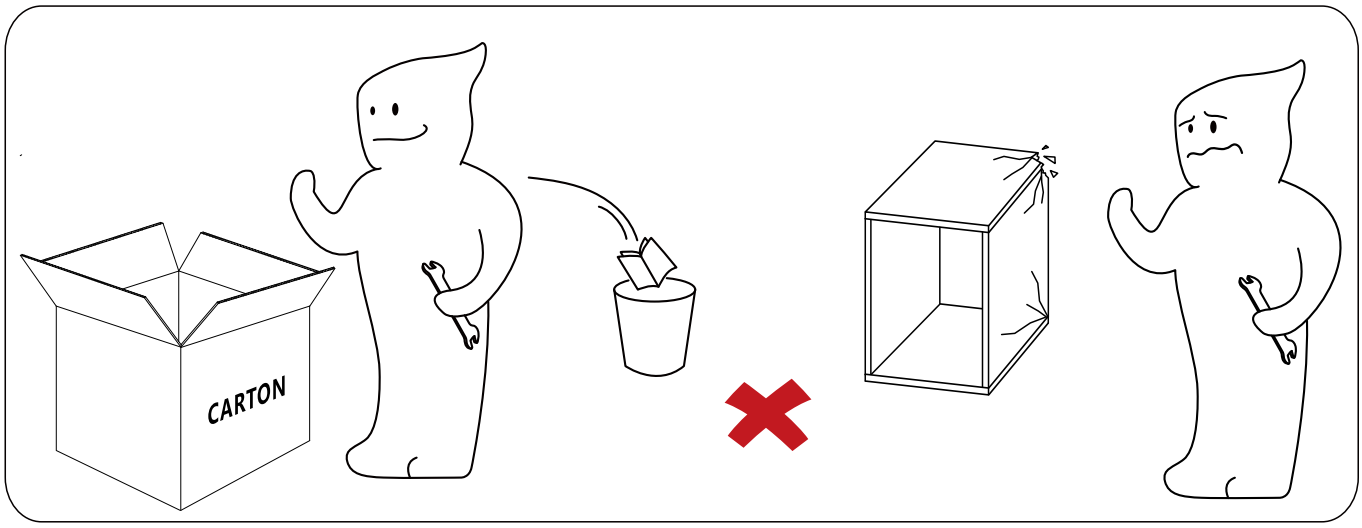


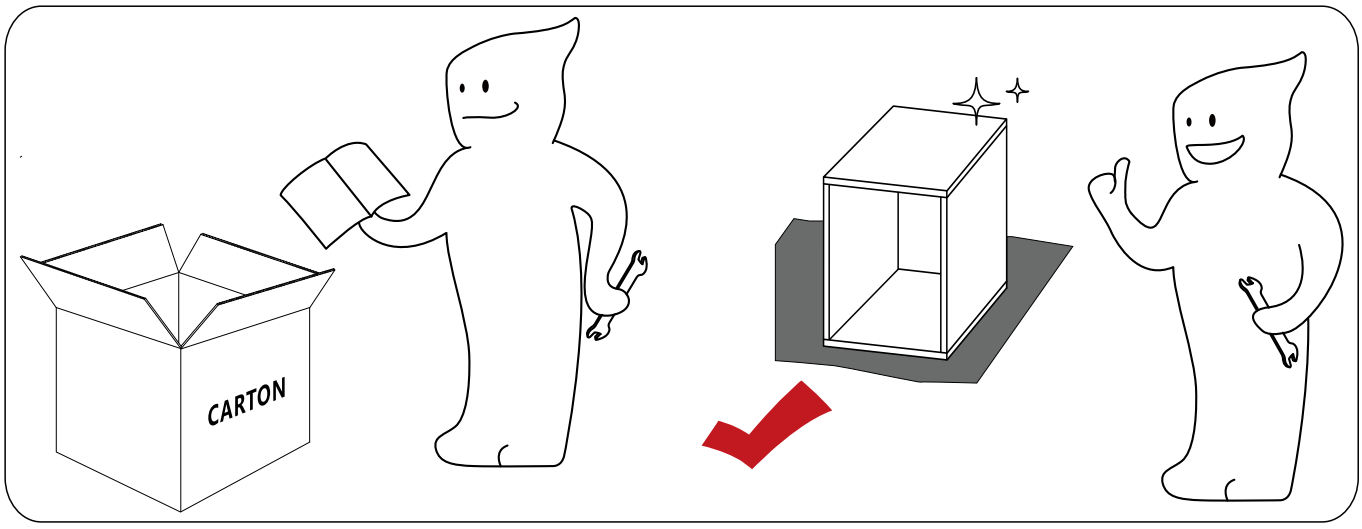
**Note:**
**1. Should be assembled on flat ground to keep balance.**
**2. Before completing the installation, do not tighten the screws.**

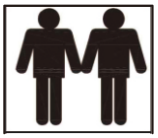


For easier and better assembly, **2** or more adults are required.


C
D2
H
F3
I
K
J
F4
D1
B2
M
E
F1
F2
G

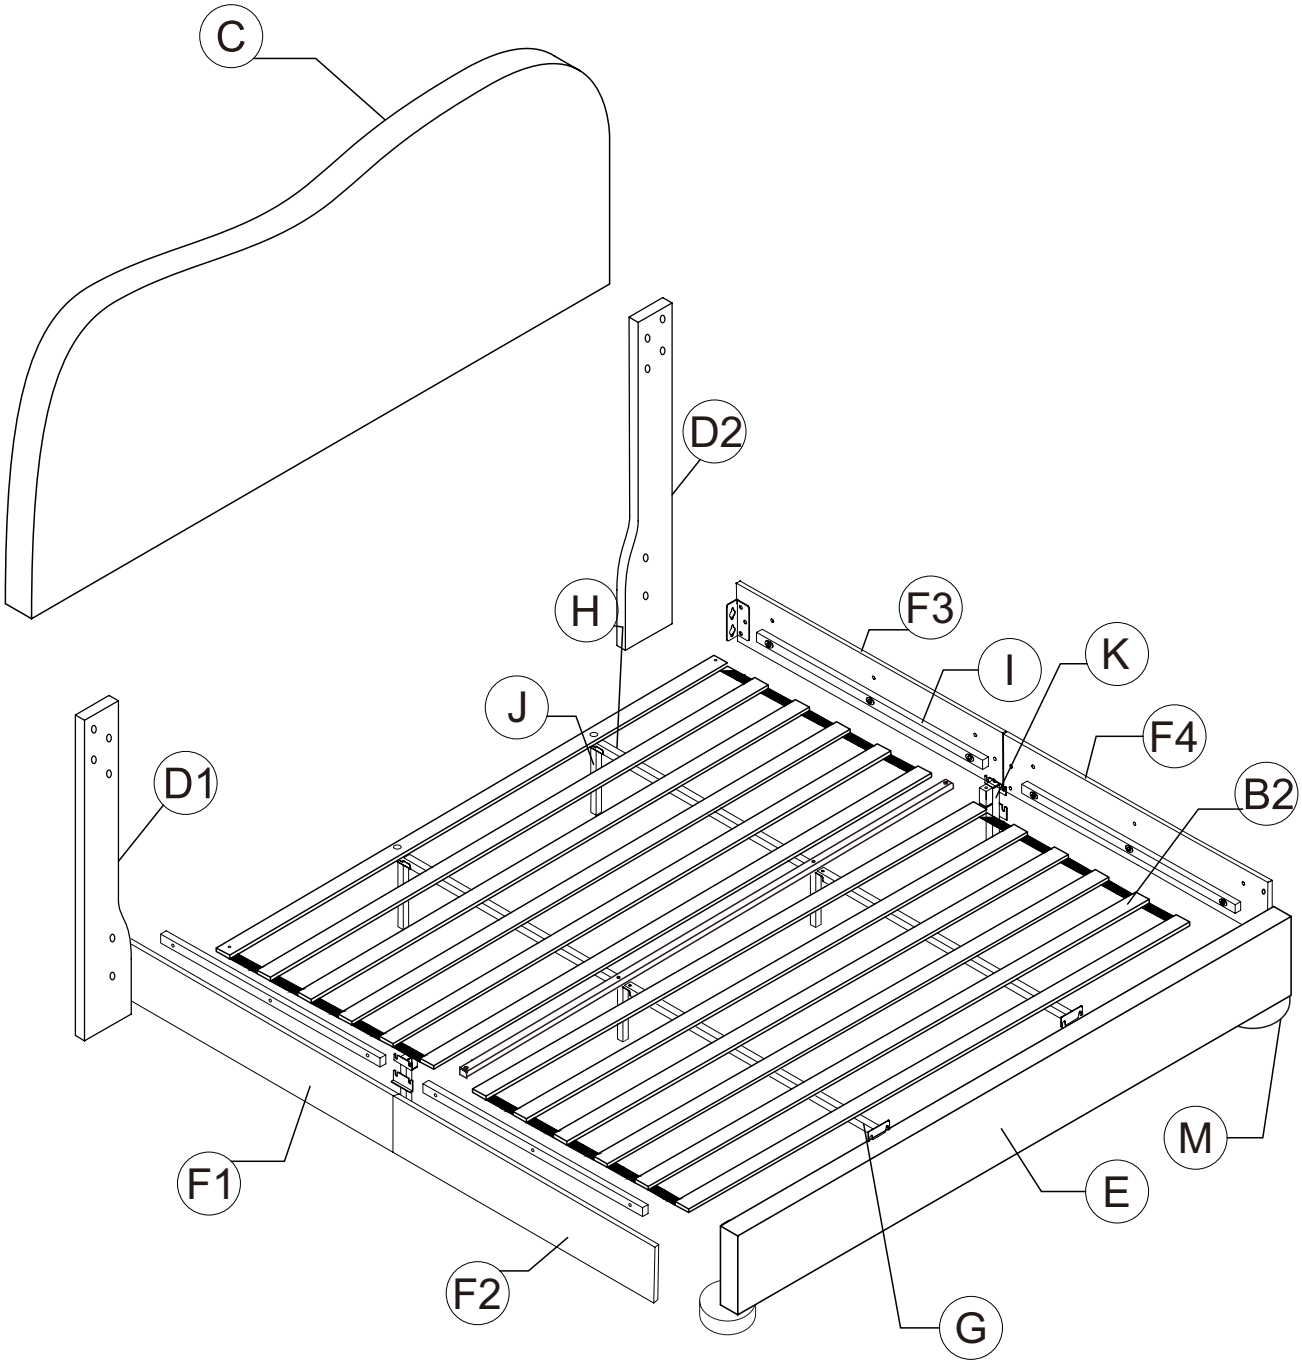
# BED FRAME PARTS LIST

B1 1PC

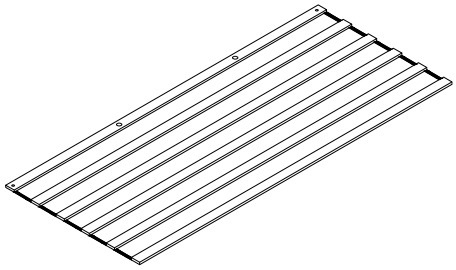


Slat

B2 1PC

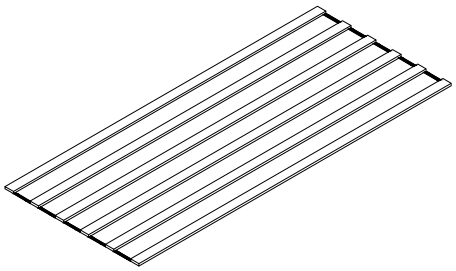

Slat

C 1PC

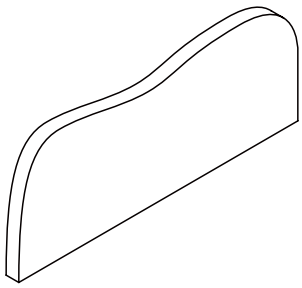

$D_1$ 1PC




Left Leg

$D_2$ 1PC




Right Leg

E 1PC

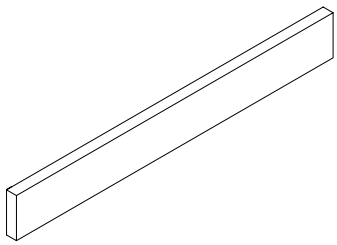


Footboard

F1 1PC

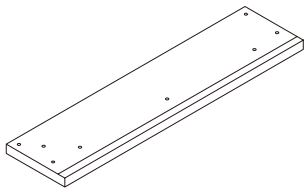


side rail

F2 1PC

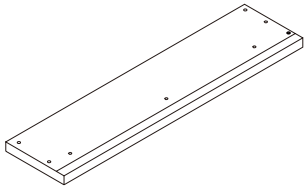


side rail

F3 1PC

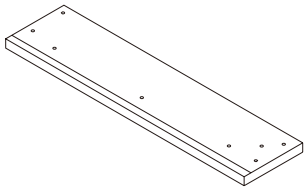


side bar

F4 1PC

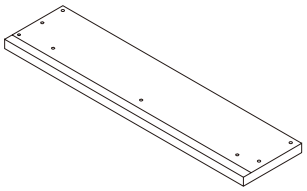


side bar

G 2PCS

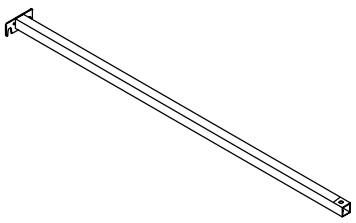


Middle behind support bar

H 2PCS

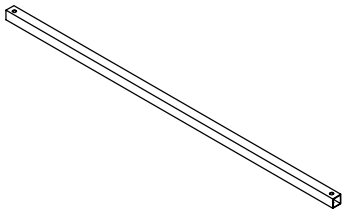


Middle front support bar

I 4PCS

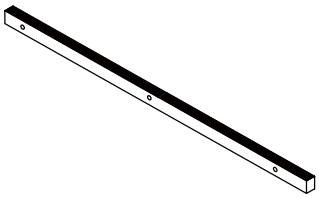


Side bar

J 4PCS














Middle support leg

K 2PCS



Bed side support leg


# FITTING PART LIST
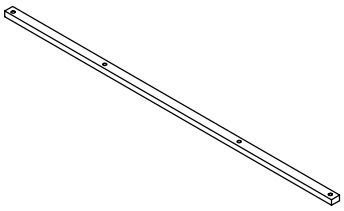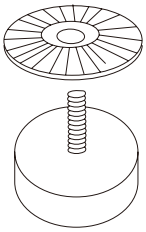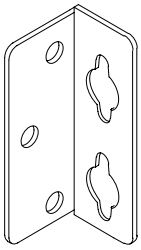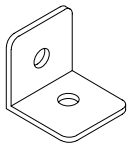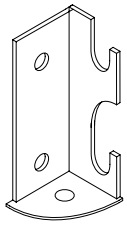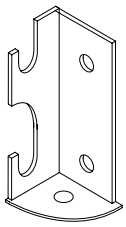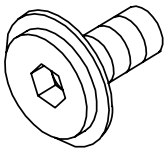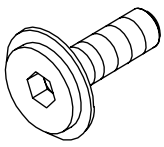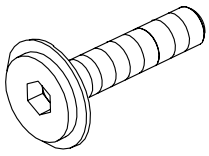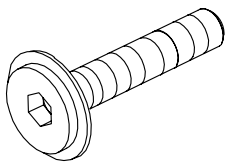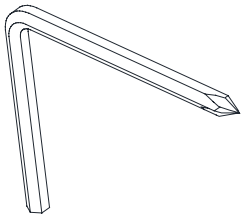
| | | | |
|---|---|---|---|
| L 1PC  Cross bar | M 2PCS  Foot | N 2PCS  Connector-N | O 2PCS  Connector-O |
| P1 1PC  | P2 1PC  | | |
| a 30PCS  M8*18 | b 4PCS  M8*25 | c 20PCS  M8*35 | d 10PCS  M8*55 |
| e 2PCS  M4*35 | f 2PCS  | g 1PC  | |

# step1


| d | M8*55 | 8PCS |
|---|---|---|

As shown in the figure, the headboard height can be adjusted by locking the support legs to different holes on the headboard for a 2-inch height adjustment.

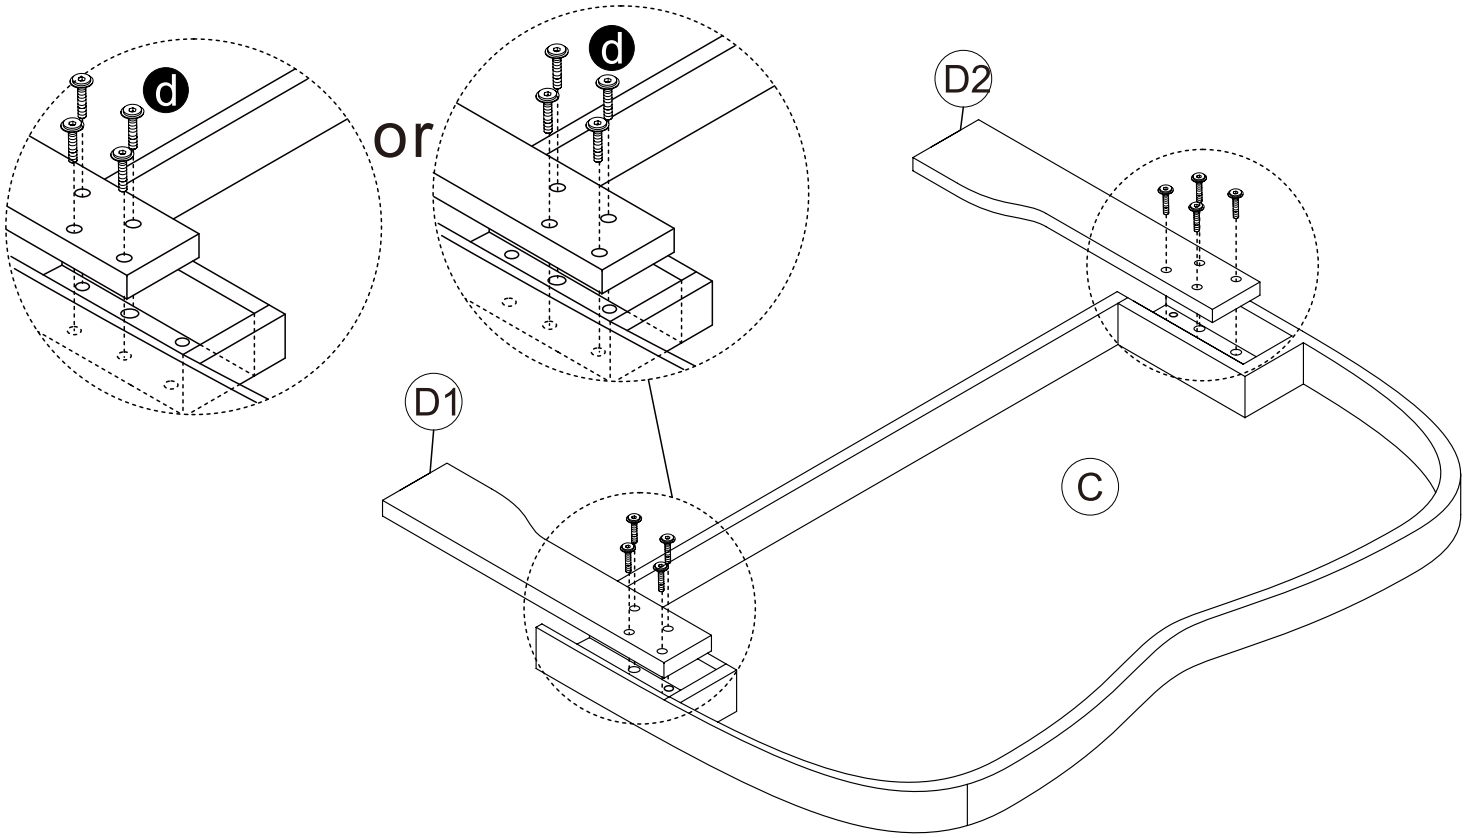


# step2

| b | M8*25 | 4PCS |
|---|---|---|

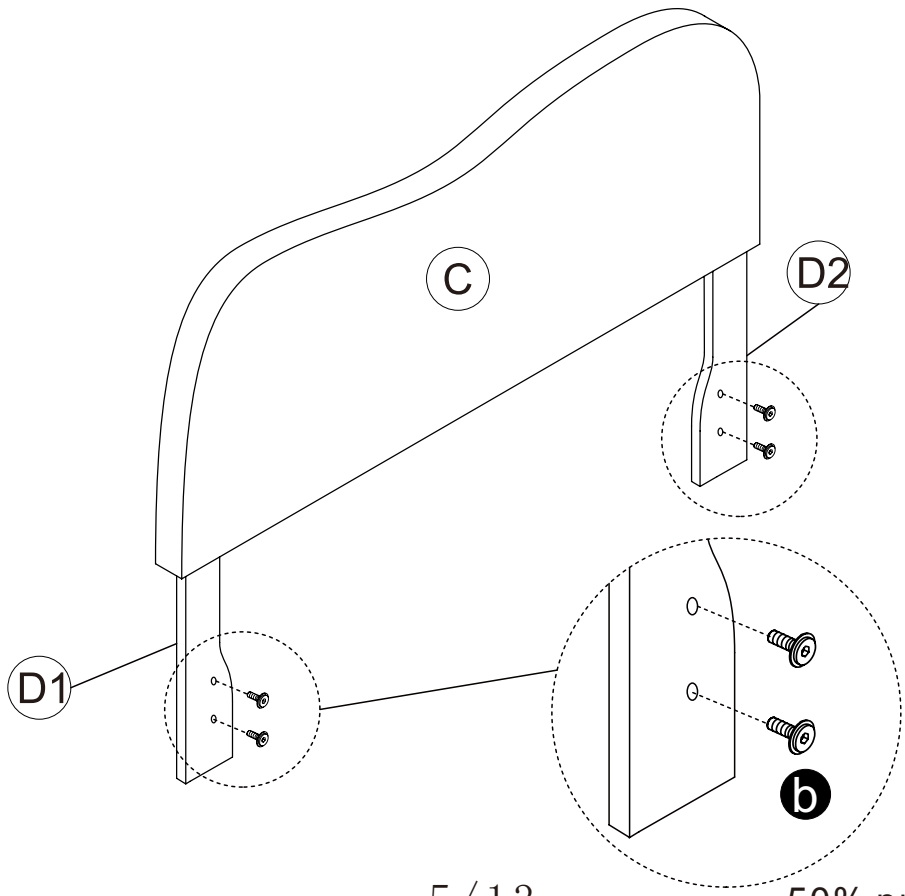





50% pre-screweded.

# step3


| a | M8*18 | 6PCS |
|---|---|---|

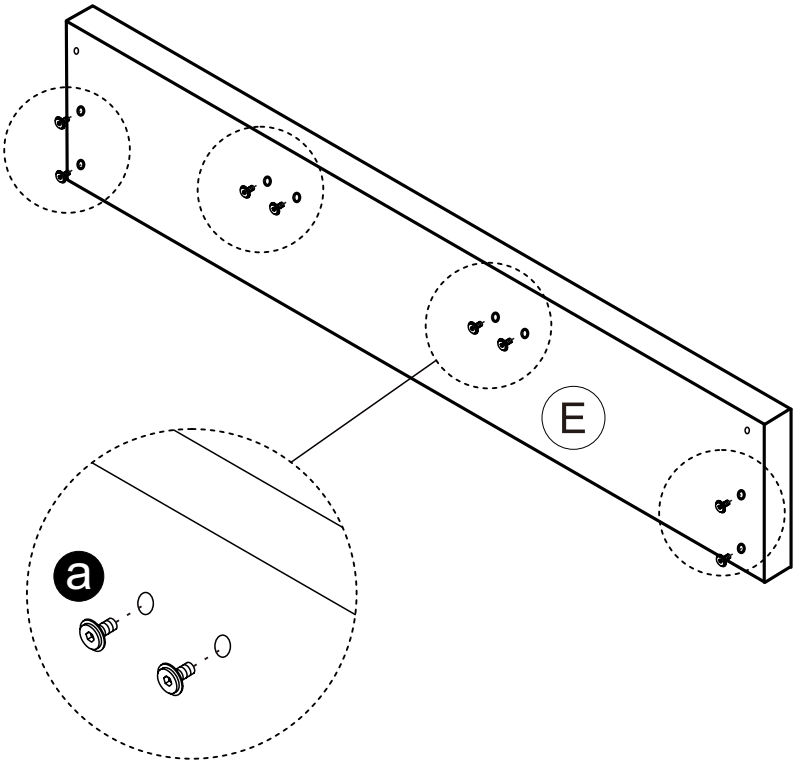


50% pre-screweded


# step4

| a | M8*18 | 6PCS |
|---|---|---|

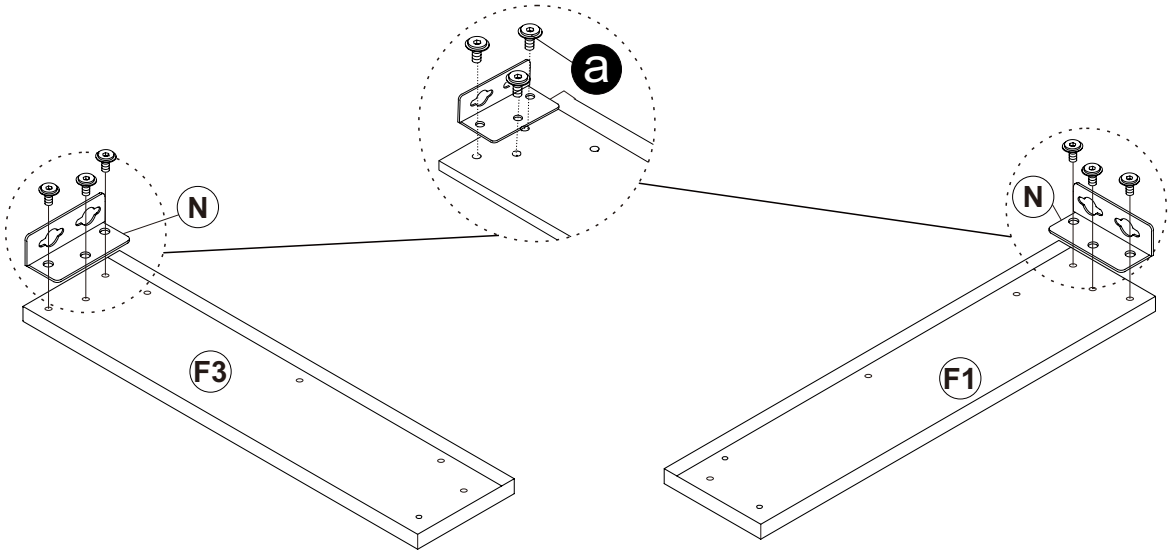


# step5

| a | M8*18 | 4PCS |
|---|---|---|

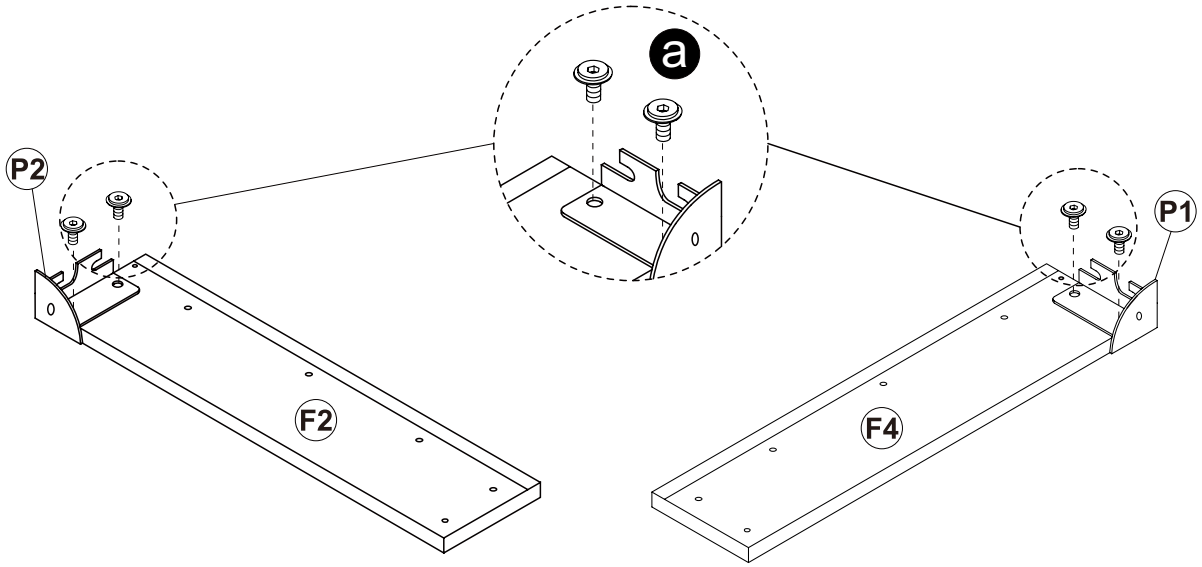



# step6

| a | M8*18 | 8PCS |
|---|---|---|

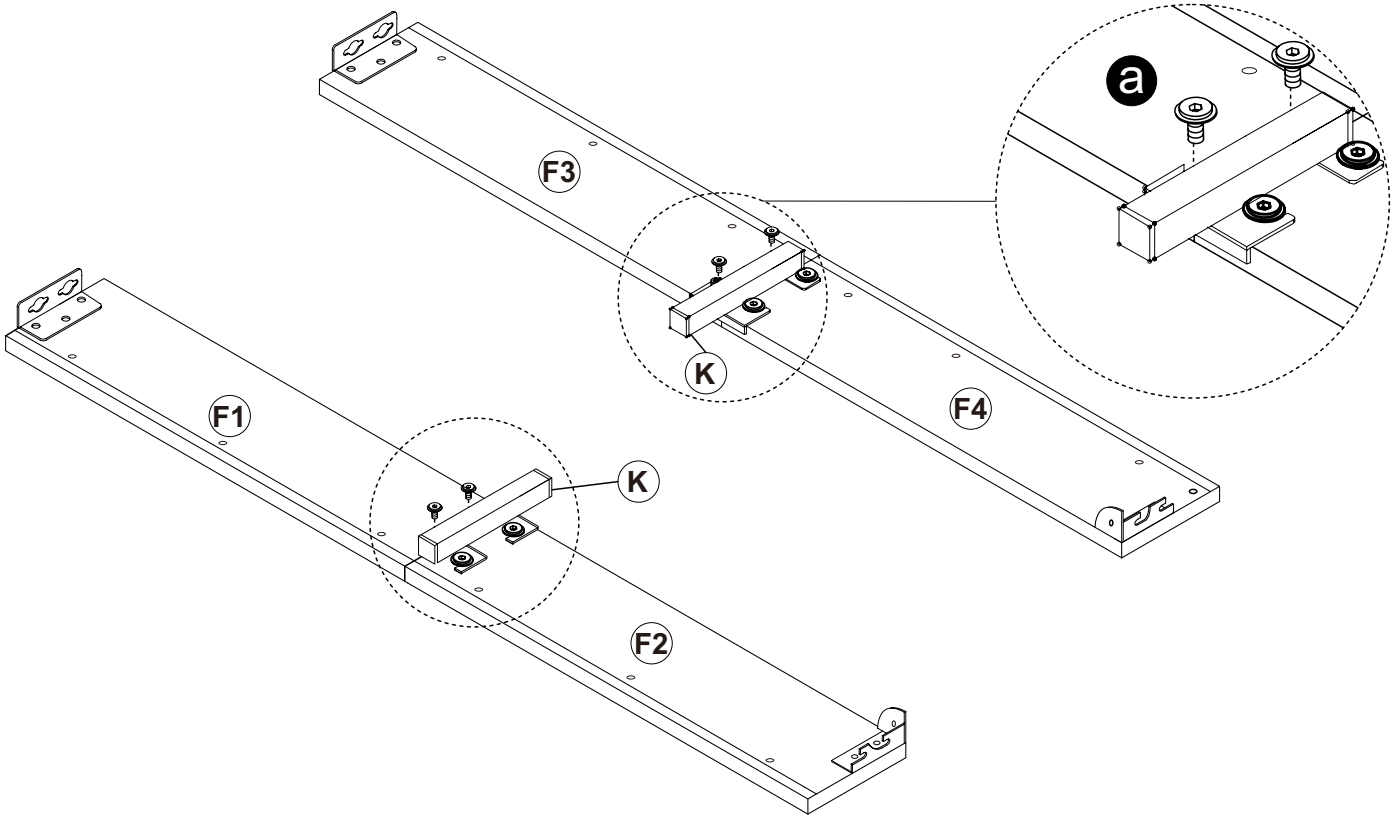


# step7

Please first use the pre-installed screw a on the footboard to attach it to the connectors P1 and P2 on the side panel, and then tighten the screw a.

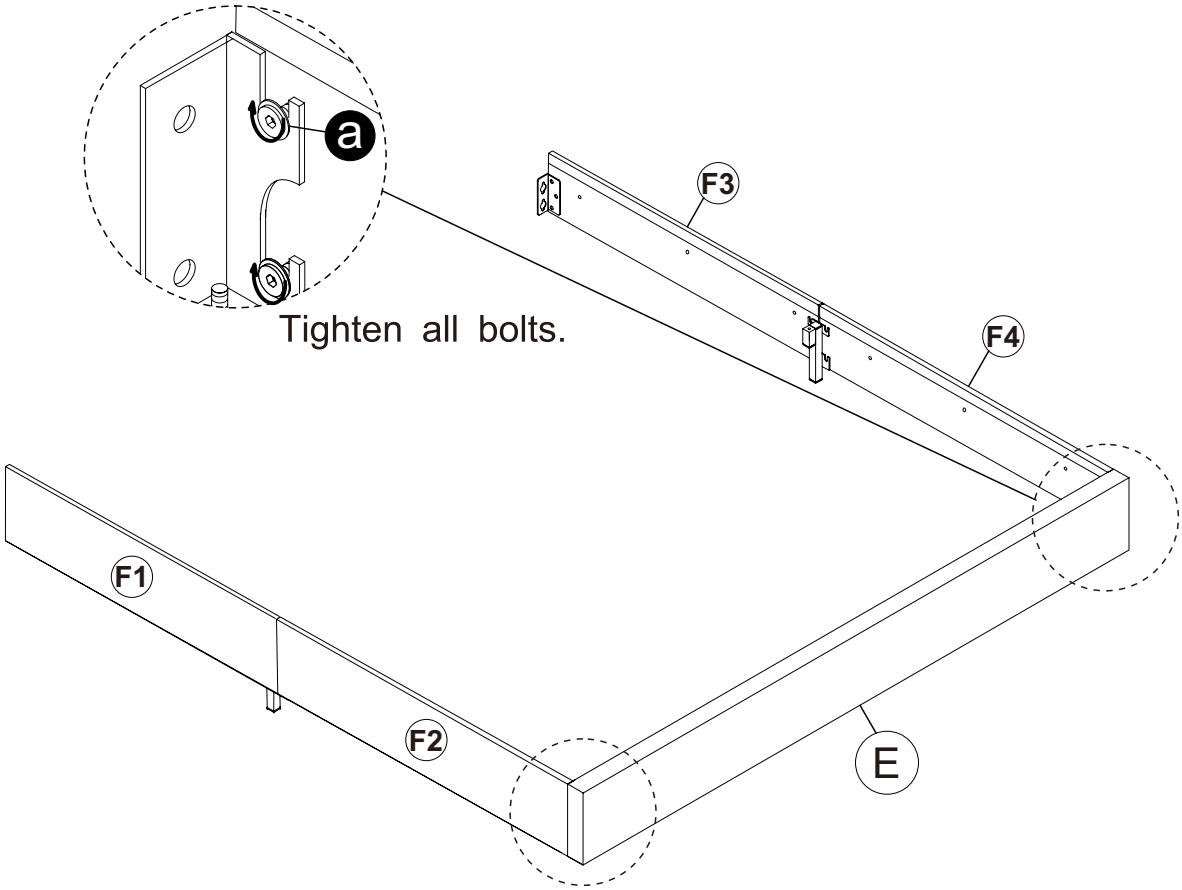



# step8

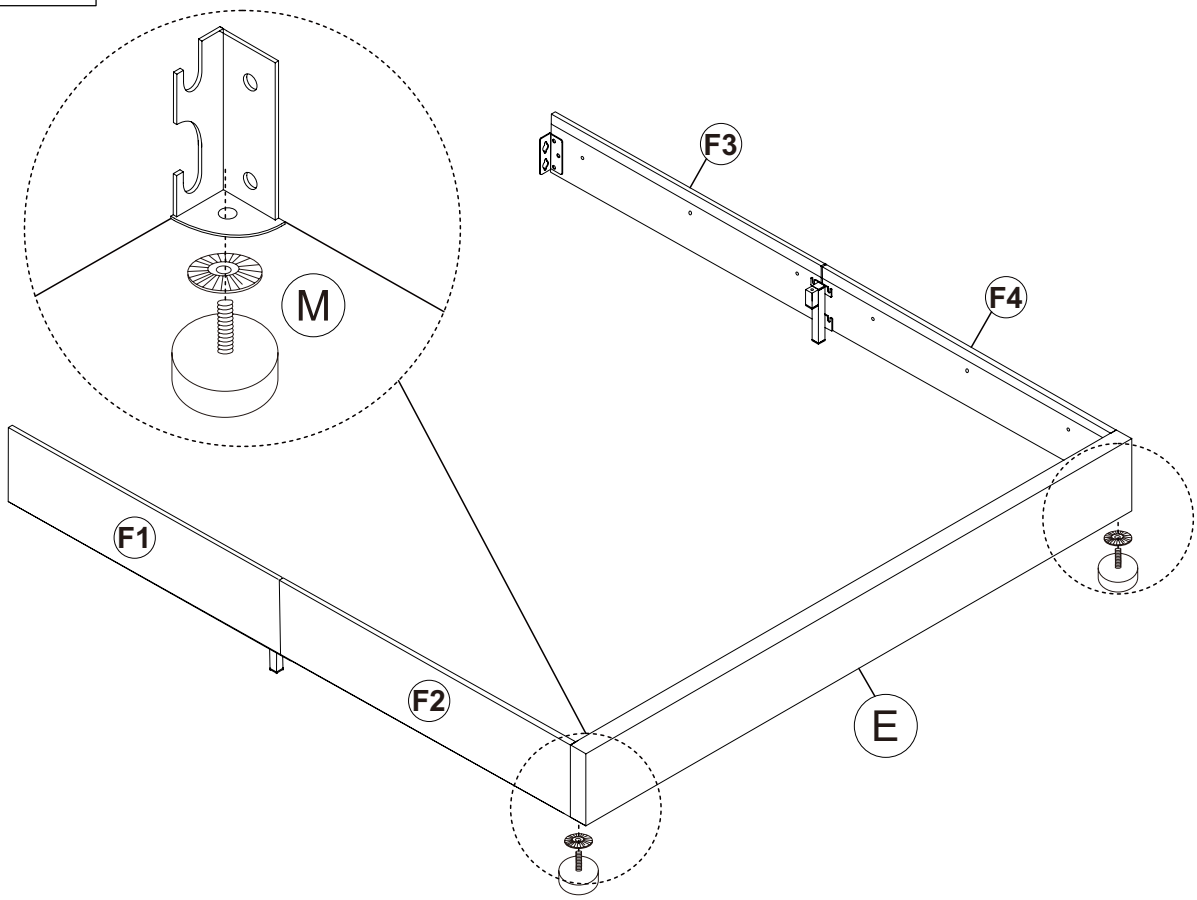


## step9

Please first attach the side panel to the pre-installed screw b on the head support leg using connector N, and then tighten screw b.

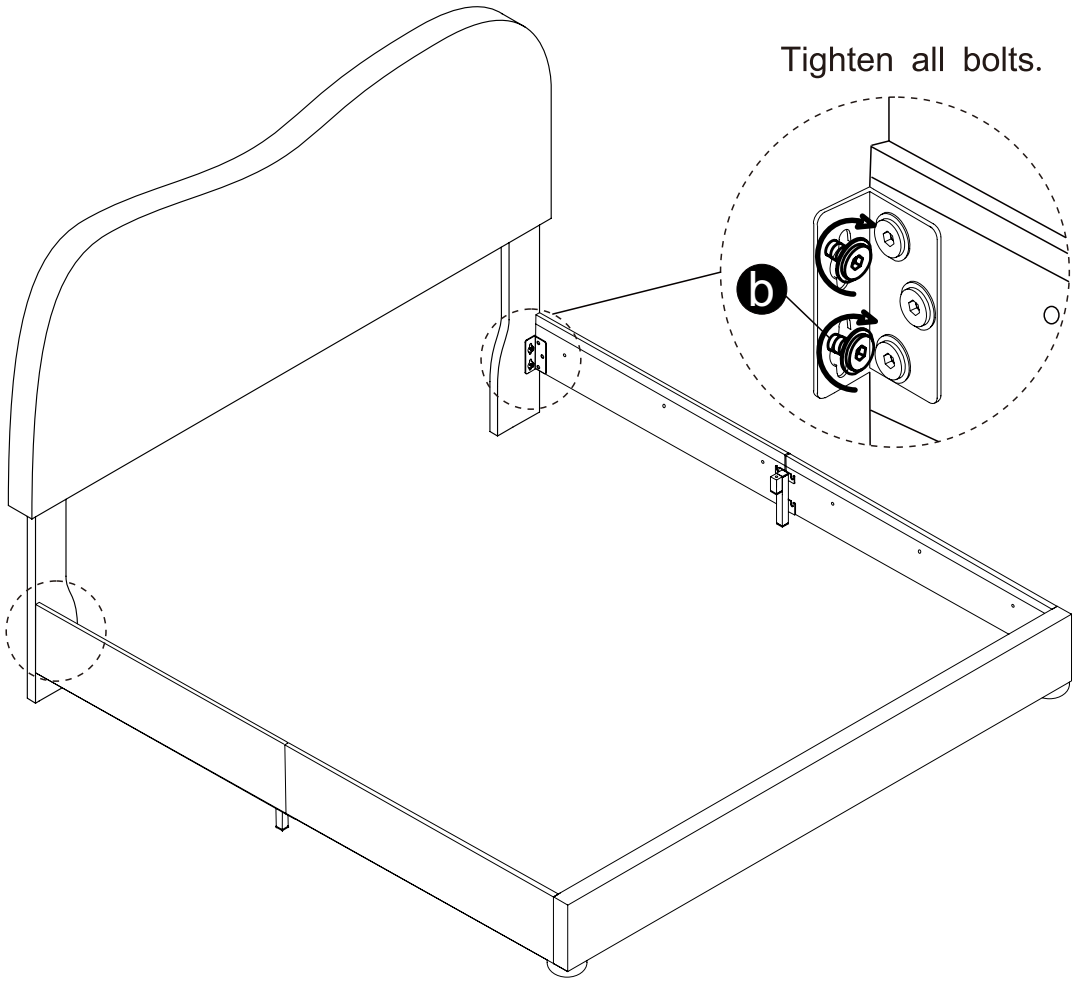



## step10

| | | |
|---|---|---|
| a | M8*18 | 4PCS |

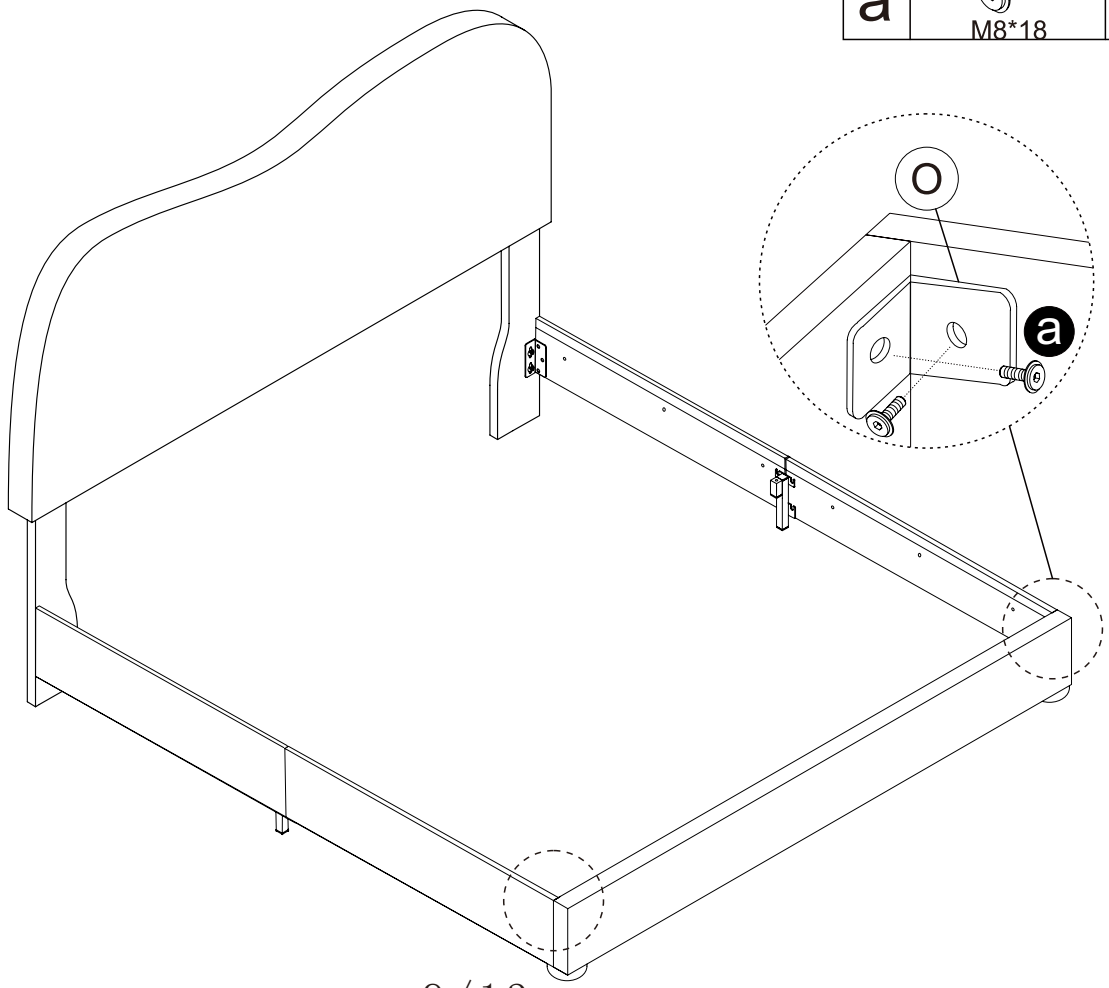


# step11

| C | M8*35 | 12PCS |
|---|---|---|

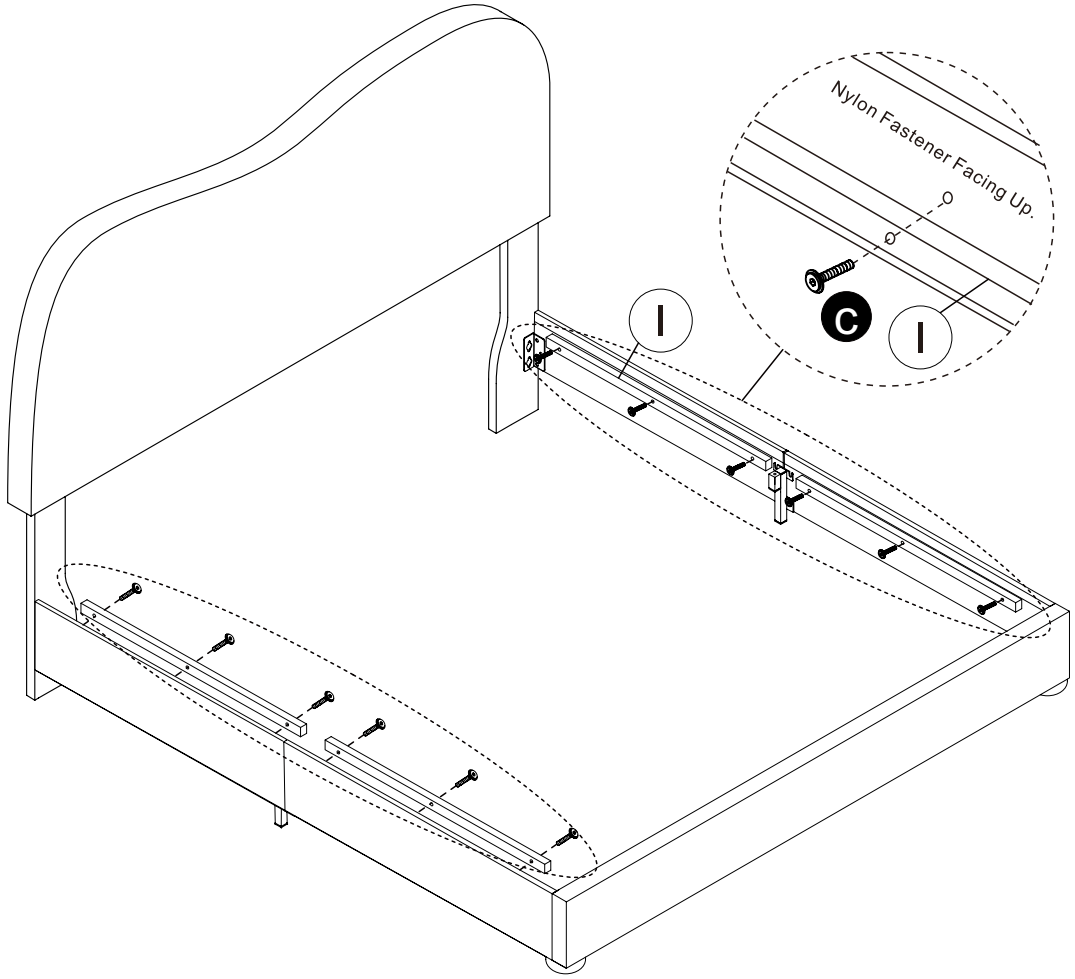



# step12

| C | M8*35 | 4PCS |
|---|---|---|

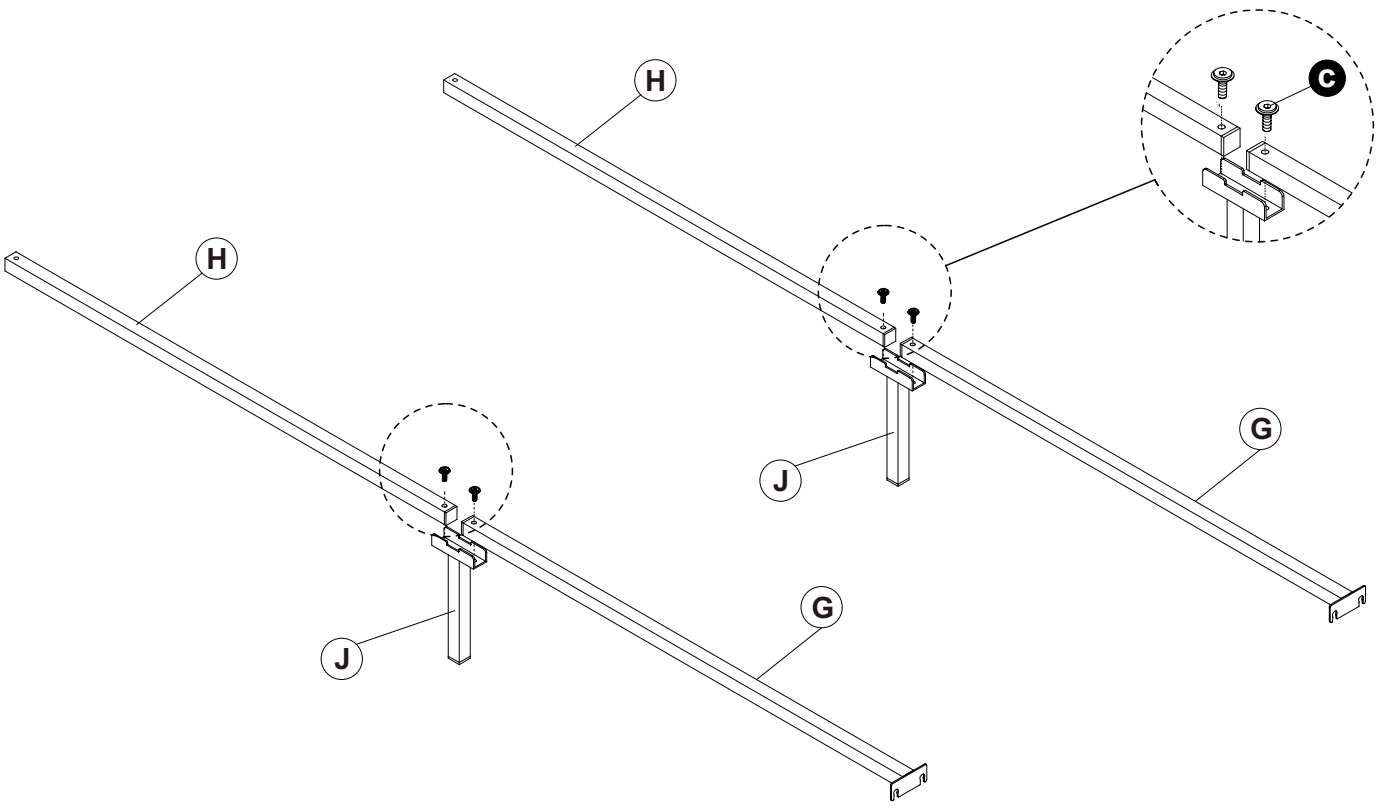


## step13

Please first hang bracket G onto screw a pre-installed on the footboard, and then tighten screw a.

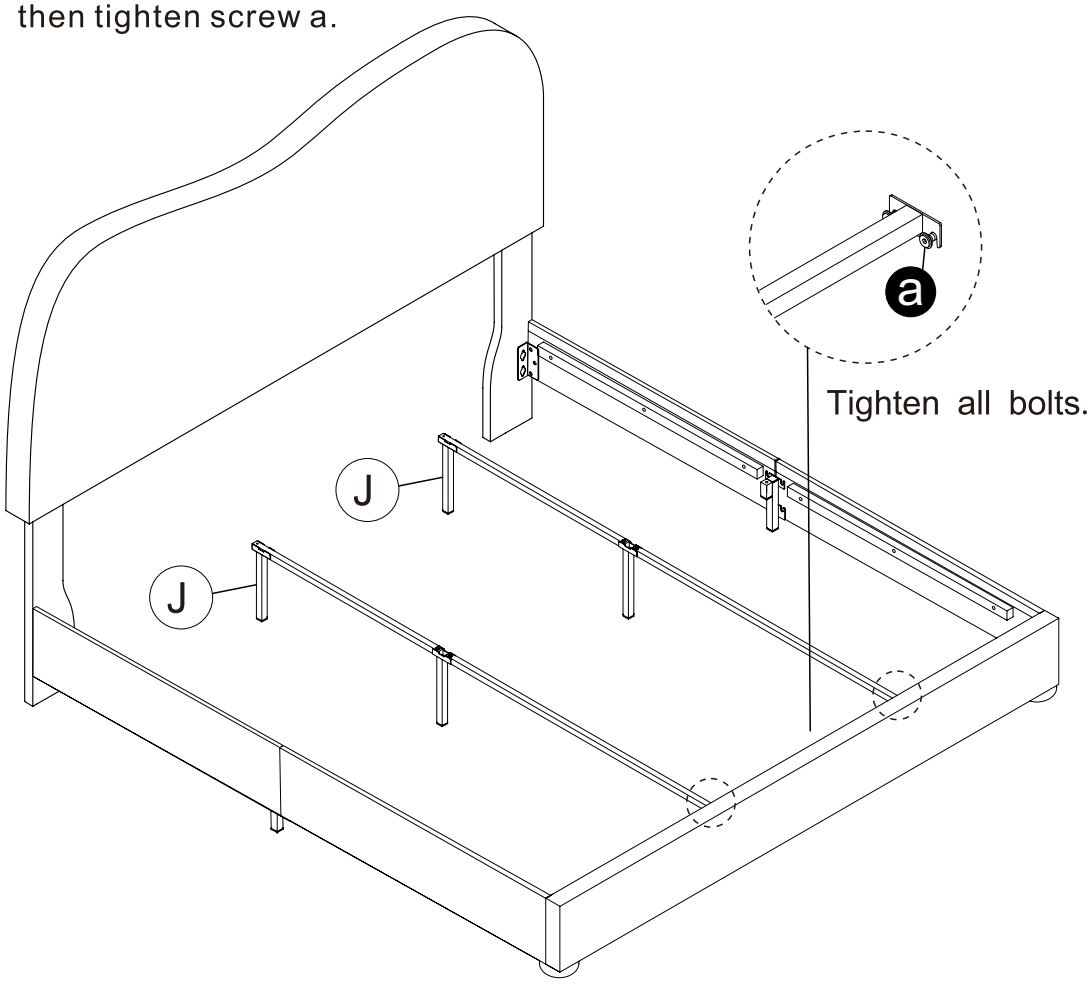



## step14

| C | M8*35 | 4PCS |
|---|---|---|

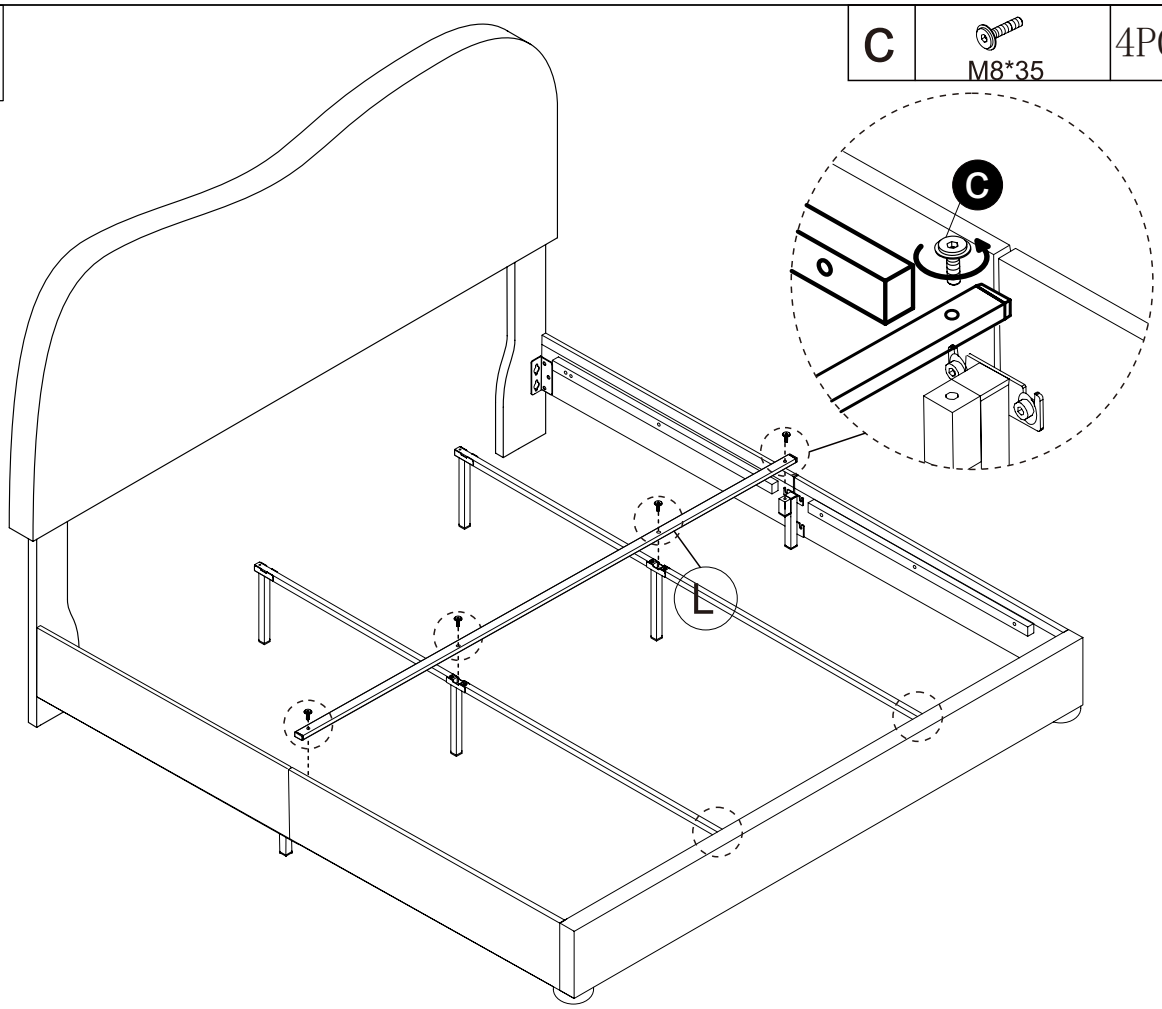


# step15

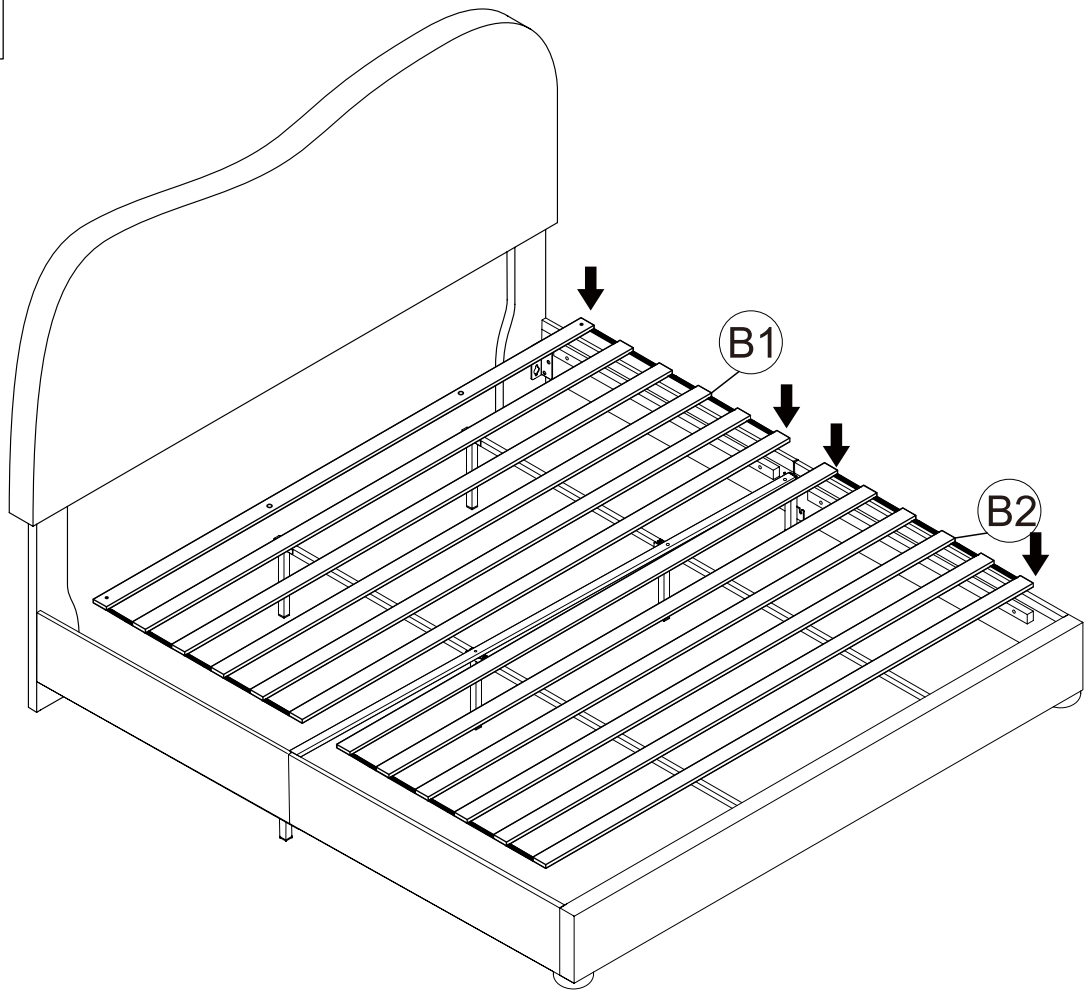


# step16

| | | |
|---|---|---|
| d |  M8*55 | 2PCS |

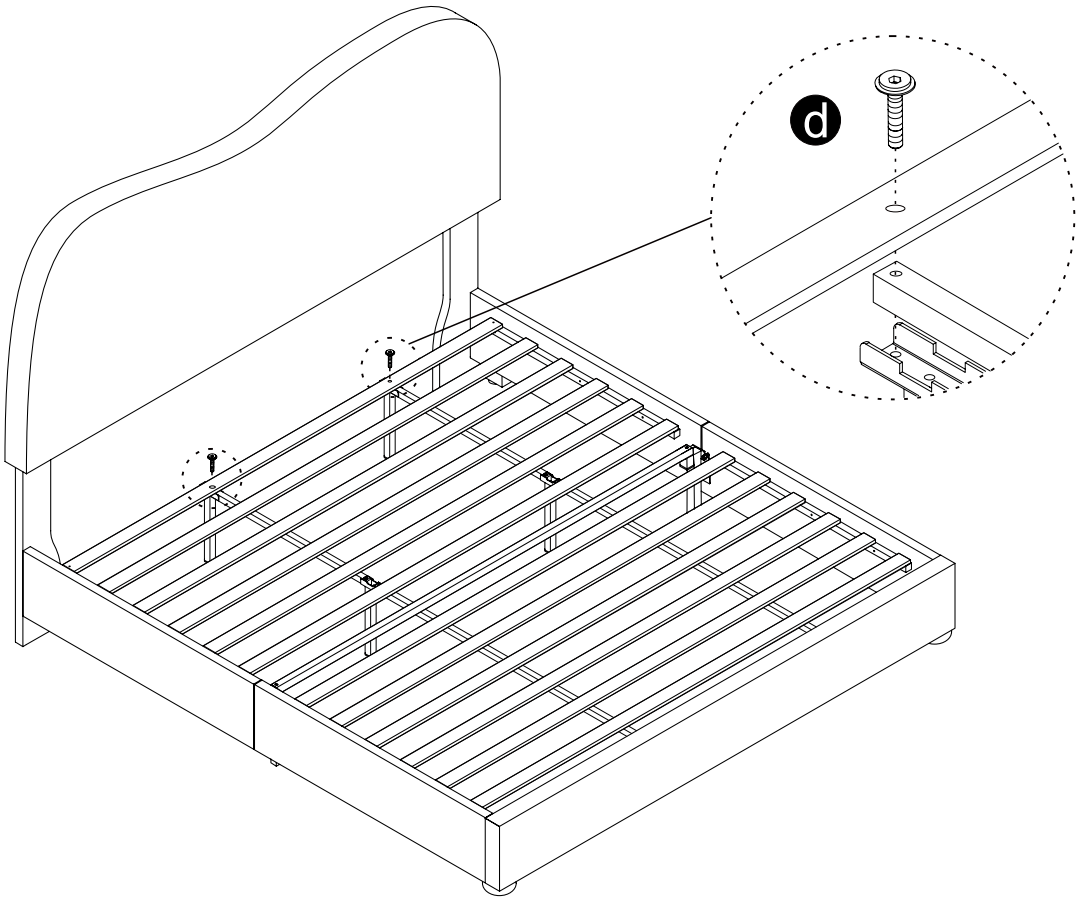

# step17

| | | |
|---|---|---|
| e | M4*35 | 2PCS |
| f | | 2PCS |

