



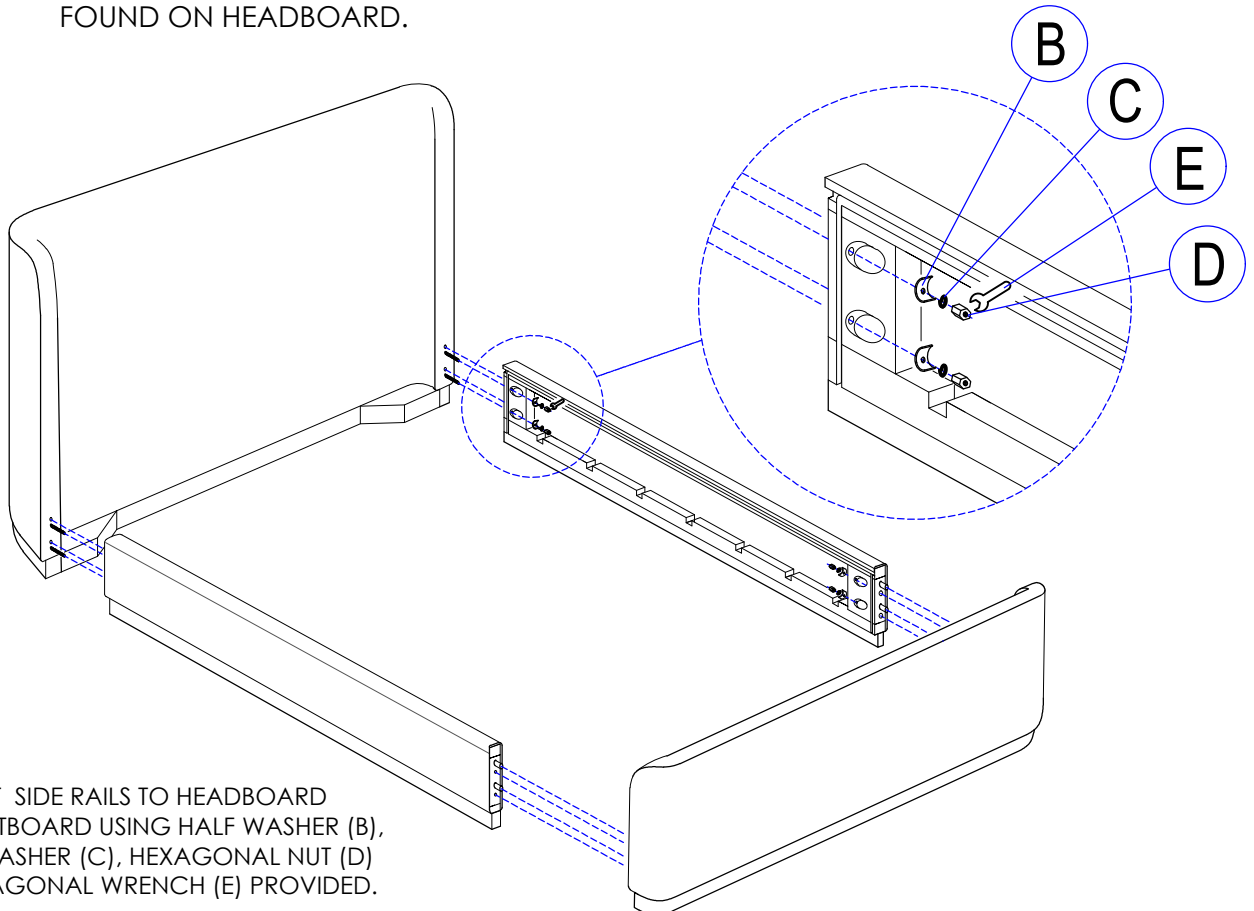

PARTS LIST

A	B	C	D	E	F	G	
BOLT M8 x 80 8 PCS.	HALF WASHER M8 8 PCS.	SPRING WASHER M8 (8 PCS.)	HEXAGONAL NUT M8 (8 PCS.)	WRENCH KEY (FOR HEX.NUT) 1 PC.	ALLEN BOLT (FOR BED SLAT) M6 X 60 (3 PCS.)	ALLEN KEY M4 (FOR ALLEN BOLT) 1 PC.	

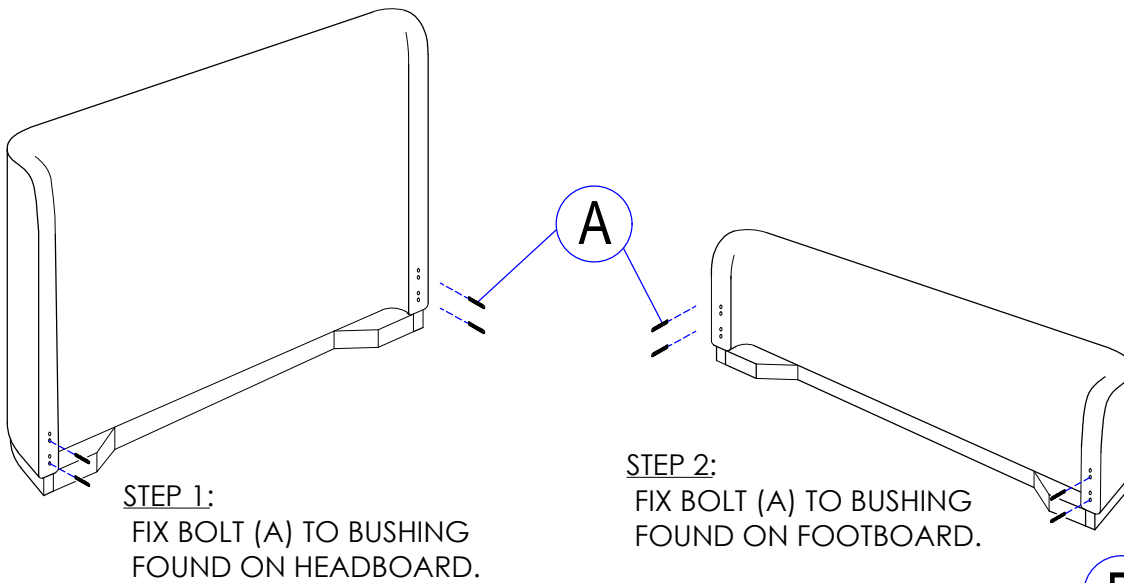

SPECIAL CARE INSTRUCTIONS : KEEP FURNITURE OUT OF DIRECT SUNLIGHT AS IT CAN DAMAGE THE FINISH.
CLEAN WITH A 'NON BUILD-UP' CLEANER AND A SOFT FURNITURE POLISHING CLOTH.