










# Assembly Instructions

## RETURN-REVERSIBLE

TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG	TUN019IB	
<b>A</b>  Cam Lock 7Pcs+2Pcs(spare)	<b>B</b>  Klix Cam 7Pcs+2Pcs(spare)	<b>C</b>  Dowel 5Pcs+1Pc(spare)	<b>D</b>  Adjustable Glide 4Pcs	<b>E</b>  6 Hole L-Bracket 2Pcs	<b>F</b>  Screw #4x5/8 30Pcs+5Pcs(spare)	<b>G</b>  60mm Black Grommet 2Pcs	<b>H</b>  I-Bracket 3Pcs	<b>I</b>  Sticker 20Pcs

### STEP1


IMPORTANT:

#### FUNCTION OF KLIX CAM




1/4 RIGHT  
TURN FOR  
LOCKING



MAKE SURE THE ARROW IS  
POINTING UPWARDS  
BEFORE INSERTING INTO  
THE PANEL'S HOLE.

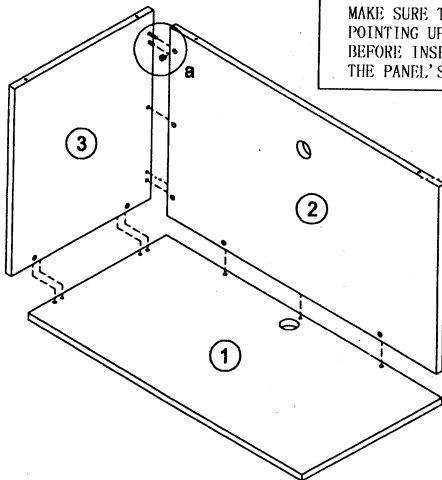


a

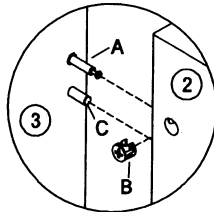


### STEP2

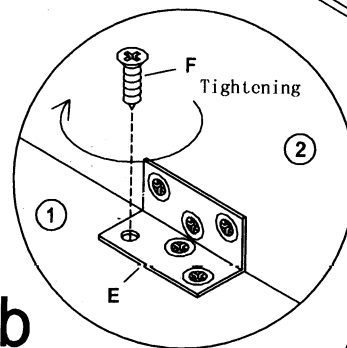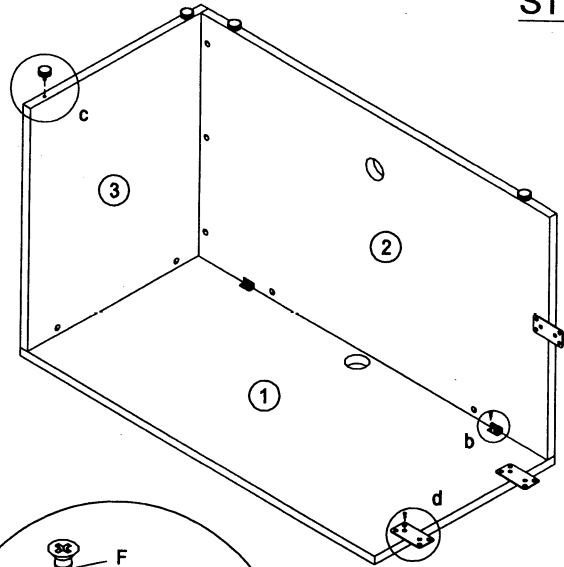

b

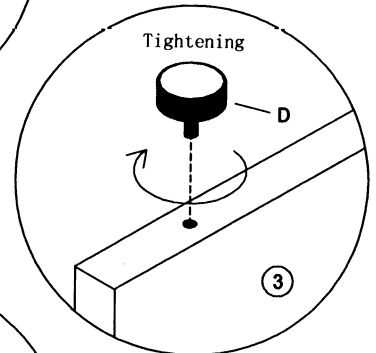


c

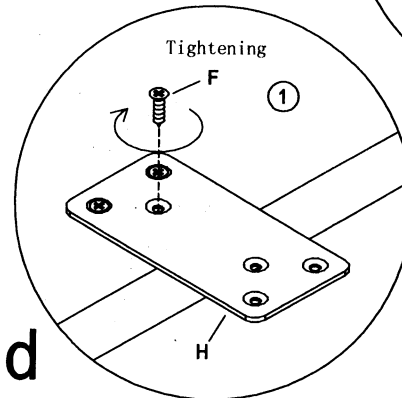


d


### STEP3

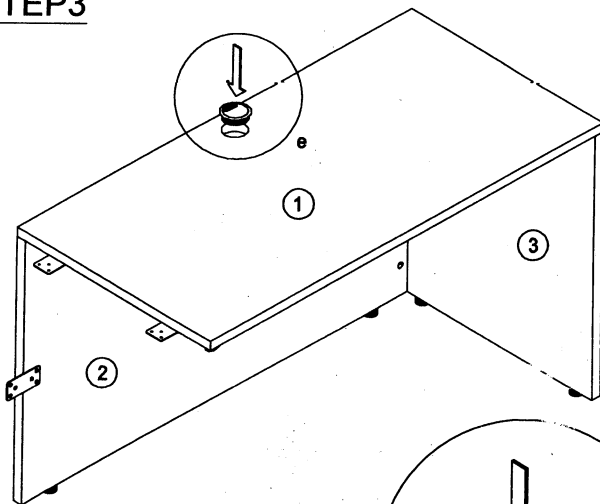

e

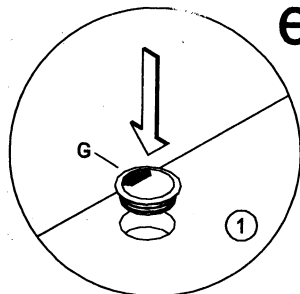

COMPLETED ASSEMBLY

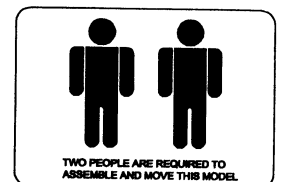

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.