


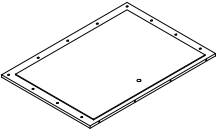
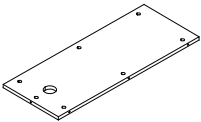
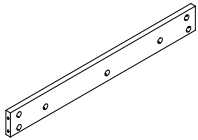

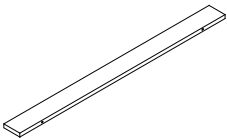

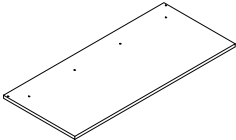

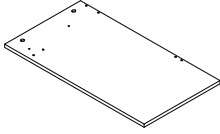

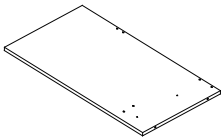
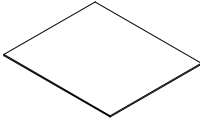
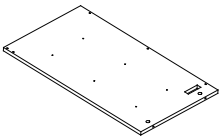

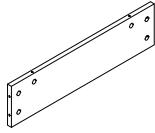
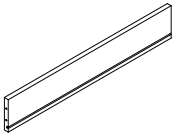
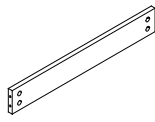

"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"









- 
1. Two or more people are needed to complete the installation.










2. Please protect the wires and remote control accessories from damage during installation.


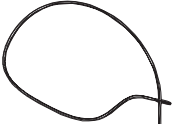
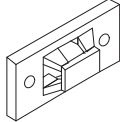








3. Professional installation is highly recommended.


4. Assemble on a flat, clean and soft surface.

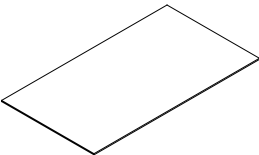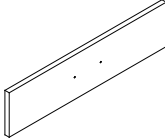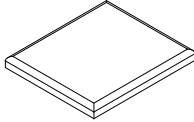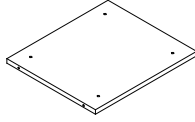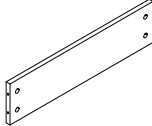Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		X1	10		X1
2		X2	11		X1
3		X1	12		X3
4		X1	13		X3
5		X1	14		X3
6		X1	15		X3
7		X1	16		X3
8		X1	17		X1
9		X1	18		X1

Item no.	Reference Image	Qty.
19		X1
20		X1
21		X1
22		X1
23		X1
24		X2
25		X2
26		X1


Item no.	Reference Image	Qty.
(A)	 4X20mm	X8
(B)	 4X25mm	X20
(C)	 3.5X14mm	X4
(D)		X11
(E)		X81
(F)	 15X 9.5mm	X81
(H)		X4
(I)		X8
(J)		X8

Item no.	Reference Image	Qty.
(K)	 3.5X12mm	X32
(L)		X1
(L1)		X2
(L2)	 6×30MM	X2
(L3)	 3.5×14MM	X2
(L4)	 3.5×35MM	X2
(M)		X1
(N)		X1
(O)		X1
(P)		X1
(Q)		X11

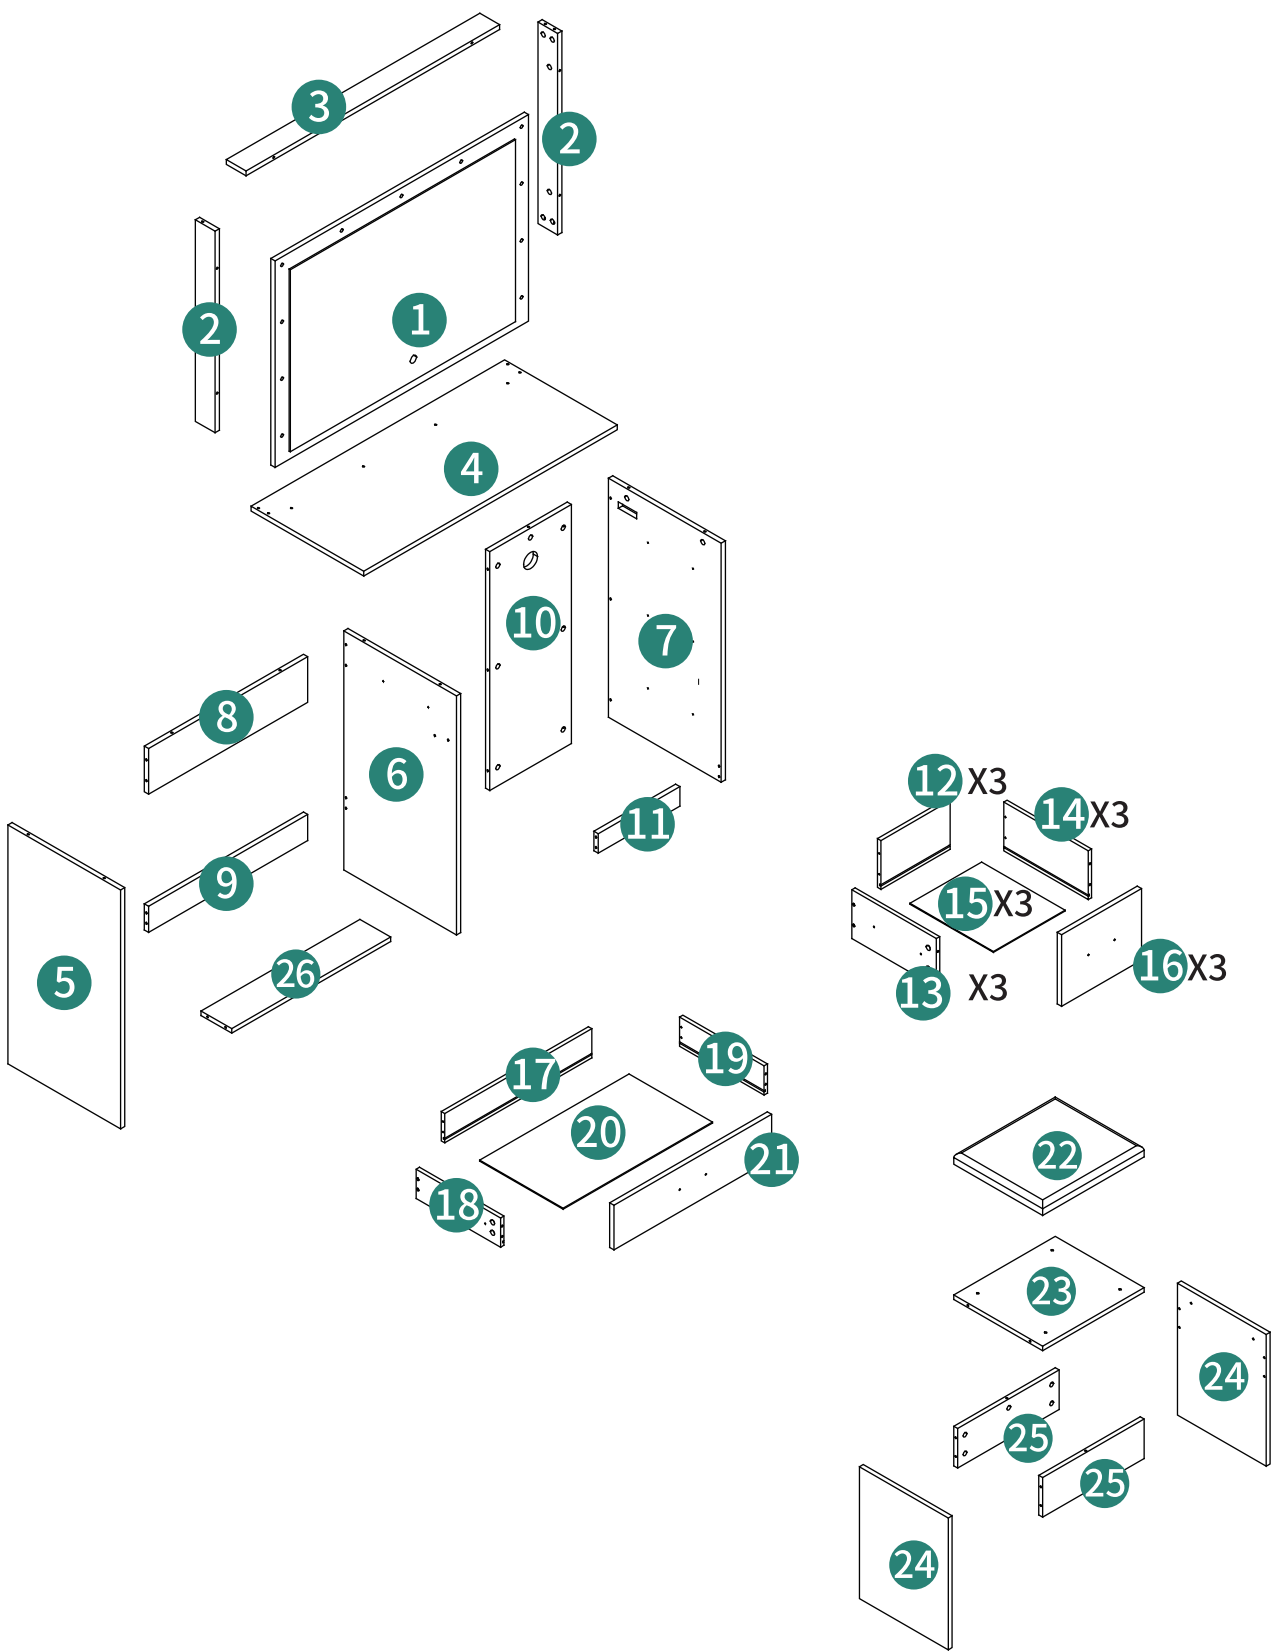


USING CAM LOCK AND QUICKFIT

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

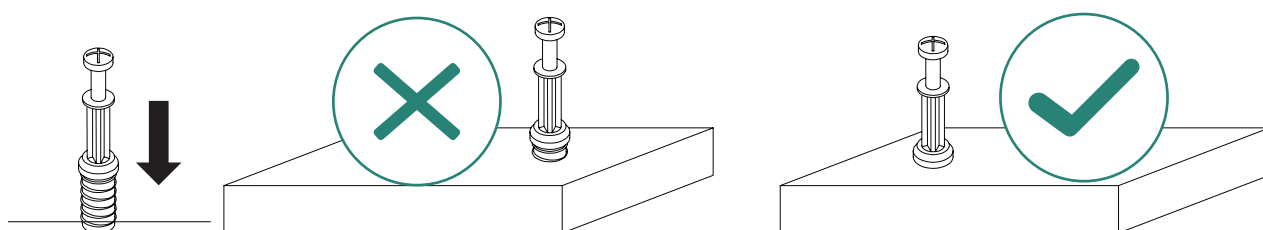


When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

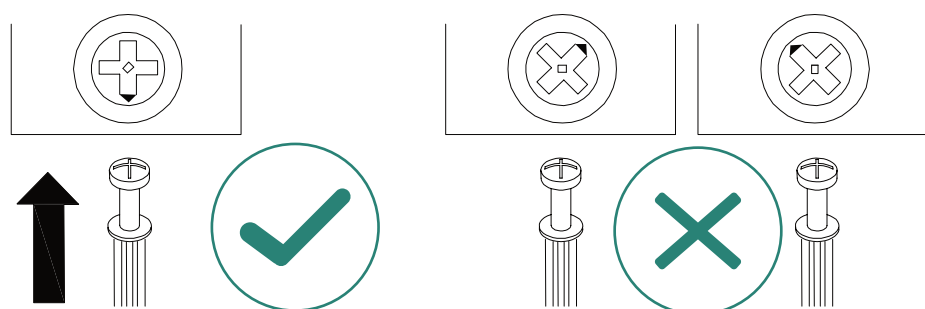


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

Turn cam lock clockwise to tighten.

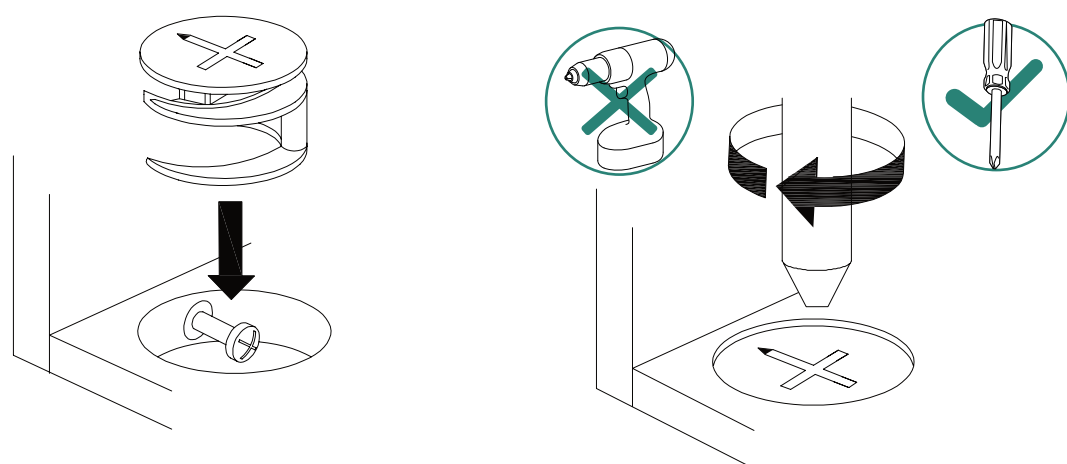


PRE-FIX DRAWER RUNNER INSTRUCTIONS


Pull inner and outer drawer runners apart before fixing them to panels.




Slide drawer runners apart until the drawer lock can be seen, as shown.

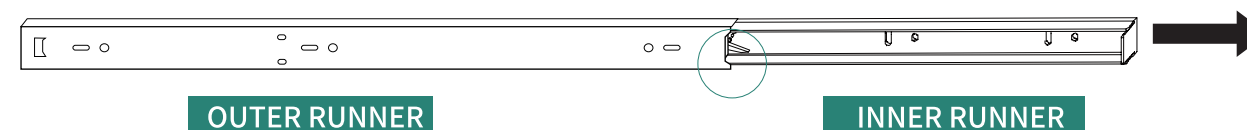


Press and hold the drawer runner lock and then continue to slide drawer runners apart, as shown.

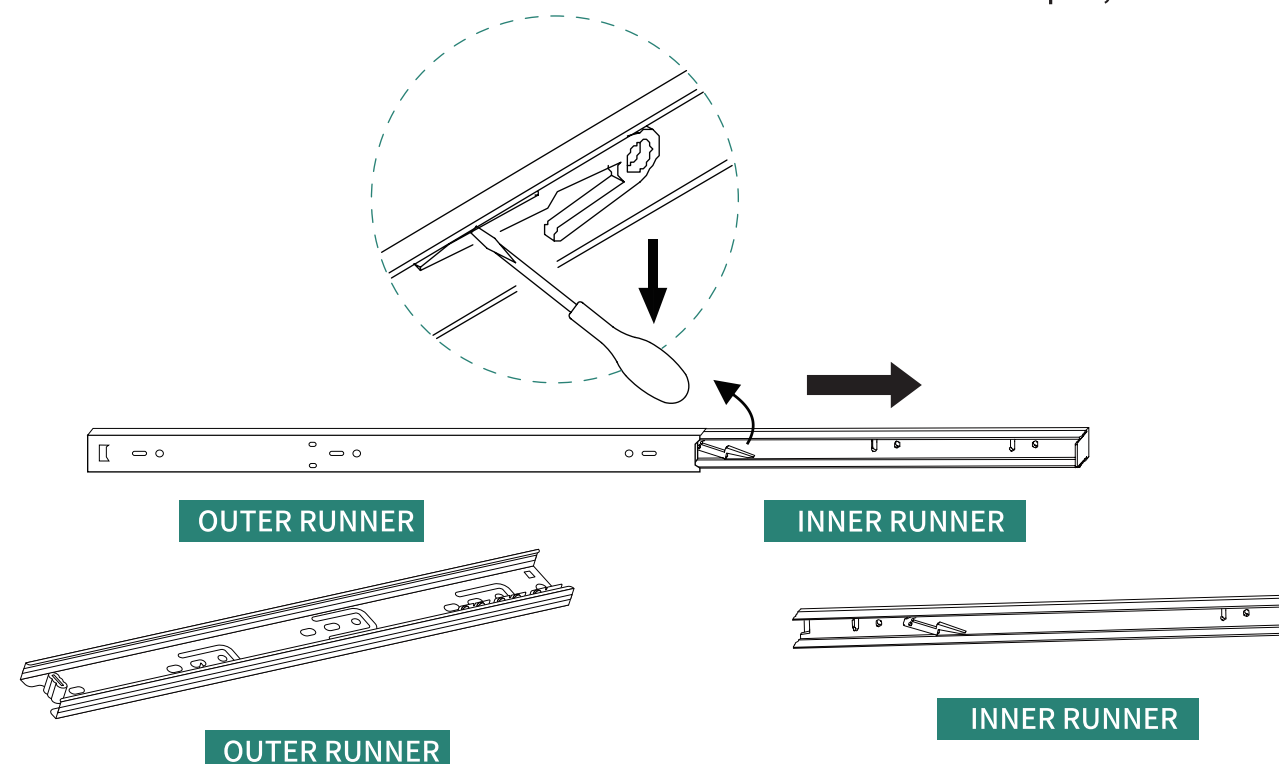

Your inner and outer drawer runners are ready to be fixed to panels.

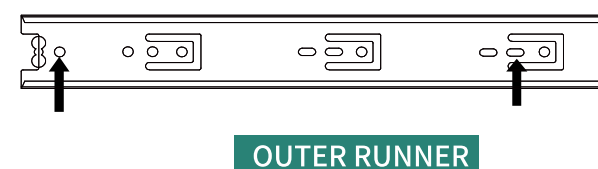


! When installing the outer guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it side-to-side at the marked position.

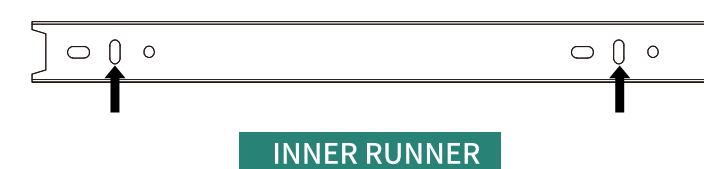

! When installing the inner guide rail, please use the guide rail notch to assemble towards the inner direction of the drawer. Please fix the screws according to the marked position. If the installed position is changed, adjust it up and down at the marked position.

1


⑥1pc ⑩1pc ⑪1pc ⑤5pcs ⑦5pcs ⑧6pcs ⑨3pcs ①1pc

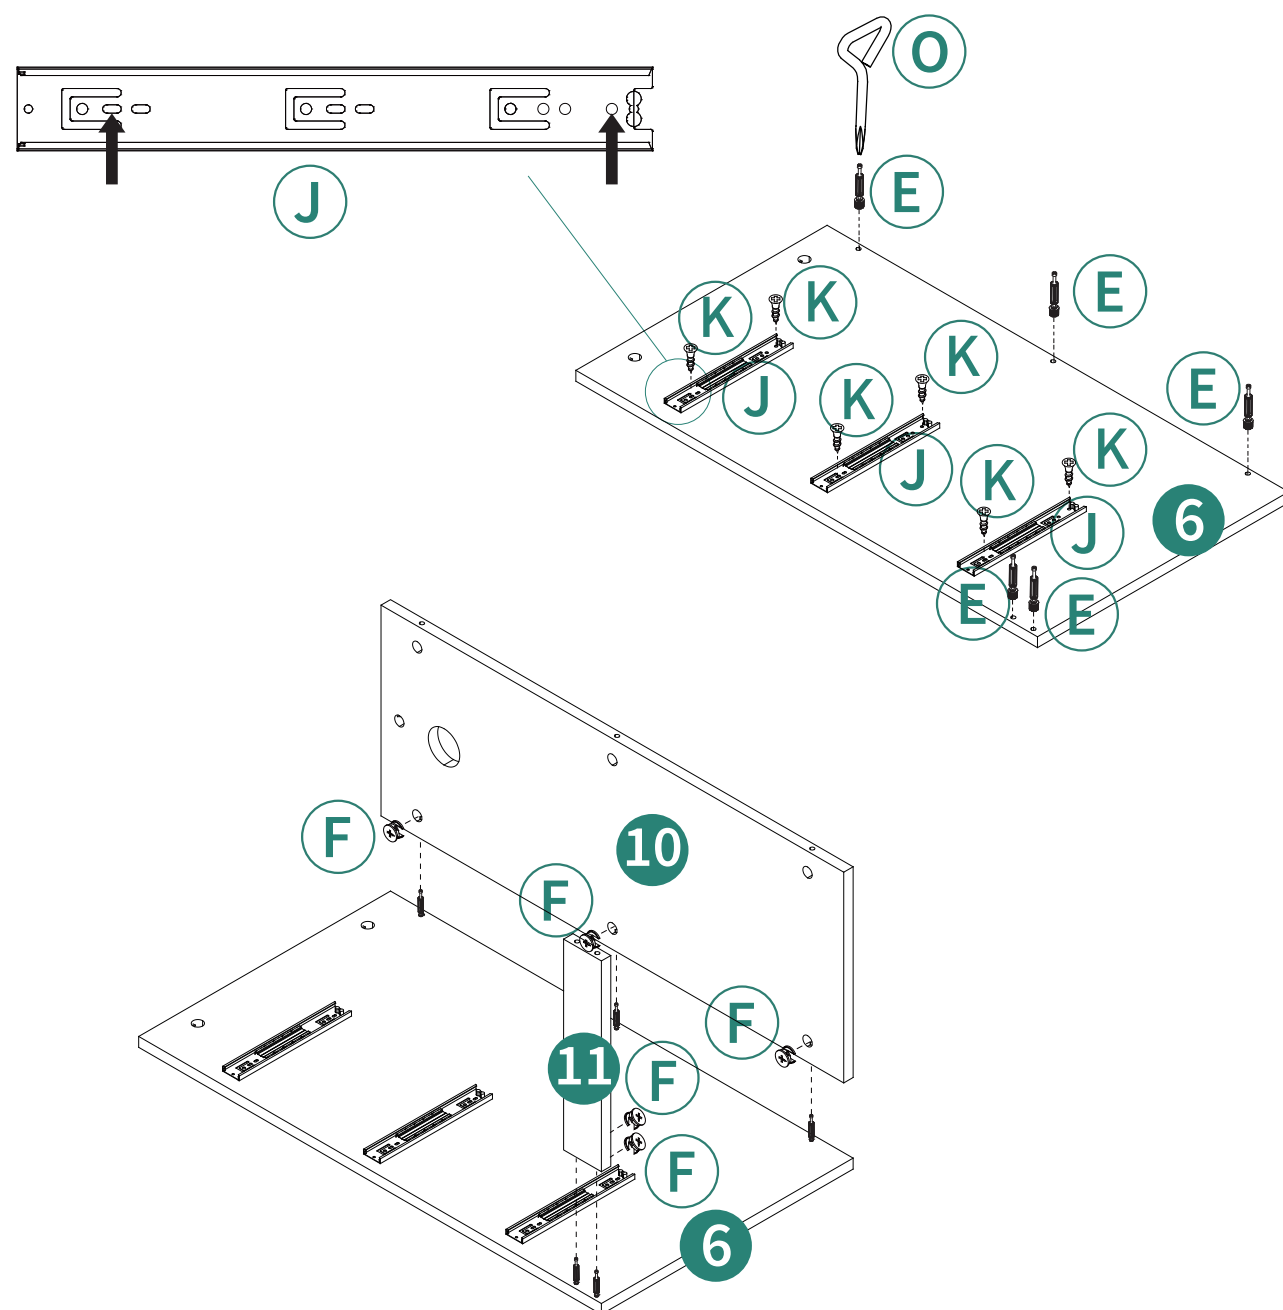

7

2



⑦1pc ⑤11pcs ⑦5pcs ⑧8pcs ⑨4pcs

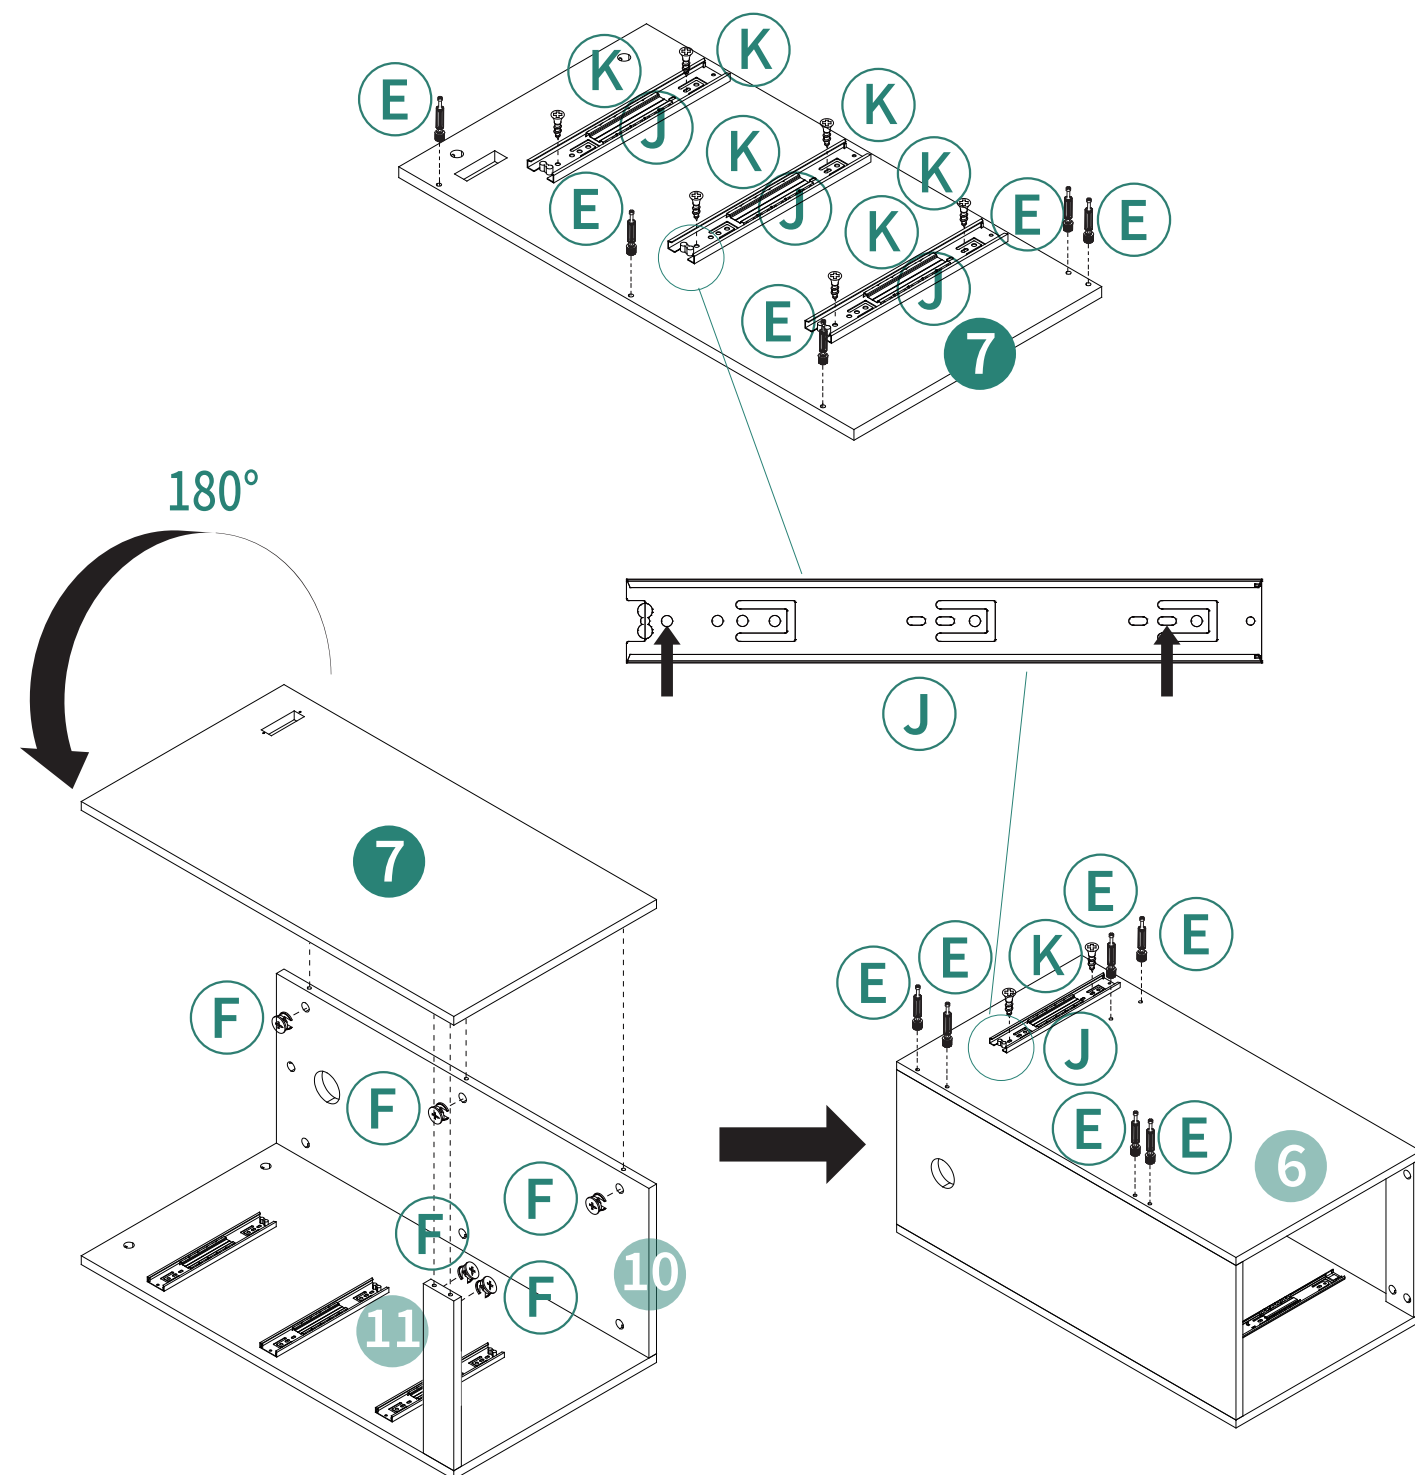

8

3



- ⑤1pc
- ⑧1pc
- ⑨1pc
- ②61pc
- Ⓔ6pcs
- Ⓕ12pcs
- Ⓚ2pcs
- Ⓝ1pc

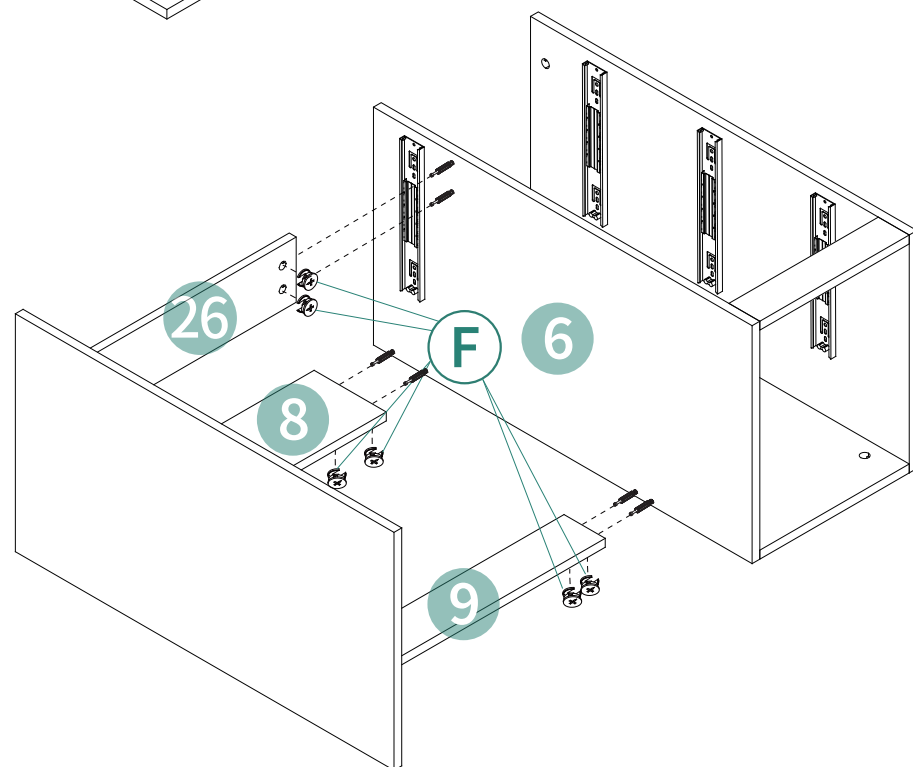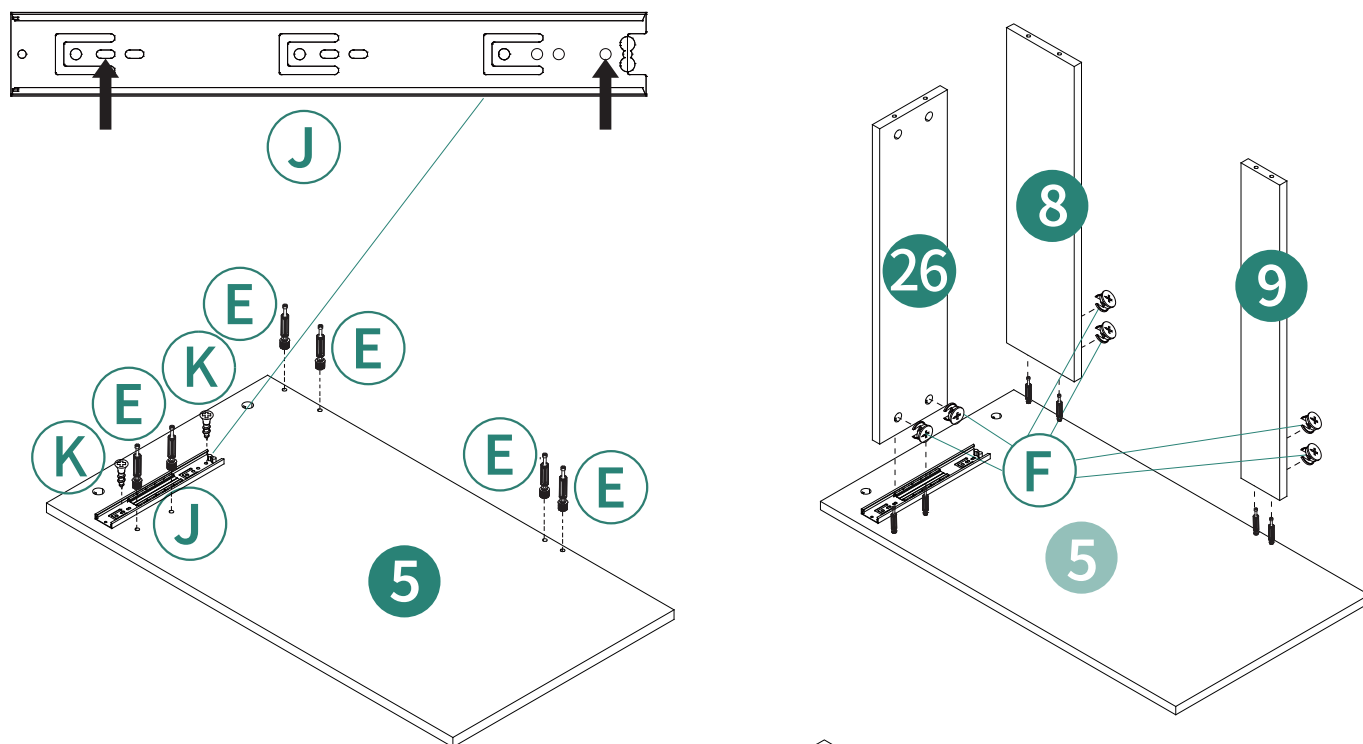

9


4

- ①1pc
- ②2pcs
- ③1pc
- Ⓔ12pcs
- Ⓕ4pcs

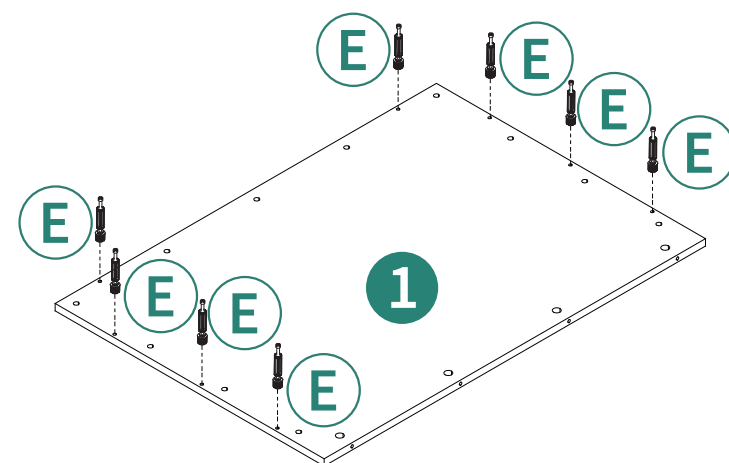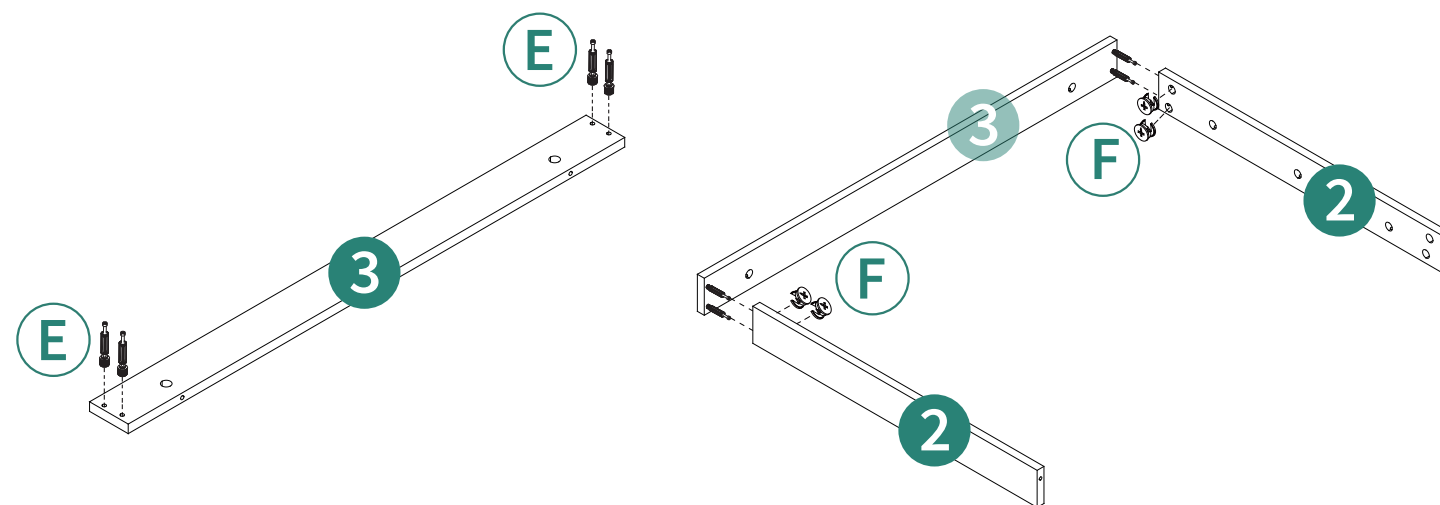


10

5






④ 1pc ⑤ 17pcs ⑥ 8pcs

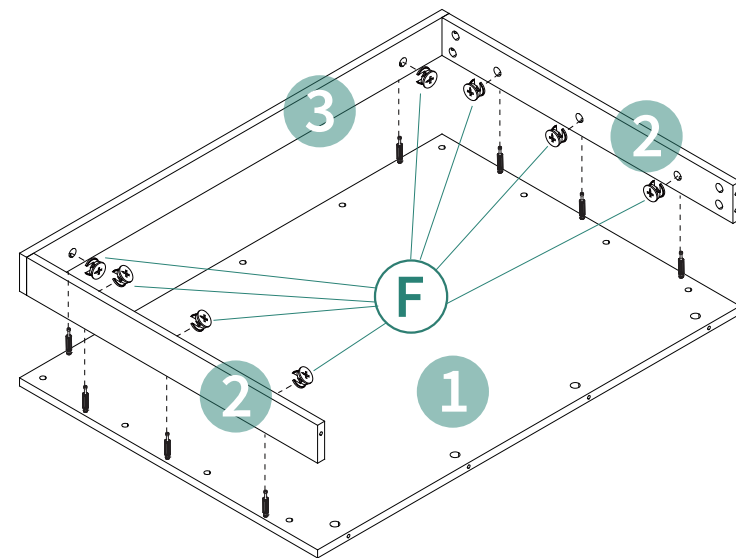





6



⑥ 17pcs

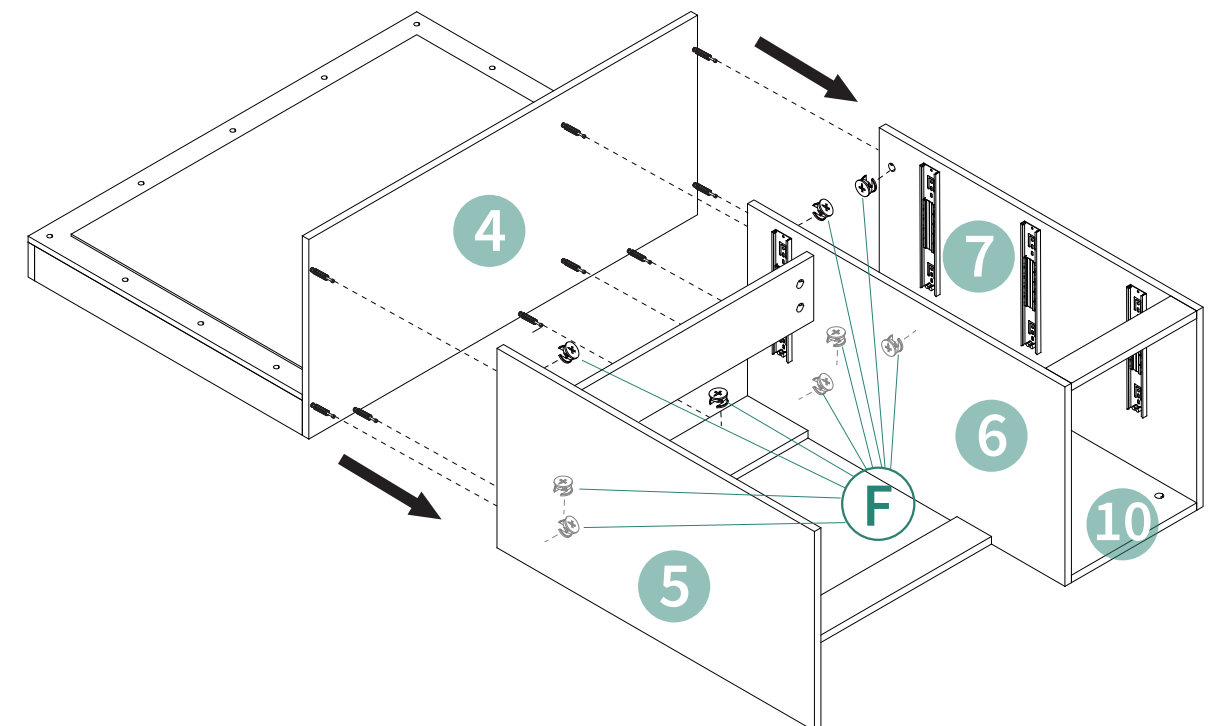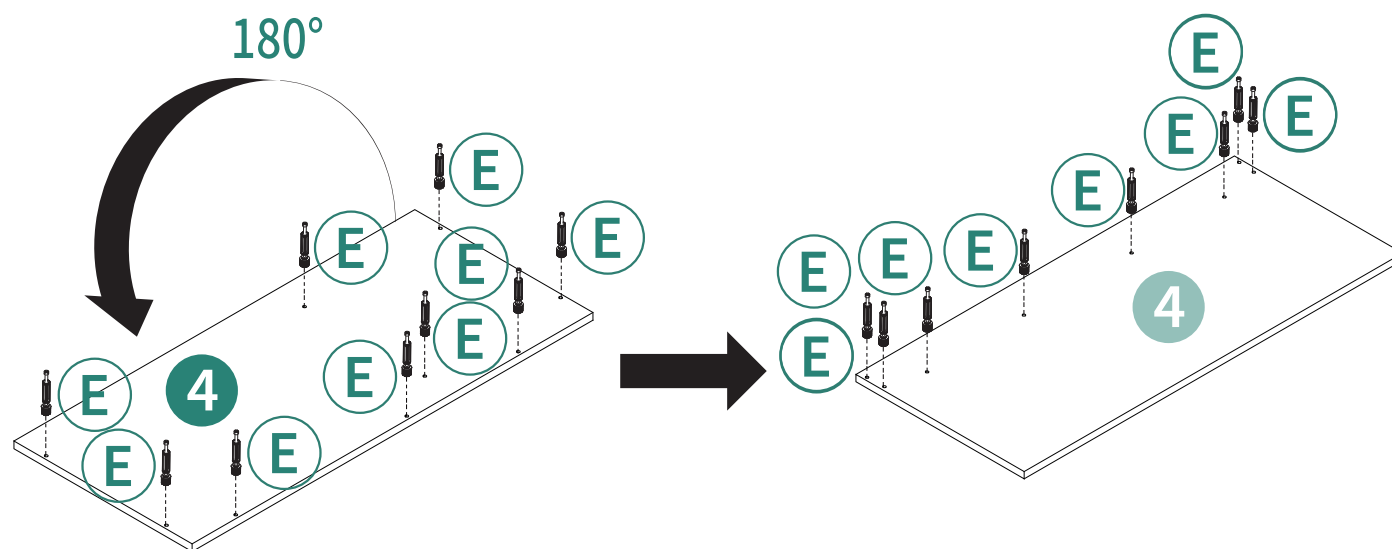
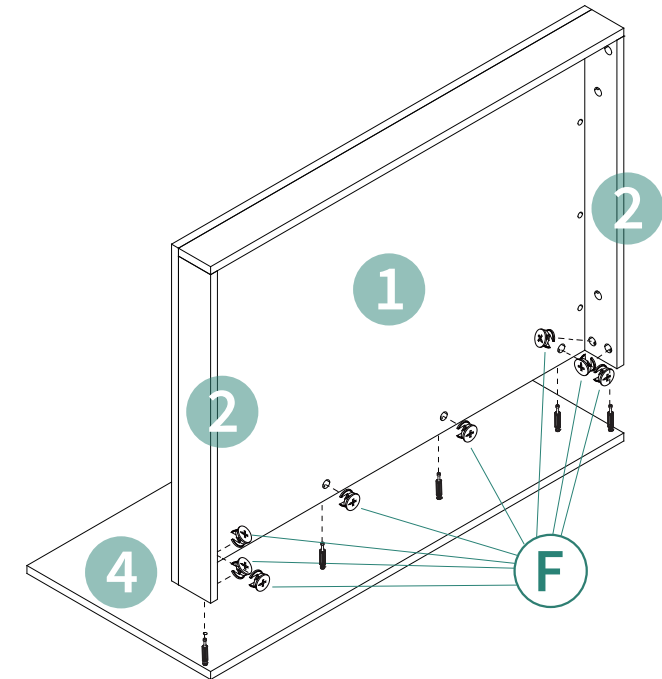


7

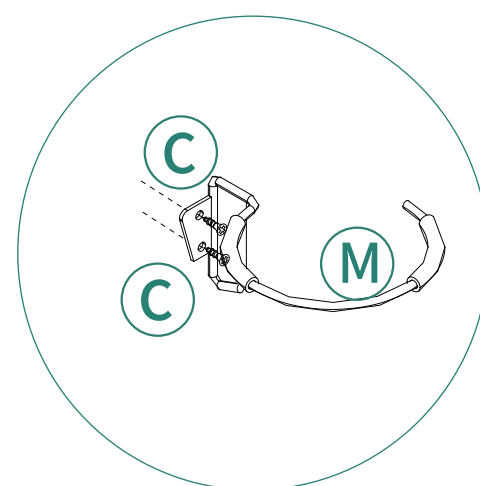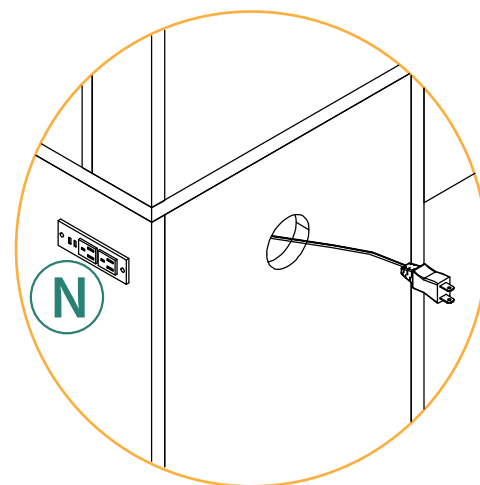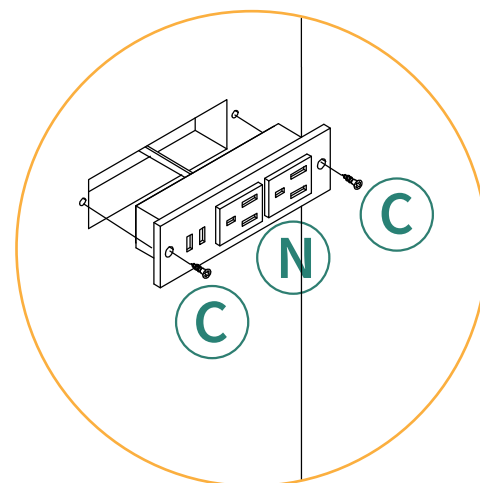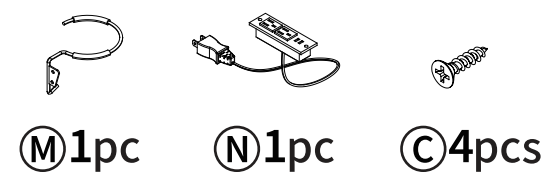


Install at a location based on your needs.

8

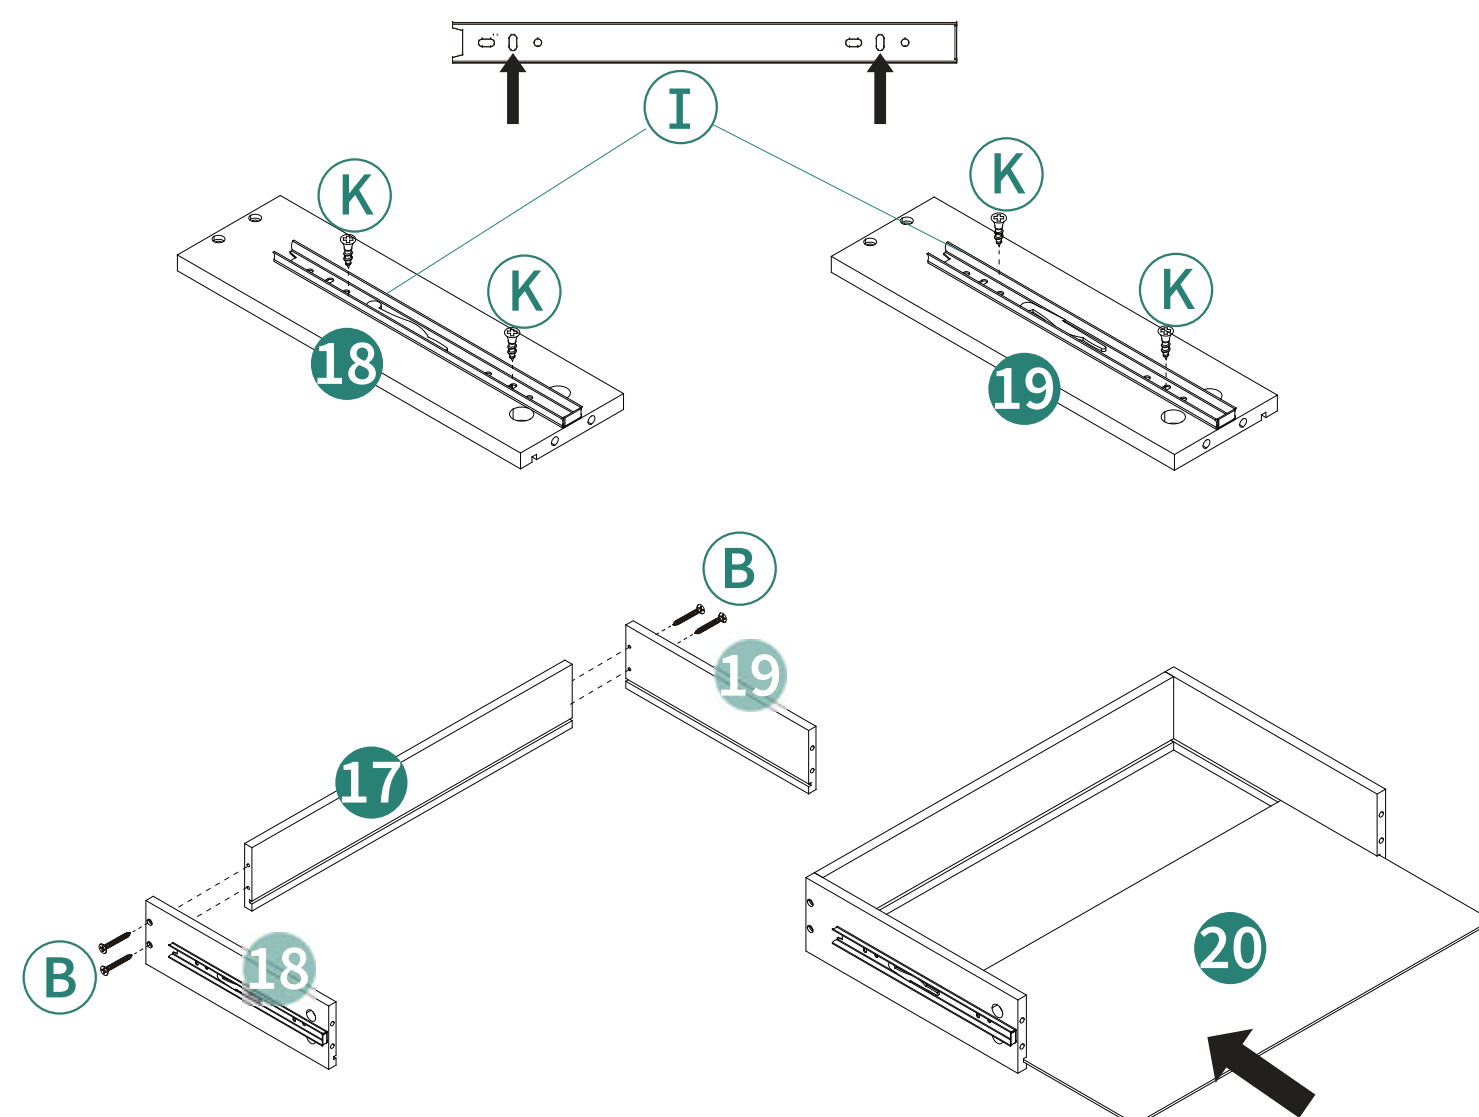
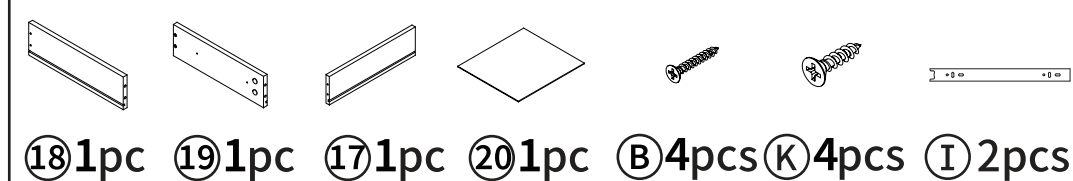


9

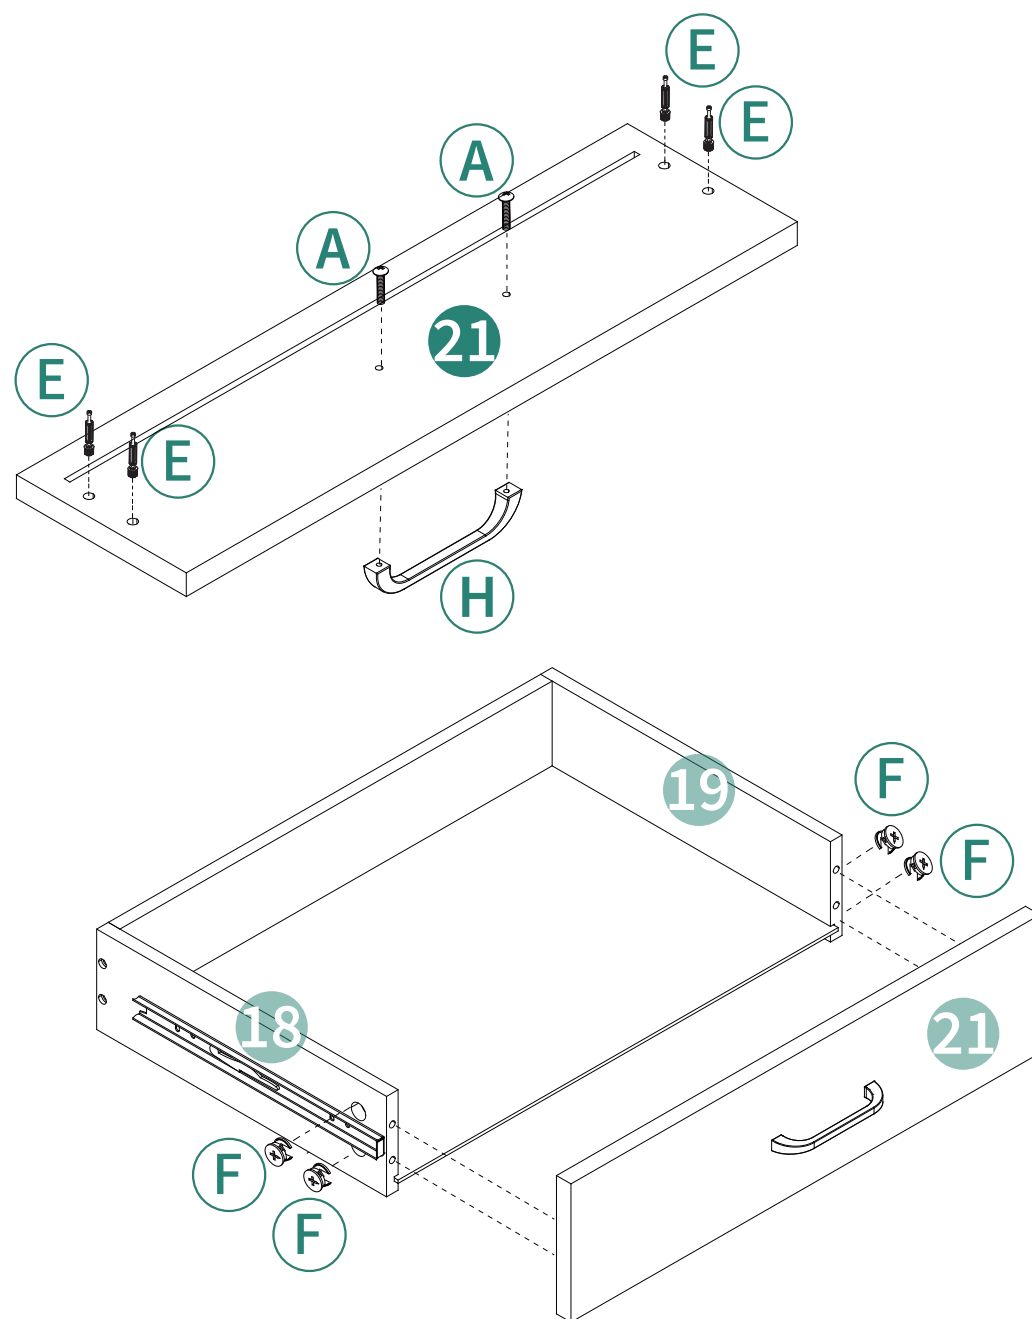



15

10
X 3

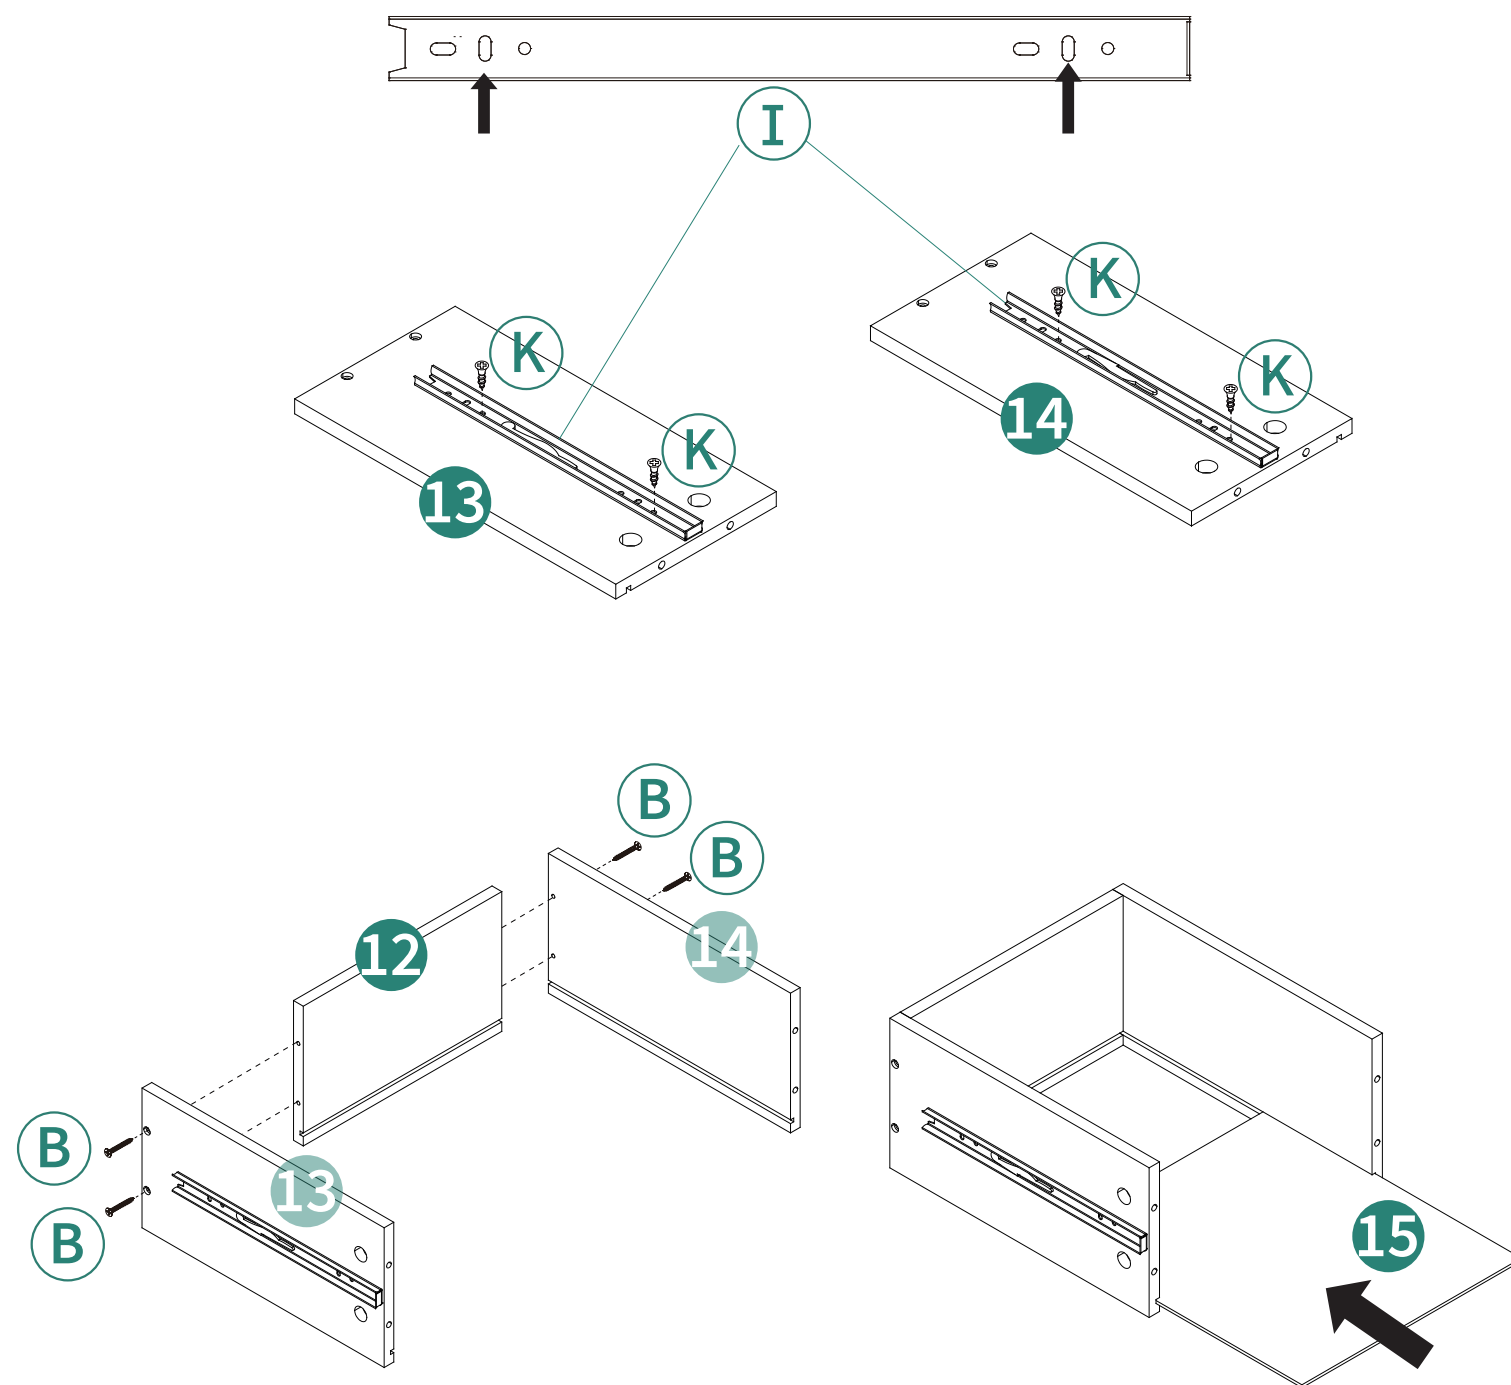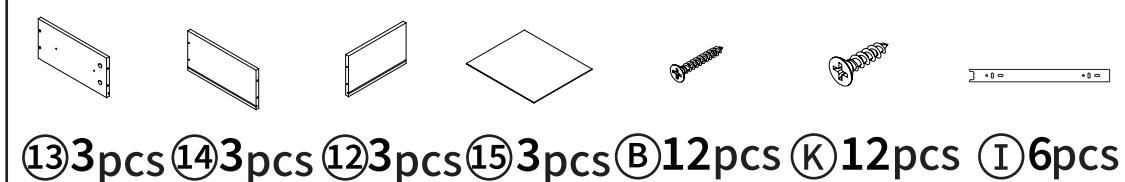


16

11
X 3

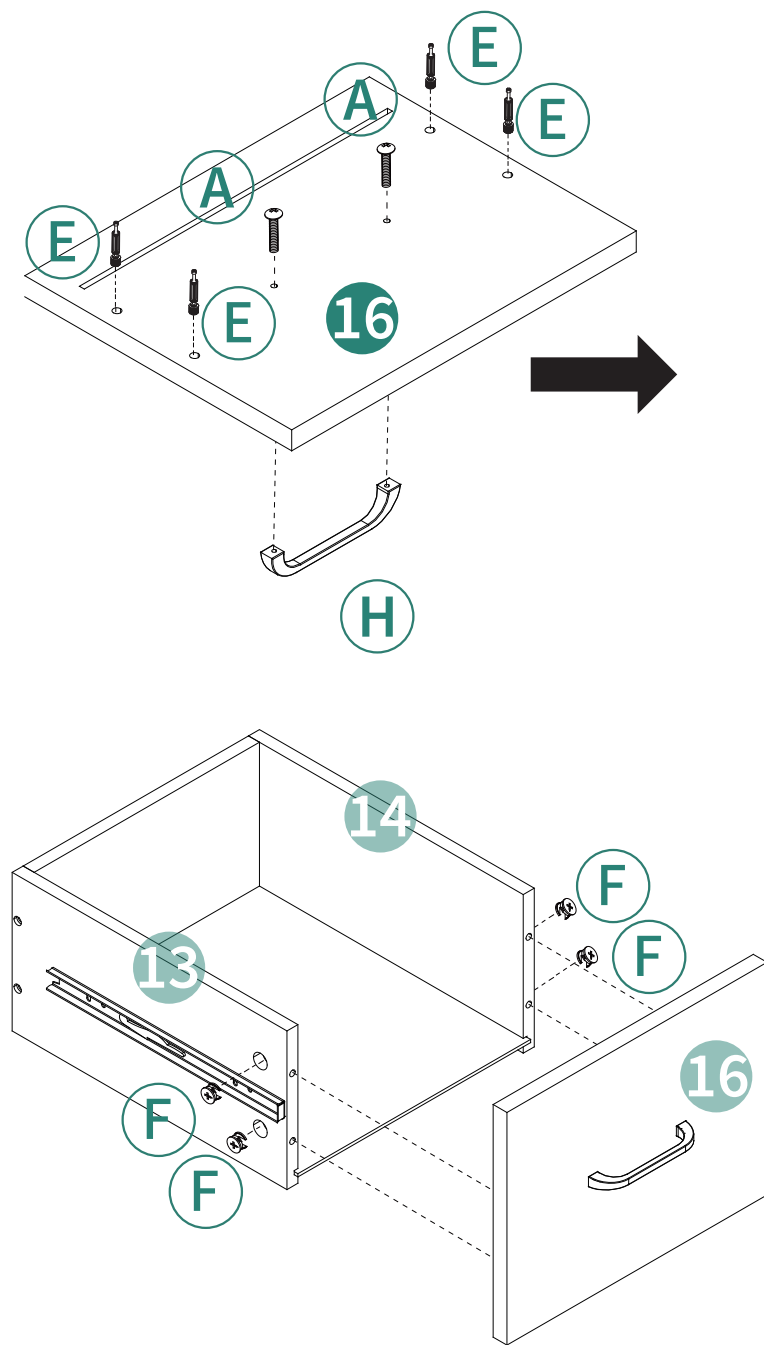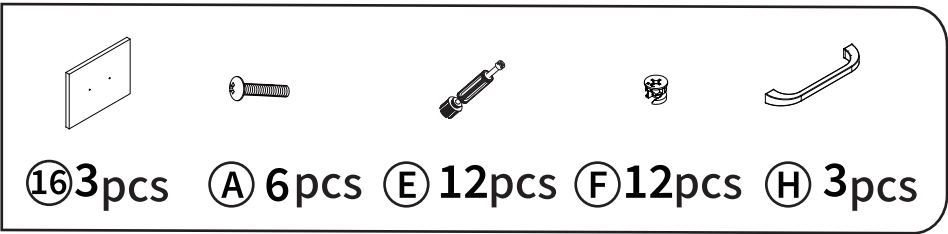

17

12

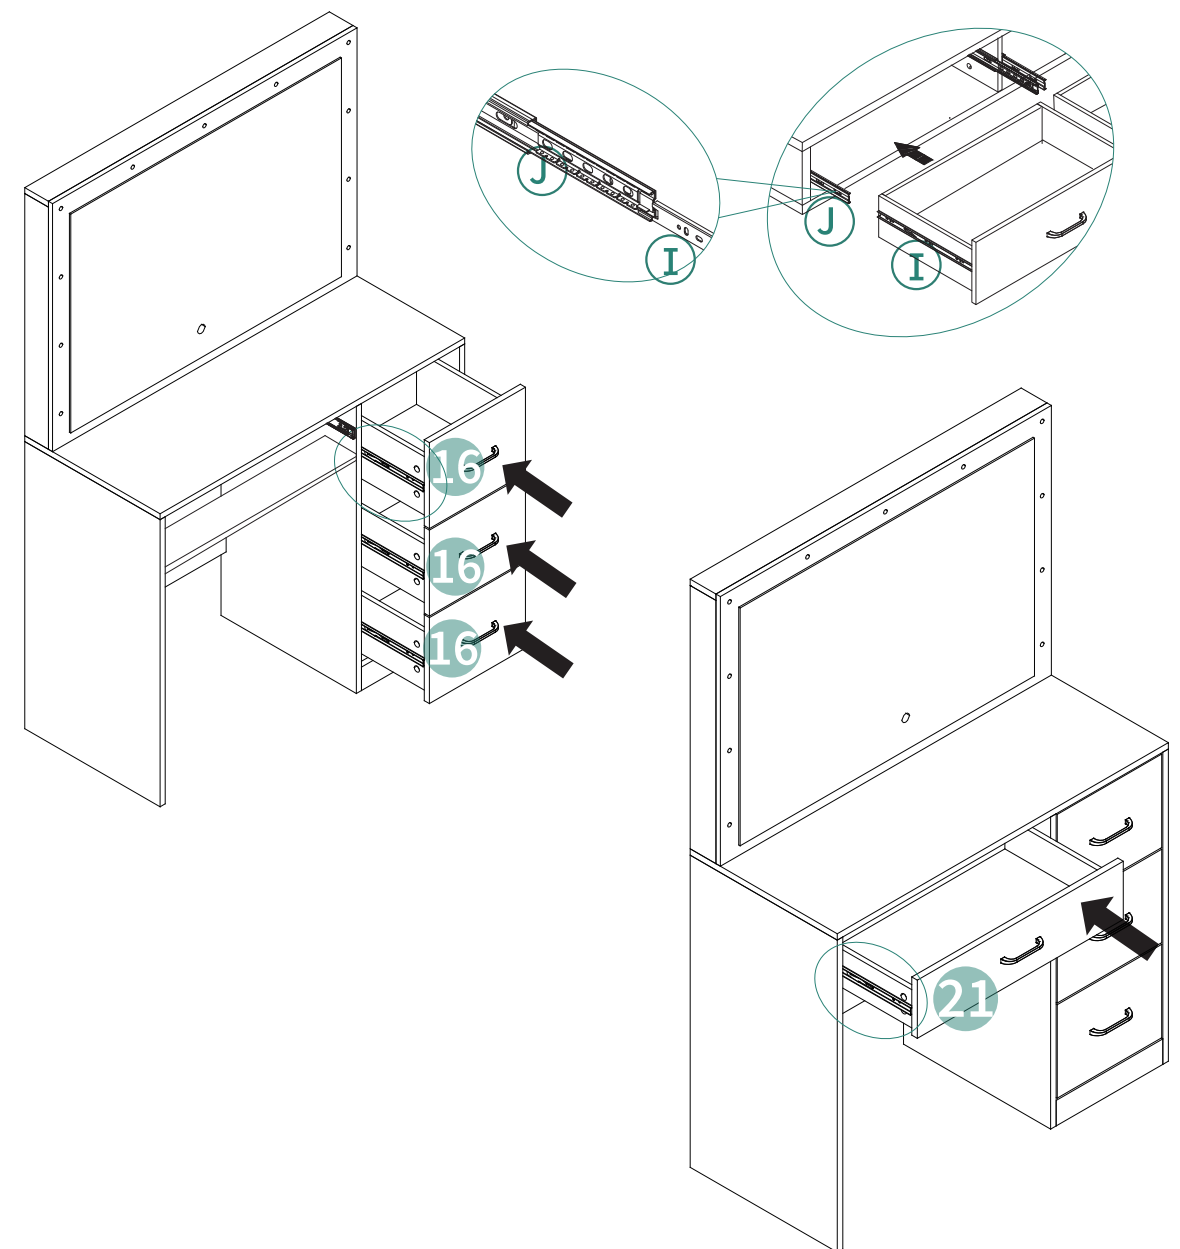





18

13


Ⓟ 1pc

Ⓠ 11pcs

ⓓ 11pcs

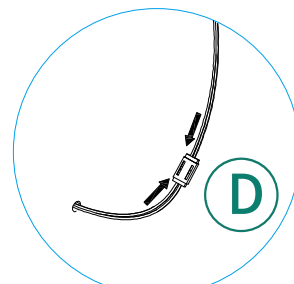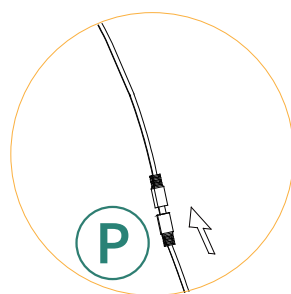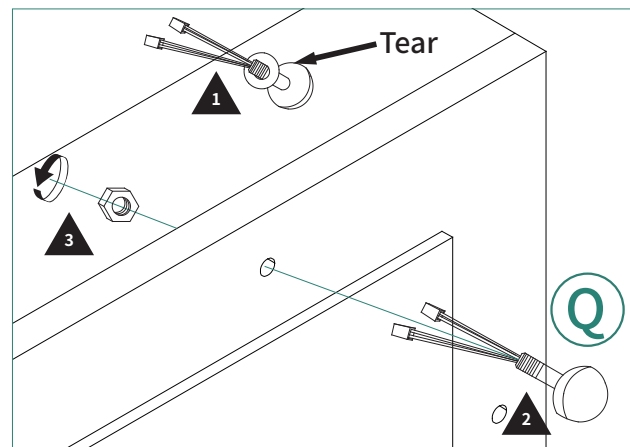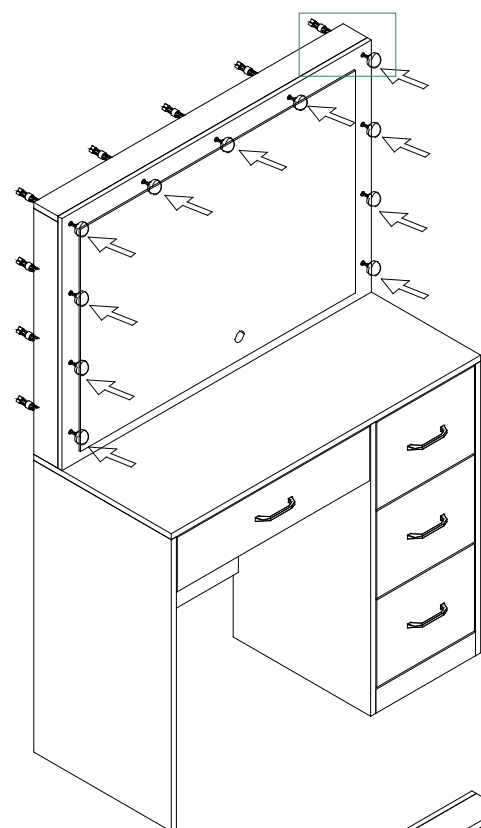

Connect the red line to the blue line.

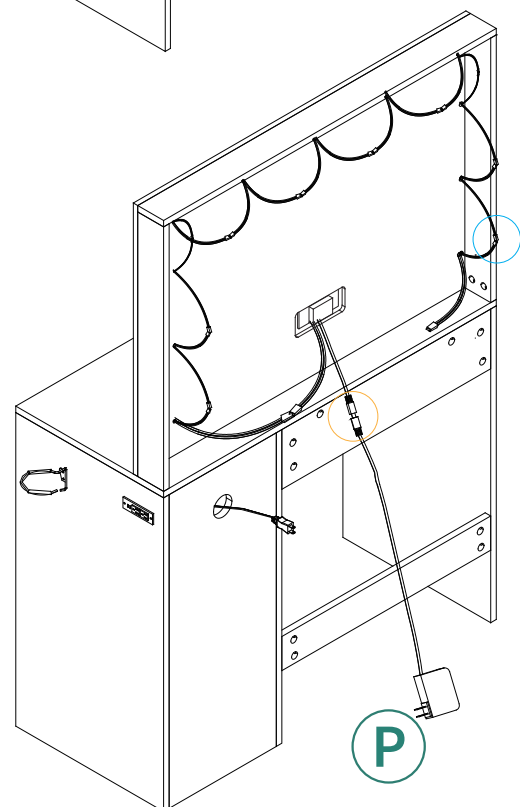

19

14







Ⓛ 1pcs

Ⓛ1 2pcs

Ⓛ2 2pcs

Ⓛ3 2pcs






Ⓛ4 2pcs

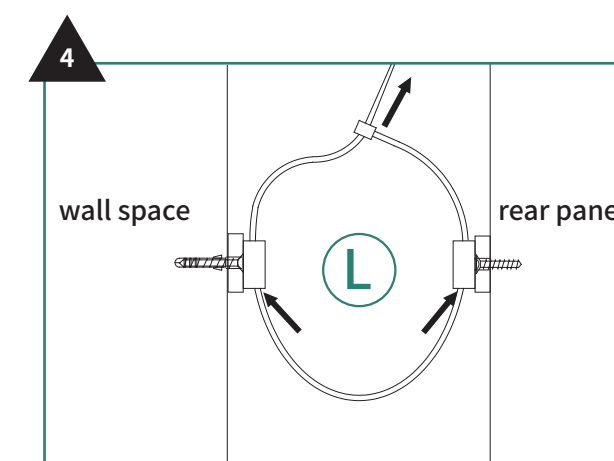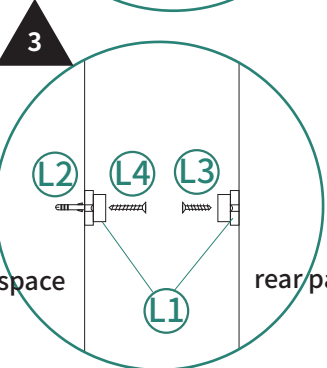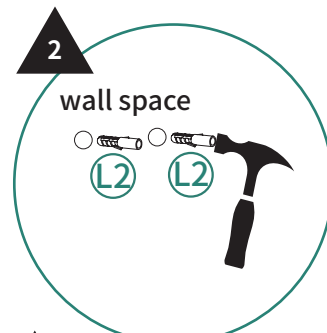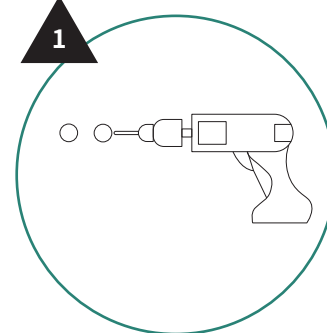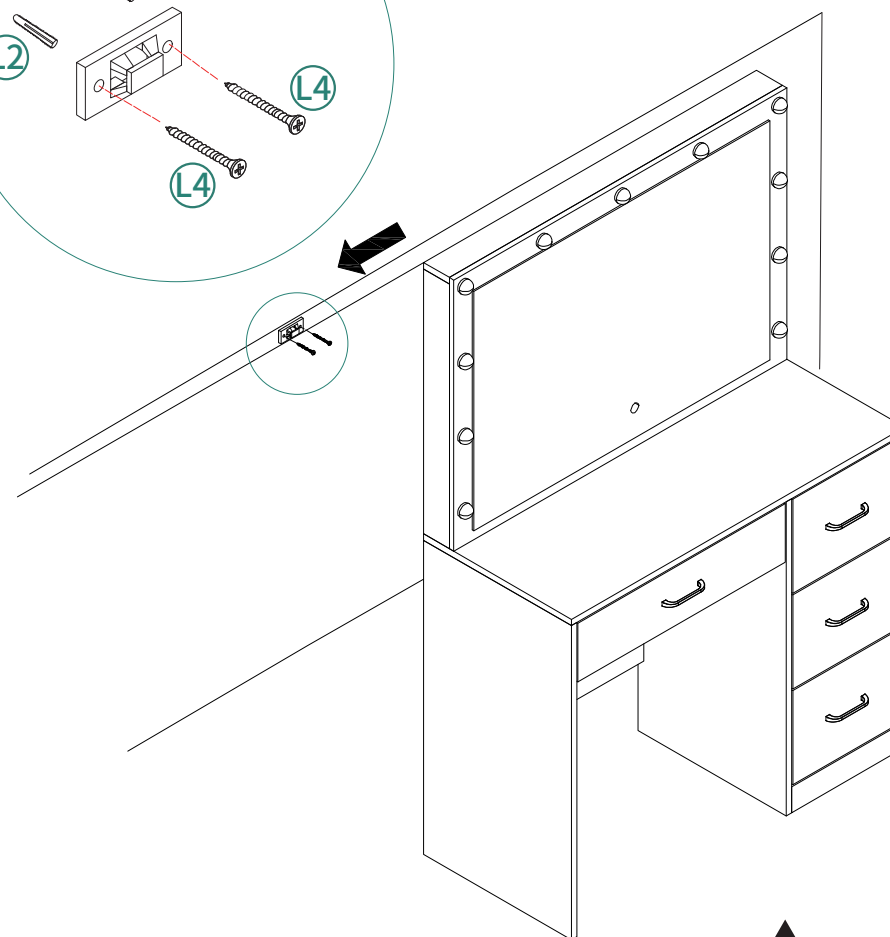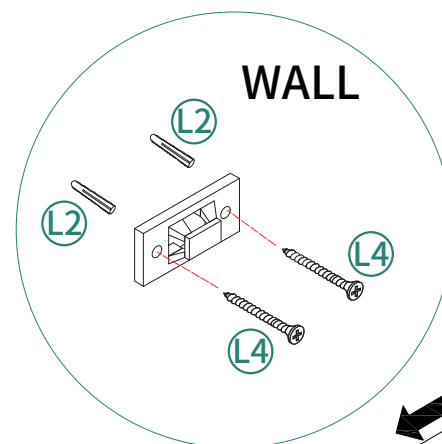


⚠ After the cabinet assembly, please install the wall fixing device on the back of the cabinet to avoid accidents. Install at a location based on your need.

20

15

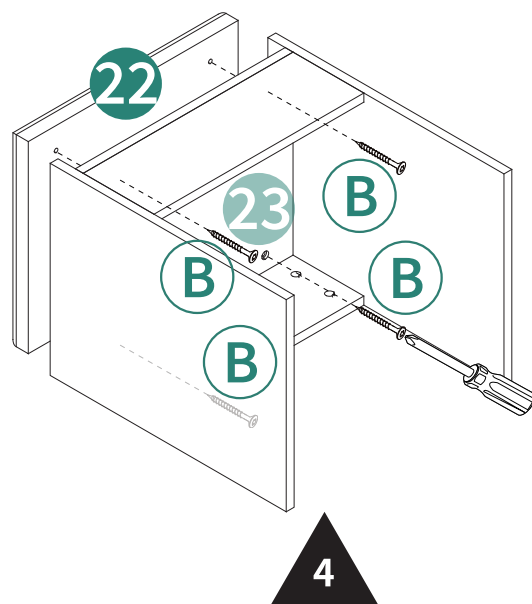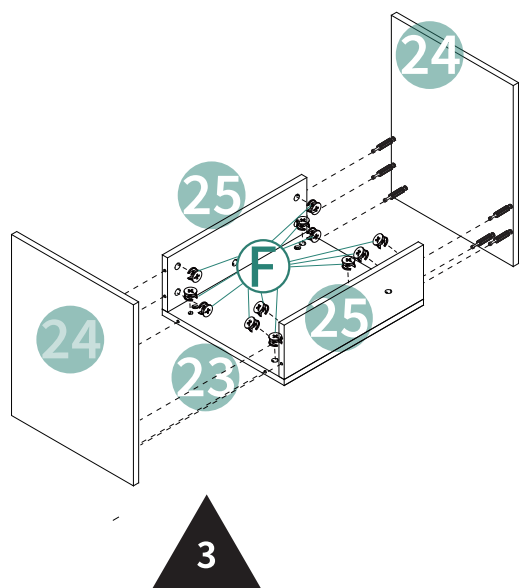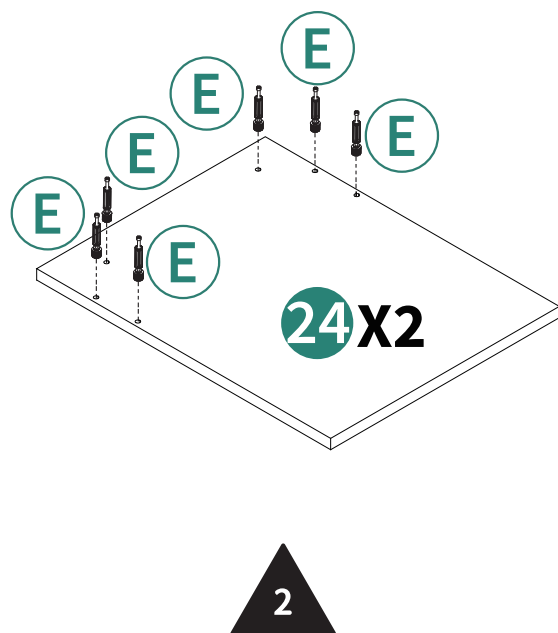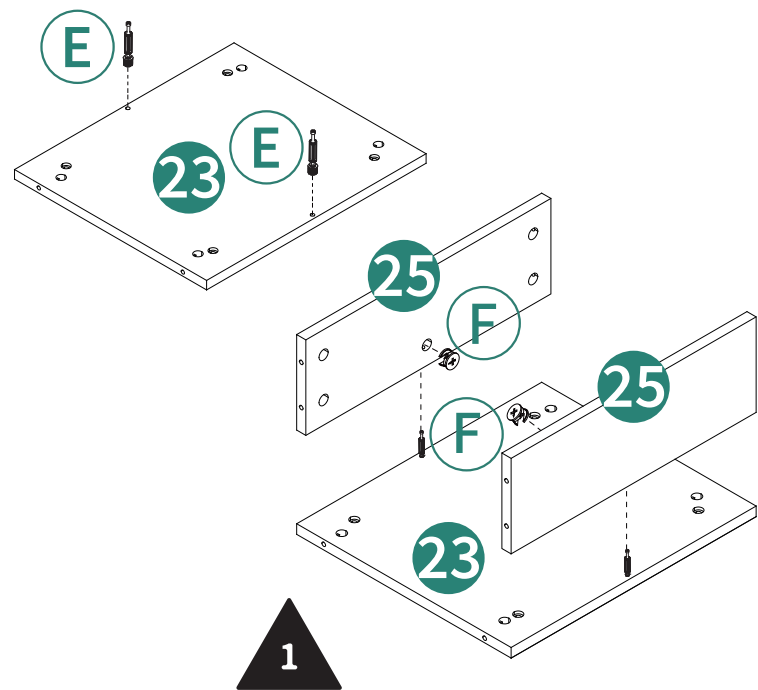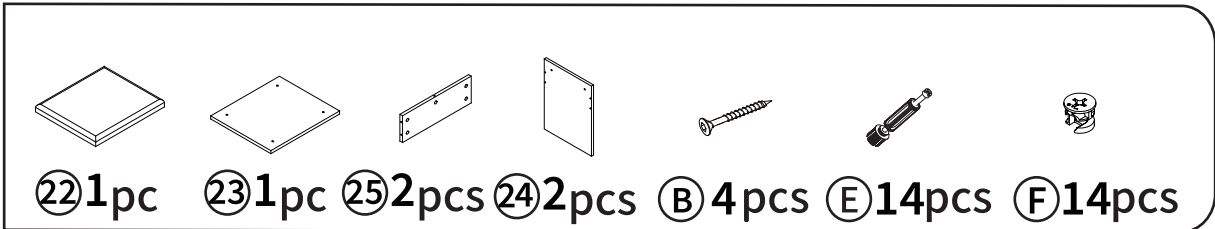

16

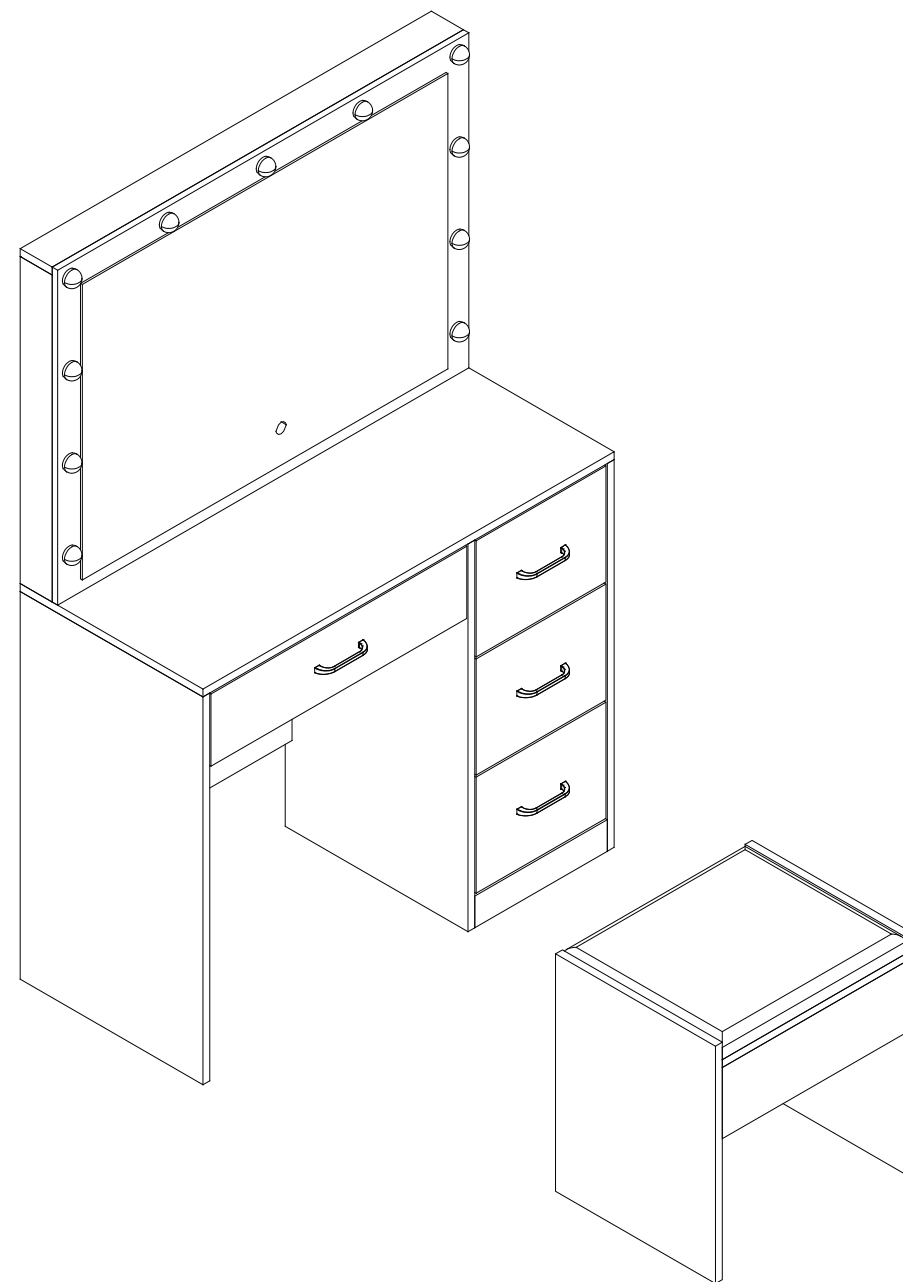

Installation Completed