


29x21cm-2019-0921-1


STEP 5

You need 2 PCS "3" Part 6PCS "2" Part
 2 PCS "9" Part 2 PCS "10" Part
 10PCS "M6S5" Part

Connect 9 and 10
 Connect "2+2+2+3"

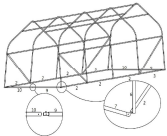


The other connector is joined by inserting screw "M6S5".

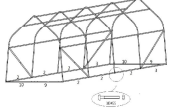

[5]

STEP 6

Repeat the above operation to finish the opposite side of the frame.

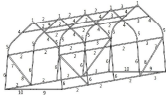


STEP 7

You need a cover part.
 Put the cover over the frame, and stretching the cover. Make sure each edge on the cover's side ARE MATCH the edge on the frame.



Finally you get your job done:



[6]

20' X 10' X 7' GREENHOUSE INSTRUCTION

Thank you for your purchase. Any problem please don't hesitate to contact with us, we will resolve all your problems ASAP.

Warm Tips: Please do not install it in a place where the wind is too strong.

ACCESSORIES DESCRIPTION

1		3PCS	10		2PCS
2		21PCS	Cover		1PCS
3		7PCS	M6S5		35PCS
4		10PCS	M6S5		20PCS
5		10PCS	H		55PCS
6		10PCS			
7		4PCS			
8		4PCS			
9		2PC			

INSTRUCTION STEPS

STEP 1

You need 9 PCS "1" Part 1 PCS "3" Part


3 PCS "2" Part 5 PCS "M6S5" Part

Connect "1" and "2" with the screw M6S5.



[1]

Connect these parts in order "2+2+2+3"



Put the "1" at the both ends and the three joints in the middle with the screws, you finish the part.

STEP 2

You need 10 PCS "4" Part 20 PCS "M6S5" Part
 10 PCS "5" Part

Connect the ends of "1" with "4" and "5" by fastening the elastic fasteners: "1+4+5".



You need to repeat the above option until the five parts are completed to finish the frame as the following picture.



STEP 3


You need 6 PCS "2" Part 2 PCS "3" Part

10 PCS "M6S5" Part

Connect these parts in order "2+2+2+3" with screws M6S5

Connect the above with the screws like following picture.


[2]

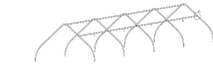

The circle part is connecting with screw M6S5.



The back side is operating the same steps, you get this one as like this:

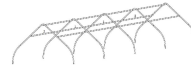

STEP 4

You need 2 PCS "3" Part 6PCS "2" Part

4 PCS "7" Part 4 PCS "8" Part


10PCS "M6S5" Part

Connect these parts in order "2+2+2+3"

Connect the above with the screws like following picture.

[3]

Connect this part to the end of "6" and the end of "5" with screws M6S5 like the circle parts in the following picture:

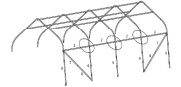

Connect "7" and "8" and the connect these parts as following picture:



The other side is on the same operation.

[4]